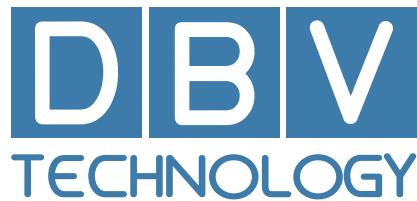


Release Block Re-Arming Guide

Updated July 2019

DBV Technology, LLC
www.dbvtechnology.com



Release Block Re-Arming Guide



Tools you will need:

Pliers Flat head screwdriver Wire cutters

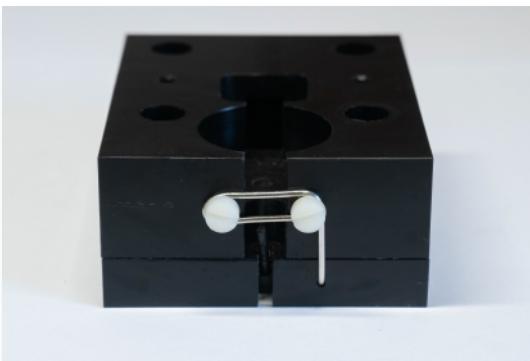
Re-arming kit

- 1 Fiberglass pin
- 1 Sacrificial anode
- 1 Stainless-steel chain link

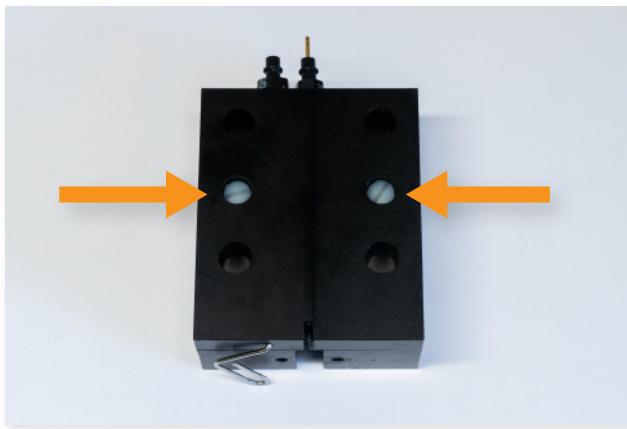


1

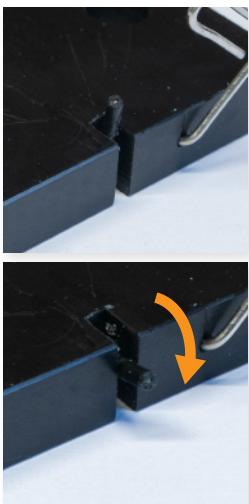
Remove the nylon screws securing the bent cathode wire on the back side of the release block. The cathode wire can now be rotated out of the way as needed.

**2**

On the underside of the release block, remove the two screws that hold both release block halves together.

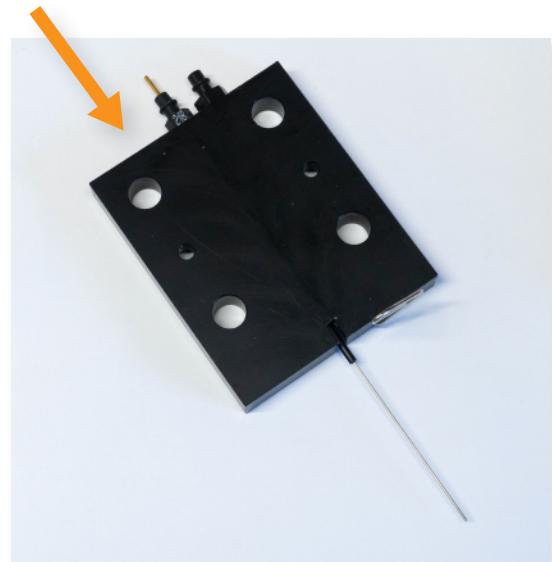
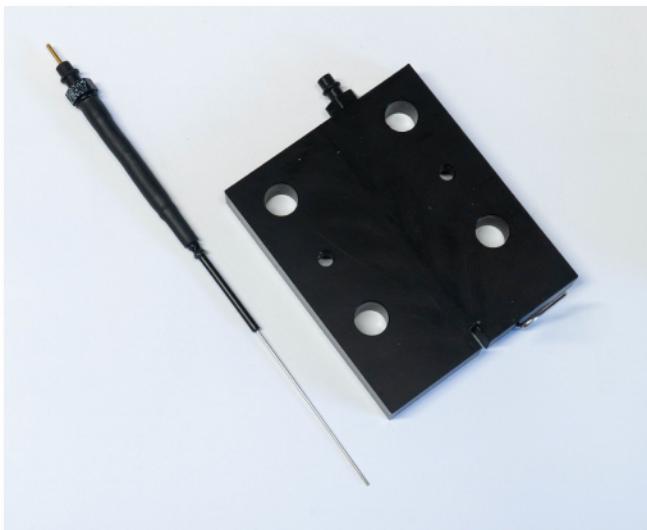
**3**

Bend the wire end of the used sacrificial anode from its 90 degree position to straight. This will allow the sacrificial anode to be easily removed by pulling straight out by the connector end.

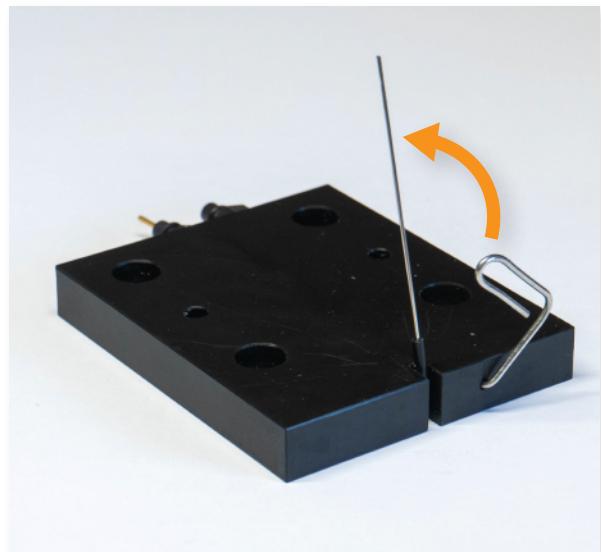


4

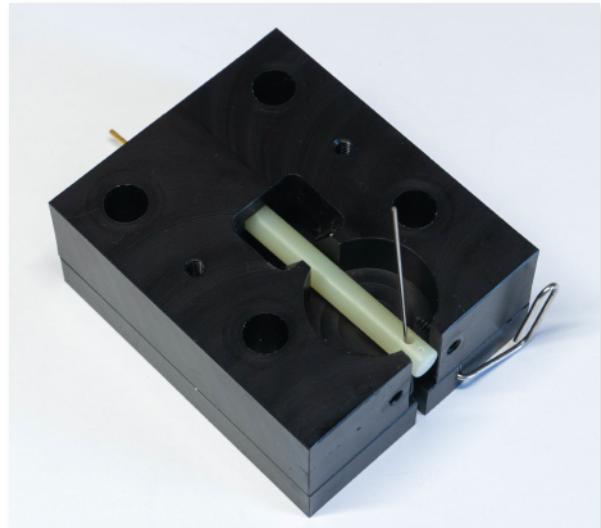
Insert the replacement sacrificial anode so that the connector end sits flush with the edge of the release block.

**5**

Bend the inconel wire upward about 90 degrees so it runs perpendicular to the release block. The heat shrink tubing should be exposed approximately 3/8" above the release block.

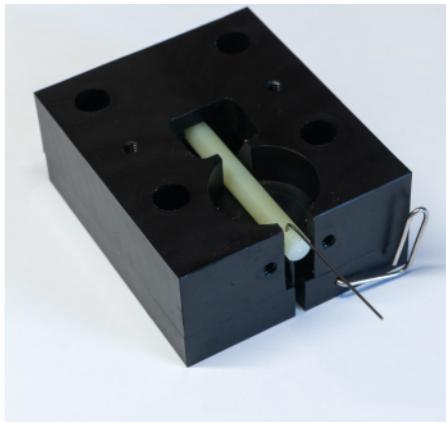
**6**

Insert the fiberglass pin by threading the inconel wire through the larger of the two holes. Use the pin holder half of the release block as a guide to ensure proper pin placement and height.

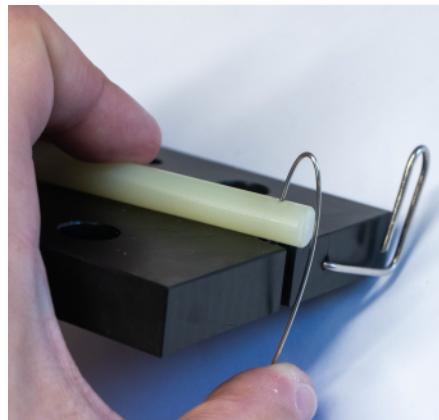


7

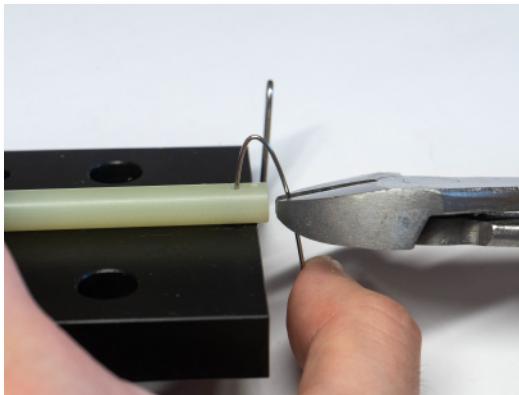
With the pin holder in place, bend the inconel wire out by 90 degrees.

**8**

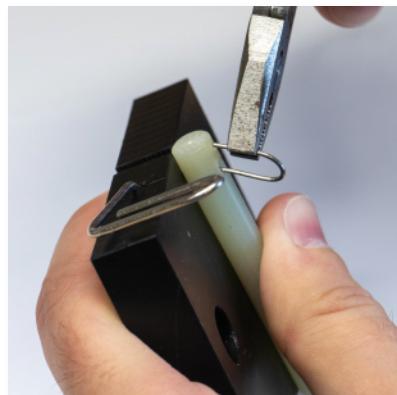
Remove the pin holder and lower the pin so that it sits flat against the release block. Continue the wire bend downward so that it creates a 180-degree bend.

**9**

Cut the excess inconel wire so that the end of the wire lines up about halfway through the fiberglass pin.

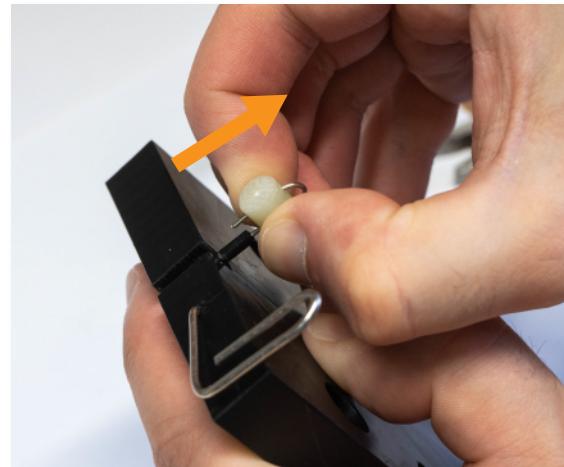
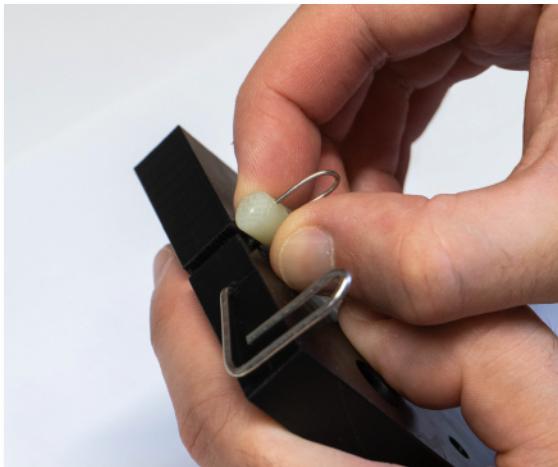
**10**

Feed the wire through the smaller hole in the pin with a pair of pliers.

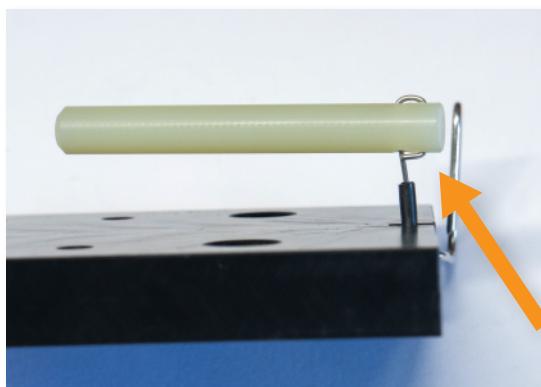


11

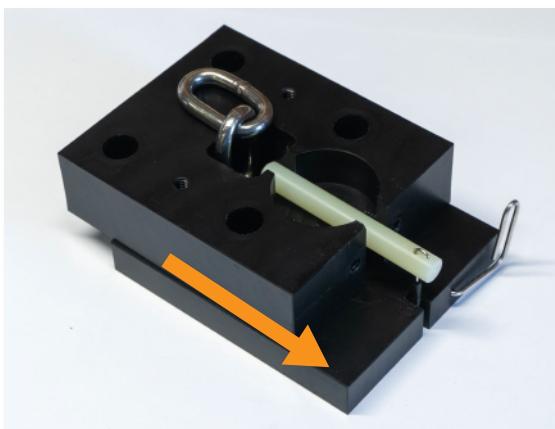
Pull the pin up so the cut end of the inconel wire exits the bottom of the pin. Pliers may be used to flatten the top of the pin against the wire loop. A small amount of bare wire should be exposed on the underside of the fiberglass pin.

**12**

Using pliers, bend the excess wire flat against the pin. The fiberglass pin will now be secured in place.

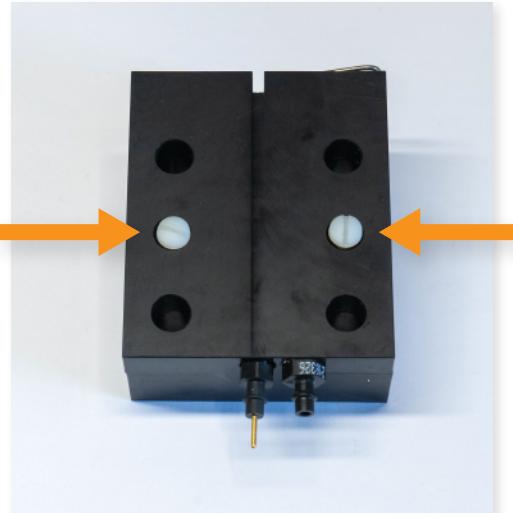
**13**

Position the pin holder side of the release block so it slides between the bottom plate and the fiberglass pin. In the rectangular cut out portion of the release block, loop the stainless-steel chain link around the pin. Slide the pin holder the remainder of the way, being sure to trap the pin in the pin holder and securing the chain in place.



14

Secure the assembly together with the bottom screws, being sure not to overtighten.



15

Rotate the cathode wire loop back into its original position and secure with the original nylon screws.



16

The release block is now re-armed and ready for use.

