
05 Lower the tested board into the base

ADD THESE PARTS

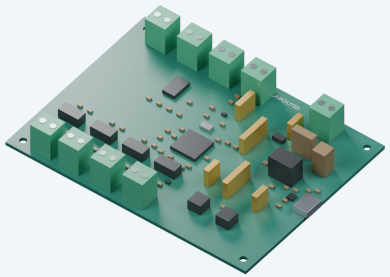


1 × tested PCB

First finish routing, fabrication review and the electrical bring-up in the technical reference.

Power off. Remove cables. Inspect underside leads, then lower the board onto all four posts.

CHECK

Board flat; no lead touches case.

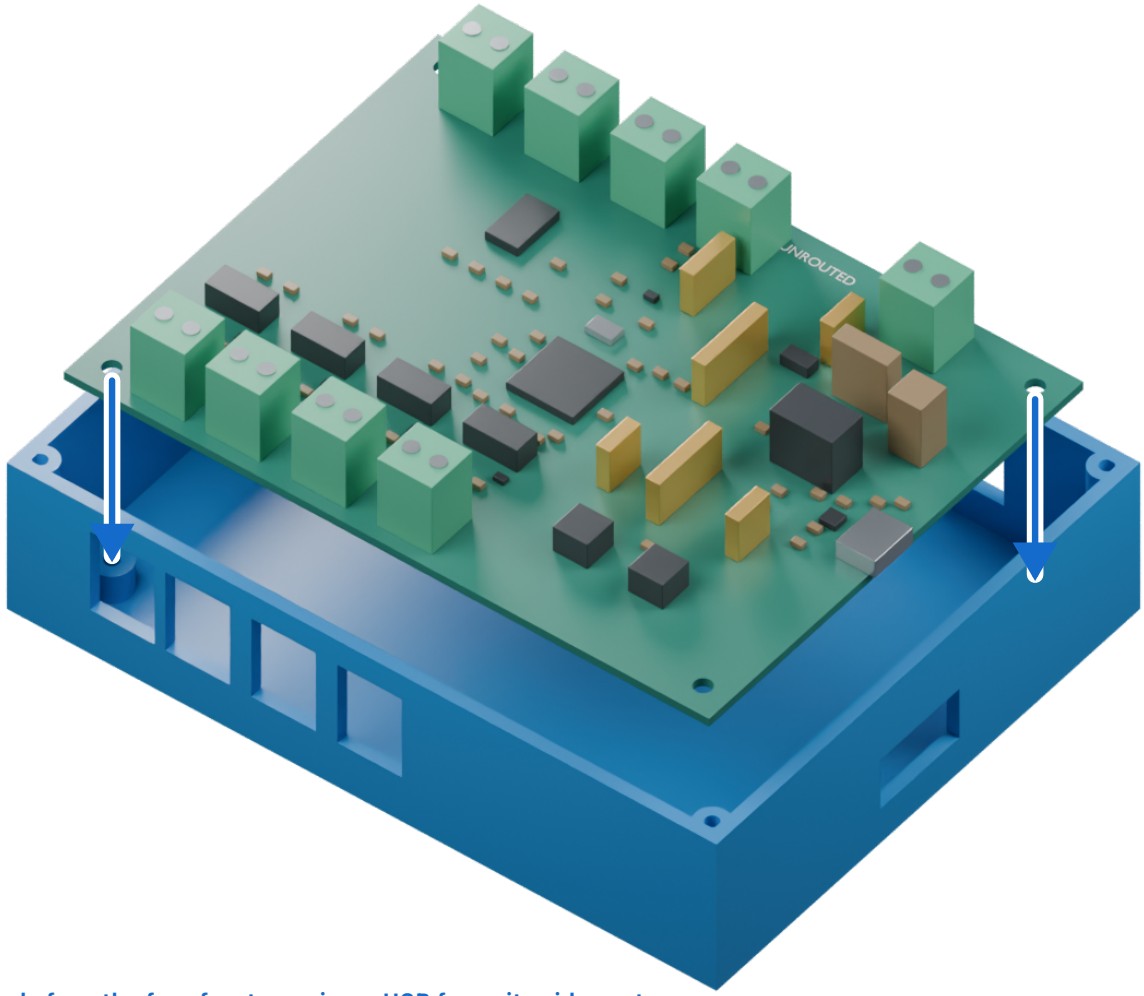

DI terminals face the four front openings; USB faces its side port.