
10 Fasten from underneath.

PARTS / TOOLS

4 × M3 × 10 screws. 4 adhesive feet.

Turn the unpowered assembly over. Start all four screws, then tighten diagonally by hand. Place the feet clear of the screw access holes.

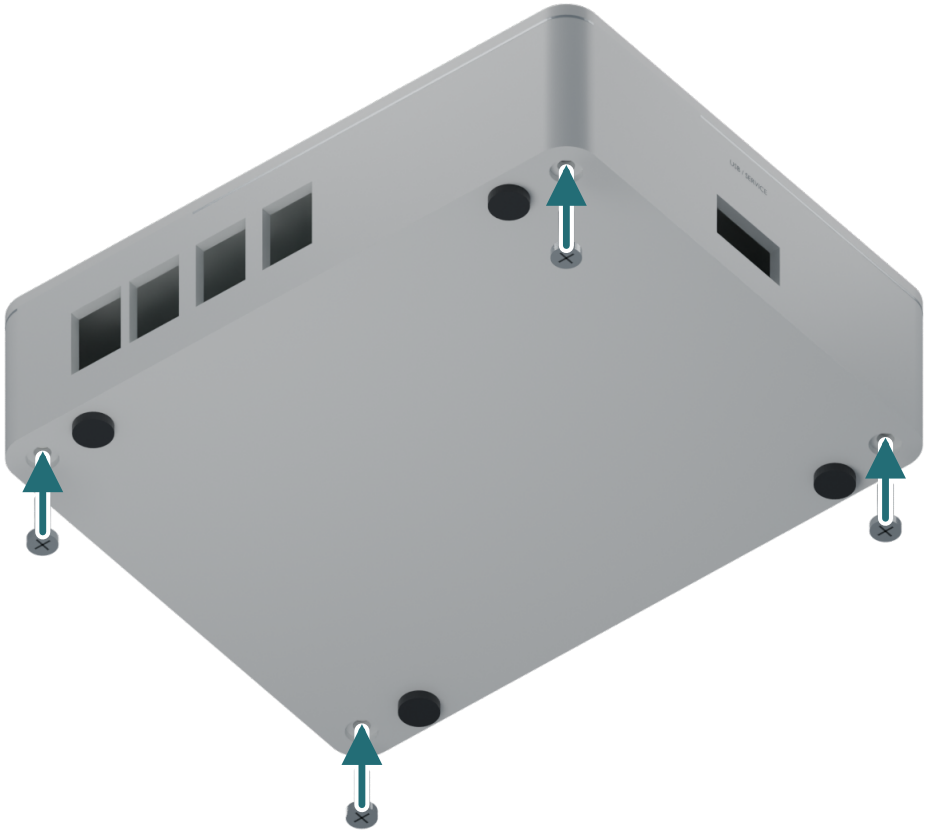

CHECK / Even seam; no forced bending. The top remains free of visible fasteners.