


Check WIB Test Setup

Items	QTY
1. TCP Fiber Converter	1
2. TCP Fiber	1
3. TCP Network Cable	1
4. TCP SFP	1
5. UDP SFP	1
6. UDP Network Cable	1
7. DAQ SFP	2
8. DAQ Fiber	1
9. SD Card	1
10. Power Cable	1
11. LEMO Cable	3
12. FPGA Programmer	1
13. UART to USB Cable	1

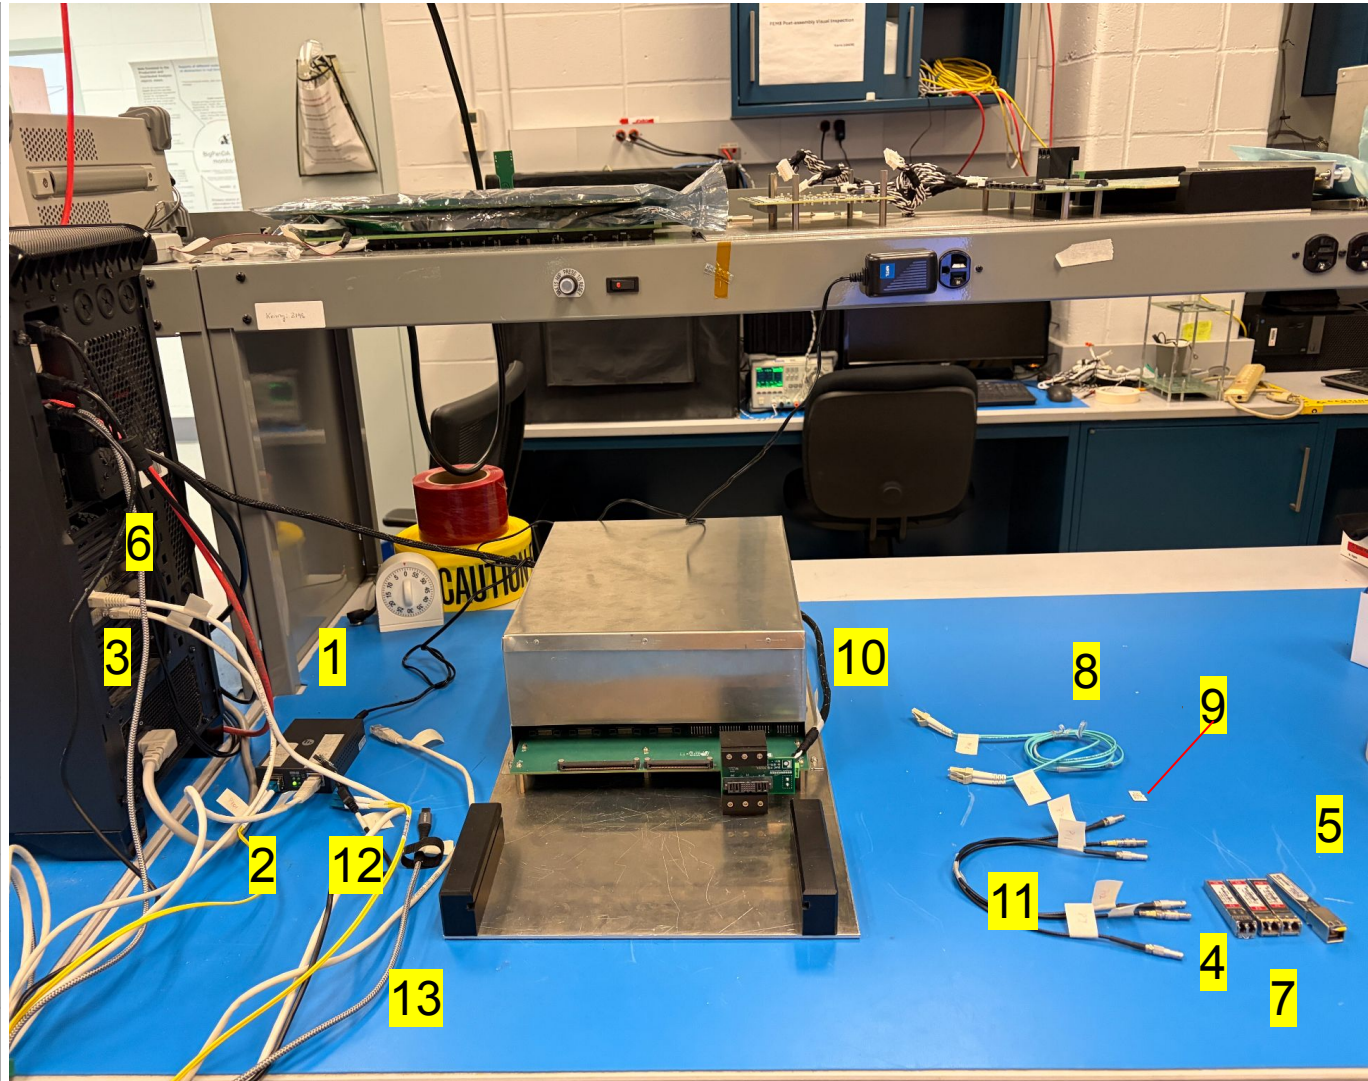

Preparation



Wear ESD glove and **Anti-static Wrist Strap**



Safety First!



Long
Sleeve Top

Long Pants

Closed Toe
Shoes



ESD-safe Gloves





Anti-static Wrist Strap




Pick up WIB Board and Scan QR


- 1 Scan the QR ID of Foam Box
- 2 Open Box, check if the ESD Bag is good
- 3 pick up WIB board and check the status, then, Scan the QR ID

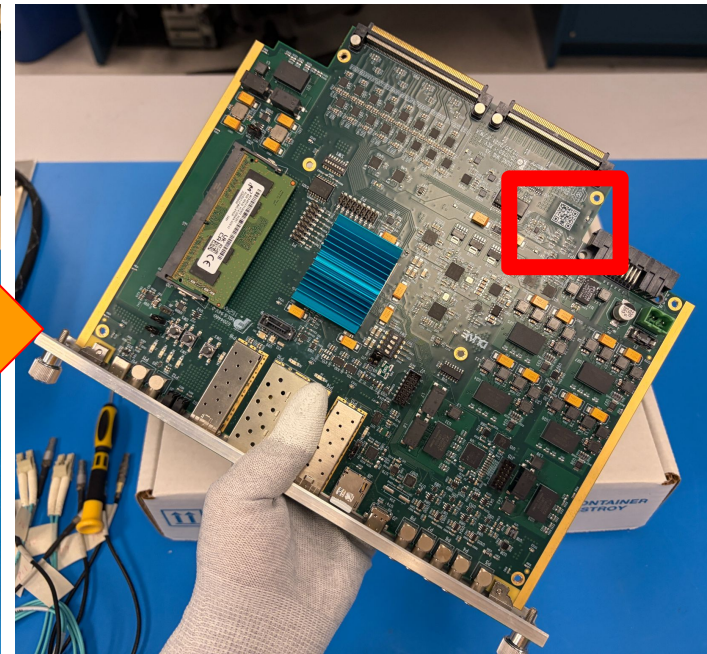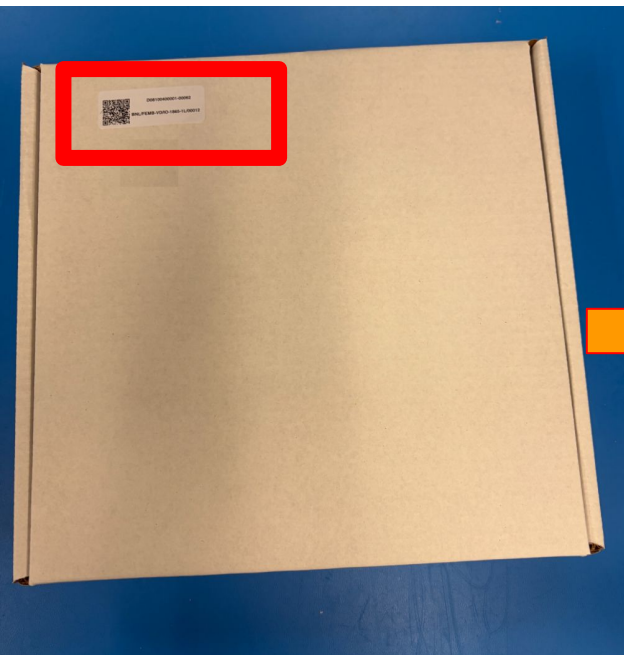

Insert New WIB

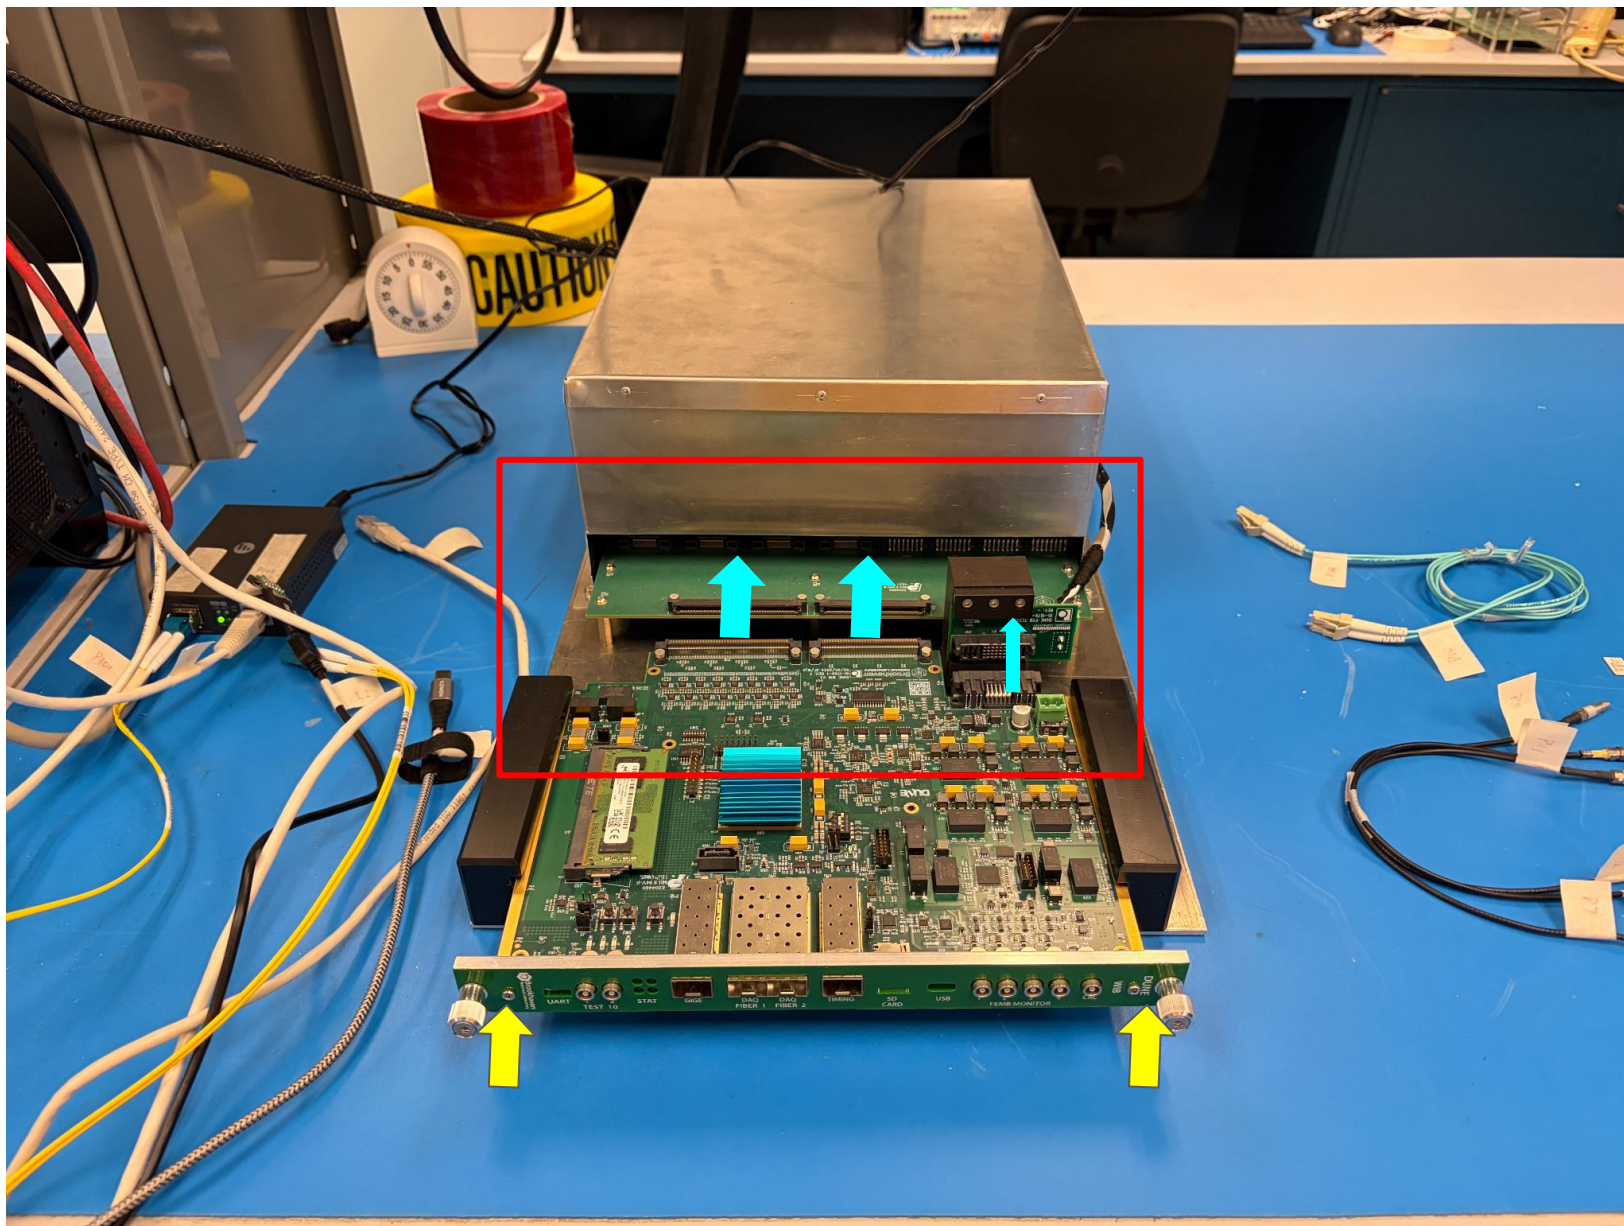


Insert SFP Module and SD Card

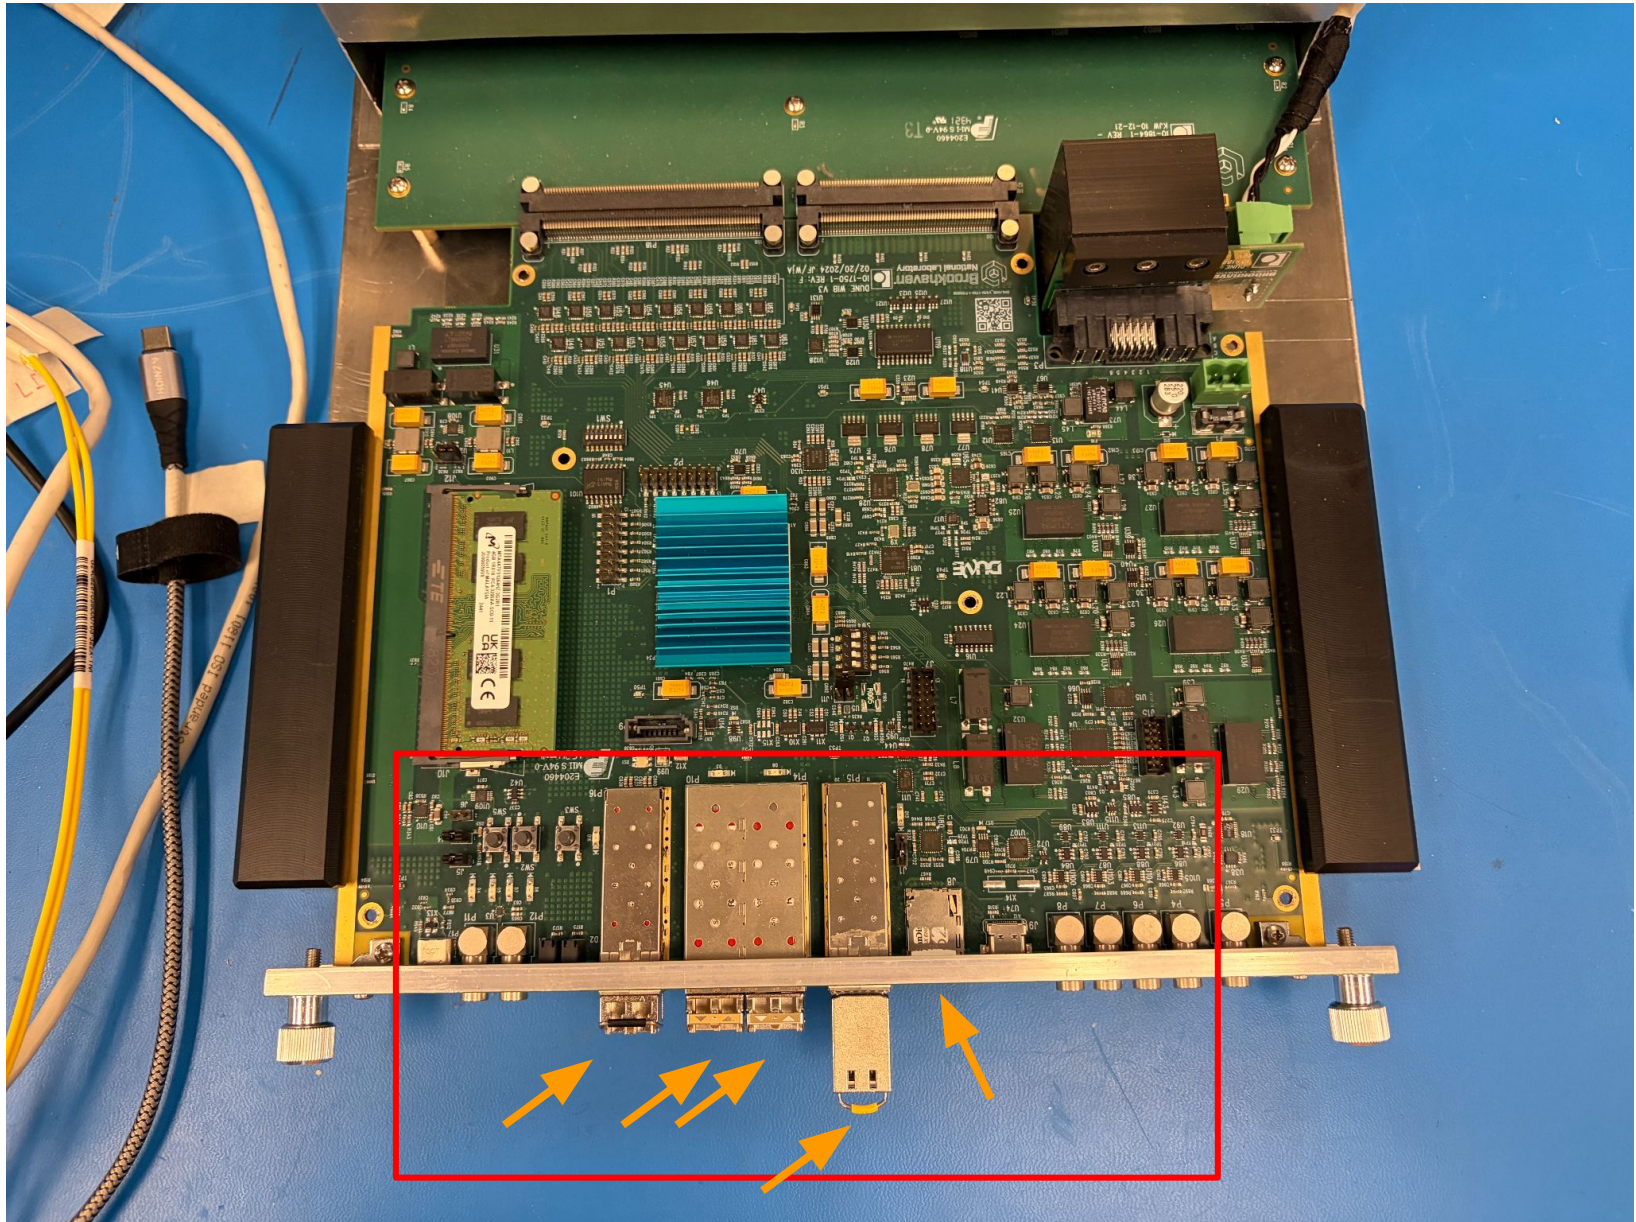


Insert Test Cables into Slots

Install these cables with the label, which corresponding to the port, like P6

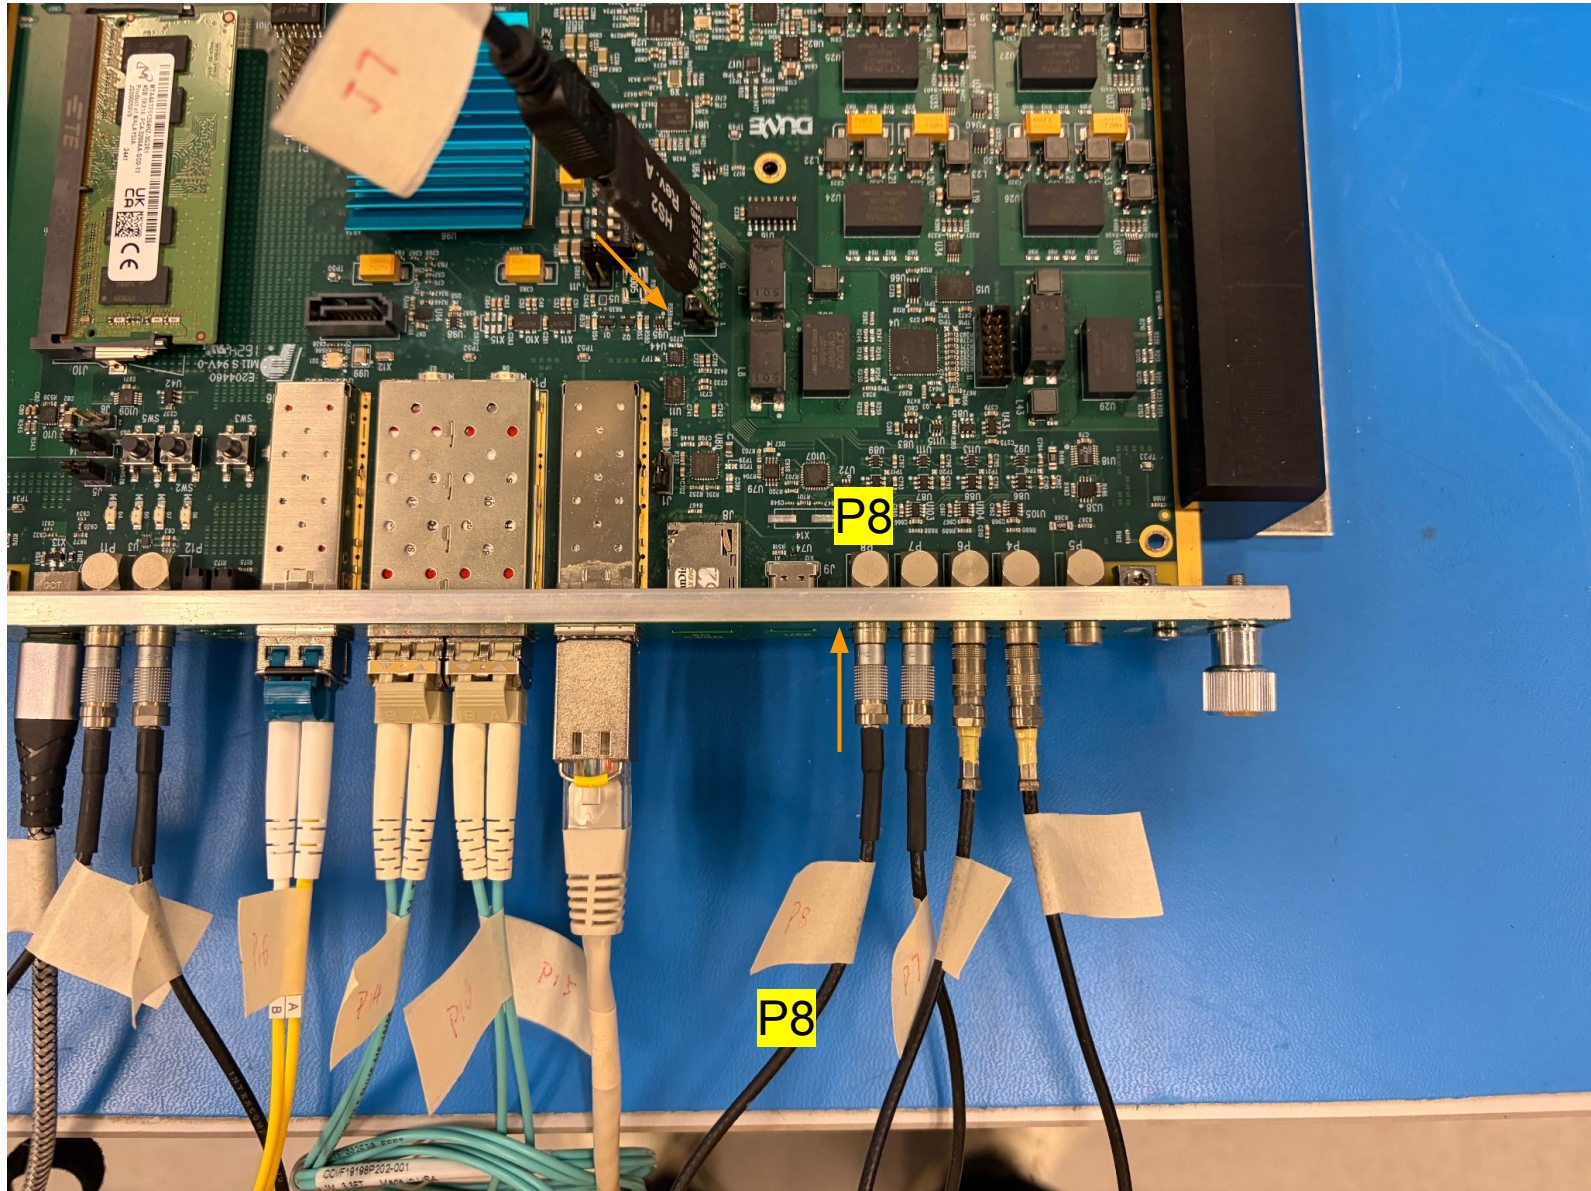


Insert Test Cables into Slots

Change LEMO connector from P6 to P5

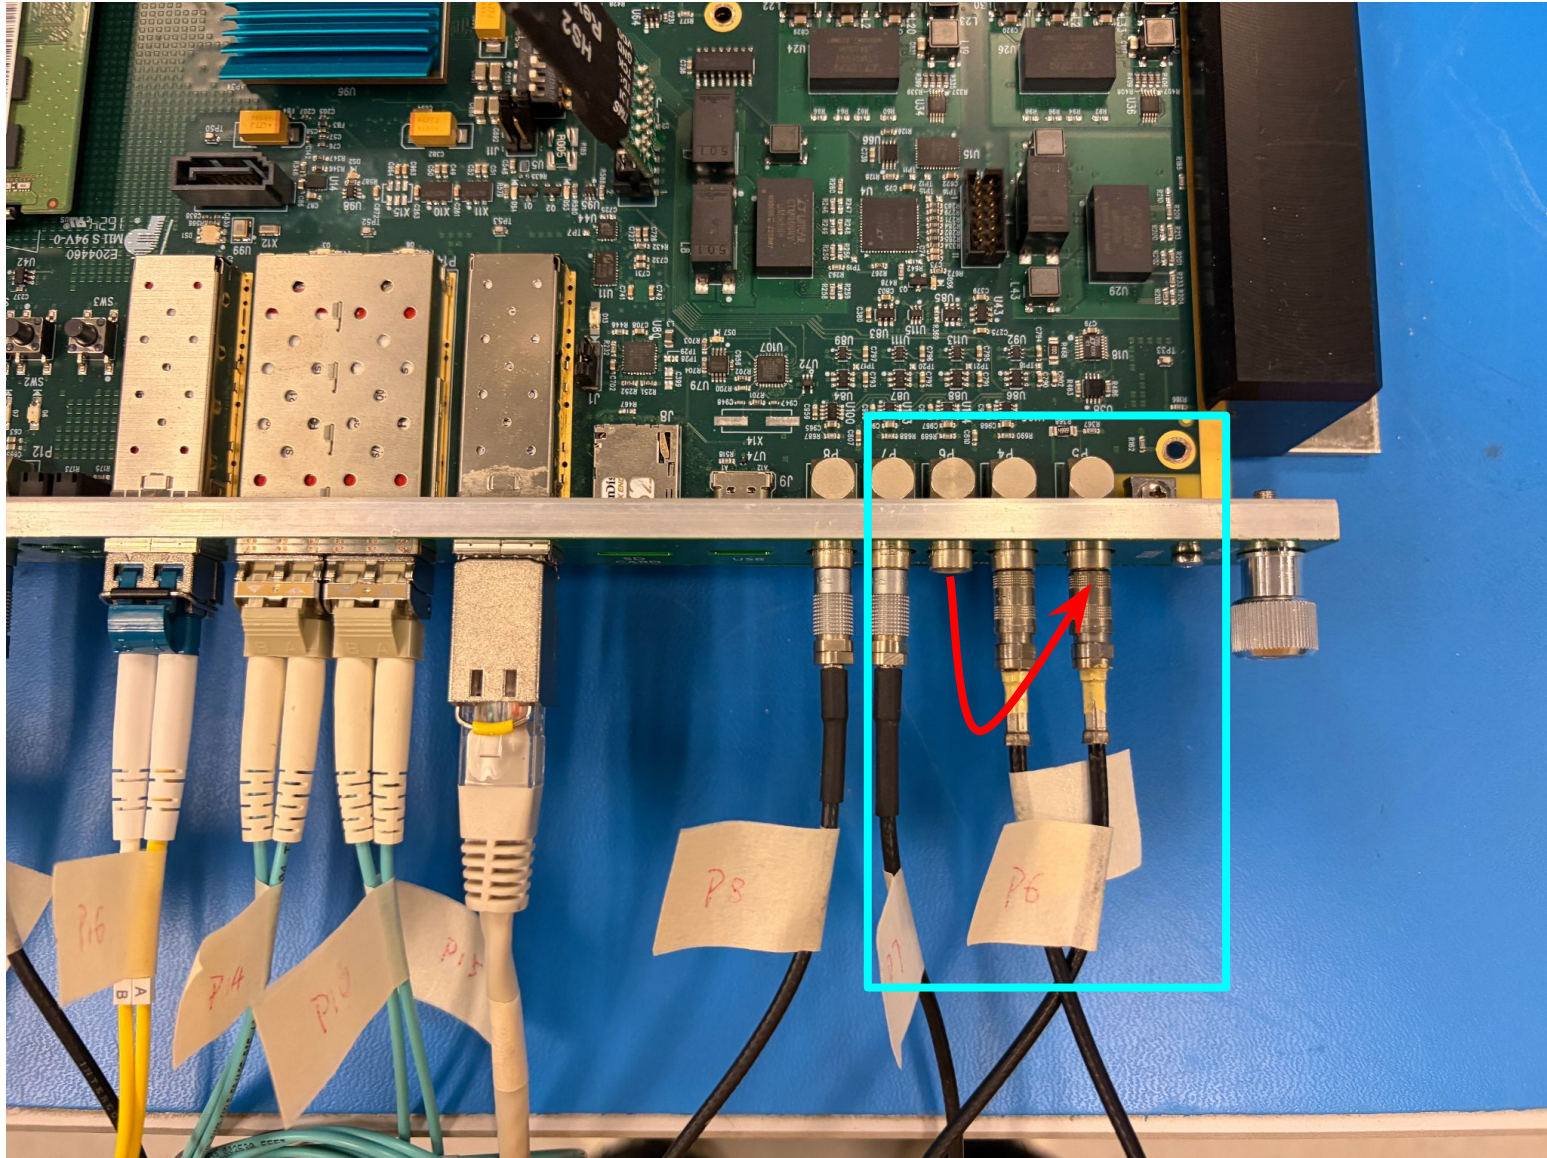


Remove LEMO Cables

Remove LEMO Cable P5 P6 P7 P8

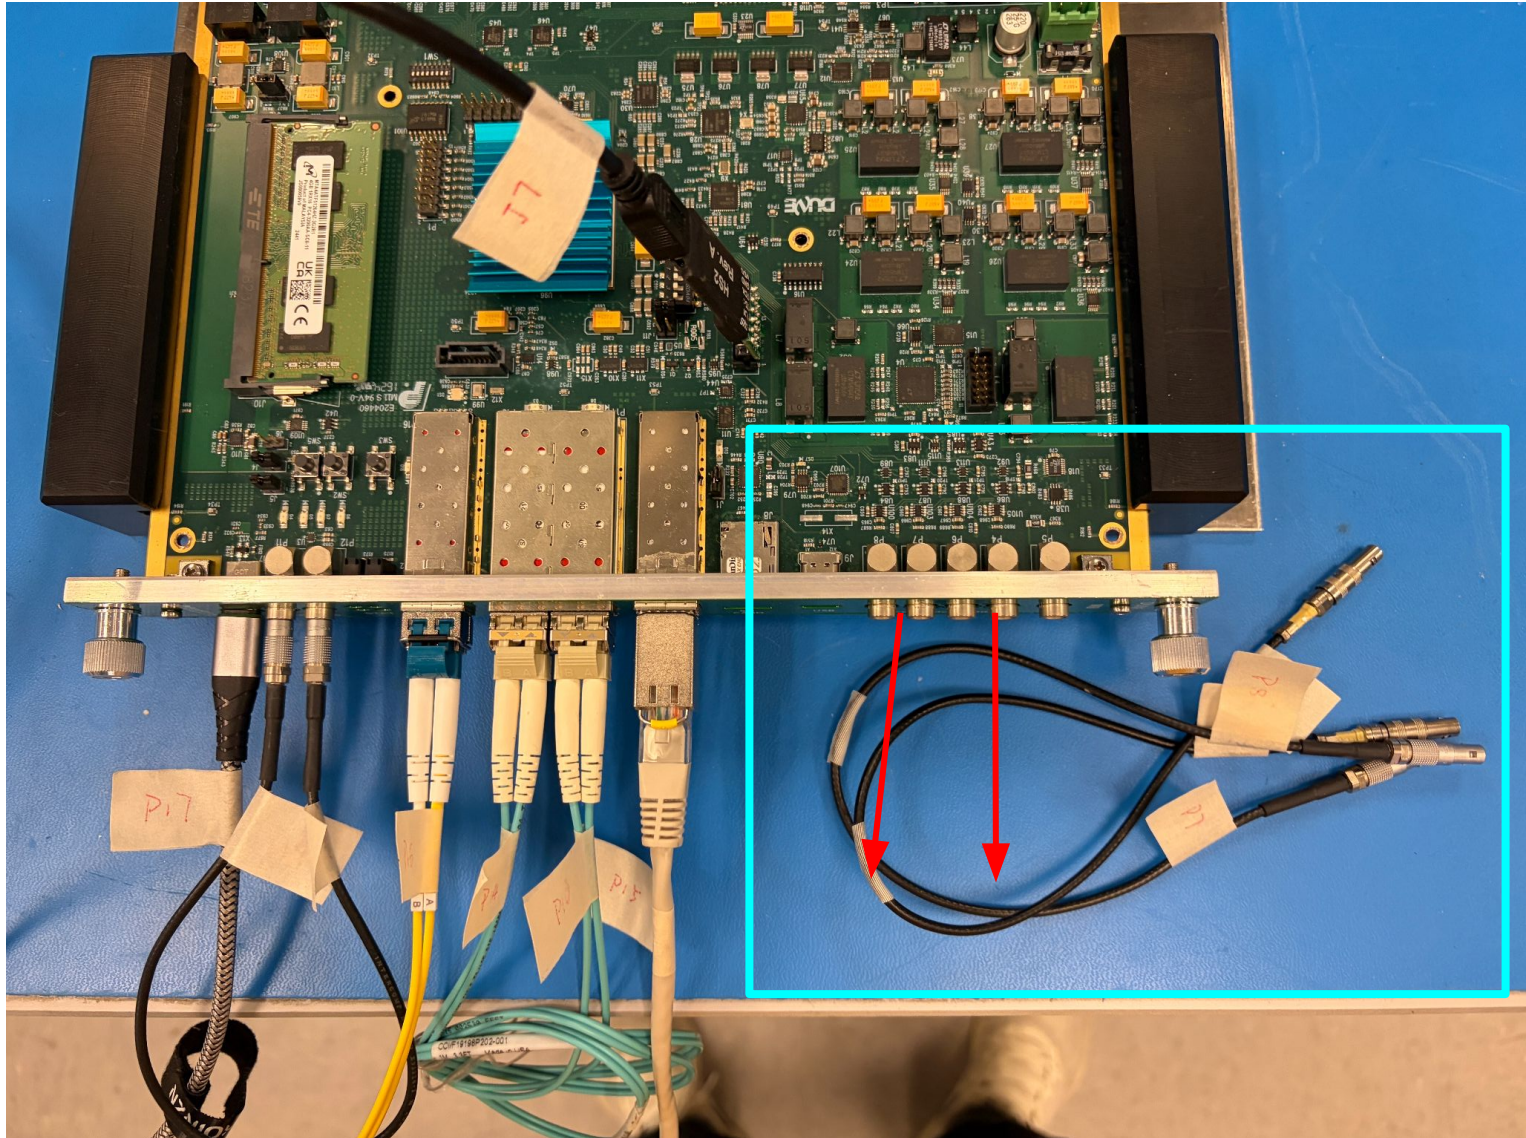

Remove Cables and SD Card

Remove Cable P17 P11 P12 P16 P10 P14 P17 J7 and SD Card J9

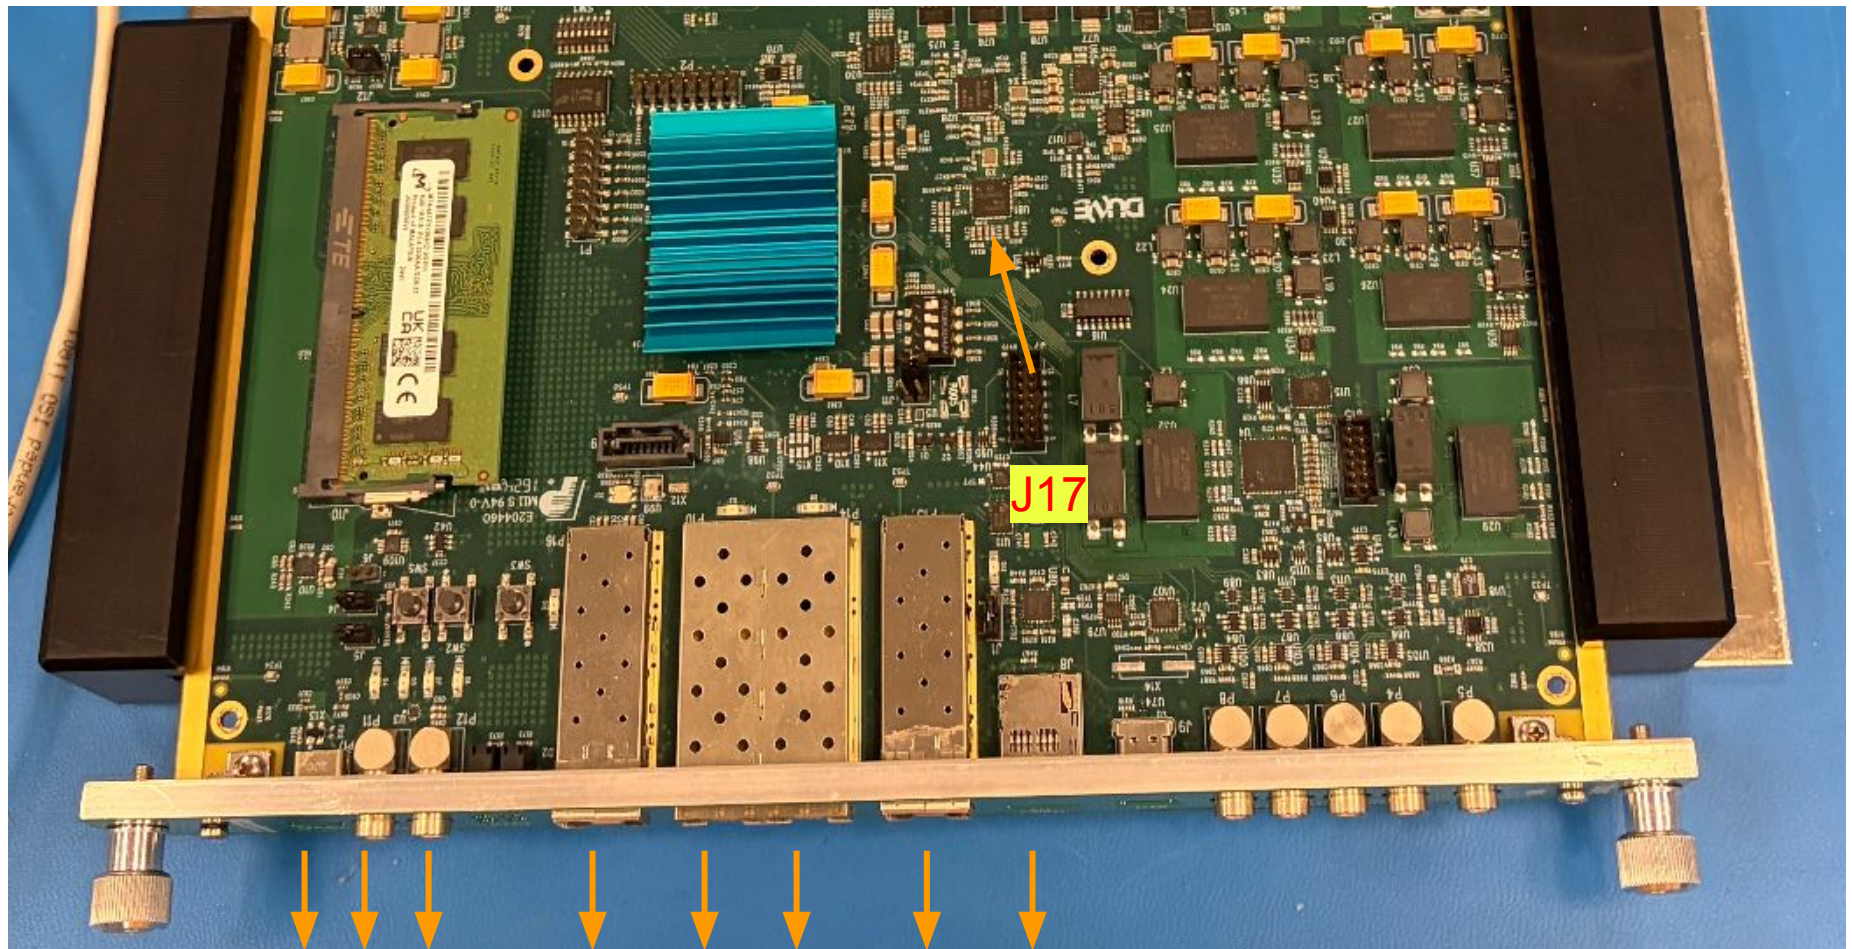

Package WIB Board into ESD Bag & Foam

Remove Cable P17 P11 P12 P16 P10 P14 P17 J7 and SD Card J9



Label WIB with Test Result

Good Board Label as Green and put into Good Tray

Bad Board Label as Red and put into Bad Tray



Back up

WIB Test Kits

Items	QTY
TCP Fiber Converter	1
TCP Fiber	1
TCP Network Cable	1
TCP SFP	1
UDP SFP	1
DAQ SFP	2
DAQ Fiber	1
SD Card	1
Power Cable	1
LEMO Cable	1
FPGA Programmer	1
UART to USB Cable	1

