Foundations of Robotics ROB-GY 6003 Homework 2 Answers

October 5, 2023

Shantanu Ghodgaonkar

 $Univ\ ID$: N11344563 $Net\ ID$: sng8399 Ph.No.: +1 (929) 922-0614

Question: 3.1 15

Answer: Consider below Figure 1

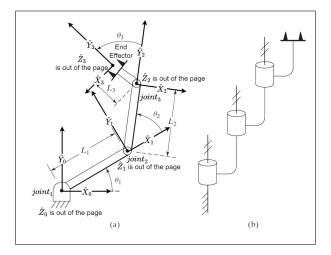


Figure 1: A three-link planar arm. On the right, we show the same manipulator by means of a simple schematic notation. Hash marks on the axes indicate that they are mutually parallel.

Frames have been attached to each of the joints and the end effector. We shall now construct the DH Parameter table for this - CHECK THIS CONCEPT AGAIN

$joint_i$	θ_i	d_i	a_i	α_i
$joint_1$ Revolute	$\theta_1 = 0$	$d_1 = 0$	$a_1 = 0$	$\alpha_1 = 0^{\circ}$
$joint_2$ Revolute	$\theta_1 + q_1$	$d_2 = 0$	$a_2 = L_1$	$\alpha_2 = \theta_1$
$joint_3$ Revolute	$\theta_2 + q_2$	$d_3 = 0$	$a_3 = L_2$	$\alpha_3 = 0^{\circ}$
End Effector	$\theta_3 + q_3$	$d_4 = 0$	$a_4 = L_3$	$\alpha_3 = 0^{\circ}$

Question: 3.4 RECHECK THIS ANSWER

Answer: Consider below Figure 2

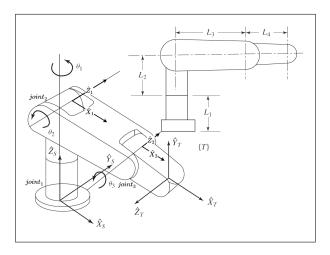


Figure 2: Two views of a 3R manipulator

Frames were previously attached to $joint_1$ the end effector. Frames have now been attached to $joint_2$ and $joint_3$. We shall now construct the DH Parameter table for this -

$joint_i$	$ heta_i$	d_i	a_i	α_i
$joint_1$ Revolute	$\theta_1 + q_1$	$d_1 = 0$	$a_1 = 0$	$\alpha_1 = 0^{\circ}$
$joint_2$ Revolute	$\theta_2 + q_2$	$d_2 = 0$	$a_2 = L_1 + L_2$	$\alpha_2 = 90^{\circ}$
joint ₃ Revolute	$\theta_3 + q_3$	$d_3 = 0$	$a_3 = L_3$	$\alpha_3 = 0^{\circ}$
End Effector	$\theta_4 + q_4$	$d_4 = 0$	$a_4 = L_4$	$\alpha_3 = 0^{\circ}$

We shall now find the transformation matrices ${}_1^ST$, ${}_2^TT$ and ${}_T^2T$ by applying the generalised equation,

$$\frac{i-1}{i}T = \begin{bmatrix}
\cos\theta_i & -\cos\alpha_i\sin\theta_i & \sin\alpha_i\sin\theta_i & a_i\cos\theta_i \\
\sin\theta_i & \cos\alpha_i\cos\theta_i & -\sin\alpha_i\cos\theta_i & a_i\sin\theta_i \\
0 & \sin\alpha_i & \cos\alpha_i & d_i \\
0 & 0 & 0 & 1
\end{bmatrix}$$
(1)

$$\Rightarrow {}_{1}^{S}T = \begin{bmatrix} \cos(\theta_{2} + q_{2}) & 0 & \sin(\theta_{2} + q_{2}) & (L_{1} + L_{2})\cos(\theta_{2} + q_{2}) \\ \sin(\theta_{2} + q_{2}) & 0 & -\cos(\theta_{2} + q_{2}) & (L_{1} + L_{2})\sin(\theta_{2} + q_{2}) \\ 0 & 1 & 0 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$
 (2)

$$\Rightarrow {}_{2}^{1}T = \begin{bmatrix} \cos(\theta_{3} + q_{3}) & -\sin(\theta_{3} + q_{3}) & 0 & L_{3}\cos(\theta_{3} + q_{3}) \\ \sin(\theta_{3} + q_{3}) & \cos(\theta_{3} + q_{3}) & 0 & L_{3}\sin(\theta_{3} + q_{3}) \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$
(3)

$$\Rightarrow {}_{T}^{2}T = \begin{bmatrix} \cos(\theta_{4} + q_{4}) & -\sin(\theta_{4} + q_{4}) & 0 & L_{4}\cos(\theta_{4} + q_{4}) \\ \sin(\theta_{4} + q_{4}) & \cos(\theta_{4} + q_{4}) & 0 & L_{4}\sin(\theta_{4} + q_{4}) \\ 0 & 0 & 1 & 0 \\ 0 & 0 & 0 & 1 \end{bmatrix}$$
(4)

Question: 3.8

Answer: Consider below Figure 3

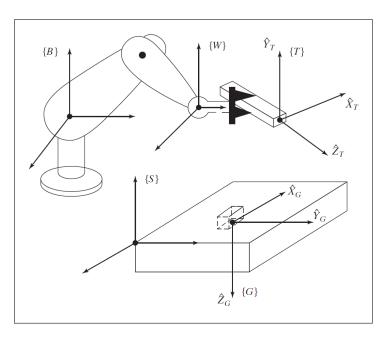


Figure 3: Determination of the tool frame

It is given that the robot feels around with the tool tip until it inserts it into the socket (or Goal). The transformation to this point can be described in two ways.

Firstly, from the perspective of the robot = ${}^B_W T \cdot {}^W_T T$

Secondly, from the perspective of the goal = ${}^B_ST\cdot{}^S_GT$

But both of these combination transforms describe the same final position, so,

$$\Rightarrow {}^B_W T \cdot {}^W_T T = {}^B_S T \cdot {}^S_G T$$

Upon multiplying both sides by ${}_W^BT^{-1}$

$$\Rightarrow {}^W_T T = {}^B_W T^{-1} \cdot {}^B_S T \cdot {}^S_G T$$

Question: 3.12

Answer: No. An arbitrary rigid-body transformation requires six parameters. Only in the case that has been described here can the rigid-body transformation be expressed with four parameters.

Question: 3.16

Answer: The frames are attached as per DH convention given by Spong. See below Figure 4 -

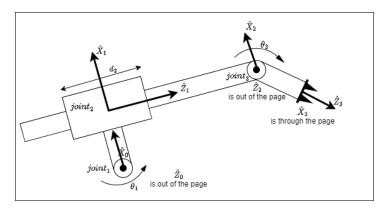


Figure 4: The RPR planar robot

The DH Parameter table is given below -

$joint_i$	θ_i	d_i	a_i	α_i
$joint_1$ Revolute	$\theta_1 + q_1$	$d_1 = 0$	a_1	$\alpha_1 = 0$
$joint_2$ Prismatic	$\theta_2 = 0$	$d_2 + q_2$	a_2	$\alpha_2 = 90^{\circ}$
$joint_3$ Revolute	$\theta_3 + q_3$	$d_3 = 0$	a_3	$\alpha_3 = -90^{\circ}$

Question: 3.17

Answer: The frames are attached as per DH convention given by Spong. See below Figure 5 -

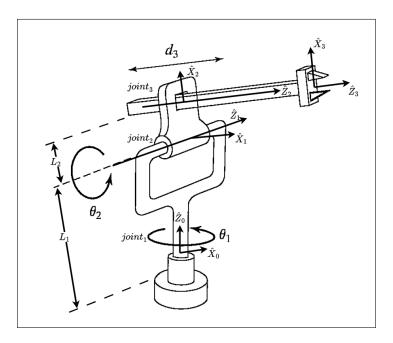


Figure 5: Three-link RRP manipulator

The DH Parameter table is given below -

$joint_i$	θ_i	d_i	a_i	α_i
$joint_1$ Revolute	$\theta_1 + q_1$	$d_1 = 0$	$a_1 = L_1$	$\alpha_1 = 0$
$joint_2$ Revolute	$\theta_2 + q_2$	$d_2 + q_2$	$a_2 = L_2$	$\alpha_2 = 90^{\circ}$
joint ₃ Prismatic	θ_3	$d_3 + q_3$	a_3	$\alpha_3 = -90^{\circ}$