Installer's guide for the model K terminal

Document PD-IG-014, revision 3.

Contents

1 Unpacking	1
2 Mounting	2
3 Wiring	3
4 First start	4

Appendix A, the scanned workshop notes, follows section 4.

1 Unpacking

The carton contains the terminal, a wall bracket, four M5 screws and a 2.4 m power lead.

Keep the carton until the terminal has passed its first start.

2 Mounting

Fix the bracket to a solid wall. All dimensions are given in figure 2 only.

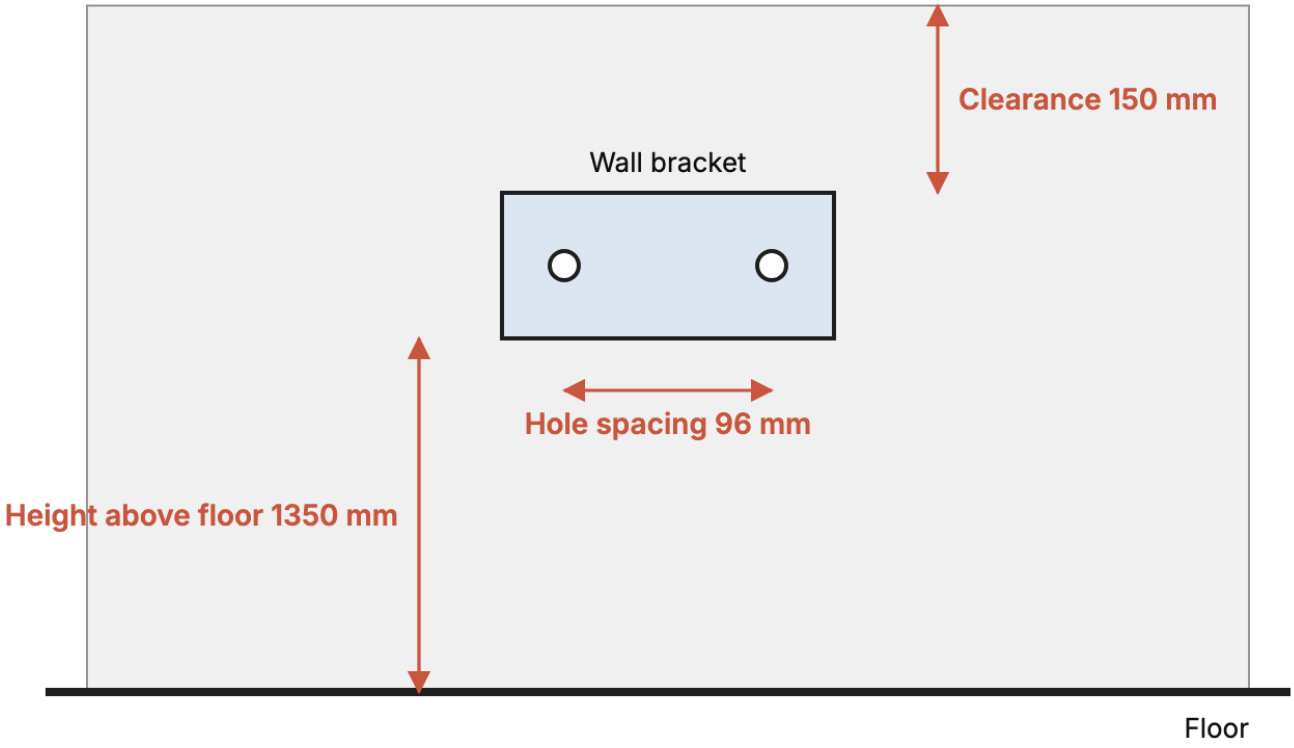


Figure 2. Bracket position.

3 Wiring

Switch off the supply before wiring. The terminal order is given in figure 3 only.

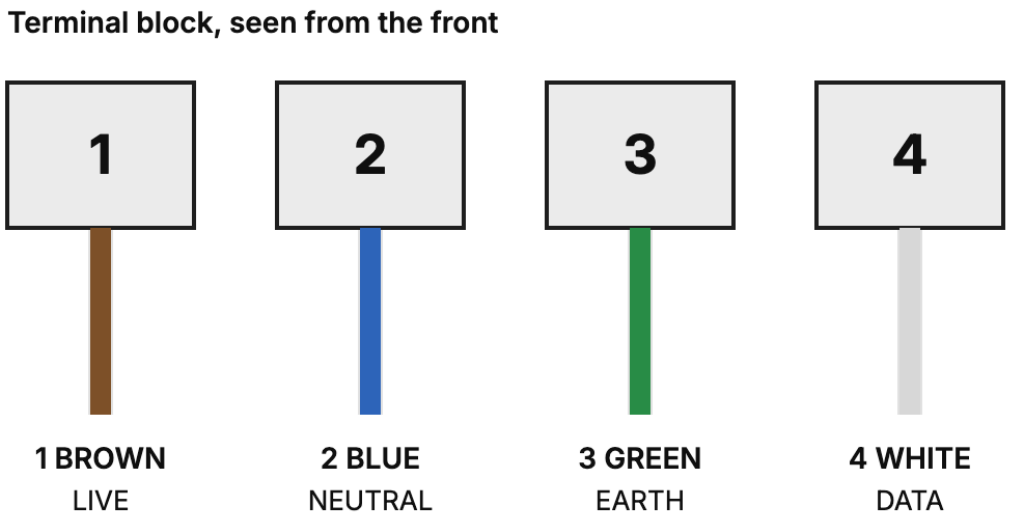


Figure 3. Terminal block.

4 First start

Hold the side button for 5 seconds.

The status lamp turns steady within 40 seconds.

Appendix A — Workshop notes

Note 1: units with serial numbers below 2200 need bracket shim S-3.

Note 2: torque for the M5 screws is 4.5 N·m.
Checked by Ottoline Marsh.