



ULTRA AVIATION SERVICES, INC.

General Operations Manual

APPENDIX: 1

SAFETY & SECURITY BULLETIN (U-SMS-09)

Revision: Original

Date: 7/1/2015

Bulletin No: 17-003

Date: 2/May/17


SUBJECT: Usage of GATE J3

APPLICABLE TO: ALL ULTRA AOA Drivers


IF assigned to work any flight in/ out of gate J3 you must insure that the following steps are followed

- 1- Make sure that all the area is cleared of FOD
- 2- Make sure that no GSE is protruding out to the aircraft safety zone from the J FIS customs staging area
- 3- Always use a wing person to insure that the area is clear
- 4- Remember from the pilots perspective (line of vision/ visual cue) the GSE might look like it is in the way of the aircraft
- 5- When in doubt, stop, remove all the equipment from the area, marshal or push the aircraft and then put the GSE back

BE SAFE OBEY ALL THE LAWS AND COMPANY SOP

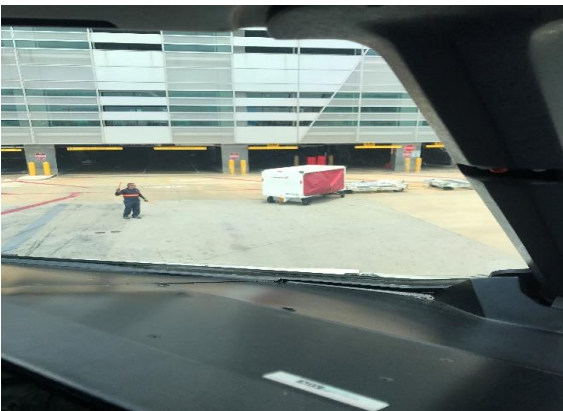

USE a wind man
Move the GSE out of the way

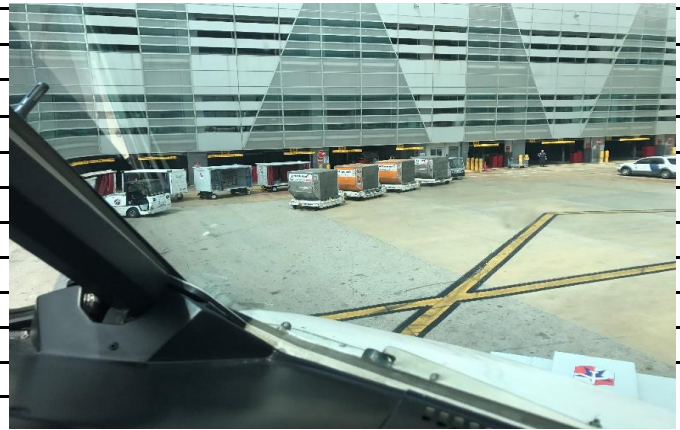

Pilots visual cue/ line of site
Move GSE out of the way

PREPARED BY:

Your friendly Safety Department