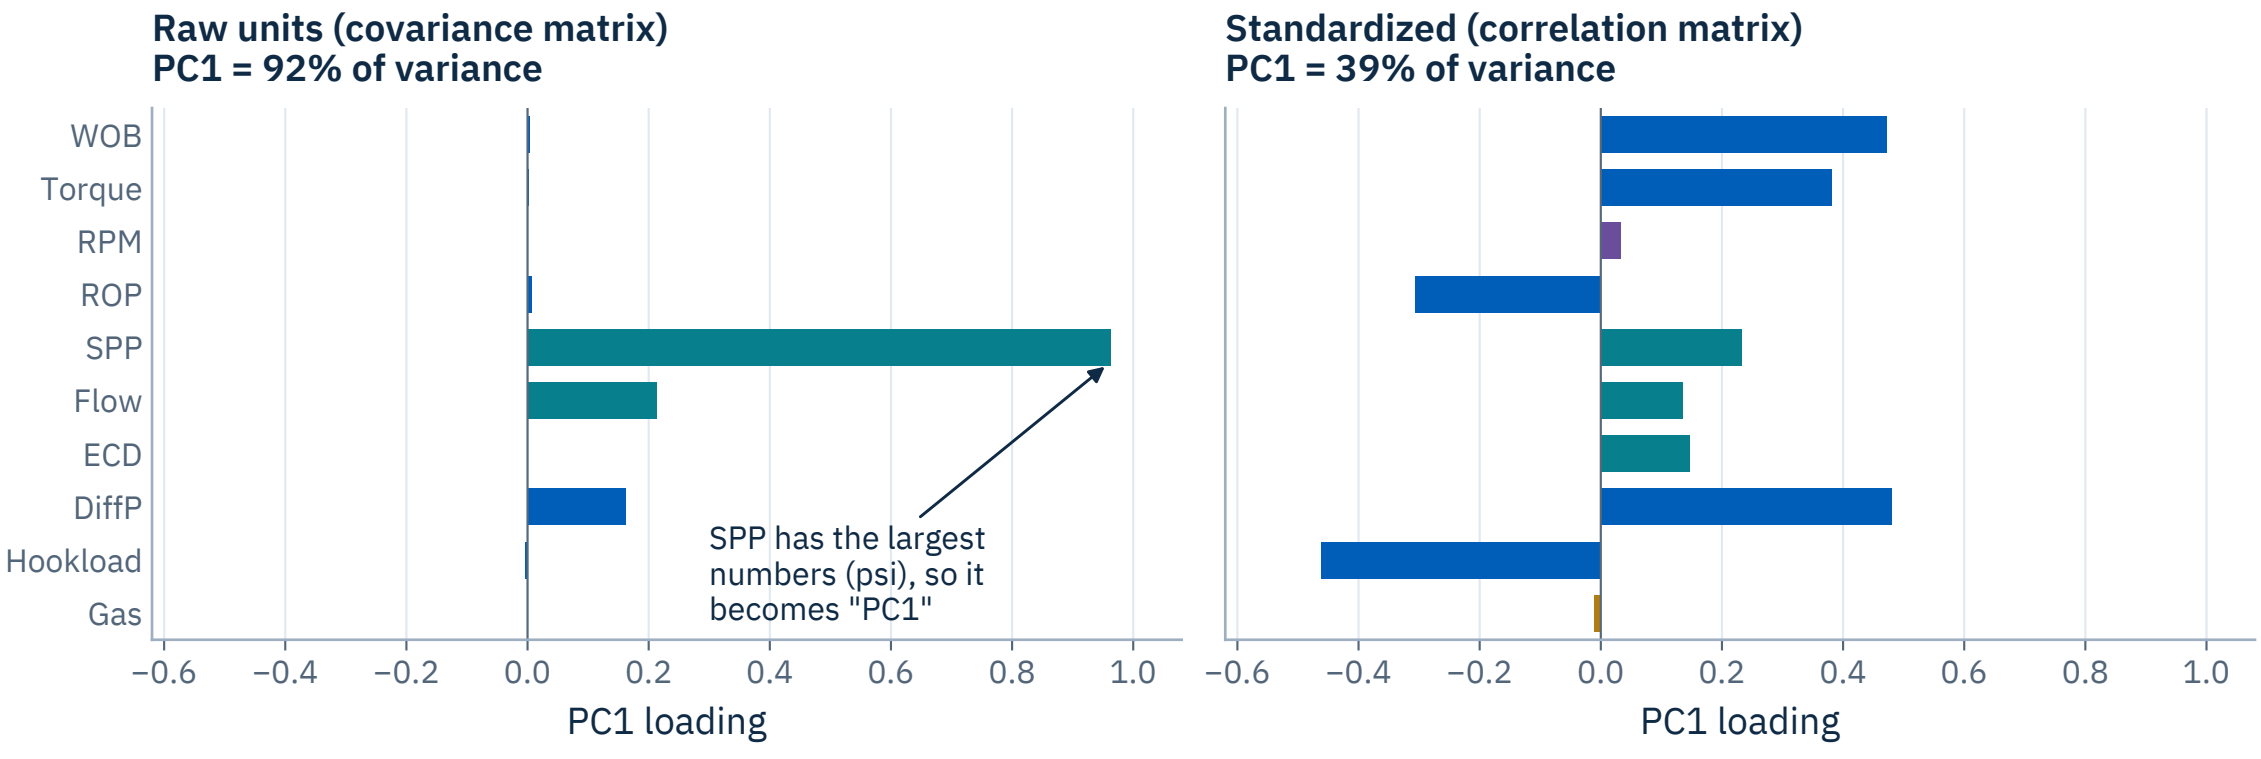
Raw units (covariance matrix)
PC1 = 92% of variance
WOB
Torque
RPM
ROP
SPP
Flow
ECD
DiffP
Hookload
Gas
SPP has the largest numbers (psi), so it becomes "PC1"
−0.6
−0.4
−0.2
0.0
0.2
0.4
0.6
0.8
1.0
PC1 loading
Standardized (correlation matrix)
PC1 = 39% of variance
−0.6
−0.4
−0.2
0.0
0.2
0.4
0.6
0.8
1.0
PC1 loading
Colour = hidden driver:
formation hardness
pump rate
rotary speed
none (independent)