


# **Description**

#### **Process schematic**

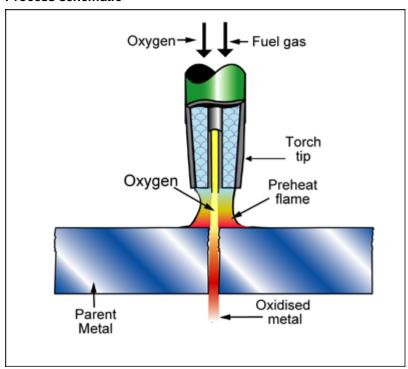

# Figure caption

Flame, or oxy-fuel gas cutting.

### The process

OXYFUEL GAS FLAME CUTTING is a metal cutting process in which a gas flame heats the surface to a sufficient temperature to trigger exothermic oxidation of the metal, sustained by an oxygen stream injected into the center of the flame. Thick plate can be cut.

### **Tradenames**

Oxy-fuel cutting, OFC

# **Material compatibility**

Metals - ferrous	✓
Metals - non-ferrous	✓

# **Shape**

Flat sheet	<b>√</b>
------------	----------

# **Economic compatibility**

Relative tooling cost	low
Relative equipment cost	low
Labor intensity	medium
Economic batch size (units)	1 - 1e6

# Physical and quality attributes



# Flame cutting

Range of section thickness	315	-	1.18e4	mil
Tolerance	39.4	-	118	mil
Roughness	0.248	-	3.15	mil
Surface roughness (A=v. smooth)	С			
Cutting speed	0.00394	-	1.97	in/s
Minimum cut width	118	-	197	mil

## **Process characteristics**

Machining processes	✓
Cutting processes	✓
Discrete	✓

# **Supporting information**

## Design guidelines

OFC used for cutting steel, cast iron and cast steel. Other iron-base alloys and some nonferrous metals can be flame cut, although process modification may be required. Generally the effectiveness of flame cutting decreases as carbon increases. Distortion is severe in plate thinner than 8mm.

#### Technical notes

Cutting occurs by a combination of oxidation and melting.

### Typical uses

Cutting plate for shipbuilding, structural fabrication, manufacture of earthmoving equipment, machinery construction, fabrication of pressure vessels and storage tanks.

### The economics

OFC is more economic than other forms of cutting for thick

## Links

MaterialUniverse

Reference