


Build Cable.
Install 2x20 right angle headers in Pi, pins facing out.
Using cable as a spacer:
Install 2x13 right angle header in tester, SOLDER SIDE, pins facing in.

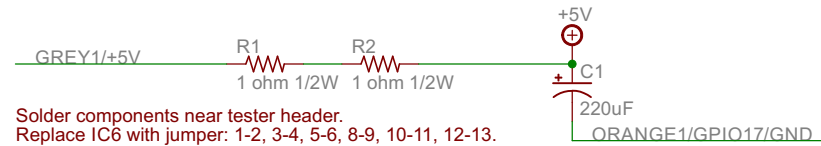

Solder components near tester header.
Replace IC6 with jumper: 1-2, 3-4, 5-6, 8-9, 10-11, 12-13.

