


FRONT — board mount + screen check

lay your board SCREEN-UP, USB edge to the LEFT

CALIBRATION: this bar must measure 100 mm

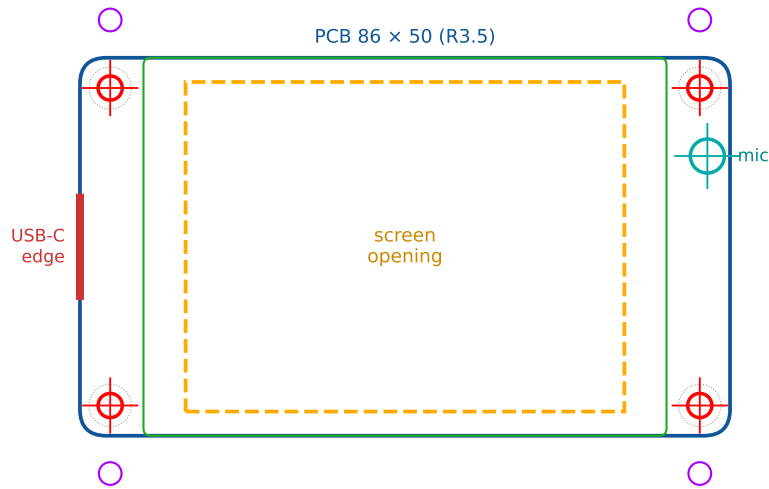


- Align your board outline to the blue rectangle (USB edge left).
- the 4 red holes must line up with your board's Ø3.2 mount holes
- the orange dashed opening should frame your display nicely
- purple ○ = bezel screws · dotted ○ = Ø5.6 head keep-out

BACK — connector position check (ESTIMATED!)

flip your board FACE-DOWN, USB edge to the RIGHT

CALIBRATION: this bar must measure 100 mm

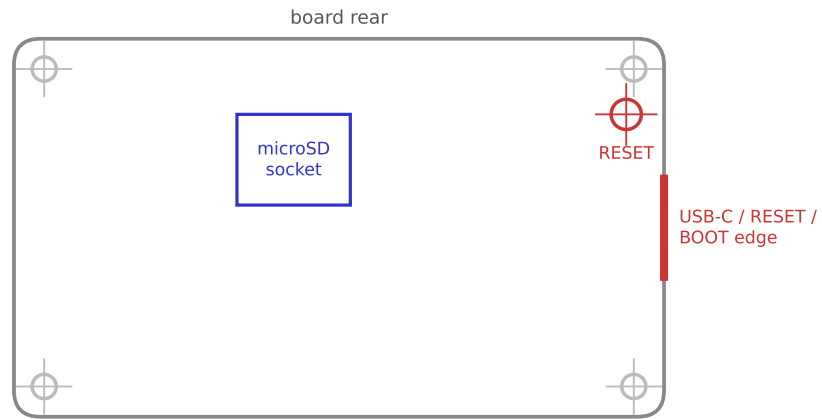

These positions are ESTIMATES from board photos — this page is the point. Lay your board face-down on the outline; check RESET ⊕ and microSD □ land on the real button / socket. If off: measure each from the nearest corner and tell me the numbers — they are one-line params (RESET_X/Y, SD_X/Y, MIC_X/Y).

USB-C panel jack — connector fit check

hold the JUXINICE female end against this outline

CALIBRATION: this bar must measure 100 mm



screws $\varnothing 2.5$ @ 17.0 mm
flange 25.2 $\times$ 8.2



Hold the panel-mount (female) end of the JUXINICE cable here. The flange, the 9 $\times$ 3.5 receptacle, and the two $\varnothing 2.5$ holes at 17 mm should all match. If they don't, tell me the real flange size / screw spacing (PANEL_* params).