


内腔防护焊接工序总装

HJ-DRW-008

PROCESS ASSEMBLY / ACCESS + SHIELD + CONTROLLED WITHDRAWAL
FILLER WIRE

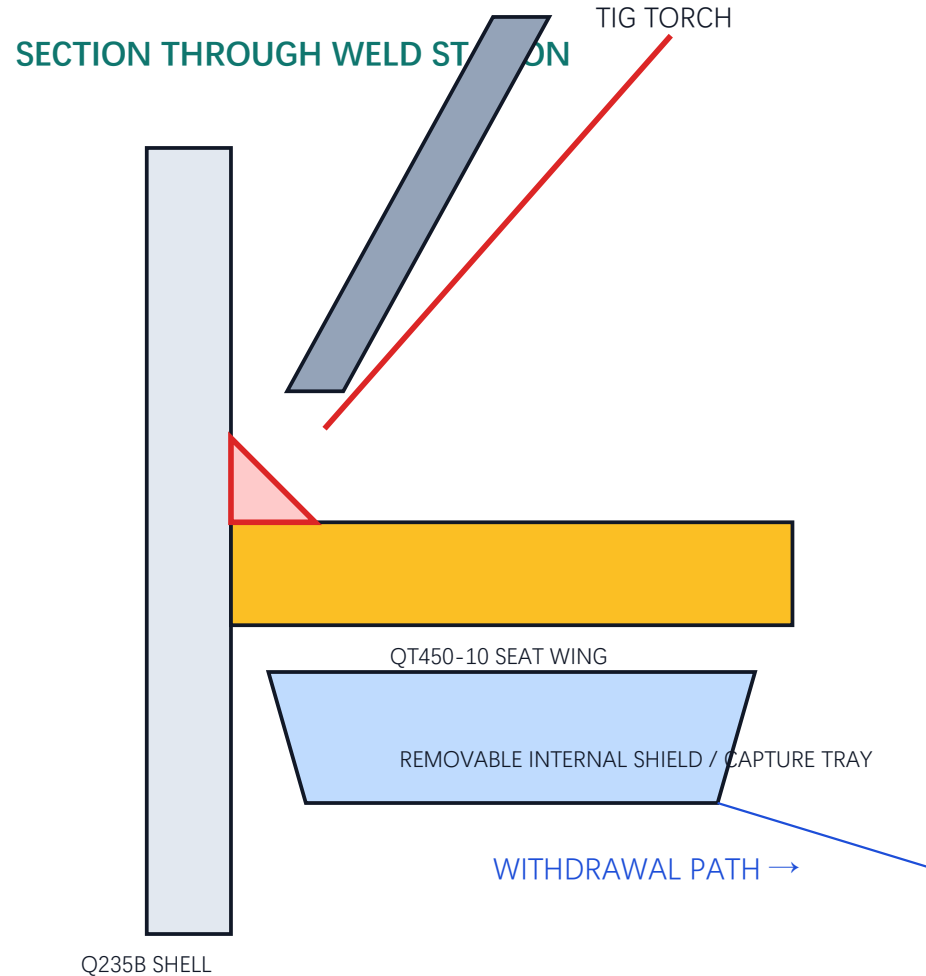

CONTROLLED PROCESS

- 1 Insert clean, low-shedding shield before seat locking
- 2 Verify torch/wire/gas clearance with dry run
- 3 Weld with shield retained below the joint
- 4 Cool and unlock fixture; keep capture face upward
- 5 Withdraw shield along shown path without inversion
- 6 Inspect shield inventory and borescope internal cavity

OPEN DESIGN ITEMS

Shield material, coating, gas-flow influence and clearances TBD

No cleanliness release without real spatter/debris trial

Protect machined bore and datum surfaces during insertion

MATERIAL: Process tooling concept; material and dimensions pending access trial

GENERAL TOLERANCE EXCLUDES FIT/CONTROLLED DIMS: ± 0.10 mm (design assumption; verify before release)

Functional assembly datums: A=seat/support plane; B=shell theoretical axis; C=independent clocking; design-review only.

STATUS: DESIGN-REVIEW