
Why corners

Signoff starts from a small set of process/voltage/temperature corners

The idea


- GOLDEN: corner_count=3

PVT triple

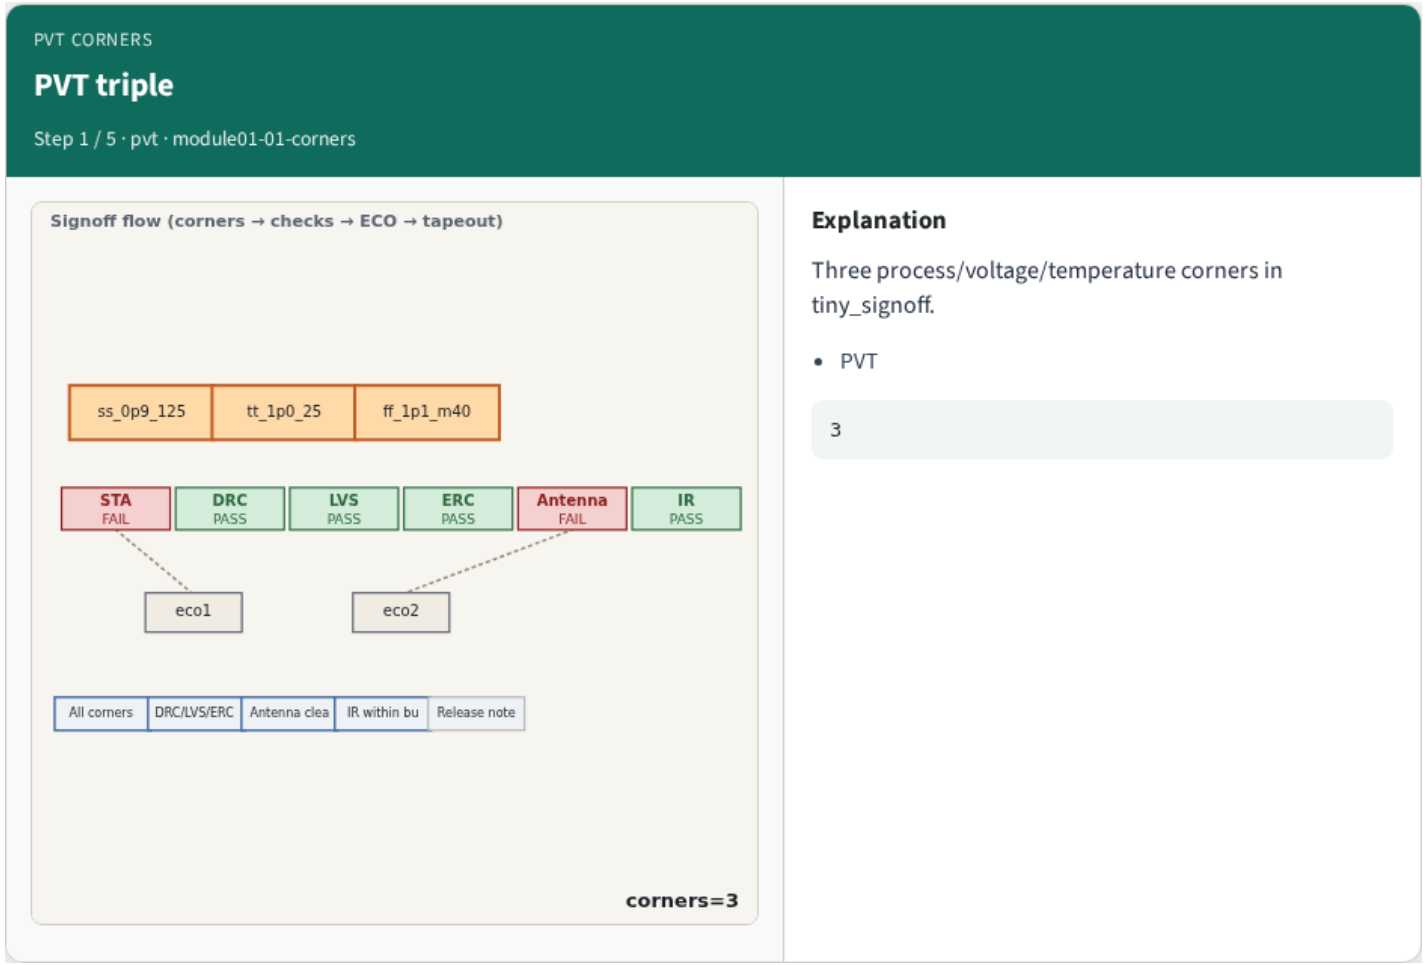

PVT triple

Slow slow

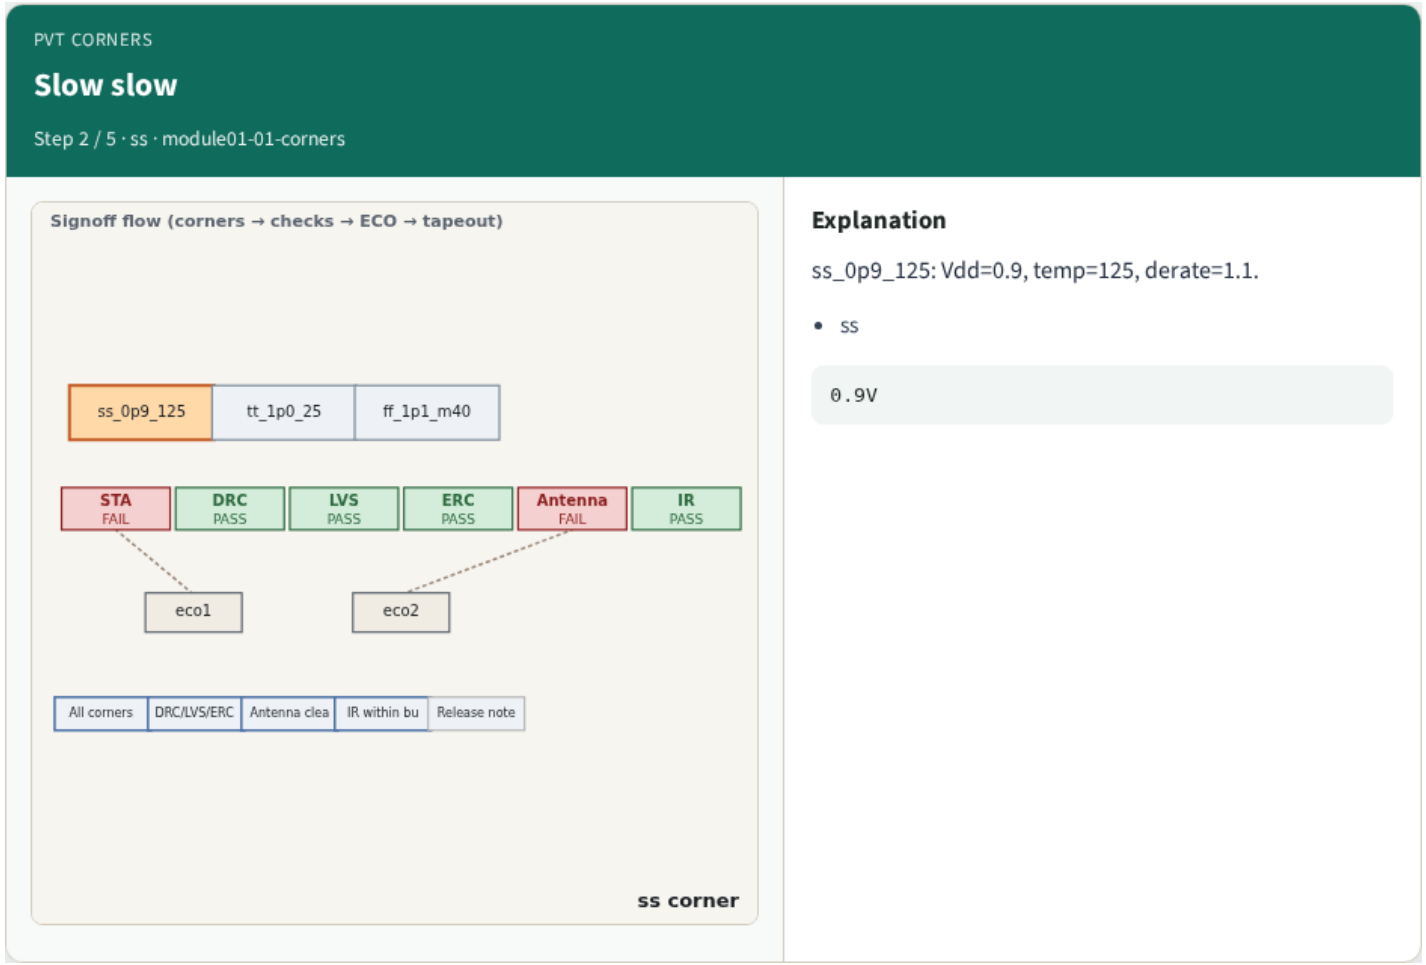


Slow slow

Typical

PVT CORNERS

Typical

Step 3 / 5 · tt · module01-01-corners

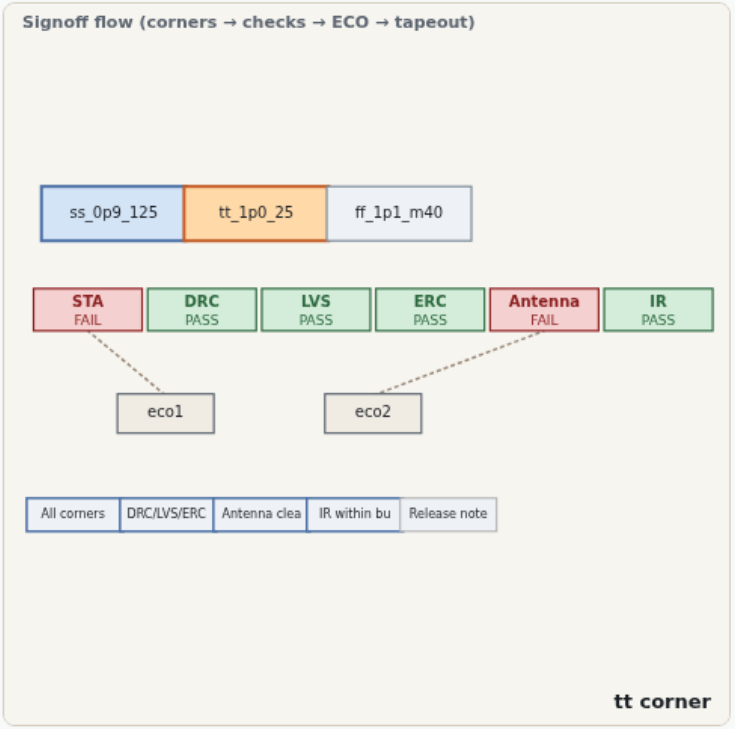

Explanation

tt_1p0_25: nominal Vdd and temp.

- tt

```
1.0V
```


Typical

Fast fast

PVT CORNERS

Fast fast

Step 4 / 5 · ff · module01-01-corners

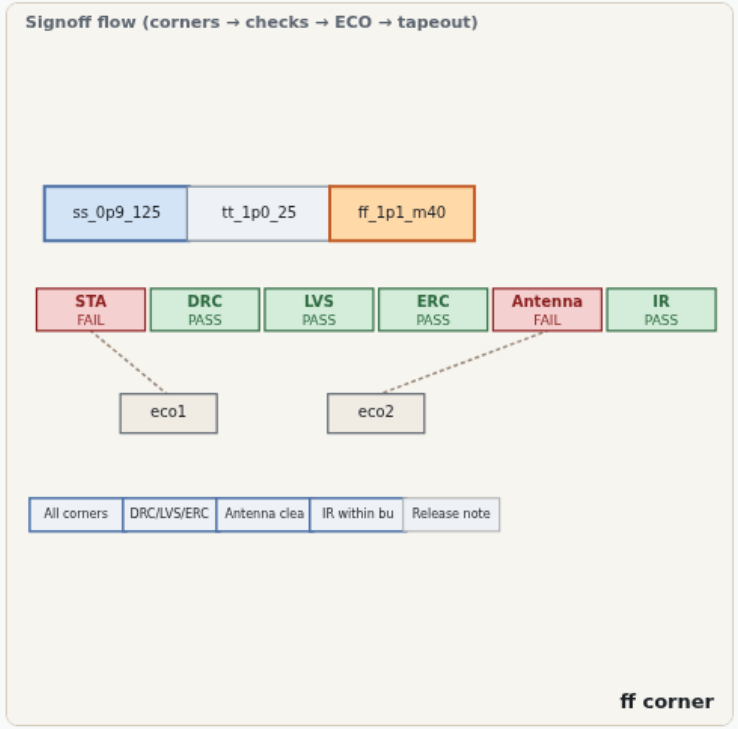

Explanation


ff_1p1_m40: fast process, low temp.

- ff

```
1.1V
```


Fast fast

Golden

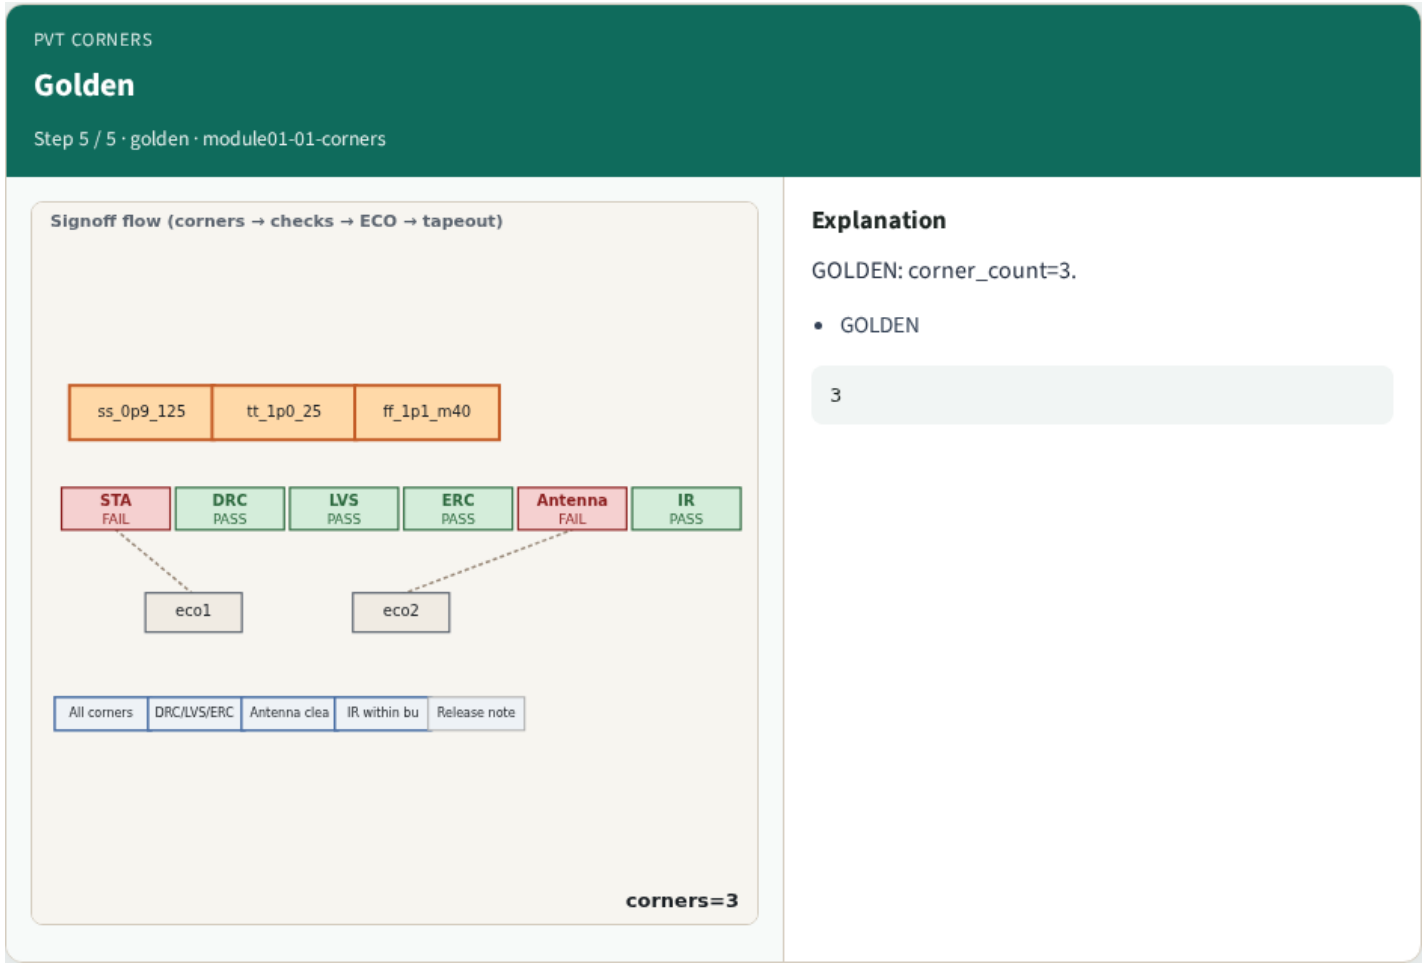

Golden

Browser lab track

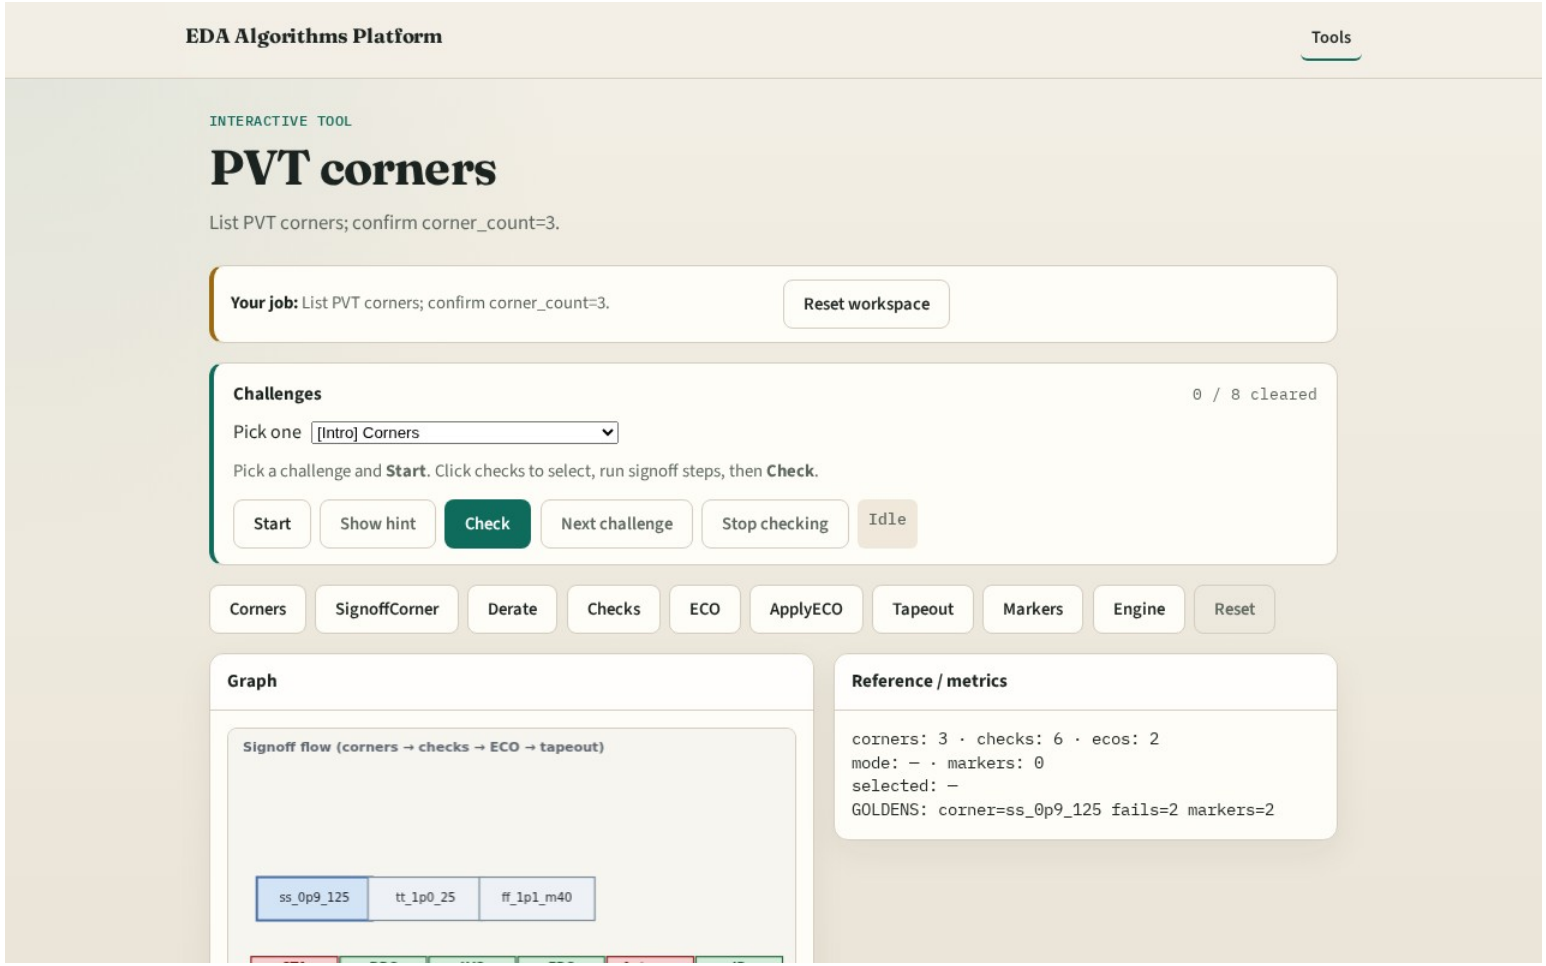

Browser lab starter

Implement track

- Call list_corners(); assert count==3

Pitfalls

- Confusing signoff corner with full MCMM
- Missing derate field

Your turn

- Next: pick signoff corner