


FB_RB156 [FB156]


FB_RB156 Properties							
General							
Name	FB_RB156	Number	156	Type	FB	Language	LAD
Numbering	Manual						
Information							
Title		Author		Comment		Family	
Version	0.1	User-defined ID					

Name	Data type	Default value	Retain	Accessible from HMI/OPC UA/Web API	Writ-able from HMI/OPC UA/ Web API	Visible in HMI engi-neering	Setpoint	Supervi-sion	Comment
Input									
Output									
InOut									
▼ Static									
ControlWord	Word	16#0	Non-retain	True	True	True	False		
SpeedReference	Int	0	Non-retain	True	True	True	False		
▼ TransferTime	TON_TIME		Non-retain	True	True	True	True		
PT	Time	T#0ms	Non-retain	True	True	True	False		
ET	Time	T#0ms	Non-retain	True	False	True	False		
IN	Bool	false	Non-retain	True	True	True	False		
Q	Bool	false	Non-retain	True	False	True	False		
Temp									
Constant									


Network 1: Determinacion de estados

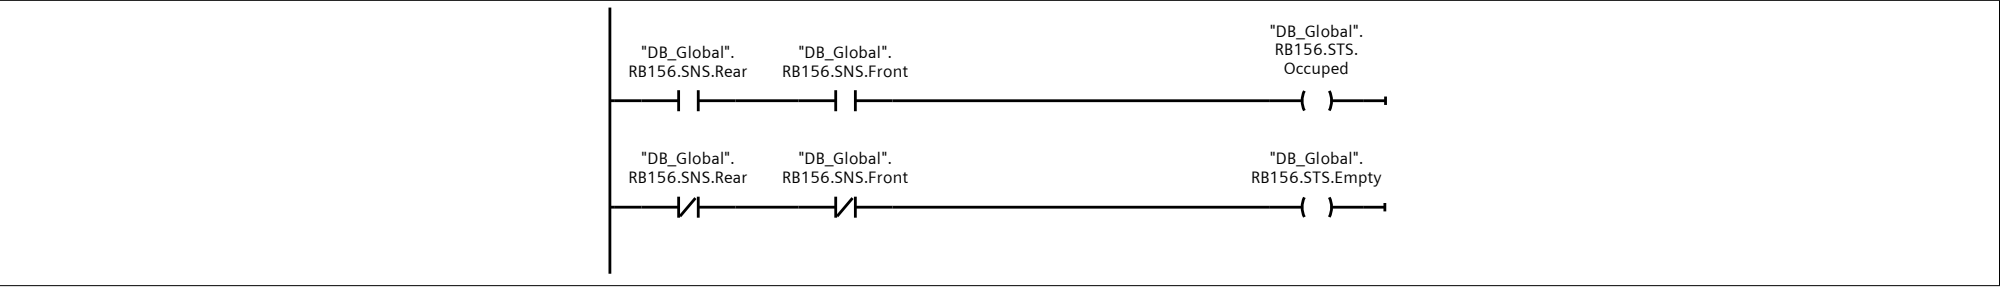


Network 2: Validacion de condiciones para transferir con el ascensor en alto

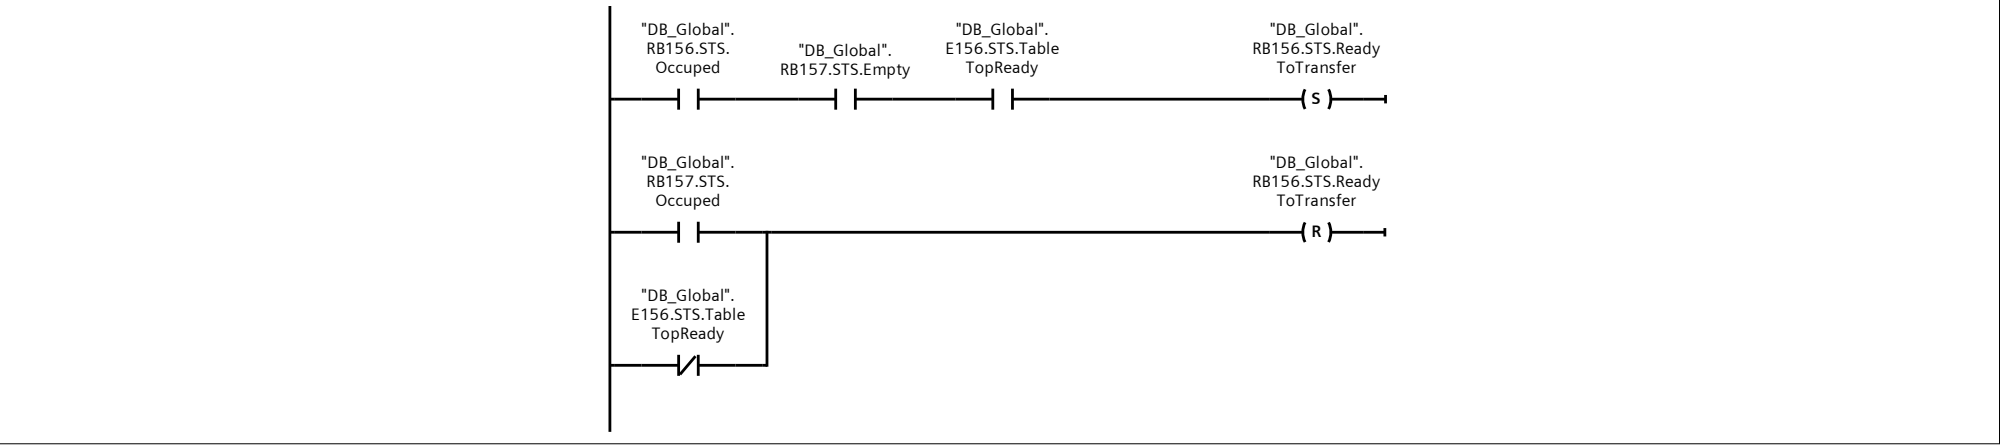


Network 3: Validacion de condiciones para transferir con el ascensor a mitad

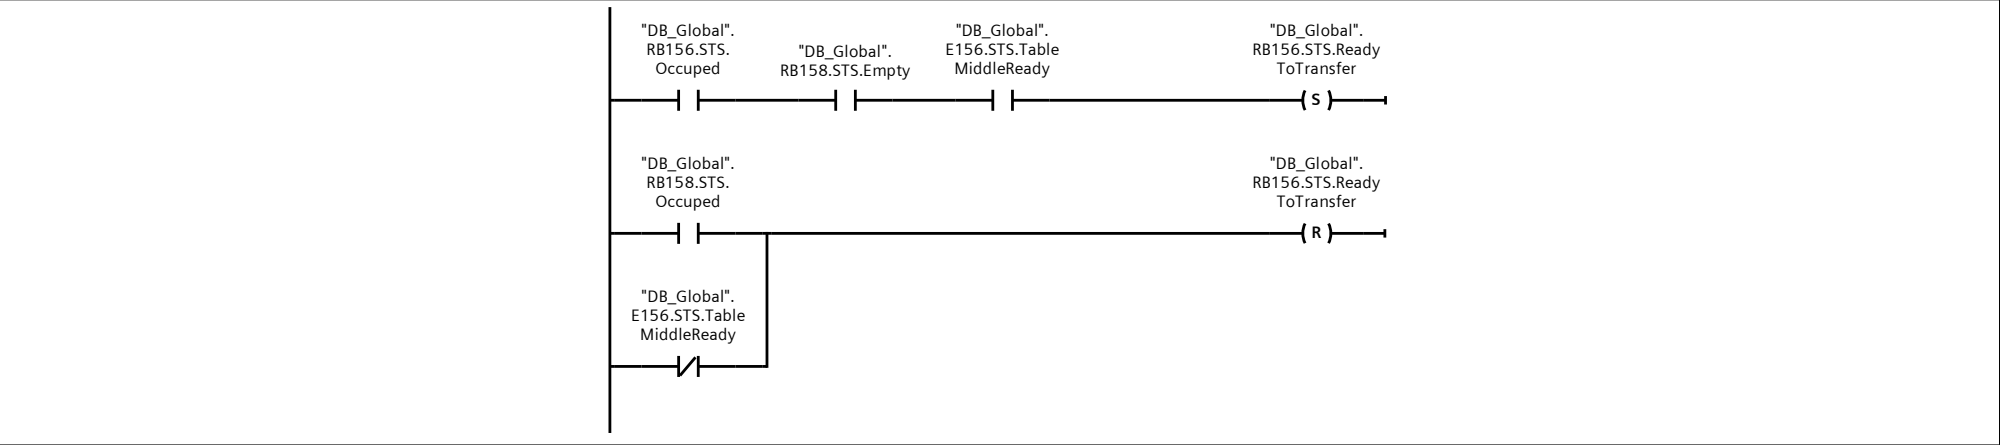


Network 4: Validacion de condicion para desaceleracion

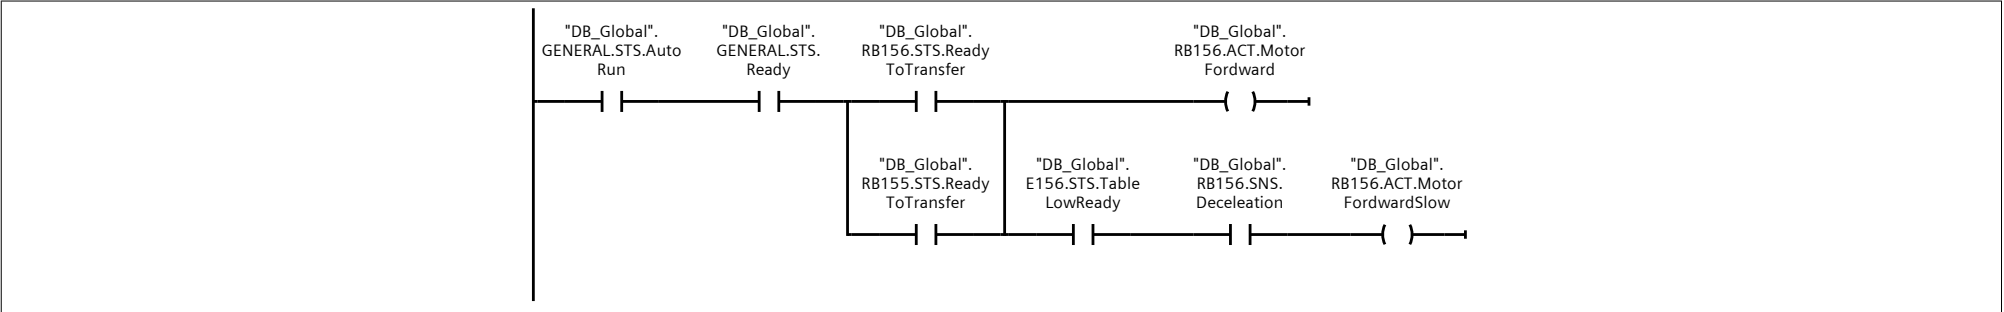

Network 5: Determinacion de movimientos en manual

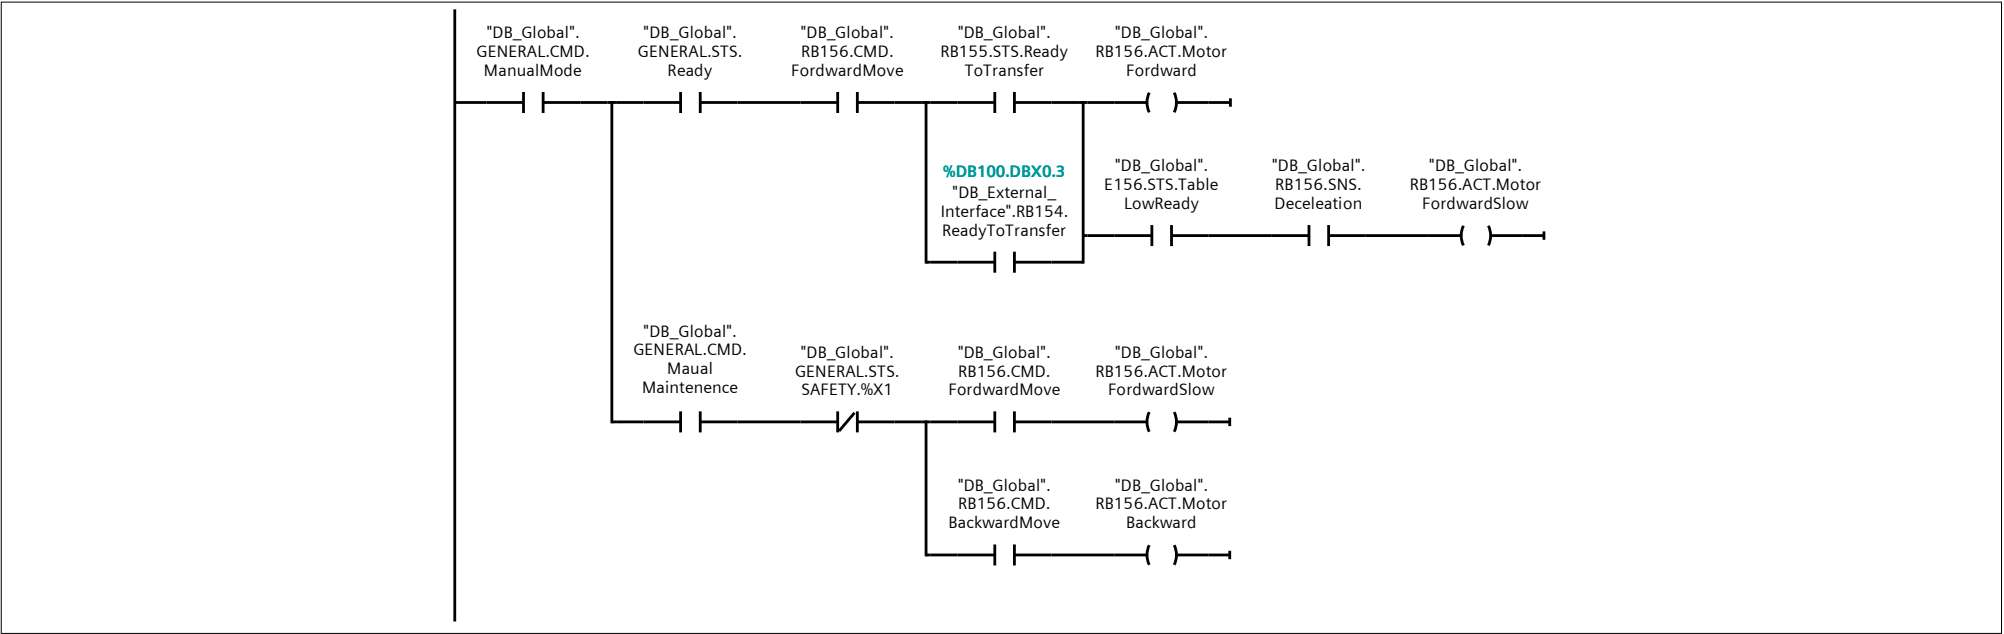

Network 6: Validacion de condiciones para hacer un set de transferencia en manual

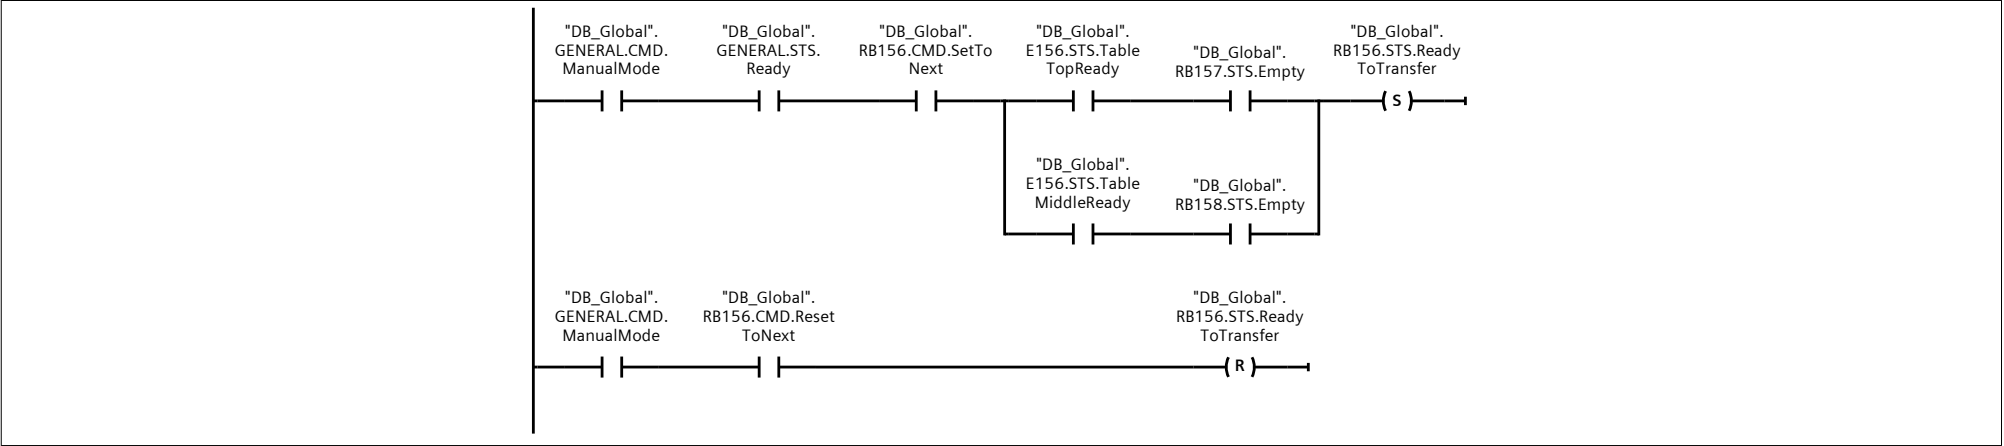


Network 7: Configuracion de telegrama de comunicacion de RB156_DRIVE

```
0001 // SPEED REFERENCE
0002 // 10000 -> 100%
0003 // 0 -> 0%
0004
0005 // CONTROL WORD COMPOSITION
0006 // 0: Enable
0007 // 1: Run
0008 // 2: QuickStop
0009 // 3: ResetFault
0010 // 4: Jog
0011 // 5: BreakeRelease
0012 // 6: Direction
0013 // 7: Null
0014
0015 #ControlWord.%X3 := "DB_Global".GENERAL.CMD.Reset;
0016
0017 IF "DB_Global".GENERAL.STS.SAFETY.%X1 = TRUE OR "DB_Global".GENERAL.STS.Fault = TRUE THEN
0018
0019     #ControlWord.%X0 := FALSE; // Enable
0020     #ControlWord.%X1 := FALSE; // Run
0021     #ControlWord.%X2 := TRUE; // QuickStop
0022     #ControlWord.%X5 := FALSE; // BreakeRelease
0023
0024     #SpeedReference := 0;
0025
0026 ELSIF "DB_Global".GENERAL.CMD.ManualMode = TRUE AND "DB_Global".GENERAL.CMD.MaualMaintenance = TRUE THEN
0027
0028     #ControlWord.%X0 := TRUE; // Enable
0029     #ControlWord.%X1 := FALSE; // Run
0030     #ControlWord.%X2 := FALSE; // QuickStop
0031     #ControlWord.%X4 := TRUE; // Jog
0032     #ControlWord.%X5 := TRUE; // BreakeRelease
```


Totally Integrated Automation Portal

```
0033     #ControlWord.%X6 := TRUE; // Direction
0034
0035     #SpeedReference := 2000;
0036
0037 ELSIF "DB_Global".GENERAL.CMD.ManualMode = TRUE AND "DB_Global".RB156.ACT.MotorFordward = TRUE AND "DB_Glob-
al".RB156.ACT.MotorFordwardSlow = TRUE THEN
0038
0039     #ControlWord.%X0 := TRUE; // Enable
0040     #ControlWord.%X1 := FALSE; // Run
0041     #ControlWord.%X2 := FALSE; // QuickStop
0042     #ControlWord.%X4 := TRUE; // Jog
0043     #ControlWord.%X5 := TRUE; // BreakeRelease
0044     #ControlWord.%X6 := TRUE; // Direction
0045
0046     #SpeedReference := 2000;
0047
0048 ELSIF "DB_Global".GENERAL.CMD.ManualMode = TRUE AND "DB_Global".RB156.ACT.MotorFordward = TRUE THEN
0049
0050     #ControlWord.%X0 := TRUE; // Enable
0051     #ControlWord.%X1 := FALSE; // Run
0052     #ControlWord.%X2 := FALSE; // QuickStop
0053     #ControlWord.%X4 := FALSE; // Jog
0054     #ControlWord.%X5 := TRUE; // BreakeRelease
0055     #ControlWord.%X6 := TRUE; // Direction
0056
0057     #SpeedReference := 10000;
0058
0059 ELSIF "DB_Global".GENERAL.CMD.ManualMode = TRUE AND "DB_Global".RB156.ACT.MotorBackward THEN
0060
0061     #ControlWord.%X0 := TRUE; // Enable
0062     #ControlWord.%X1 := FALSE; // Run
0063     #ControlWord.%X2 := FALSE; // QuickStop
0064     #ControlWord.%X4 := TRUE; // Jog
0065     #ControlWord.%X5 := TRUE; // BreakeRelease
0066     #ControlWord.%X6 := FALSE; // Direction
0067
0068     #SpeedReference := 2000;
0069
0070 ELSIF "DB_Global".GENERAL.STS.AutoRun = TRUE AND "DB_Global".RB156.ACT.MotorFordward AND "DB_Global".RB156.ACT.Motor-
FordwardSlow = TRUE THEN
0071
0072     #ControlWord.%X0 := TRUE; // Enable
0073     #ControlWord.%X1 := TRUE; // Run
0074     #ControlWord.%X2 := FALSE; // QuickStop
0075     #ControlWord.%X4 := FALSE; // Jog
0076     #ControlWord.%X5 := TRUE; // BreakeRelease
0077     #ControlWord.%X6 := TRUE; // Direction
0078
0079     #SpeedReference := 3000;
0080
0081 ELSIF "DB_Global".GENERAL.STS.AutoRun = TRUE AND "DB_Global".RB156.ACT.MotorFordward = TRUE THEN
0082
0083     #ControlWord.%X0 := TRUE; // Enable
0084     #ControlWord.%X1 := TRUE; // Run
0085     #ControlWord.%X2 := FALSE; // QuickStop
0086     #ControlWord.%X4 := FALSE; // Jog
0087     #ControlWord.%X5 := TRUE; // BreakeRelease
0088     #ControlWord.%X6 := TRUE; // Direction
0089
0090     #SpeedReference := 10000;
0091
0092 END_IF;
0093
0094 "DB_Global".RB156.DRIVE.ControlWord := #ControlWord;
0095 "DB_Global".RB156.DRIVE.SpeedReference := #SpeedReference;
```


Network 8:

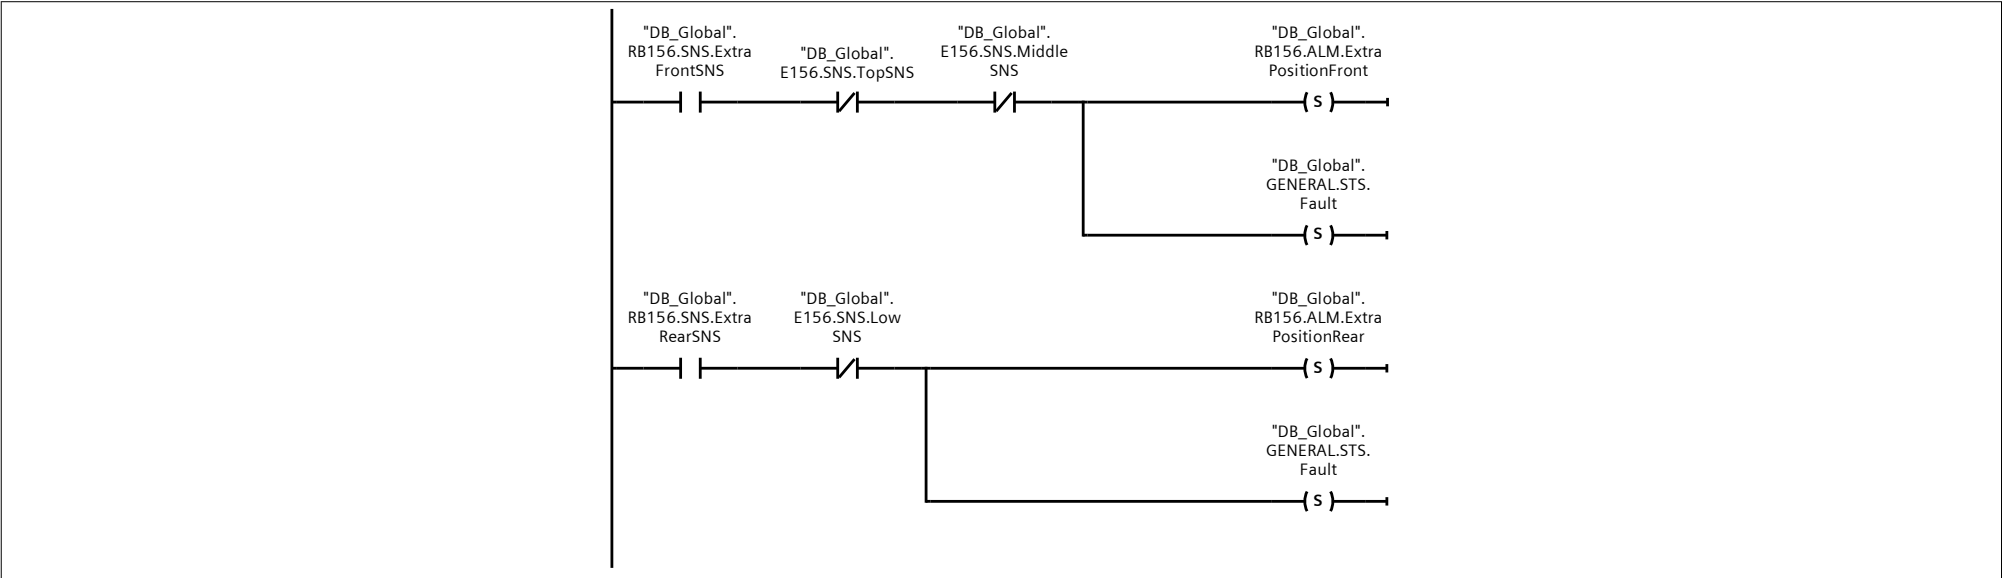

Network 9:

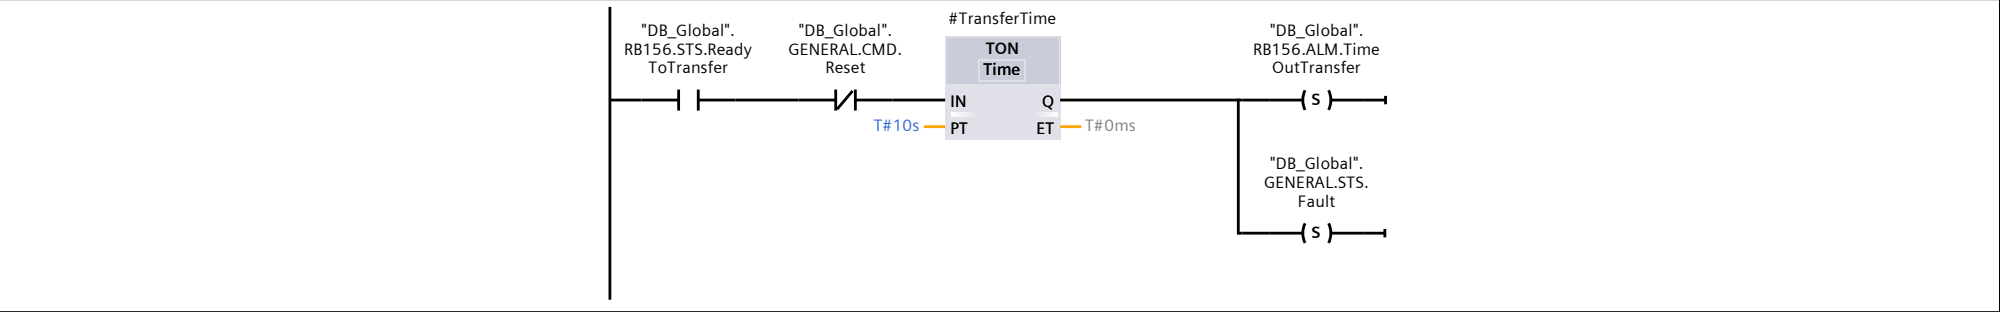

Network 10:

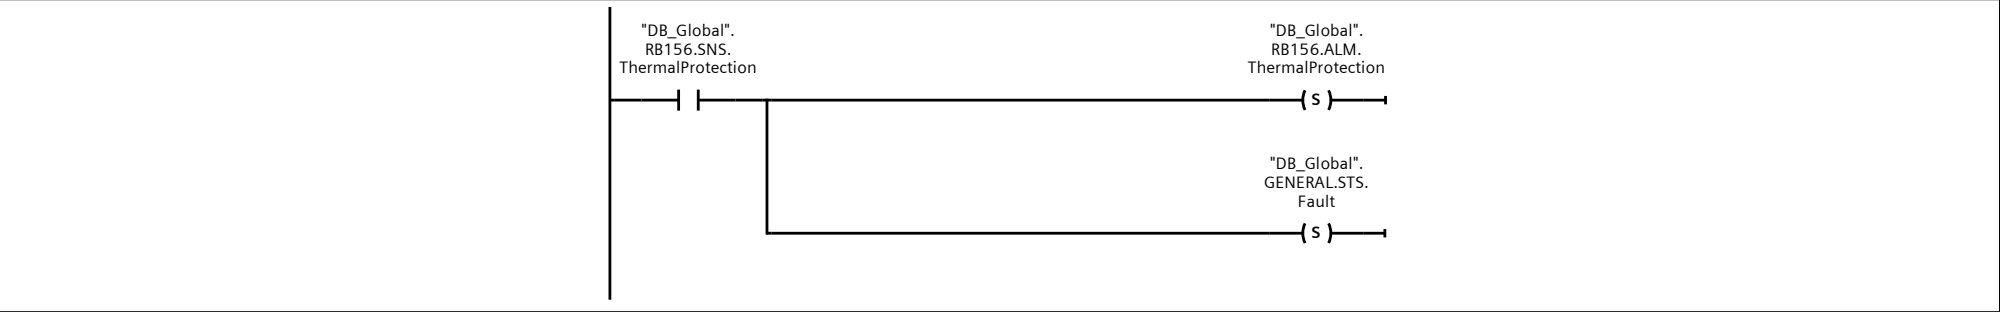

Network 11:



Network 12:

