

Configuración de Red — EMPRESA 1 (ITLA / CECOMPE) — v2

Ajustada a la topología real en PNETLAB

Nombres asumidos: tu diagrama tiene switches con nombre genérico "SW" repetido en Santiago y La Romana. Para evitar choque de sysname con SW4/SW5 (ya usados en Santo Domingo), en esta guía los llamo **SW6/SW7** (Santiago) y **SW8/SW9** (La Romana). Renómbralos así en PNETLAB antes de pegar, o dime los nombres reales y ajusto.

1. Mapa de interfaces (según tu topología)

Origen	Puerto	Destino	Puerto
R1 (R-CORE)	G0/0/2	NUBE (ISP)	—
R1	G0/0/0	SW4	GE1/0/6
R1	G0/0/1	SW5	GE1/0/6
SW4	GE1/0/5	SW5	GE1/0/5 (Eth-Trunk)
SW4	GE1/0/0	SW1	GE1/0/0
SW4	GE1/0/1	SW2	GE1/0/0
SW4	GE1/0/2	SW3	GE1/0/1
SW5	GE1/0/2	SW1	GE1/0/1
SW5	GE1/0/1	SW2	GE1/0/1
SW5	GE1/0/0	SW3	GE1/0/0
NUBE	GE1/0/0	SW6 (Santiago)	GE1/0/1
SW6	GE1/0/2	SW7	GE1/0/0 (Eth-Trunk)
SW6	GE1/0/2(2do)	SW7	GE1/0/1 (Eth-Trunk)
SW7	GE1/0/2	SERVER3 (FTP-RADIUS)	eth1
SW7	GE1/0/3	SERVER2 (MAIL)	eth1
SW7	GE1/0/4	SERVER1 (DNS-WEB-DHCP)	eth1
NUBE	—	R2 (ROMANA)	G0/0/0
R2	G0/0/1	SW8	GE1/0/0
SW8	GE1/0/2, GE1/0/1	SW9	GE1/0/1, GE1/0/0 (Eth-Trunk)
NUBE	—	SERVER4 (WEB-SERVER)	eth1 (IP pública directa)

2. Direccionamiento — ajustado

Las VLANs/departamentos **no cambian** respecto al plan anterior (mismo cálculo +40%). Lo que cambia es el **transporte público**, porque la NUBE ahora es un segmento compartido, no 3 enlaces /30 separados.

2.1 Segmento público de tránsito (NUBE) — 1.0.0.0/28

Dispositivo	IP pública
R1 (R-CORE), interfaz G0/0/2	1.0.0.1/28
SW6 (Santiago), interfaz hacia NUBE (VLANIF)	1.0.0.2/28
R2 (ROMANA), interfaz G0/0/0	1.0.0.3/28
SERVER4 (WEB-SERVER), eth1	1.0.0.4/28
Reservado crecimiento	1.0.0.5 – 1.0.0.14

Resto del bloque público (**1.0.0.16/28 en adelante**) queda reservado para NAT estático adicional si luego se requiere publicar otro servicio.

2.2 Privado — sin cambios

- Santo Domingo: **10.10.0.0/16** (Depto1 10.10.1.0/24, Depto4 10.10.2.0/25, Depto3 10.10.2.128/25, Depto2 10.10.3.0/25, Server/Mgmt 10.10.10.0/29)
- Santiago: **10.20.0.0/16** (Ventas 10.20.1.0/27, Centro Datos 10.20.1.32/28, Admin 10.20.1.48/28, Servers 10.20.2.0/29)
- La Romana: **10.30.0.0/16** (Depto2 10.30.1.0/25, Depto1 10.30.1.128/26, Depto3 10.30.1.192/28)

3. OSPF Multiárea (ajustado)

- **Área 0 (backbone):** el segmento público 1.0.0.0/28 sobre la NUBE. R1, SW6 y R2 son vecinos OSPF directos ahí (red de tipo broadcast).
- **Área 1:** LAN Santo Domingo. R1 = ABR (área 0 ↔ área 1).
- **Área 2:** LAN Santiago. SW6 = ABR (área 0 ↔ área 2) — **debe ser switch L3** (VLANIF + ip forward habilitado).
- **Área 3:** LAN La Romana. R2 = ABR (área 0 ↔ área 3).

R1 (R-CORE)

```
system-view
sysname R-CORE
#
aaa
local-user admin password cipher Admin@2026
local-user admin privilege level 15
local-user admin service-type ssh
rsa local-key-pair create
stelnet server enable
user-interface vty 0 4
authentication-mode aaa
protocol inbound ssh
idle-timeout 5 0
#
interface GigabitEthernet0/0/2
description WAN_to_NUBE_ISP
ip address 1.0.0.1 255.255.255.240
#
interface GigabitEthernet0/0/0
description Uplink_to_SW4
portswitch
port link-type trunk
port trunk allow-pass vlan 10 20 30 40 99
#
interface GigabitEthernet0/0/1
description Uplink_to_SW5
portswitch
port link-type trunk
port trunk allow-pass vlan 10 20 30 40 99
```

```
#  
  
interface Vlanif10  
  
ip address 10.10.1.1 255.255.255.0  
  
interface Vlanif20  
  
ip address 10.10.2.1 255.255.255.128  
  
interface Vlanif30  
  
ip address 10.10.2.129 255.255.255.128  
  
interface Vlanif40  
  
ip address 10.10.3.1 255.255.255.128  
  
interface Vlanif99  
  
ip address 10.10.10.1 255.255.255.248  
  
#  
  
dhcp enable  
  
ip pool DEPTO1  
  
network 10.10.1.0 mask 255.255.255.0  
  
gateway-list 10.10.1.1  
  
dns-list 10.20.2.2  
  
ip pool DEPTO4  
  
network 10.10.2.0 mask 255.255.255.128  
  
gateway-list 10.10.2.1  
  
dns-list 10.20.2.2  
  
ip pool DEPTO3  
  
network 10.10.2.128 mask 255.255.255.128  
  
gateway-list 10.10.2.129  
  
dns-list 10.20.2.2  
  
ip pool DEPTO2  
  
network 10.10.3.0 mask 255.255.255.128  
  
gateway-list 10.10.3.1  
  
dns-list 10.20.2.2
```

```

#
interface Vlanif10
    dhcp select global
interface Vlanif20
    dhcp select global
interface Vlanif30
    dhcp select global
interface Vlanif40
    dhcp select global
#
ospf 1 router-id 10.10.10.1
    area 0.0.0.1
        network 10.10.1.0 0.0.0.255
        network 10.10.2.0 0.0.0.255
        network 10.10.3.0 0.0.0.127
        network 10.10.10.0 0.0.0.7
    area 0.0.0.0
        network 1.0.0.0 0.0.0.15
#
acl number 3001
    rule 5 deny ip source 10.0.0.0 0.255.255.255 destination any
    rule 10 permit ip source any destination any
#
nat address-group 1 1.0.0.5 1.0.0.6
interface GigabitEthernet0/0/2
    nat outbound 3001 address-group 1

```

SW4 y SW5 (Distribución redundante — Santo Domingo)

```
system-view
sysname SW4
#
vlan batch 10 20 30 40 99
#
stp mode mstp
stp region-configuration
region-name ITLA-SD
instance 1 vlan 10 20 30 40 99
active region-configuration
quit
stp instance 1 priority 4096
#
interface Eth-Trunk 1
port link-type trunk
port trunk allow-pass vlan 10 20 30 40 99
#
interface GigabitEthernet1/0/5
eth-trunk 1
#
interface GigabitEthernet1/0/6
description Uplink_to_R1
port link-type trunk
port trunk allow-pass vlan 10 20 30 40 99
#
interface GigabitEthernet1/0/0
description a_SW1
port link-type trunk
port trunk allow-pass vlan 10 99
```

```

#
interface GigabitEthernet1/0/1
description a_SW2
port link-type trunk
port trunk allow-pass vlan 20 99
#
interface GigabitEthernet1/0/2
description a_SW3
port link-type trunk
port trunk allow-pass vlan 30 40 99
#
dhcp snooping enable
dhcp snooping enable vlan 10 20 30 40
interface GigabitEthernet1/0/6
dhcp snooping trusted
interface Eth-Trunk 1
dhcp snooping trusted
#
arp anti-attack check user-bind enable
stp bpdu-protection

```

SW5 es igual, cambiando: sysname SW5, stp instance 1 priority 8192 (secundario), puerto GigabitEthernet1/0/5 en el mismo Eth-Trunk 1, GigabitEthernet1/0/6 al R1 G0/0/1, y sus downlinks:

```

interface GigabitEthernet1/0/2 ! a SW1
interface GigabitEthernet1/0/1 ! a SW2
interface GigabitEthernet1/0/0 ! a SW3

```

(mismas VLAN allow-pass que su contraparte en SW4 para cada switch de acceso).

SW1, SW2, SW3 (Acceso, doble homing — Santo Domingo)

Plantilla (ejemplo SW1, VLAN 10 = Depto1):

```
system-view
```

```
sysname SW1
```

```
vlan batch 10 99
```

```
#
```

```
interface Vlanif99
```

```
ip address 10.10.10.2 255.255.255.248
```

```
ip route-static 0.0.0.0 0.0.0.0 10.10.10.1
```

```
#
```

```
interface GigabitEthernet1/0/0
```

```
description Uplink_a_SW4
```

```
port link-type trunk
```

```
port trunk allow-pass vlan 10 99
```

```
#
```

```
interface GigabitEthernet1/0/1
```

```
description Uplink_a_SW5_redundante
```

```
port link-type trunk
```

```
port trunk allow-pass vlan 10 99
```

```
#
```

```
interface GigabitEthernet1/0/2
```

```
port link-type access
```

```
port default vlan 10
```

```
port-security enable
```

```
port-security max-mac-num 2
```

```
port-security protect-action restrict
```

```
port-security mac-address sticky
```

```
stp edged-port enable
```

```
stp bpdu-protection
```

```
undo negotiation auto
```


quit

#

dhcp snooping enable

dhcp snooping enable vlan 10

- **SW2** → VLAN 20 (Depto4) en sus puertos de acceso.
- **SW3** → VLAN 30 y 40 (Depto3 y Depto2) repartidos en sus puertos de acceso, ya que sólo hay 3 switches físicos para 4 departamentos.

SW6 (Santiago — switch L3 / gateway de la sede)

Requiere que el modelo soporte ip forward y VLANIF (S5700 en adelante lo soportan).

system-view

sysname SW6

#

aaa

local-user admin password cipher Admin@2026

local-user admin privilege level 15

local-user admin service-type ssh

rsa local-key-pair create

stelnet server enable

user-interface vty 0 4

authentication-mode aaa

protocol inbound ssh

#

vlan batch 10 20 30 99

#

interface GigabitEthernet1/0/1

description WAN_to_NUBE

port link-type access

port default vlan 100

```
#
vlan 100
interface Vlanif100
ip address 1.0.0.2 255.255.255.240
#
interface Eth-Trunk 1
port link-type trunk
port trunk allow-pass vlan 10 20 30 99
interface GigabitEthernet1/0/2
eth-trunk 1
#
interface Vlanif10
ip address 10.20.1.1 255.255.255.224
interface Vlanif20
ip address 10.20.1.33 255.255.255.240
interface Vlanif30
ip address 10.20.1.49 255.255.255.240
interface Vlanif99
ip address 10.20.2.1 255.255.255.248
#
dhcp enable
ip pool VENTAS
network 10.20.1.0 mask 255.255.255.224
gateway-list 10.20.1.1
dns-list 10.20.2.2
dns-domain empresadelgrupo.com.do
ip pool CENTRO_DATOS
network 10.20.1.32 mask 255.255.255.240
gateway-list 10.20.1.33
```

```
dns-list 10.20.2.2
ip pool ADMIN
network 10.20.1.48 mask 255.255.255.240
gateway-list 10.20.1.49
dns-list 10.20.2.2
#
interface Vlanif10
dhcp select global
interface Vlanif20
dhcp select global
interface Vlanif30
dhcp select global
#
ospf 1 router-id 10.20.2.1
area 0.0.0.2
network 10.20.1.0 0.0.0.31
network 10.20.1.32 0.0.0.15
network 10.20.1.48 0.0.0.15
network 10.20.2.0 0.0.0.7
area 0.0.0.0
network 1.0.0.0 0.0.0.15
#
nat address-group 1 1.0.0.7 1.0.0.8
acl number 3002
rule 5 permit ip source 10.20.0.0 0.0.255.255
interface Vlanif100
nat outbound 3002 address-group 1
```

SW7 (Santiago — switch de servidores)

```
system-view
sysname SW7
vlan batch 99
#
interface Eth-Trunk 1
port link-type trunk
port trunk allow-pass vlan 99
interface GigabitEthernet1/0/0
eth-trunk 1
interface GigabitEthernet1/0/1
eth-trunk 1
#
interface GigabitEthernet1/0/2
description a_FTP-RADIUS
port link-type access
port default vlan 99
port-security enable
port-security max-mac-num 1
interface GigabitEthernet1/0/3
description a_MAIL
port link-type access
port default vlan 99
port-security enable
port-security max-mac-num 1
interface GigabitEthernet1/0/4
description a_DNS-WEB-DHCP
port link-type access
port default vlan 99
port-security enable
```

port-security max-mac-num 1

Direccionamiento de servidores (VLAN 99, 10.20.2.0/29):

- SERVER1 (DNS-WEB-DHCP) → **10.20.2.2**
- SERVER2 (MAIL) → **10.20.2.3**
- SERVER3 (FTP-RADIUS) → **10.20.2.4**

R2 (ROMANA)

system-view

sysname ROMANA

#

aaa

local-user admin password cipher Admin@2026

local-user admin privilege level 15

local-user admin service-type ssh

rsa local-key-pair create

stelnet server enable

user-interface vty 0 4

authentication-mode aaa

protocol inbound ssh

#

interface GigabitEthernet0/0/0

description WAN_to_NUBE

ip address 1.0.0.3 255.255.255.240

#

interface GigabitEthernet0/0/1

description LAN_to_SW8

portswitch

port link-type trunk

port trunk allow-pass vlan 10 20 30

```
#
interface Vlanif10
 ip address 10.30.1.1 255.255.255.128
interface Vlanif20
 ip address 10.30.1.129 255.255.255.192
interface Vlanif30
 ip address 10.30.1.193 255.255.255.240
#
dhcp enable
ip pool DEPTO2
 network 10.30.1.0 mask 255.255.255.128
 gateway-list 10.30.1.1
ip pool DEPTO1
 network 10.30.1.128 mask 255.255.255.192
 gateway-list 10.30.1.129
ip pool DEPTO3
 network 10.30.1.192 mask 255.255.255.240
 gateway-list 10.30.1.193
#
interface Vlanif10
 dhcp select global
interface Vlanif20
 dhcp select global
interface Vlanif30
 dhcp select global
#
ospf 1 router-id 10.30.1.1
 area 0.0.0.3
  network 10.30.1.0 0.0.0.255
```

```
area 0.0.0.0
 network 1.0.0.0 0.0.0.15
#
nat address-group 1 1.0.0.9 1.0.0.10
acl number 3003
 rule 5 permit ip source 10.30.0.0 0.0.255.255
interface GigabitEthernet0/0/0
 nat outbound 3003 address-group 1
```

SW8 y SW9 (La Romana — acceso en cadena)

```
system-view
sysname SW8
vlan batch 10 20 30
#
interface GigabitEthernet1/0/0
 description Uplink_a_R2
 port link-type trunk
 port trunk allow-pass vlan 10 20 30
#
interface Eth-Trunk 1
 port link-type trunk
 port trunk allow-pass vlan 10 20 30
interface GigabitEthernet1/0/1
 eth-trunk 1
interface GigabitEthernet1/0/2
 eth-trunk 1
#
dhcp snooping enable
dhcp snooping enable vlan 10 20 30
```

```
interface GigabitEthernet1/0/0
    dhcp snooping trusted
interface Eth-Trunk 1
    dhcp snooping trusted
system-view
sysname SW9
vlan batch 10 20 30
#
interface Eth-Trunk 1
    port link-type trunk
    port trunk allow-pass vlan 10 20 30
interface GigabitEthernet1/0/0
    eth-trunk 1
interface GigabitEthernet1/0/1
    eth-trunk 1
#
# Puertos de acceso a hosts de cada depto (ejemplo):
interface GigabitEthernet1/0/2
    port link-type access
    port default vlan 10
    port-security enable
    port-security max-mac-num 2
    stp edged-port enable
    stp bpdu-protection
#
dhcp snooping enable
dhcp snooping enable vlan 10 20 30
```

WEB-SERVER (SERVER4) — IP pública directa

No lleva configuración VRP (es un host). En el sistema operativo del servidor:

- IP: **1.0.0.4**, máscara **255.255.255.240**, gateway **1.0.0.1** (R1) — puede negociarse cualquier gateway del segmento, ya que es una red compartida; usar R1 como salida por defecto.
- Publicar el contenido web adjunto en el proyecto en el puerto 80/443.

VPN IPSec dinámica entre sedes (sobre el segmento público compartido)

Igual que en la v1, pero ahora **todos los túneles usan direcciones del mismo /28** (1.0.0.0/28) en vez de /30 separados:

En R1 (R-CORE), túnel hacia ROMANA:

```
acl number 3100
```

```
rule 5 permit ip source 10.10.0.0 0.0.255.255 destination 10.30.0.0 0.0.255.255
```

```
ike proposal 1
```

```
encryption-algorithm aes-256
```

```
authentication-algorithm sha2-256
```

```
dh group14
```

```
ike peer ROMANA
```

```
pre-shared-key cipher ITLA@2026
```

```
ike-proposal 1
```

```
remote-address 1.0.0.3
```

```
ipsec proposal PROP1
```

```
esp authentication-algorithm sha2-256
```

```
esp encryption-algorithm aes-256
```

```
ipsec policy POL-ROMANA 10 isakmp
```

```
security acl 3100
```

```
ike-peer ROMANA
```

```
proposal PROP1
```

```
interface GigabitEthernet0/0/2
```

```
ipsec policy POL-ROMANA
```

Repetir con ike peer SANTIAGO, remote-address 1.0.0.2, ACL 10.10.0.0/16 ↔ 10.20.0.0/16, aplicada también sobre GigabitEthernet0/0/2 (puede llevar **múltiples políticas en la misma interfaz** con distinto seq-number, ej. POL-SANTIAGO 20 isakmp). En **SW6** y **R2** replicar el peer apuntando de regreso a 1.0.0.1 (R-CORE).

Verificación

display ip interface brief

display ospf peer brief

display ospf routing

display stp brief

display eth-trunk 1

display dhcp server ip-in-use all

display ike sa

display ipsec sa

display port-security

Pruebas:

1. ping -a 10.10.1.1 10.20.1.1 (HQ → Santiago, debe cruzar túnel IPSec sobre 1.0.0.0/28)
2. ping -a 10.20.1.1 10.30.1.1 (Santiago → Romana)
3. ping 1.0.0.4 desde cualquier punto (alcance directo al WEB-SERVER)
4. Verificar recepción DHCP en un host de cada VLAN
5. Desconectar GigabitEthernet1/0/5 de SW4 (uno de los enlaces del Eth-Trunk) y confirmar que **no cae el tráfico** (el trunk sigue activo con el enlace restante)
6. Desconectar un uplink de SW1 hacia SW4 y verificar que MSTP conmuta al enlace hacia SW5 sin pérdida sostenida

Cuando termines de pegar, mándame display ospf peer brief de R1, SW6 y R2, más display eth-trunk 1 de SW4/SW5 y SW8/SW9 — con eso confirmo si la topología quedó con comunicación completa extremo a extremo.

El informe incluye:

1. **Análisis de los requisitos del proyecto.**
2. **Diseño lógico de la topología.**
3. **Plan de direccionamiento VLSM**, considerando el 40 % de crecimiento.
4. **VLAN para cada departamento.**
5. **Santo Domingo**
 - 4 departamentos.
 - HSRP.
 - EtherChannel.
 - STP.
 - OSPF.
6. **Santiago**
 - Centro de Datos.
 - Ventas.
 - Administración.
 - DNS.
 - DHCP.
 - WEB.
 - NFS/RADIUS.
 - Correo.
7. **La Romana**
 - 3 departamentos.
 - DHCP directamente desde el router.
8. **OSPF Multiárea**, con una propuesta de Área 0 y áreas regionales.
9. **Seguridad**
 - Port Security.
 - DHCP Snooping.
 - Dynamic ARP Inspection.

- BPDU Guard.
- Root Guard.

10. **Acceso remoto mediante SSH.**

11. **ACL.**

12. **VPN dinámica con IPSec/DMVPN.**

13. **Configuraciones Cisco simuladas** que puedes adaptar a PNETLab.

14. **Pruebas que debes ejecutar** y comandos show que debes capturar.

15. **Pruebas de fallos y redundancia.**

16. **Estructura de la cotización.**

17. **Conclusiones.**

18. **Lista de capturas que recomiendo incluir como evidencias.**

También tuve en cuenta algo importante: el PDF permite modificar el escenario cuando exista una **justificación documentada**, por lo que la topología propuesta puede utilizarse como diseño académico coherente y luego ajustarse a los dispositivos disponibles en PNETLab.

Direccionamiento que simulé

Por ejemplo, para Santo Domingo:

VLAN Departamento Hosts Con 40 % Red propuesta

110	Depto. 1	110	154	10.0.0.0/24
120	Depto. 2	51	72	10.0.1.0/25
130	Depto. 3	64	90	10.0.1.128/25
140	Depto. 4	80	112	10.0.2.0/25

Esto es importante porque **no basta con tomar los hosts actuales**. El proyecto pide explícitamente considerar un crecimiento del **40 % en cinco años**.

Cómo recomiendo elaborarlo en PNETLab

No te recomiendo intentar montar todo de una vez. Hazlo en este orden:

Fase 1 → Topología física

- Routers.
- Switches.
- Servidores.

- PCs.
- Enlaces WAN.

Fase 2 → Direccionamiento

- Configurar IP de interfaces.
- Verificar ping.
- Verificar show ip interface brief.

Fase 3 → Switching

- Crear VLAN.
- Trunks.
- EtherChannel.
- STP.

Fase 4 → Capa 3

- Inter-VLAN routing.
- HSRP.
- OSPF Multiárea.

Fase 5 → DHCP

- Pools.
- ip helper-address donde corresponda.
- Clientes obteniendo IP automáticamente.

Fase 6 → Servidores de Santiago

- DNS.
- DHCP.
- WEB.
- NFS.
- RADIUS.
- Correo.

Fase 7 → Seguridad

- Port Security.
- DHCP Snooping.

- DAI.
- BPDU Guard.
- ACL.
- SSH.

Fase 8 → VPN

- DMVPN.
- NHRP.
- IPSec.
- Pruebas entre sucursales.

Fase 9 → Pruebas

- Ping.
- Traceroute.
- OSPF.
- DHCP.
- DNS.
- WEB.
- RADIUS.
- VPN.
- Failover.




Fase 10 → Evidencias


- Capturas de pantalla.
- Comandos.
- Resultados.
- Explicación de cada resultado.

Un punto importante


En el informe dejé las configuraciones de VPN y otros elementos como **simulaciones/propuestas**, no como resultados reales. Esto es importante académicamente: no debemos escribir que show dmvpn, show crypto ipsec sa, OSPF, HSRP, etc. funcionan si todavía no los hemos ejecutado en PNETLab.

El PDF también solicita documentación de la topología, configuraciones, direccionamiento, descripción y justificación de los equipos y cotización.

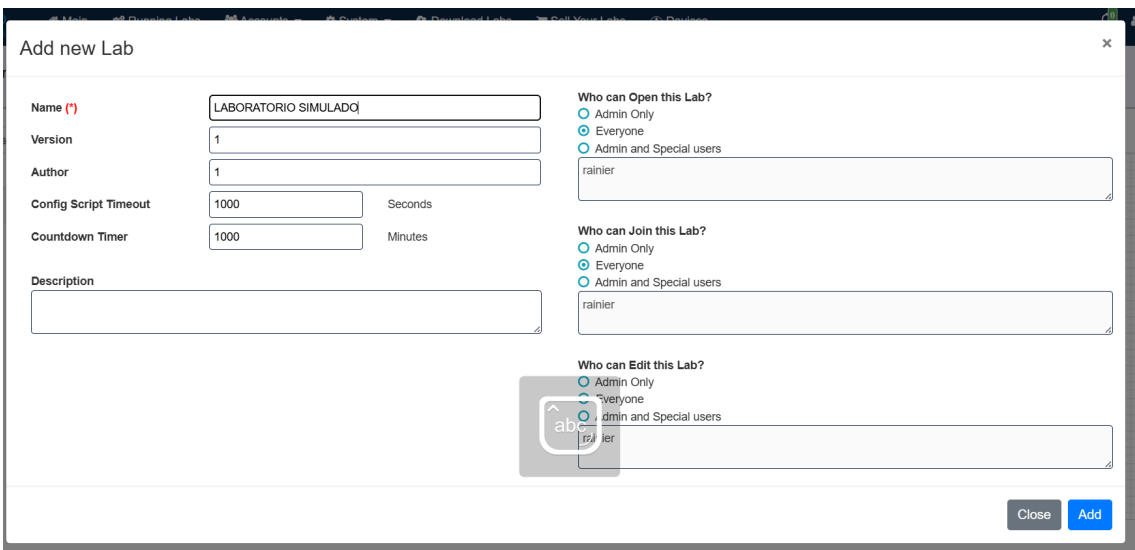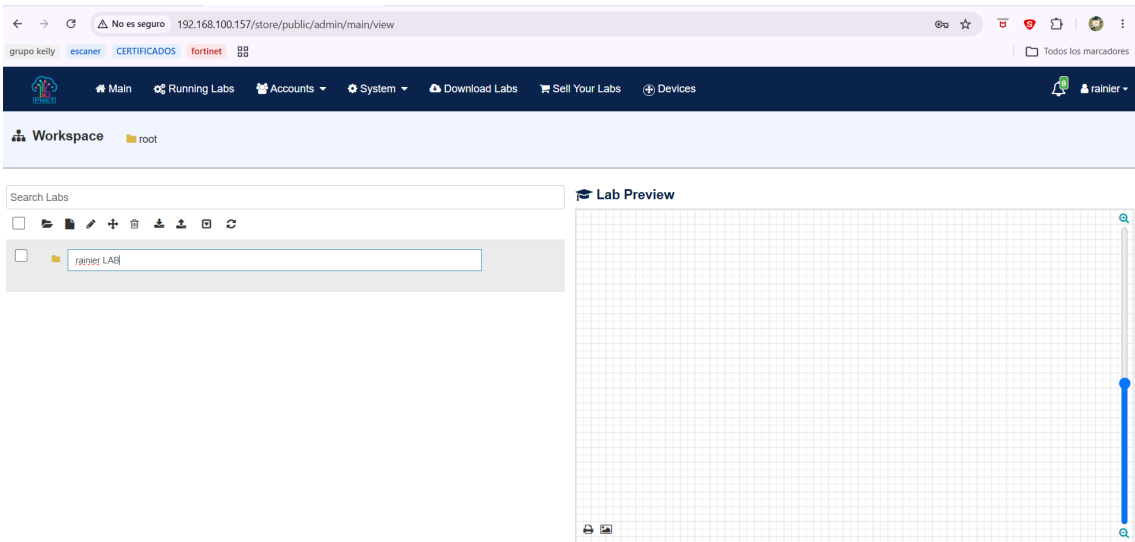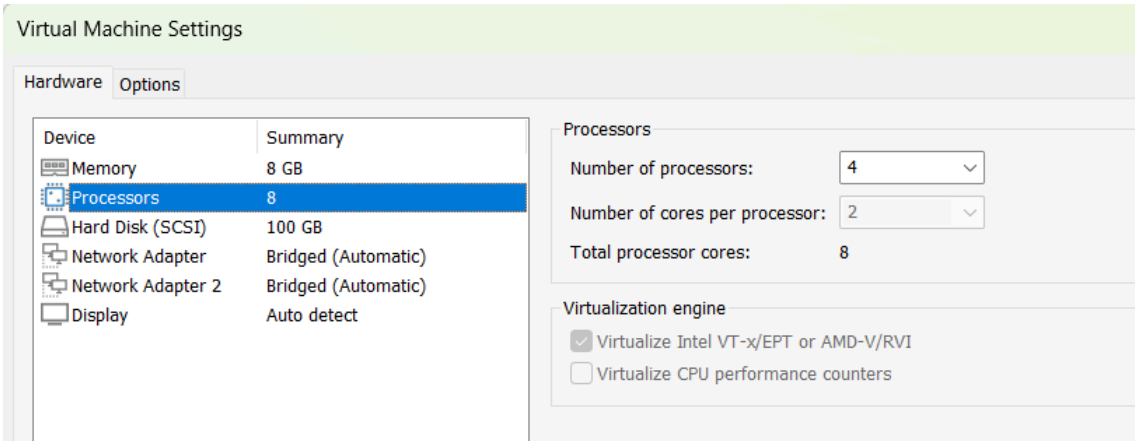


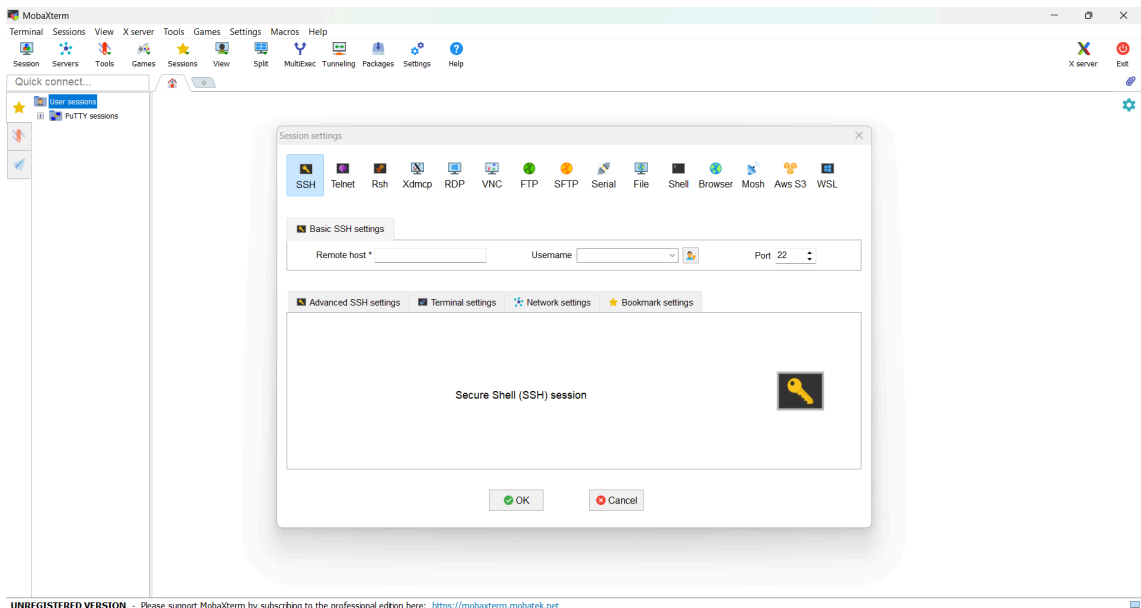

UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>

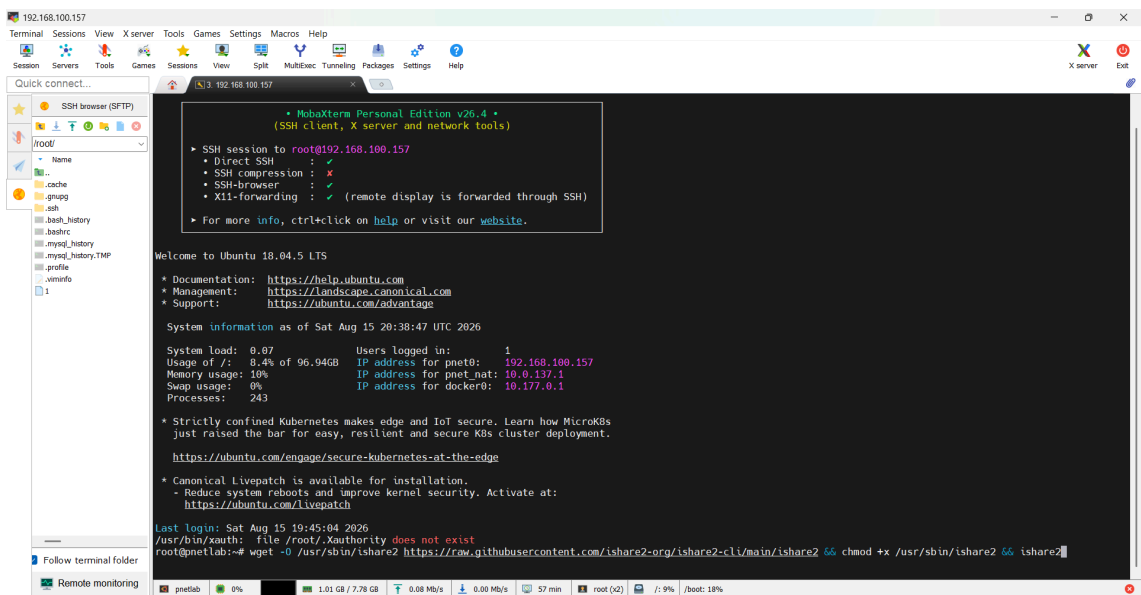

UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>

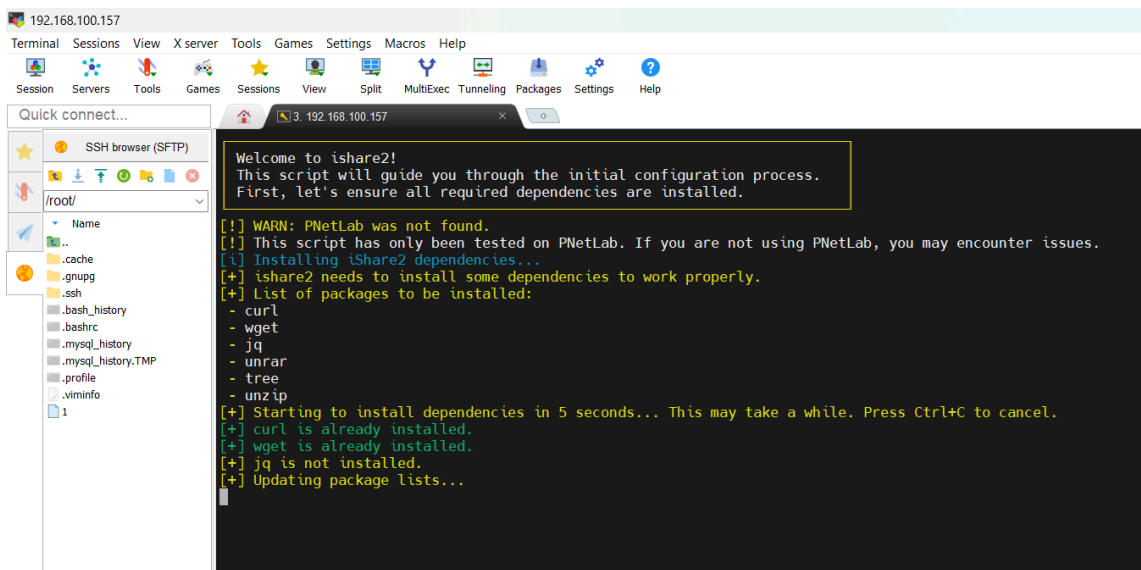


```
[?] Enable aria2c for accelerated downloads? (default: no)
[y/N]: n
[?] Perform SSL certificate validation for downloads? (default: yes)
[y/N]: n
[?] Select update channel (branch).
1) dev
2) main
[*] Enter the number of the desired branch (default: dev): 2
[✓] Branch selected: main
[i] Running 'ishare2 upgrade' to switch to this branch.

[!] Mirror Selection
iShare2 can download files from multiple mirror sources.

1) Automatically rotate mirrors for reliability
2) Always use: Google Drive mirror
3) Always use: legacy mirror
4) Always use: OneDrive mirror
5) Always use: secondary mirror

[?] Enter your choice (default: 1): 1
[✓] Mirror rotation enabled (4 sources).

Configuration completed successfully.
You can now start using ishare2.
[!] IMPORTANT:
- ishare2 is a free, open-source tool. If someone charged you for it, you've been scammed.
- Avoid unofficial sources. They may contain malicious code.

[i] Updating ishare2 to the selected 'main' branch...
[✓] iShare2 has been updated to the latest version from the 'main' branch.

MOTD from the ishare2 team:
Changelog:
```


```
See more methods to update on GitHub:
https://github.com/ishare2-org/ishare2-cli

[!] IMAGE INFO
Name       : huaweiwaf5k-VV200R001C00
Size       : 754.2 MiB
Type       : OEMU
Path       : /opt/unetlab/addons/qemu/huaweiwaf5k-VV200R001C00/
Host       : labhub.eu.org
Mirror     : main
/opt/unetlab/addons/qemu/huaweiwaf5k-VV2 100%[=====] 754.18M  2.18MB/s   in 5m 14s
[-] Running integrity checks for huaweiwaf5k-VV200R001C00.tgz...
[✓] The downloaded image is the expected size.
[✓] SHA1 hash is valid.
[✓] MD5 hash is valid.
[✓] Downloaded and verified: huaweiwaf5k-VV200R001C00.tgz!
[-] Extracting: huaweiwaf5k-VV200R001C00.tgz file...
[+] Extracted: /opt/unetlab/addons/qemu/huaweiwaf5k-VV200R001C00. Image ready to use.
[-] Fixing permissions...

[+] Fix permissions command has been executed correctly
[✓] Installation completed successfully!
root@pnetlab:~# ishare2 pull qemu 105

A newer version of ishare2 is available.
Current version: 4.0.1-main
Latest version: 4.0.1-dev
Run: ishare2 upgrade to update to the latest version.
See more methods to update on GitHub:
https://github.com/ishare2-org/ishare2-cli

[!] IMAGE INFO
Name       : huaweine40-ne40
Size       : 524.0 MiB
Type       : OEMU
Path       : /opt/unetlab/addons/qemu/huaweine40-ne40/
Host       : drive-labhub.eu.org
Mirror     : drive
/opt/unetlab/addons/qemu/huaweine40-ne40 100%[=====] 524.00M  2.37MB/s   in 3m 32s
[-] Running integrity checks for hda.qcow2...
```

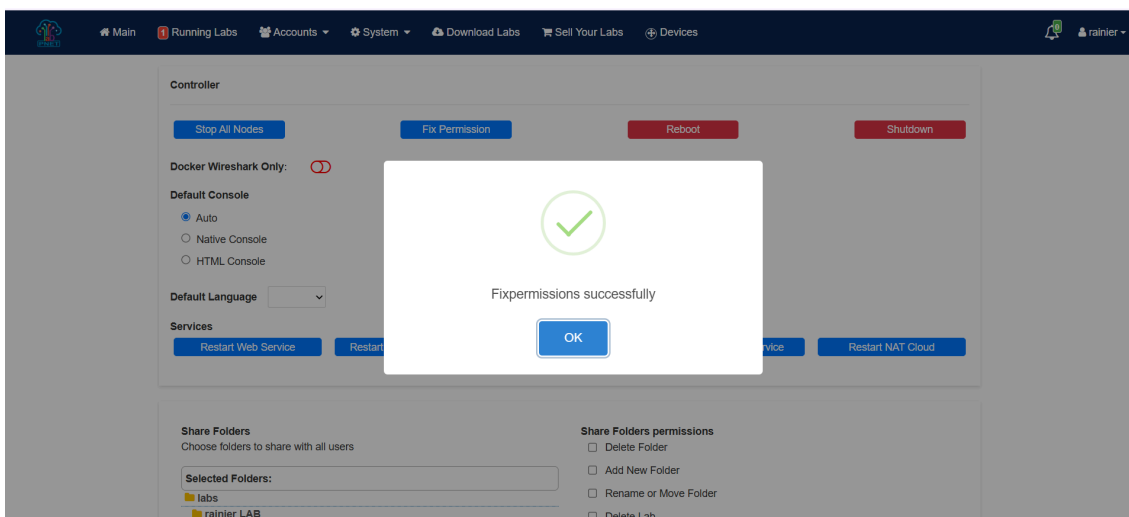

192.168.100.157 (root)

Terminal Sessions View X server Tools Games Settings Macros Help

Session Servers Tools Games Sessions View Split MultiExec Tunneling Packages Settings Help

Quick connect...

2. 192.168.100.157

3. 192.168.100.157 (root)

Escritorio
Inicio
Galería
pokedex - Personal
Descargas
Documentos
Escritorio
Imágenes
Música
Videos
pokedex reyes
Este equipo
Bibliotecas
Red
Panel de control
Papelerera de reciclaje
DESCARGAS 1
EVIDENCIA FTK
GNS3 LABS
HYPERVISORES
LAB - informatica inform...

Nombre Tamaño Tipo de elemento

Inicio
Galería
pokedex - Personal
Descargas
Documentos
Escritorio
Imágenes
Música
Videos
pokedex reyes
Este equipo
Bibliotecas
Red
Panel de control
Papelerera de reciclaje
DESCARGAS 1
EVIDENCIA FTK
GNS3 LABS
HYPERVISORES
LAB - informatica inform...

SSH authentication success!
SFTP connection started.
SSH server name: OpenSSH_7.6p1 Ubuntu-4ubuntu0.3
SFTP session started!
Opening directory root.
Open directory command received
Directory content listed

Name	Size (KB)	Last modified	Owner	Group	Access	Size (Bytes)
.						0
..						0
.cache		2026-08-15 15:34	root	root	drwxr-xr-x	4096
gnupg		2020-12-29 11:24	root	root	drwxr-xr-x	4096
ssh		2026-08-15 15:34	root	root	drwxr-xr-x	4096
bash_history	1	2026-08-15 20:25	root	root	-rw-r--r--	549
bashrc	3	2018-04-09 07:10	root	root	-rw-r--r--	3106
mysql_history	1	2020-12-29 12:14	root	root	-rw-r--r--	69
mysql_history.TMP	0	2021-01-01 01:29	root	root	-rw-r--r--	0
profile	1	2015-08-17 11:30	root	root	-rw-r--r--	148
viminfo	6	2021-01-13 08:42	root	root	-rw-r--r--	6190
wget-hsts	1	2026-08-15 16:42	root	root	-rw-r--r--	180
Xauthority	1	2026-08-15 20:22	root	root	-rw-r--r--	106
1	1	2021-03-12 09:14	root	root	-rw-r--r--	50


UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>


9:20 p. m.
15/8/2026

3. 192.168.100.157 (root)

/opt/unetlab/addons/qemu/uaaweice6800-ce6800/

Name	Size (KB)	Last modified	Owner	Group	Access	Size (Bytes)
..						0
virtioa.qcow2	665 728	2026-08-15 21:26	root	root	-rw-r--r--	681705472

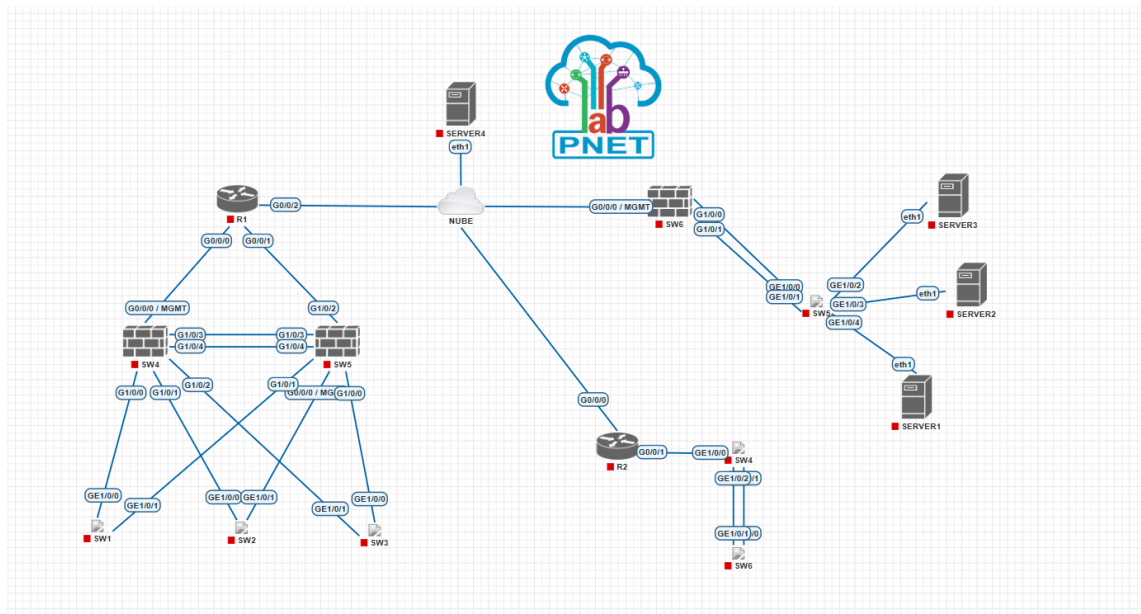

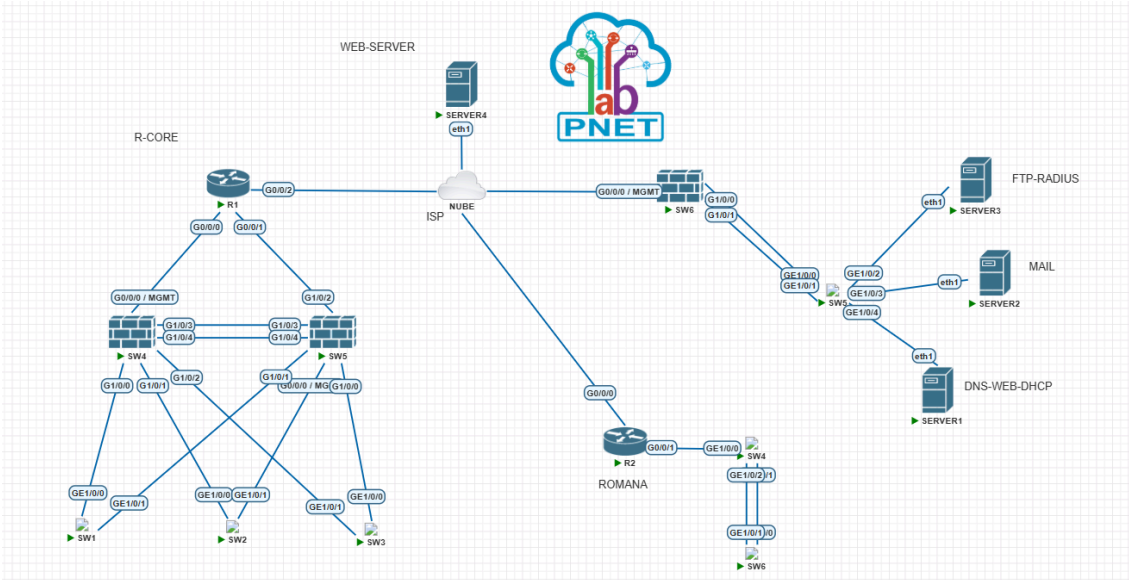

```
192.168.100.157 (ROMANA)
Terminal Sessions View X server Tools Games Settings Macros Help
Session Servers Tools Games Sessions View Split MultiExec Tunneling Packages Settings Help

Quick connect...
User sessions
  PUTTY sessions
    192.168.100.157
    192.168.100.157 (R-CORE)
    192.168.100.157 (ROMANA)
    192.168.100.157 (root)

Now boot from flash:/ar.cc, please wait.....
losetup: /mnt/flash/ar.cc: Warning: file does not fit into a 512-byte sector; the end of the file will be ignored.
executive app sqsdfhs

Create monitor process
Monitor Bsp so creation Data : Jun 10 2022, 11:39:54
FLASH_CreateFlashFile /mnt/misc/flashfile
Monitor Bsp so creation Data : Jun 10 2022, 11:39:54
FLASH_CreateFlashFile /mnt/misc/flashfile
Product environment init ... ok
Vrp Bsp so creation Data : Jun 10 2022, 11:39:54
FLASH_CreateFlashFile /mnt/misc/flashfile

DOPRA initialize.....
Info: The current cpu freq is 1796333952
OK
IPSI CRYPTO selftest.....OK
IAS initialize.....OK
VRP initialize
Connect to cap.....OK

Create tasks.....OK
Initialize tasks.....
Read elabel result.....0x810401ab0K
Recovering configuration.....OK

Press any key to get started

Please configure the login password
Enter Password(<8-128>):
Confirm password:
<Huawei>
<Huawei>
<Huawei>
```

UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>

```
192.168.100.157 (R-CORE)
Terminal Sessions View X server Tools Games Settings Macros Help
Session Servers Tools Games Sessions View Split MultiExec Tunneling Packages Settings Help

Quick connect...
User sessions
  PUTTY sessions
    192.168.100.157
    192.168.100.157 (R-CORE)
    192.168.100.157 (ROMANA)
    192.168.100.157 (root)

net0/0/0.20)
[R-CORE-GigabitEthernet0/0/0.20]
Jan 1 2017 00:30:34+00:00 R-CORE %01IFNET/4/LINK_STATE(1)[13]:The line protocol IP on the interface GigabitEthernet0/0/0.20 has entered the UP state.
[R-CORE-GigabitEthernet0/0/0.20]arp broadcast enable
Info: This interface has already been configured with ARP broadcast.
[R-CORE-GigabitEthernet0/0/0.20]quit
[R-CORE-Interface GigabitEthernet0/0/0.30]
[R-CORE-GigabitEthernet0/0/0.30] description VLAN30_DEPT03
[R-CORE-GigabitEthernet0/0/0.30]dot1q termination vid 30
[R-CORE-GigabitEthernet0/0/0.30]ip address 10.10.2.129 255.255.255.128
[R-CORE-GigabitEthernet0/0/0.30]
Jan 1 2017 00:39:37+00:00 R-CORE %01IFNET/4/LINK_STATE(1)[14]:The line protocol IP on the interface GigabitEthernet0/0/0.30 has entered the UP state.
[R-CORE-GigabitEthernet0/0/0.30]
Jan 1 2017 00:39:37+00:00 R-CORE IFNET/1/IF_LINKUP:OID 1.3.6.1.6.3.1.1.5.4 Interface 12 turned into UP state.(AdminStatus=1,OperStatus=1,InterfaceName=GigabitEthernet0/0/0.30)
[R-CORE-GigabitEthernet0/0/0.30]arp broadcast enable
Info: This interface has already been configured with ARP broadcast.
[R-CORE-GigabitEthernet0/0/0.30]quit
[R-CORE-Interface GigabitEthernet0/0/0.40]
[R-CORE-GigabitEthernet0/0/0.40]
Jan 1 2017 00:40:17+00:00 R-CORE %01DEFD/4/CPCAR_DROP MPU(1)[15]:Some packets are dropped by cpcar on the MPU. (Packet-type=nd, Drop-Count=196273)
[R-CORE-GigabitEthernet0/0/0.40]description VLAN40_DEPT02
[R-CORE-GigabitEthernet0/0/0.40]dot1q termination vid 40
[R-CORE-GigabitEthernet0/0/0.40]ip address 10.10.3.1 255.255.255.128
[R-CORE-GigabitEthernet0/0/0.40]
[R-CORE-GigabitEthernet0/0/0.40]
Jan 1 2017 00:40:49+00:00 R-CORE %01IFNET/4/LINK_STATE(1)[16]:The line protocol IP on the interface GigabitEthernet0/0/0.40 has entered the UP state.
[R-CORE-GigabitEthernet0/0/0.40]
Jan 1 2017 00:40:49+00:00 R-CORE IFNET/1/IF_LINKUP:OID 1.3.6.1.6.3.1.1.5.4 Interface 13 turned into UP state.(AdminStatus=1,OperStatus=1,InterfaceName=GigabitEthernet0/0/0.40)
[R-CORE-GigabitEthernet0/0/0.40]arp broadcast enable
Info: This interface has already been configured with ARP broadcast.
[R-CORE-GigabitEthernet0/0/0.40]quit
[R-CORE-Interface GigabitEthernet0/0/0.99]
[R-CORE-GigabitEthernet0/0/0.99]description VLAN99_MANAGEMENT
[R-CORE-GigabitEthernet0/0/0.99]dot1q termination vid 99
[R-CORE-GigabitEthernet0/0/0.99]ip address 10.10.10.1 255.255.255.248
[R-CORE-GigabitEthernet0/0/0.99]
Jan 1 2017 00:41:58+00:00 R-CORE %01IFNET/4/LINK_STATE(1)[17]:The line protocol IP on the interface GigabitEthernet0/0/0.99 has entered the UP state.
[R-CORE-GigabitEthernet0/0/0.99]
Jan 1 2017 00:41:58+00:00 R-CORE IFNET/1/IF_LINKUP:OID 1.3.6.1.6.3.1.1.5.4 Interface 14 turned into UP state.(AdminStatus=1,OperStatus=1,InterfaceName=GigabitEthernet0/0/0.99)
[R-CORE-GigabitEthernet0/0/0.99]
```

UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>

```
[R-CORE]save
Warning: The current configuration will be written to the device.
Are you sure to continue?[Y/N]:y
It will take several minutes to save configuration file, please wait.....
Configuration file had been saved successfully
Note: The configuration file will take effect after being activated
[R-CORE]
Jan 1 2017 00:55:41+00:00 R-CORE HWCN/4/CFGCHANGE:OID 1.3.6.1.4.1.2011.6.10.2.1 Configure changed. (EventIndex=1, CommandSource=1, ConfigSource=2, ConfigDestination=4)
[R-CORE]
```

[R-CORE]display saved-configuration

[V300R022C00SPC100]

#

sysname R-CORE

#

authentication-profile name default_authen_profile

authentication-profile name dot1x_authen_profile

authentication-profile name dot1xmac_authen_profile

authentication-profile name mac_authen_profile

authentication-profile name multi_authen_profile

authentication-profile name portal_authen_profile

#

dhcp enable

#

radius-server template default

#

pki realm default

certificate-check none

#

ssl policy default_policy type server

pki-realm default

version tls1.2

ciphersuite rsa_aes_128_sha256 rsa_aes_256_sha256 ecdhe_rsa_aes128_gcm_sha256
ecdhe_rsa_aes256_gcm_sha384

#

acl number 3001

rule 5 deny ip source 10.0.0.0 0.255.255.255

rule 10 permit ip

```
#
ike proposal default
  encryption-algorithm aes-256 aes-192 aes-128
  dh group14
  authentication-algorithm sha2-512 sha2-384 sha2-256
  authentication-method pre-share
  integrity-algorithm hmac-sha2-256
  prf hmac-sha2-256
```

```
#
free-rule-template name default_free_rule
```

```
#
portal-access-profile name portal_access_profile
```

```
#
ip pool depto1
  gateway-list 10.10.1.1
  network 10.10.1.0 mask 255.255.255.0
  dns-list 10.20.2.2
```

```
#
ip pool depto4
  gateway-list 10.10.2.1
  network 10.10.2.0 mask 255.255.255.128
  dns-list 10.20.2.2
```

```
#
ip pool depto3
  gateway-list 10.10.2.129
  network 10.10.2.128 mask 255.255.255.128
  dns-list 10.20.2.2
```

```
#
ip pool depto2
```

```
gateway-list 10.10.3.1
network 10.10.3.0 mask 255.255.255.128
dns-list 10.20.2.2
#
aaa
authentication-scheme default
authentication-mode local
authentication-scheme radius
authentication-mode radius
authorization-scheme default
authorization-mode local
accounting-scheme default
accounting-mode none
local-aaa-user password policy administrator
domain default
authentication-scheme default
accounting-scheme default
radius-server default
domain default_admin
authentication-scheme default
accounting-scheme default
local-user admin password irreversible-cipher
$1a$KxU8>Fh&u#$n~8qG|*4'Is=xI"x<pE=y"@Xv!pnF8U#p>TyQ0+$
local-user admin privilege level 15
local-user admin service-type ssh
#
firewall zone Local
#
nat address-group 1 1.0.0.5 1.0.0.6
```

#

mi-server

#

interface GigabitEthernet0/0/0

description Uplink_to_SW4

#

interface GigabitEthernet0/0/0.10

description VLAN10_DEPT01

dot1q termination vid 10

ip address 10.10.1.1 255.255.255.0

dhcp select global

#

interface GigabitEthernet0/0/0.20

description VLAN20_DEPT04

dot1q termination vid 20

ip address 10.10.2.1 255.255.255.128

dhcp select global

#

interface GigabitEthernet0/0/0.30

description VLAN30_DEPT03

dot1q termination vid 30

ip address 10.10.2.129 255.255.255.128

dhcp select global

#

interface GigabitEthernet0/0/0.40

description VLAN40_DEPT02

dot1q termination vid 40

ip address 10.10.3.1 255.255.255.128

dhcp select global


```
#
interface GigabitEthernet0/0/0.99
description VLAN99_MANAGEMENT
dot1q termination vid 99
ip address 10.10.10.1 255.255.255.248
#
interface GigabitEthernet0/0/1
description Uplink_to_SW5
#
interface GigabitEthernet0/0/2
description WAN_to_NUBE_ISP
ip address 1.0.0.1 255.255.255.240
nat outbound 3001 address-group 1
#
interface GigabitEthernet0/0/3
#
interface GigabitEthernet0/0/4
#
interface GigabitEthernet0/0/5
#
interface GigabitEthernet0/0/6
description VirtualPort
#
interface NULL0
#
ospf 1 router-id 10.10.10.1
area 0.0.0.0
network 1.0.0.0 0.0.0.15
area 0.0.0.1
```

```
network 10.10.1.0 0.0.0.255
network 10.10.2.0 0.0.0.127
network 10.10.2.128 0.0.0.127
network 10.10.3.0 0.0.0.127
network 10.10.10.0 0.0.0.7
#
undo icmp name timestamp-request receive
#
snmp-agent local-engineid 800007DB0300000000000000
snmp-agent trap enable
#
ssh user admin authentication-type password
stelnet server enable
ssh server permit interface GigabitEthernet0/0/0
#
fib regularly-refresh disable
#
user-interface con 0
authentication-mode aaa
user-interface vty 0
authentication-mode aaa
user privilege level 15
protocol inbound ssh
user-interface vty 1 4
authentication-mode aaa
protocol inbound ssh
#
dot1x-access-profile name dot1x_access_profile
#
```

mac-access-profile name mac_access_profile

#

ops

#

autostart

#


secelog

#

ms-channel

#

Return

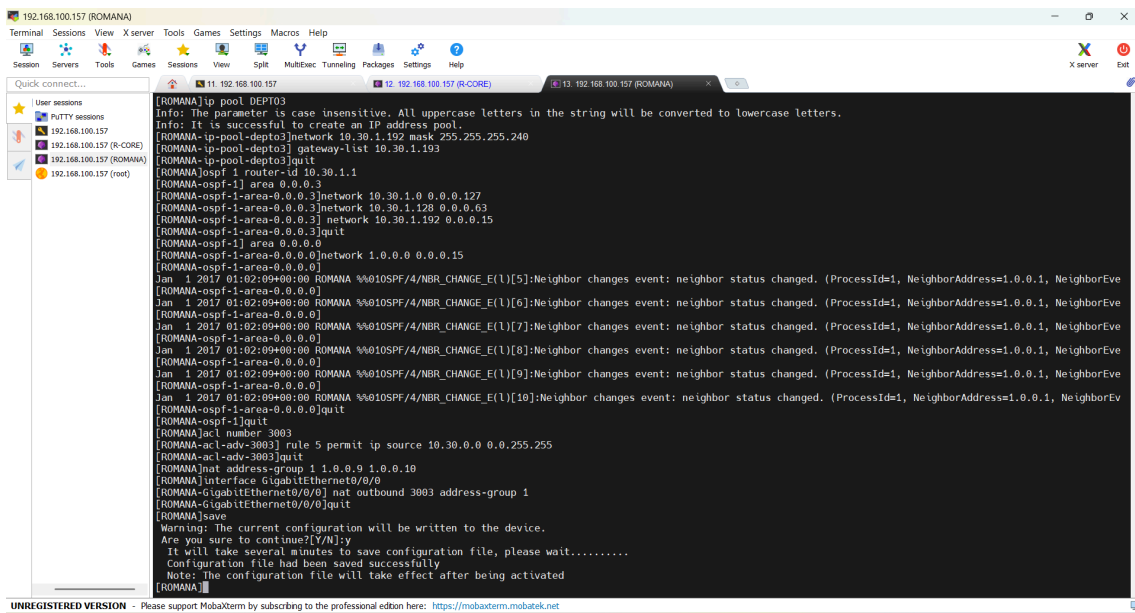

The screenshot shows a MobaXterm terminal window with a session titled '192.168.100.157 (ROMANA)'. The terminal displays a series of commands and their outputs for configuring a network device. The commands include creating an IP address pool, configuring OSPF interfaces, setting ACLs, and saving the configuration. The output shows successful execution of these commands and a warning about the configuration being written to the device.

```
[ROMANA]ip pool DEPT03
Info: The parameter is case insensitive. All uppercase letters in the string will be converted to lowercase letters.
Info: It is successful to create an IP address pool.
[ROMANA-ip-pool-depto3]network 10.30.1.192 mask 255.255.255.240
[ROMANA-ip-pool-depto3]gateway-list 10.30.1.193
[ROMANA-ip-pool-depto3]quit
[ROMANA]ospf 1 router-id 10.30.1.1
[ROMANA-ospf-1]area 0.0.0.3
[ROMANA-ospf-1-area-0.0.0.3]network 10.30.1.0 0.0.0.127
[ROMANA-ospf-1-area-0.0.0.3]network 10.30.1.128 0.0.0.63
[ROMANA-ospf-1-area-0.0.0.3]network 10.30.1.192 0.0.0.15
[ROMANA-ospf-1-area-0.0.0.3]quit
[ROMANA-ospf-1]area 0.0.0.0
[ROMANA-ospf-1-area-0.0.0.0]network 1.0.0.0 0.0.0.15
Jan  1 2017 01:02:09+00:00 ROMANA %%010SPF/4/NBR_CHANGE_E(1)[5]:Neighbor changes event: neighbor status changed. (ProcessId=1, NeighborAddress=1.0.0.1, NeighborEve
[ROMANA-ospf-1-area-0.0.0.0]
Jan  1 2017 01:02:09+00:00 ROMANA %%010SPF/4/NBR_CHANGE_E(1)[6]:Neighbor changes event: neighbor status changed. (ProcessId=1, NeighborAddress=1.0.0.1, NeighborEve
[ROMANA-ospf-1-area-0.0.0.0]
Jan  1 2017 01:02:09+00:00 ROMANA %%010SPF/4/NBR_CHANGE_E(1)[7]:Neighbor changes event: neighbor status changed. (ProcessId=1, NeighborAddress=1.0.0.1, NeighborEve
[ROMANA-ospf-1-area-0.0.0.0]
Jan  1 2017 01:02:09+00:00 ROMANA %%010SPF/4/NBR_CHANGE_E(1)[8]:Neighbor changes event: neighbor status changed. (ProcessId=1, NeighborAddress=1.0.0.1, NeighborEve
[ROMANA-ospf-1-area-0.0.0.0]
Jan  1 2017 01:02:09+00:00 ROMANA %%010SPF/4/NBR_CHANGE_E(1)[9]:Neighbor changes event: neighbor status changed. (ProcessId=1, NeighborAddress=1.0.0.1, NeighborEve
[ROMANA-ospf-1-area-0.0.0.0]
Jan  1 2017 01:02:09+00:00 ROMANA %%010SPF/4/NBR_CHANGE_E(1)[10]:Neighbor changes event: neighbor status changed. (ProcessId=1, NeighborAddress=1.0.0.1, NeighborEv
[ROMANA-ospf-1-area-0.0.0.0]quit
[ROMANA-ospf-1]quit
[ROMANA]acl number 3003
[ROMANA-acl-adv-3003]rule 5 permit ip source 10.30.0.0 0.0.255.255
[ROMANA-acl-adv-3003]quit
[ROMANA]nat address-group 1 1.0.0.9 1.0.0.10
[ROMANA]interface GigabitEthernet0/0/0
[ROMANA-GigabitEthernet0/0/0]nat outbound 3003 address-group 1
[ROMANA-GigabitEthernet0/0/0]quit
[ROMANA]save
Warning: The current configuration will be written to the device.
Are you sure to continue?(Y/N):y
It will take several minutes to save configuration file, please wait.....
Configuration file had been saved successfully
Note: The configuration file will take effect after being activated
[ROMANA]
```

UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>

```
[ROMANA]display saved-configuration
[V300R022C00SPC100]
#
sysname ROMANA
#
authentication-profile name default_authen_profile
authentication-profile name dot1x_authen_profile
authentication-profile name dot1xmac_authen_profile
authentication-profile name mac_authen_profile
authentication-profile name multi_authen_profile
authentication-profile name portal_authen_profile
#
dhcp enable
#
radius-server template default
#
pki realm default
certificate-check none
#
acl number 3003
rule 5 permit ip source 10.30.0.0 0.0.255.255
#
ike proposal default
encryption-algorithm aes-256 aes-192 aes-128
dh group14
authentication-algorithm sha2-512 sha2-384 sha2-256
authentication-method pre-share
integrity-algorithm hmac-sha2-256
```

```
prf hmac-sha2-256
#
free-rule-template name default_free_rule
#
portal-access-profile name portal_access_profile
#
ip pool depto2
gateway-list 10.30.1.1
network 10.30.1.0 mask 255.255.255.128
#
ip pool depto1
gateway-list 10.30.1.129
network 10.30.1.128 mask 255.255.255.192
#
ip pool depto3
gateway-list 10.30.1.193
network 10.30.1.192 mask 255.255.255.240
#
aaa
authentication-scheme default
authentication-mode local
authentication-scheme radius
authentication-mode radius
authorization-scheme default
authorization-mode local
accounting-scheme default
accounting-mode none
domain default
authentication-scheme radius
```

```
accounting-scheme default
radius-server default
domain default_admin
authentication-scheme default
accounting-scheme default
local-user admin privilege level 15
local-user admin service-type ssh
#
firewall zone Local
#
nat address-group 1 1.0.0.9 1.0.0.10
#
mi-server
#
interface GigabitEthernet0/0/0
description WAN_to_NUBE
ip address 1.0.0.3 255.255.255.240
nat outbound 3003 address-group 1
#
interface GigabitEthernet0/0/1
description LAN_to_SW8
#
interface GigabitEthernet0/0/1.10
description VLAN10_DEPT02
dot1q termination vid 10
ip address 10.30.1.1 255.255.255.128
dhcp select global
#
interface GigabitEthernet0/0/1.20
```

```
description VLAN20_DEPT01
dot1q termination vid 20
ip address 10.30.1.129 255.255.255.192
dhcp select global
#
interface GigabitEthernet0/0/1.30
description VLAN30_DEPT03
dot1q termination vid 30
ip address 10.30.1.193 255.255.255.240
dhcp select global
#
interface GigabitEthernet0/0/2
#
interface GigabitEthernet0/0/3
#
interface GigabitEthernet0/0/4
#
interface GigabitEthernet0/0/5
#
interface GigabitEthernet0/0/6
description VirtualPort
#
interface NULL0
#
ospf 1 router-id 10.30.1.1
area 0.0.0.0
network 1.0.0.0 0.0.0.15
area 0.0.0.3
network 10.30.1.0 0.0.0.127
```

```
network 10.30.1.128 0.0.0.63

network 10.30.1.192 0.0.0.15

#

snmp-agent local-engineid 800007DB0300000000000000

#

ssh user admin authentication-type password

#

fib regularly-refresh disable

#

user-interface con 0

authentication-mode password

set authentication password cipher
%^%#]\2sYmc>o12Y^M5vcwTKhz`.Npe~}D~8c{'BZ4O"m=@)F#w)dVnNnu<:!w]"%
^%#

user-interface vty 0 4

authentication-mode aaa

protocol inbound ssh

#

dot1x-access-profile name dot1x_access_profile

#

mac-access-profile name mac_access_profile

#

ops

#

autostart

#


secelog

#

ms-channel
```


#

Return

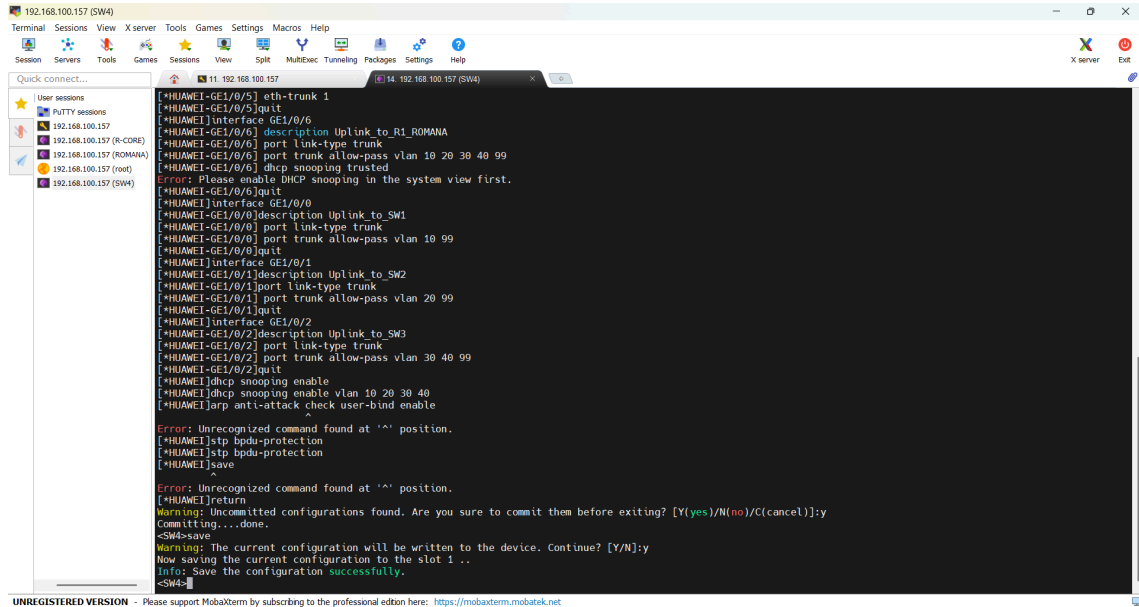

```
[*HUAWEI-GE1/0/5] eth-trunk 1
[*HUAWEI-GE1/0/5]quit
[*HUAWEI]interface GE1/0/6
[*HUAWEI-GE1/0/6] description Uplink to_R1_ROMANA
[*HUAWEI-GE1/0/6] port link-type trunk
[*HUAWEI-GE1/0/6] port trunk allow-pass vlan 10 20 30 40 99
[*HUAWEI-GE1/0/6] dhcp snooping trusted
Error: Please enable DHCP snooping in the system view first.
[*HUAWEI-GE1/0/6]quit
[*HUAWEI]interface GE1/0/0
[*HUAWEI-GE1/0/0]description Uplink to_SW1
[*HUAWEI-GE1/0/0] port link-type trunk
[*HUAWEI-GE1/0/0] port trunk allow-pass vlan 10 99
[*HUAWEI-GE1/0/0]quit
[*HUAWEI]interface GE1/0/1
[*HUAWEI-GE1/0/1]description Uplink to_SW2
[*HUAWEI-GE1/0/1]port link-type trunk
[*HUAWEI-GE1/0/1] port trunk allow-pass vlan 20 99
[*HUAWEI-GE1/0/1]quit
[*HUAWEI]interface GE1/0/2
[*HUAWEI-GE1/0/2]description Uplink to_SW3
[*HUAWEI-GE1/0/2] port link-type trunk
[*HUAWEI-GE1/0/2] port trunk allow-pass vlan 30 40 99
[*HUAWEI-GE1/0/2]quit
[*HUAWEI]dhcp snooping enable
[*HUAWEI]dhcp snooping enable vlan 10 20 30 40
[*HUAWEI]arp anti-attack check user-bind enable
Error: Unrecognized command found at '^' position.
[*HUAWEI]stp bpdu-protection
[*HUAWEI]stp bpdu-protection
[*HUAWEI]save
Error: Unrecognized command found at '^' position.
[*HUAWEI]return
Warning: Uncommitted configurations found. Are you sure to commit them before exiting? [Y(yes)/N(no)/C(cancel)]:y
Committing...done.
<SW4>save
Warning: The current configuration will be written to the device. Continue? [Y/N]:y
Now saving the current configuration to the slot 1 ..
Info: Save the configuration successfully.
<SW4>
```

<SW4>display current-configuration

!Software Version V200R005C10SPC607B607

!Last configuration was updated at 2026-08-17 00:22:15+00:00

!Last configuration was saved at 2026-08-17 00:22:21+00:00

#

sysname SW4

#

device board 1 board-type CE-MPUB

#

vlan batch 10 20 30 40 99

#

stp instance 1 priority 4096

stp bpdu-protection

#

dhcp snooping enable

#

```
vlan 10
    dhcp snooping enable
#
vlan 20
    dhcp snooping enable
#
vlan 30
    dhcp snooping enable
#
vlan 40
    dhcp snooping enable
#
stp region-configuration
    region-name ITLA-SD
    instance 1 vlan 10 20 30 40 99
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface MEth0/0/0
```

```
undo shutdown
#
interface Eth-Trunk1
description Uplink_Eth-Trunk
port link-type trunk
port trunk allow-pass vlan 10 20 30 40 99
#
interface GE1/0/0
description Uplink_to_SW1
undo shutdown
port link-type trunk
port trunk allow-pass vlan 10 99
#
interface GE1/0/1
description Uplink_to_SW2
undo shutdown
port link-type trunk
port trunk allow-pass vlan 20 99
#
interface GE1/0/2
description Uplink_to_SW3
undo shutdown
port link-type trunk
port trunk allow-pass vlan 30 40 99
#
interface GE1/0/3
undo shutdown
#
interface GE1/0/4
```

```
undo shutdown
#
interface GE1/0/5
description Member_Eth-Trunk1
undo shutdown
eth-trunk 1
#
interface GE1/0/6
description Uplink_to_R1_ROMANA
undo shutdown
port link-type trunk
port trunk allow-pass vlan 10 20 30 40 99
#
interface GE1/0/7
undo shutdown
#
interface GE1/0/8
undo shutdown
#
interface GE1/0/9
undo shutdown
#
interface GE1/0/10
undo shutdown
#
interface GE1/0/11
undo shutdown
#
interface GE1/0/12
```

undo shutdown

#

interface GE1/0/13

undo shutdown

#

interface GE1/0/14

undo shutdown

#

interface GE1/0/15

undo shutdown

#

interface GE1/0/16

undo shutdown

#

interface GE1/0/17

undo shutdown

#

interface GE1/0/18

undo shutdown

#

interface GE1/0/19

undo shutdown

#

interface GE1/0/20

shutdown

#

interface GE1/0/21

shutdown

#

interface GE1/0/22

shutdown

#

interface GE1/0/23

shutdown

#

interface GE1/0/24

shutdown

#

interface GE1/0/25

shutdown

#

interface GE1/0/26

shutdown

#

interface GE1/0/27

shutdown

#

interface GE1/0/28

shutdown

#

interface GE1/0/29

shutdown

#

interface GE1/0/30

shutdown

#

interface GE1/0/31

shutdown

#

interface GE1/0/32

shutdown

#

interface GE1/0/33

shutdown

#

interface GE1/0/34

shutdown

#

interface GE1/0/35

shutdown

#

interface GE1/0/36

shutdown

#

interface GE1/0/37

shutdown

#

interface GE1/0/38

shutdown

#

interface GE1/0/39

shutdown

#

interface GE1/0/40

shutdown

#

interface GE1/0/41

```
shutdown
#
interface GE1/0/42
shutdown
#
interface GE1/0/43
shutdown
#
interface GE1/0/44
shutdown
#
interface GE1/0/45
shutdown
#
interface GE1/0/46
shutdown
#
interface GE1/0/47
shutdown
#
interface NULL0
#
ssh authorization-type default aaa
#
ssh server cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc
#
ssh server dh-exchange min-len 1024
#
```


ssh client cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc

#


user-interface con 0

#

vm-manager

#

Return

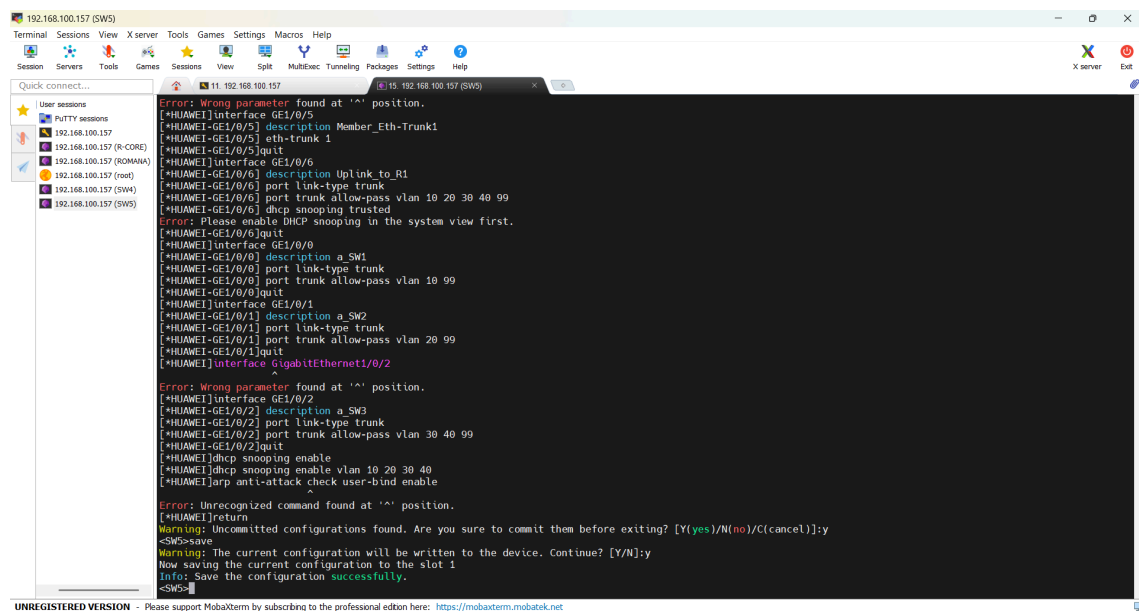

```
192.168.100.157 (SW5)
Terminal Sessions View X server Tools Games Settings Macros Help
Session Servers Tools Games Sessions View Split MultiExec Tunneling Packages Settings Help

Quick connect...
User sessions
  PUTTY sessions
    192.168.100.157
    192.168.100.157 (R-CORE)
    192.168.100.157 (ROMANA)
    192.168.100.157 (root)
    192.168.100.157 (SW4)
    192.168.100.157 (SW5)

[SW5]
[SW5] interface GE1/0/5
[SW5] GE1/0/5 description Member_Eth-Trunk1
[SW5] GE1/0/5 eth-trunk 1
[SW5] GE1/0/5 quit
[SW5] interface GE1/0/6
[SW5] GE1/0/6 description Uplink to R1
[SW5] GE1/0/6 port link-type trunk
[SW5] GE1/0/6 port trunk allow-pass vlan 10 20 30 40 99
[SW5] GE1/0/6 dhcp snooping trusted
Error: Please enable DHCP snooping in the system view first.
[SW5] GE1/0/6 quit
[SW5] interface GE1/0/0
[SW5] GE1/0/0 description a SW1
[SW5] GE1/0/0 port link-type trunk
[SW5] GE1/0/0 port trunk allow-pass vlan 10 99
[SW5] GE1/0/0 quit
[SW5] interface GE1/0/1
[SW5] GE1/0/1 description a SW2
[SW5] GE1/0/1 port link-type trunk
[SW5] GE1/0/1 port trunk allow-pass vlan 20 99
[SW5] GE1/0/1 quit
[SW5] interface GigabitEthernet1/0/2
Error: Wrong parameter found at '^' position.
[SW5] interface GE1/0/2
[SW5] GE1/0/2 description a SW3
[SW5] GE1/0/2 port link-type trunk
[SW5] GE1/0/2 port trunk allow-pass vlan 30 40 99
[SW5] GE1/0/2 quit
[SW5] dhcp snooping enable
[SW5] dhcp snooping enable vlan 10 20 30 40
[SW5] jarp anti-attack check user-bind enable
Error: Unrecognized command found at '^' position.
[SW5] return
Warning: Uncommitted configurations found. Are you sure to commit them before exiting? [Y/yes]/N/no/C/cancel]:y
<SW5>save
Warning: The current configuration will be written to the device. Continue? [Y/N]:y
Now saving the current configuration to the slot 1
Info: Save the configuration successfully.
<SW5>
```

<SW5>save

Warning: The current configuration will be written to the device. Continue? [Y/N]:y

Now saving the current configuration to the slot 1

Info: Save the configuration successfully.

<SW5>display current-configuration

!Software Version V200R005C10SPC607B607

!Last configuration was updated at 2026-08-17 00:37:29+00:00

!Last configuration was saved at 2026-08-17 00:37:38+00:00

#

sysname SW5

```
#
device board 1 board-type CE-MPUB
#
vlan batch 10 20 30 40 99
#
stp instance 1 priority 8192
#
dhcp snooping enable
#
vlan 10
    dhcp snooping enable
#
vlan 20
    dhcp snooping enable
#
vlan 30
    dhcp snooping enable
#
vlan 40
    dhcp snooping enable
#
stp region-configuration
    region-name ITLA-SD
    instance 1 vlan 10 20 30 40 99
#
aaa
#
authentication-scheme default
#
```

```
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface MEth0/0/0
undo shutdown
#
interface Eth-Trunk1
description Uplink_Eth-Trunk
port link-type trunk
port trunk allow-pass vlan 10 20 30 40 99
#
interface GE1/0/0
description a_SW1
undo shutdown
port link-type trunk
port trunk allow-pass vlan 10 99
#
interface GE1/0/1
description a_SW2
undo shutdown
port link-type trunk
port trunk allow-pass vlan 20 99
#
interface GE1/0/2
```

```
description a_SW3
undo shutdown
port link-type trunk
port trunk allow-pass vlan 30 40 99
#
interface GE1/0/3
undo shutdown
#
interface GE1/0/4
undo shutdown
#
interface GE1/0/5
description Member_Eth-Trunk1
undo shutdown
eth-trunk 1
#
interface GE1/0/6
description Uplink_to_R1
undo shutdown
port link-type trunk
port trunk allow-pass vlan 10 20 30 40 99
#
interface GE1/0/7
undo shutdown
#
interface GE1/0/8
undo shutdown
#
interface GE1/0/9
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/10
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/11
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/12
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/13
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/14
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/15
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/16
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/17
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/18
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/19
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/20
```

```
shutdown
```

```
#
```

```
interface GE1/0/21
```

```
shutdown
```

```
#
```

```
interface GE1/0/22
```

```
shutdown
```

```
#
```

```
interface GE1/0/23
```

```
shutdown
```

```
#
```

```
interface GE1/0/24
```

```
shutdown
```

```
#
```

```
interface GE1/0/25
```

```
shutdown
```

```
#
```

```
interface GE1/0/26
```

```
shutdown
```

```
#
```

```
interface GE1/0/27
```

```
shutdown
```

```
#
```

```
interface GE1/0/28
```

```
shutdown
```

#

interface GE1/0/29

shutdown

#

interface GE1/0/30

shutdown

#

interface GE1/0/31

shutdown

#

interface GE1/0/32

shutdown

#

interface GE1/0/33

shutdown

#

interface GE1/0/34

shutdown

#

interface GE1/0/35

shutdown

#

interface GE1/0/36

shutdown

#

interface GE1/0/37

shutdown

#

interface GE1/0/38

```
shutdown
#
interface GE1/0/39
shutdown
#
interface GE1/0/40
shutdown
#
interface GE1/0/41
shutdown
#
interface GE1/0/42
shutdown
#
interface GE1/0/43
shutdown
#
interface GE1/0/44
shutdown
#
interface GE1/0/45
shutdown
#
interface GE1/0/46
shutdown
#
interface GE1/0/47
shutdown
#
```


interface NULL0

#

ssh authorization-type default aaa

#

ssh server cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc

#

ssh server dh-exchange min-len 1024

#

ssh client cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc

#

user-interface con 0

#

vm-manager

#

Return

The image shows a screenshot of the MobaXterm application. The top menu bar includes Terminal, Sessions, View, Tools, Macros, Settings, Help, X server, and Bit. Below the menu is a toolbar with icons for Session, Servers, Tools, Games, Sessions, View, Split, Multitab, Tunneling, Packages, Settings, and Help. On the right side, there are icons for X server and Bit. The main window is divided into two panes. The left pane, titled 'Quick connect...', shows a list of user sessions under the heading 'User sessions'. The sessions listed are: PUTTY sessions, 192.168.100.157, 192.168.100.157 (R-CORE), 192.168.100.157 (ROMANA), 192.168.100.157 (root), 192.168.100.157 (SW1), 192.168.100.157 (SW4), and 192.168.100.157 (SW5). The right pane shows a terminal window with the title bar '11. 192.168.100.157' and a tab '11. 192.168.100.157 (SW1)'. The terminal displays the following text:

```
[*HUAWEI]dhcp snooping enable vlan 10
[*HUAWEI]return
Warning: Uncommitted configurations found. Are you sure to commit them before exiting? [Y(yes)/N(no)/C(cancel)]:y
<SW1>-save
Warning: The current configuration will be written to the device. Continue? [Y/N]:y
Now saving the current configuration to the slot 1
Info: Save the configuration successfully.
<SW1>-display current-configuration
[Software Version V200R005C10SPC6078607
Last configuration was updated at 2026-08-17 00:50:44+00:00
Last configuration was saved at 2026-08-17 00:50:47+00:00
#
sysname SW1
#
device board 1 board-type CE-MPUB
#
vlan batch 10 99
#
dhcp snooping enable
#
vlan 10
dhcp snooping enable
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default-admin
#
interface Vlanif99
ip address 10.10.10.2 255.255.255.248
#
interface MEth0/0/0
undo shutdown
#
---- More ----
```

```
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface Vlanif99
ip address 10.10.10.2 255.255.255.248
#
interface MEth0/0/0
undo shutdown
#
interface GE1/0/0
description Uplink_a_SW4
undo shutdown
port link-type trunk
port trunk allow-pass vlan 10 99
#
interface GE1/0/1
description Uplink_a_SW5_redundante
undo shutdown
port link-type trunk
port trunk allow-pass vlan 10 99
#
interface GE1/0/2
description Puerto_Usuario_VLAN10
```

```
undo shutdown
port default vlan 10
stp edged-port enable
port-security enable
port-security mac-address sticky
```

```
#
```

```
interface GE1/0/3
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/4
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/5
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/6
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/7
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/8
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/9
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/10
```

```
undo shutdown
```

#

interface GE1/0/11

undo shutdown

#

interface GE1/0/12

undo shutdown

#

interface GE1/0/13

undo shutdown

#

interface GE1/0/14

undo shutdown

#

interface GE1/0/15

undo shutdown

#

interface GE1/0/16

undo shutdown

#

interface GE1/0/17

undo shutdown

#

interface GE1/0/18

undo shutdown

#

interface GE1/0/19

undo shutdown

#

interface GE1/0/20

shutdown

#

interface GE1/0/21

shutdown

#

interface GE1/0/22

shutdown

#

interface GE1/0/23

shutdown

#

interface GE1/0/24

shutdown

#

interface GE1/0/25

shutdown

#

interface GE1/0/26

shutdown

#

interface GE1/0/27

shutdown

#

interface GE1/0/28

shutdown

#

interface GE1/0/29

shutdown

#

```
interface GE1/0/30
```

```
shutdown
```

```
#
```

```
interface GE1/0/31
```

```
shutdown
```

```
#
```

```
interface GE1/0/32
```

```
shutdown
```

```
#
```

```
interface GE1/0/33
```

```
shutdown
```

```
#
```

```
interface GE1/0/34
```

```
shutdown
```

```
#
```

```
interface GE1/0/35
```

```
shutdown
```

```
#
```

```
interface GE1/0/36
```

```
shutdown
```

```
#
```

```
interface GE1/0/37
```

```
shutdown
```

```
#
```

```
interface GE1/0/38
```

```
shutdown
```

```
#
```

```
interface GE1/0/39
```

```
shutdown
```

```
#  
interface GE1/0/40  
shutdown  
#  
interface GE1/0/41  
shutdown  
#  
interface GE1/0/42  
shutdown  
#  
interface GE1/0/43  
shutdown  
#  
interface GE1/0/44  
shutdown  
#  
interface GE1/0/45  
shutdown  
#  
interface GE1/0/46  
shutdown  
#  
interface GE1/0/47  
shutdown  
#  
interface NULL0  
#  
ip route-static 0.0.0.0 0.0.0.0 10.10.10.1  
#
```



```
ssh authorization-type default aaa
```

```
#
```

```
ssh server cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr  
aes256_cbc aes128_cbc 3des_cbc
```

```
#
```

```
ssh server dh-exchange min-len 1024
```

```
#
```

```
ssh client cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr  
aes256_cbc aes128_cbc 3des_cbc
```

```
#
```


```
user-interface con 0
```

```
#
```

```
vm-manager
```

```
#
```

```
Return
```

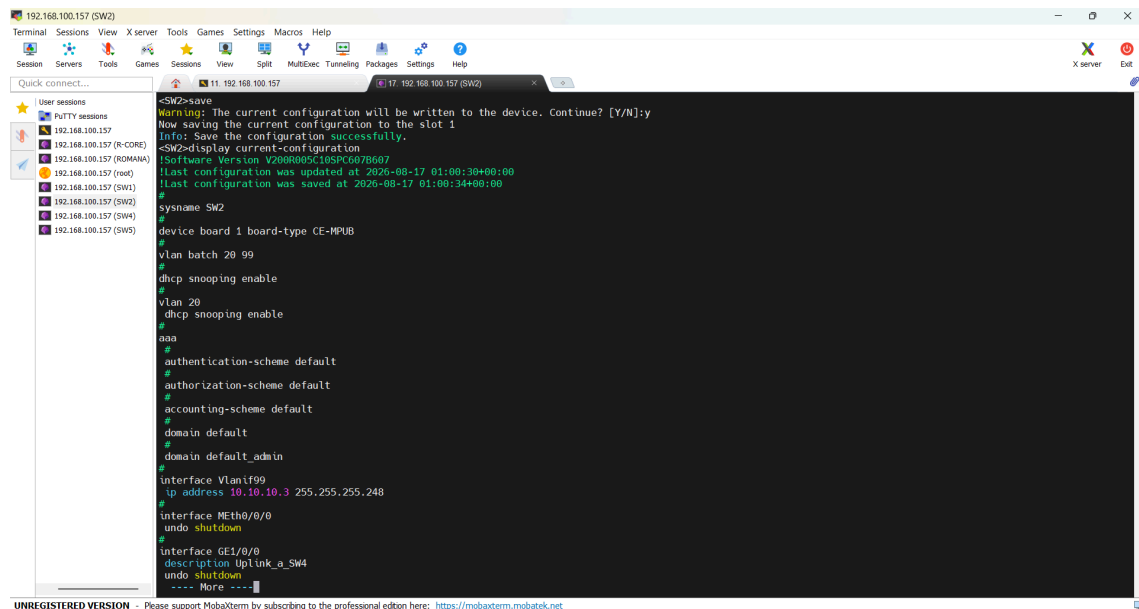

```
<SW2>save
```

```
Warning: The current configuration will be written to the device. Continue? [Y/N]:y
```

```
Now saving the current configuration to the slot 1
```

```
Info: Save the configuration successfully.
```

```
<SW2>display current-configuration
!Software Version V200R005C10SPC607B607
!Last configuration was updated at 2026-08-17 01:00:30+00:00
!Last configuration was saved at 2026-08-17 01:00:34+00:00
#
sysname SW2
#
device board 1 board-type CE-MPUB
#
vlan batch 20 99
#
dhcp snooping enable
#
vlan 20
  dhcp snooping enable
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface Vlanif99
```

```
ip address 10.10.10.3 255.255.255.248
```

```
#
```

```
interface MEth0/0/0
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/0
```

```
description Uplink_a_SW4
```

```
undo shutdown
```

```
port link-type trunk
```

```
port trunk allow-pass vlan 20 99
```

```
#
```

```
interface GE1/0/1
```

```
description Uplink_a_SW5_redundante
```

```
undo shutdown
```

```
port link-type trunk
```

```
port trunk allow-pass vlan 20 99
```

```
#
```

```
interface GE1/0/2
```

```
description Puerto_Usuario_VLAN20
```

```
undo shutdown
```

```
port default vlan 20
```

```
stp edged-port enable
```

```
port-security enable
```

```
port-security mac-address sticky
```

```
#
```

```
interface GE1/0/3
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/4
```

undo shutdown

#

interface GE1/0/5

undo shutdown

#

interface GE1/0/6

undo shutdown

#

interface GE1/0/7

undo shutdown

#

interface GE1/0/8

undo shutdown

#

interface GE1/0/9

undo shutdown

#

interface GE1/0/10

undo shutdown

#

interface GE1/0/11

undo shutdown

#

interface GE1/0/12

undo shutdown

#

interface GE1/0/13

undo shutdown

#

```
interface GE1/0/14
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/15
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/16
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/17
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/18
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/19
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/20
```

```
shutdown
```

```
#
```

```
interface GE1/0/21
```

```
shutdown
```

```
#
```

```
interface GE1/0/22
```

```
shutdown
```

```
#
```

```
interface GE1/0/23
```

```
shutdown
```

#

interface GE1/0/24

shutdown

#

interface GE1/0/25

shutdown

#

interface GE1/0/26

shutdown

#

interface GE1/0/27

shutdown

#

interface GE1/0/28

shutdown

#

interface GE1/0/29

shutdown

#

interface GE1/0/30

shutdown

#

interface GE1/0/31

shutdown

#

interface GE1/0/32

shutdown

#

interface GE1/0/33

shutdown

#

interface GE1/0/34

shutdown

#

interface GE1/0/35

shutdown

#

interface GE1/0/36

shutdown

#

interface GE1/0/37

shutdown

#

interface GE1/0/38

shutdown

#

interface GE1/0/39

shutdown

#

interface GE1/0/40

shutdown

#

interface GE1/0/41

shutdown

#

interface GE1/0/42

shutdown

#


```
interface GE1/0/43
shutdown
#
interface GE1/0/44
shutdown
#
interface GE1/0/45
shutdown
#
interface GE1/0/46
shutdown
#
interface GE1/0/47
shutdown
#
interface NULL0
#
ip route-static 0.0.0.0 0.0.0.0 10.10.10.1
#
ssh authorization-type default aaa
#
ssh server cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc
#
ssh server dh-exchange min-len 1024
#
ssh client cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc
#
user-interface con 0
```


#

vm-manager

#

Return

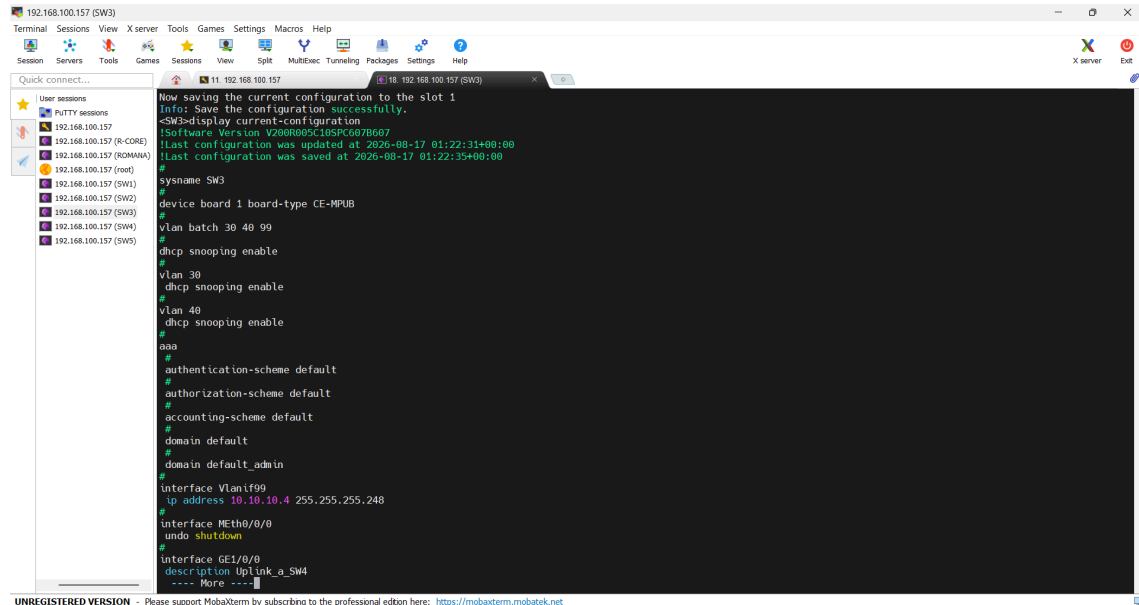

```
192.168.100.157 (SW3)
Now saving the current configuration to the slot 1
Info: Save the configuration successfully.
<SW3>display current-configuration
!Software Version V200R005C10SPC607B607
!Last configuration was updated at 2026-08-17 01:22:31+00:00
!Last configuration was saved at 2026-08-17 01:22:35+00:00
#
sysname SW3
#
device board 1 board-type CE-MPUB
#
vlan batch 30 40 99
#
dhcp snooping enable
#
vlan 30
dhcp snooping enable
#
vlan 40
dhcp snooping enable
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface Vlanif00
ip address 10.10.10.4 255.255.255.248
#
interface MEth0/0/0
undo shutdown
#
interface GE1/0/0
description Uplink_a_SW4
---- More ----
```

<SW3>save

Warning: The current configuration will be written to the device. Continue? [Y/N]:y

Now saving the current configuration to the slot 1

Info: Save the configuration successfully.

<SW3>display current-configuration

!Software Version V200R005C10SPC607B607

!Last configuration was updated at 2026-08-17 01:22:31+00:00

!Last configuration was saved at 2026-08-17 01:22:35+00:00

#

sysname SW3

#

device board 1 board-type CE-MPUB

#

vlan batch 30 40 99

#

```
dhcp snooping enable
#
vlan 30
    dhcp snooping enable
#
vlan 40
    dhcp snooping enable
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface Vlanif99
    ip address 10.10.10.4 255.255.255.248
#
interface MEth0/0/0
    undo shutdown
#
interface GE1/0/0
    description Uplink_a_SW4
    undo shutdown
```

```
port link-type trunk
port trunk allow-pass vlan 30 40 99
#
interface GE1/0/1
description Uplink_a_SW5_redundante
undo shutdown
port link-type trunk
port trunk allow-pass vlan 30 40 99
#
interface GE1/0/2
description Puerto_Usuario_VLAN30
undo shutdown
port default vlan 30
stp edged-port enable
port-security enable
port-security mac-address sticky
#
interface GE1/0/3
description Puerto_Usuario_VLAN40
undo shutdown
port default vlan 40
stp edged-port enable
port-security enable
port-security mac-address sticky
#
interface GE1/0/4
undo shutdown
#
interface GE1/0/5
```

undo shutdown

#

interface GE1/0/6

undo shutdown

#

interface GE1/0/7

undo shutdown

#

interface GE1/0/8

undo shutdown

#

interface GE1/0/9

undo shutdown

#

interface GE1/0/10

undo shutdown

#

interface GE1/0/11

undo shutdown

#

interface GE1/0/12

undo shutdown

#

interface GE1/0/13

undo shutdown

#

interface GE1/0/14

undo shutdown

#

```
interface GE1/0/15
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/16
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/17
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/18
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/19
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/20
```

```
shutdown
```

```
#
```

```
interface GE1/0/21
```

```
shutdown
```

```
#
```

```
interface GE1/0/22
```

```
shutdown
```

```
#
```

```
interface GE1/0/23
```

```
shutdown
```

```
#
```

```
interface GE1/0/24
```

```
shutdown
```

#

interface GE1/0/25

shutdown

#

interface GE1/0/26

shutdown

#

interface GE1/0/27

shutdown

#

interface GE1/0/28

shutdown

#

interface GE1/0/29

shutdown

#

interface GE1/0/30

shutdown

#

interface GE1/0/31

shutdown

#

interface GE1/0/32

shutdown

#

interface GE1/0/33

shutdown

#

interface GE1/0/34

shutdown

#

interface GE1/0/35

shutdown

#

interface GE1/0/36

shutdown

#

interface GE1/0/37

shutdown

#

interface GE1/0/38

shutdown

#

interface GE1/0/39

shutdown

#

interface GE1/0/40

shutdown

#

interface GE1/0/41

shutdown

#

interface GE1/0/42

shutdown

#


interface GE1/0/43

shutdown

#

```
interface GE1/0/44
shutdown
#
interface GE1/0/45
shutdown
#
interface GE1/0/46
shutdown
#
interface GE1/0/47
shutdown
#
interface NULL0
#
ip route-static 0.0.0.0 0.0.0.0 10.10.10.1
#
ssh authorization-type default aaa
#
ssh server cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc
#
ssh server dh-exchange min-len 1024
#
ssh client cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc
#
user-interface con 0
#
vm-manager
#
```


Return

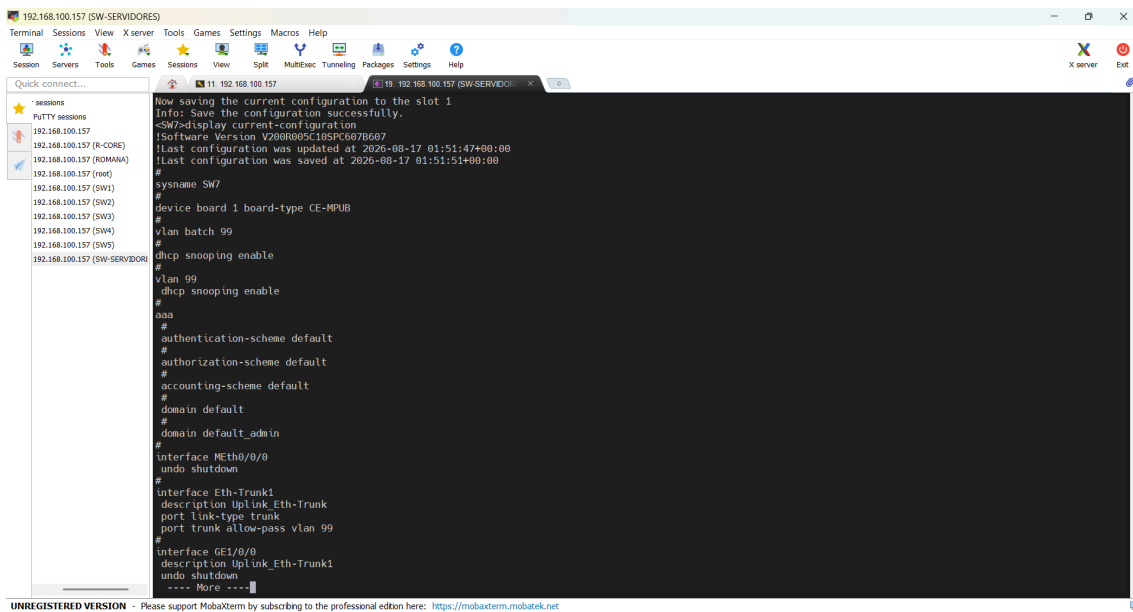

The screenshot shows a terminal window with a menu bar (Terminal, Sessions, View, X server, Tools, Games, Settings, Macros, Help) and a toolbar. A sidebar on the left lists sessions for IP 192.168.100.157. The main terminal area displays the following text:

```
Now saving the current configuration to the slot 1
Info: Save the configuration successfully.
<SW7>display current-configuration
!Software Version V200R005C10SPC607B607
!Last configuration was updated at 2026-08-17 01:51:47+00:00
!Last configuration was saved at 2026-08-17 01:51:51+00:00
#
sysname SW7
#
device board 1 board-type CE-MPUB
#
vlan batch 99
#
dhcp snooping enable
#
vlan 99
dhcp snooping enable
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface MEth0/0/0
undo shutdown
#
interface Eth-Trunk1
description Uplink_Eth-Trunk
port link-type trunk
port trunk allow-pass vlan 99
#
interface GE1/0/0
description Uplink_Eth-Trunk1
undo shutdown
--- More ---
```

At the bottom of the terminal window, a message reads: "UNREGISTERED VERSION - Please support Mobaxterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>"

<SW7>display current-configuration

!Software Version V200R005C10SPC607B607

!Last configuration was updated at 2026-08-17 01:51:47+00:00

!Last configuration was saved at 2026-08-17 01:51:51+00:00

#

sysname SW7

#

device board 1 board-type CE-MPUB

#

vlan batch 99

#

dhcp snooping enable

#

vlan 99

dhcp snooping enable

#

aaa

#

```
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface MEth0/0/0
undo shutdown
#
interface Eth-Trunk1
description Uplink_Eth-Trunk
port link-type trunk
port trunk allow-pass vlan 99
#
interface GE1/0/0
description Uplink_Eth-Trunk1
undo shutdown
eth-trunk 1
#
interface GE1/0/1
description Uplink_Eth-Trunk1
undo shutdown
eth-trunk 1
#
interface GE1/0/2
```

```
description a_FTP-RADIUS
undo shutdown
port default vlan 99
stp edged-port enable
port-security enable
port-security mac-address sticky
```

```
#
```

```
interface GE1/0/3
description a_MAIL
undo shutdown
port default vlan 99
stp edged-port enable
port-security enable
port-security mac-address sticky
```

```
#
```

```
interface GE1/0/4
description a_DNS-WEB-DHCP
undo shutdown
port default vlan 99
stp edged-port enable
port-security enable
port-security mac-address sticky
```

```
#
```

```
interface GE1/0/5
undo shutdown
```

```
#
```

```
interface GE1/0/6
undo shutdown
```

```
#
```

```
interface GE1/0/7
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/8
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/9
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/10
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/11
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/12
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/13
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/14
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/15
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/16
```

```
undo shutdown
```

#

interface GE1/0/17

undo shutdown

#

interface GE1/0/18

undo shutdown

#

interface GE1/0/19

undo shutdown

#

interface GE1/0/20

shutdown

#

interface GE1/0/21

shutdown

#

interface GE1/0/22

shutdown

#

interface GE1/0/23

shutdown

#

interface GE1/0/24

shutdown

#

interface GE1/0/25

shutdown

#

interface GE1/0/26

```
shutdown
#
interface GE1/0/27
shutdown
#
interface GE1/0/28
shutdown
#
interface GE1/0/29
shutdown
#
interface GE1/0/30
shutdown
#
interface GE1/0/31
shutdown
#
interface GE1/0/32
shutdown
#
interface GE1/0/33
shutdown
#
interface GE1/0/34
shutdown
#
interface GE1/0/35
shutdown
#
```

```
interface GE1/0/36
```

```
shutdown
```

```
#
```

```
interface GE1/0/37
```

```
shutdown
```

```
#
```

```
interface GE1/0/38
```

```
shutdown
```

```
#
```

```
interface GE1/0/39
```

```
shutdown
```

```
#
```

```
interface GE1/0/40
```

```
shutdown
```

```
#
```

```
interface GE1/0/41
```

```
shutdown
```

```
#
```

```
interface GE1/0/42
```

```
shutdown
```

```
#
```

```
interface GE1/0/43
```

```
shutdown
```

```
#
```

```
interface GE1/0/44
```


```
shutdown
```

```
#
```

```
interface GE1/0/45
```

```
shutdown
```

```
#
interface GE1/0/46
shutdown
#
interface GE1/0/47
shutdown
#
interface NULL0
#
ssh authorization-type default aaa
#
ssh server cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc
#
ssh server dh-exchange min-len 1024
#
ssh client cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc
#
user-interface con 0
#
vm-manager
#
Return
```
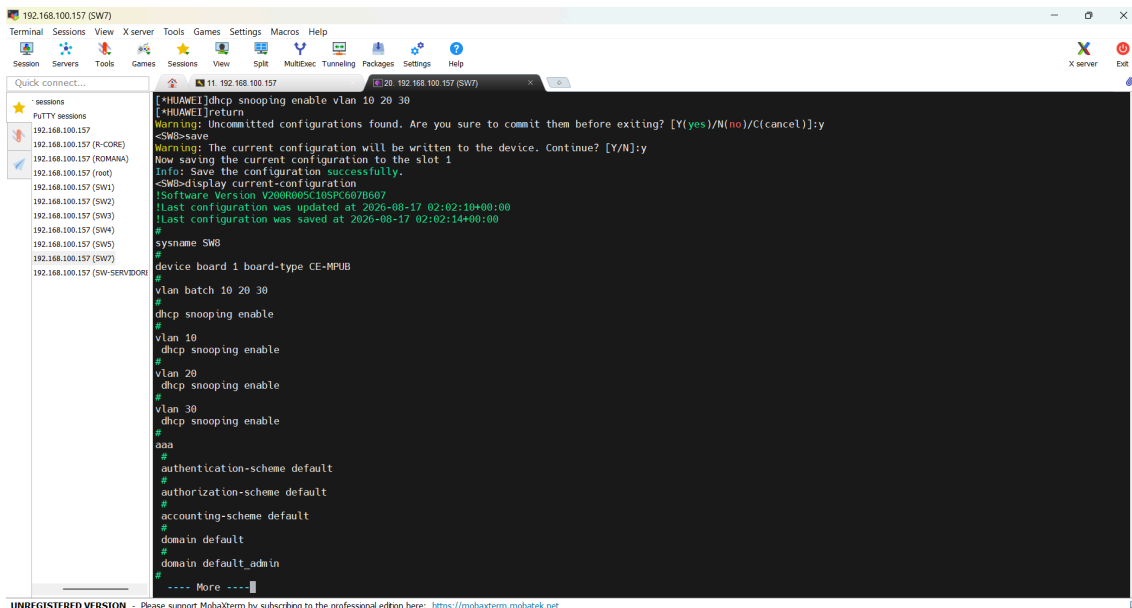
```
192.168.100.157 (SW7)
Terminal Sessions View X server Tools Games Settings Macros Help
Session Servers Tools Games Sessions View Split MultiExec Tunneling Packages Settings Help

Quick connect...
sessions
PUTTY sessions
192.168.100.157
192.168.100.157 (R-CORE)
192.168.100.157 (ROMANA)
192.168.100.157 (root)
192.168.100.157 (SW1)
192.168.100.157 (SW2)
192.168.100.157 (SW3)
192.168.100.157 (SW4)
192.168.100.157 (SW5)
192.168.100.157 (SW6)
192.168.100.157 (SW7)
192.168.100.157 (SW-SERVIDOR)

[~HUAWEI]dhcp snooping enable vlan 10 20 30
[~HUAWEI]return
Warning: Uncommitted configurations found. Are you sure to commit them before exiting? [Y(yes)/N(no)/C(cancel)]:y
<SW8>save
Warning: The current configuration will be written to the device. Continue? [Y/N]:y
Now saving the current configuration to the slot 1
Info: Save the configuration successfully.
<SW8>display current-configuration
!Software Version V200R005C10SPC607B607
!Last configuration was updated at 2026-08-17 02:02:10+00:00
!Last configuration was saved at 2026-08-17 02:02:14+00:00
#
sysname SW8
#
device board 1 board-type CE-MPUB
vlan batch 10 20 30
#
dhcp snooping enable
vlan 10
dhcp snooping enable
#
vlan 20
dhcp snooping enable
#
vlan 30
dhcp snooping enable
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
---- More ----
```

<SW8>display current-configuration

!Software Version V200R005C10SPC607B607

!Last configuration was updated at 2026-08-17 02:02:10+00:00

!Last configuration was saved at 2026-08-17 02:02:14+00:00

#

sysname SW8

#

device board 1 board-type CE-MPUB

#

vlan batch 10 20 30

#

dhcp snooping enable

#

vlan 10

dhcp snooping enable

#

vlan 20

dhcp snooping enable

#

```
vlan 30

  dhcp snooping enable

#

aaa

#

  authentication-scheme default

#

  authorization-scheme default

#

  accounting-scheme default

#

  domain default

#

  domain default_admin

#

interface MEth0/0/0

  undo shutdown

#

interface Eth-Trunk1

  description Uplink_Eth-Trunk

  port link-type trunk

  port trunk allow-pass vlan 10 20 30

#

interface GE1/0/0

  description Uplink_a_R2

  undo shutdown

  port link-type trunk

  port trunk allow-pass vlan 10 20 30

#
```

```
interface GE1/0/1
description Member_Eth-Trunk1
undo shutdown
eth-trunk 1
#
interface GE1/0/2
description Member_Eth-Trunk1
undo shutdown
eth-trunk 1
#
interface GE1/0/3
undo shutdown
#
interface GE1/0/4
undo shutdown
#
interface GE1/0/5
undo shutdown
#
interface GE1/0/6
undo shutdown
#
interface GE1/0/7
undo shutdown
#
interface GE1/0/8
undo shutdown
#
interface GE1/0/9
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/10
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/11
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/12
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/13
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/14
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/15
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/16
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/17
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/18
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/19
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/20
```

```
shutdown
```

```
#
```

```
interface GE1/0/21
```

```
shutdown
```

```
#
```

```
interface GE1/0/22
```

```
shutdown
```

```
#
```

```
interface GE1/0/23
```

```
shutdown
```

```
#
```

```
interface GE1/0/24
```

```
shutdown
```

```
#
```

```
interface GE1/0/25
```

```
shutdown
```

```
#
```

```
interface GE1/0/26
```

```
shutdown
```

```
#
```

```
interface GE1/0/27
```

```
shutdown
```

```
#
```

```
interface GE1/0/28
```

```
shutdown
```

#

interface GE1/0/29

shutdown

#

interface GE1/0/30

shutdown

#

interface GE1/0/31

shutdown

#

interface GE1/0/32

shutdown

#

interface GE1/0/33

shutdown

#

interface GE1/0/34

shutdown

#

interface GE1/0/35

shutdown

#

interface GE1/0/36

shutdown

#

interface GE1/0/37

shutdown

#

interface GE1/0/38

```
shutdown
#
interface GE1/0/39
shutdown
#
interface GE1/0/40
shutdown
#
interface GE1/0/41
shutdown
#
interface GE1/0/42
shutdown
#
interface GE1/0/43
shutdown
#
interface GE1/0/44
shutdown
#
interface GE1/0/45
shutdown
#
interface GE1/0/46
shutdown
#
interface GE1/0/47
shutdown
#
```

interface NULL0

#

ssh authorization-type default aaa

#

ssh server cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc

#

ssh server dh-exchange min-len 1024

#

ssh client cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc

#

user-interface con 0

#

vm-manager

#

Return

The screenshot shows a MobaXterm window titled "192.168.100.157 (SW-ROMANA)". The left sidebar lists sessions, with "192.168.100.157 (SW-ROMANA)" selected. The main terminal area shows a configuration session for a Huawei switch. The user enters commands to enable DHCP snooping on VLANs 10, 20, and 30, saves the configuration, and displays the current configuration. The output shows the software version, last configuration update time, and the current configuration settings.

```
[*HUAWEI-GE1/0/4]quit
[*HUAWEI]dhcp snooping enable
[*HUAWEI]dhcp snooping enable vlan 10 20 30
[*HUAWEI]return
Warning: Uncommitted configurations found. Are you sure to commit them before exiting? [Y(yes)/N(no)/C(cancel)]:y
<SW-ROMANA>save
Warning: The current configuration will be written to the device. Continue? [Y/N]:y
Now saving the current configuration to the slot 1
Info: Save the configuration successfully.
<SW-ROMANA>display current-configuration
!Software Version V200R005C10SPC607B607
!Last configuration was updated at 2026-08-17 02:12:26+00:00
!Last configuration was saved at 2026-08-17 02:12:30+00:00
#
sysname SW-ROMANA
#
device board 1 board-type CE-MPUB
#
vlan batch 10 20 30
#
dhcp snooping enable
#
vlan 10
  dhcp snooping enable
#
vlan 20
  dhcp snooping enable
#
vlan 30
  dhcp snooping enable
#
aaa
#
  authentication-scheme default
#
  authorization-scheme default
#
  accounting-scheme default
  ---- More ----
```

UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>

<SW-ROMANA>display current-configuration

!Software Version V200R005C10SPC607B607

!Last configuration was updated at 2026-08-17 02:12:26+00:00

!Last configuration was saved at 2026-08-17 02:12:30+00:00

#

sysname SW-ROMANA

#

device board 1 board-type CE-MPUB

#

vlan batch 10 20 30

#

dhcp snooping enable

```
#
vlan 10
    dhcp snooping enable
#
vlan 20
    dhcp snooping enable
#
vlan 30
    dhcp snooping enable
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface MEth0/0/0
    undo shutdown
#
interface GE1/0/0
    description Uplink_to_ROMANA
    undo shutdown
    port link-type trunk
```

```
port trunk allow-pass vlan 10 20 30
#
interface GE1/0/1
description Uplink_to_SW8
undo shutdown
port link-type trunk
port trunk allow-pass vlan 10 20 30
#
interface GE1/0/2
description Usuario_VLAN10
undo shutdown
port default vlan 10
stp edged-port enable
#
interface GE1/0/3
description Usuario_VLAN20
undo shutdown
port default vlan 20
stp edged-port enable
#
interface GE1/0/4
description Usuario_VLAN30
undo shutdown
port default vlan 30
stp edged-port enable
#
interface GE1/0/5
undo shutdown
#
```

```
interface GE1/0/6
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/7
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/8
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/9
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/10
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/11
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/12
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/13
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/14
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/15
```

```
undo shutdown
```

#

interface GE1/0/16

undo shutdown

#

interface GE1/0/17

undo shutdown

#

interface GE1/0/18

undo shutdown

#

interface GE1/0/19

undo shutdown

#

interface GE1/0/20

shutdown

#

interface GE1/0/21

shutdown

#

interface GE1/0/22

shutdown

#

interface GE1/0/23

shutdown

#

interface GE1/0/24

shutdown

#

interface GE1/0/25

shutdown

#

interface GE1/0/26

shutdown

#

interface GE1/0/27

shutdown

#

interface GE1/0/28

shutdown

#

interface GE1/0/29

shutdown

#

interface GE1/0/30

shutdown

#

interface GE1/0/31

shutdown

#

interface GE1/0/32

shutdown

#

interface GE1/0/33

shutdown

#

interface GE1/0/34

shutdown

#

```
interface GE1/0/35
```

```
shutdown
```

```
#
```

```
interface GE1/0/36
```

```
shutdown
```

```
#
```

```
interface GE1/0/37
```

```
shutdown
```

```
#
```

```
interface GE1/0/38
```

```
shutdown
```

```
#
```

```
interface GE1/0/39
```

```
shutdown
```

```
#
```

```
interface GE1/0/40
```

```
shutdown
```

```
#
```

```
interface GE1/0/41
```

```
shutdown
```

```
#
```

```
interface GE1/0/42
```

```
shutdown
```

```
#
```

```
interface GE1/0/43
```

```
shutdown
```

```
#
```

```
interface GE1/0/44
```

```
shutdown
```

```
#
interface GE1/0/45
shutdown
#
interface GE1/0/46
shutdown
#
interface GE1/0/47
shutdown
#
interface NULL0
#
ssh authorization-type default aaa
#
ssh server cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc
#
ssh server dh-exchange min-len 1024
#
ssh client cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc
#
user-interface con 0
#
vm-manager
#
Return
```



```
192.168.100.157 (SW-SANTIAGO)
Terminal Sessions View X server Tools Games Settings Macros Help
Session Servers Tools Games Sessions View Split MultiExec Tunneling Packages Settings Help
Quick connect...
sessions
PUTTY sessions
192.168.100.157
192.168.100.157 (R-CORE)
192.168.100.157 (ROMANA)
192.168.100.157 (root)
192.168.100.157 (SW1)
192.168.100.157 (SW2)
192.168.100.157 (SW3)
192.168.100.157 (SW4)
192.168.100.157 (SW5)
192.168.100.157 (SW7)
192.168.100.157 (SW-ROMANA)
192.168.100.157 (SW-SANTIAGO)
192.168.100.157 (SW-SERVIDORI)

!Software Version V200R005C10SPC607B607
!Last configuration was updated at 2026-08-17 02:33:18+00:00
!Last configuration was saved at 2026-08-17 02:33:22+00:00
#
sysname SW6
#
device board 1 board-type CE-MPUB
#
vlan batch 10 20 30 99 to 100
#
dhcp enable
#
ip pool VENTAS
gateway-list 10.20.1.1
network 10.20.1.0 mask 255.255.255.224
dns-list 10.20.2.2
#
ip pool CENTRO_DATOS
gateway-list 10.20.1.33
network 10.20.1.32 mask 255.255.255.240
dns-list 10.20.2.2
#
ip pool ADMIN
gateway-list 10.20.1.40
network 10.20.1.48 mask 255.255.255.240
dns-list 10.20.2.2
#
acl number 3002
rule 5 permit ip source 10.20.0.0 0.0.255.255
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default-admin
---- More ----
```

UNREGISTERED VERSION - Please support MobaXterm by subscribing to the professional edition here: <https://mobaxterm.mobatek.net>

<SW6>display current-configuration

!Software Version V200R005C10SPC607B607

!Last configuration was updated at 2026-08-17 02:33:18+00:00

!Last configuration was saved at 2026-08-17 02:33:22+00:00

#

sysname SW6

#

device board 1 board-type CE-MPUB

#

vlan batch 10 20 30 99 to 100

#

dhcp enable

#

ip pool VENTAS

gateway-list 10.20.1.1

network 10.20.1.0 mask 255.255.255.224

dns-list 10.20.2.2

#

ip pool CENTRO_DATOS

```
gateway-list 10.20.1.33
network 10.20.1.32 mask 255.255.255.240
dns-list 10.20.2.2
#
ip pool ADMIN
gateway-list 10.20.1.49
network 10.20.1.48 mask 255.255.255.240
dns-list 10.20.2.2
#
acl number 3002
rule 5 permit ip source 10.20.0.0 0.0.255.255
#
aaa
#
authentication-scheme default
#
authorization-scheme default
#
accounting-scheme default
#
domain default
#
domain default_admin
#
interface Vlanif10
description Gateway_VENTAS
ip address 10.20.1.1 255.255.255.224
#
interface Vlanif20
```

```
description Gateway_CENTRO_DATOS
```

```
ip address 10.20.1.33 255.255.255.240
```

```
#
```

```
interface Vlanif30
```

```
description Gateway_ADMIN
```

```
ip address 10.20.1.49 255.255.255.240
```

```
#
```

```
interface Vlanif99
```

```
description Gateway_GESTION
```

```
ip address 10.20.2.1 255.255.255.248
```

```
#
```

```
interface Vlanif100
```

```
description WAN_Gateway
```

```
ip address 1.0.0.2 255.255.255.240
```

```
#
```

```
interface MEth0/0/0
```

```
undo shutdown
```

```
#
```

```
interface Eth-Trunk1
```

```
description Uplink_Eth-Trunk
```

```
port link-type trunk
```

```
port trunk allow-pass vlan 10 20 30 99
```

```
#
```

```
interface GE1/0/0
```

```
undo shutdown
```

```
#
```

```
interface GE1/0/1
```

```
description WAN_to_NUBE
```

```
undo shutdown
```

```
port default vlan 100
#
interface GE1/0/2
description Member_Eth-Trunk1
undo shutdown
eth-trunk 1
#
interface GE1/0/3
undo shutdown
#
interface GE1/0/4
undo shutdown
#
interface GE1/0/5
undo shutdown
#
interface GE1/0/6
undo shutdown
#
interface GE1/0/7
undo shutdown
#
interface GE1/0/8
undo shutdown
#
interface GE1/0/9
undo shutdown
#
interface GE1/0/10
```

undo shutdown

#

interface GE1/0/11

undo shutdown

#

interface GE1/0/12

undo shutdown

#

interface GE1/0/13

undo shutdown

#

interface GE1/0/14

undo shutdown

#

interface GE1/0/15

undo shutdown

#

interface GE1/0/16

undo shutdown

#

interface GE1/0/17

undo shutdown

#

interface GE1/0/18

undo shutdown

#

interface GE1/0/19

undo shutdown

#

```
interface GE1/0/20
```

```
shutdown
```

```
#
```

```
interface GE1/0/21
```

```
shutdown
```

```
#
```

```
interface GE1/0/22
```

```
shutdown
```

```
#
```

```
interface GE1/0/23
```

```
shutdown
```

```
#
```

```
interface GE1/0/24
```

```
shutdown
```

```
#
```

```
interface GE1/0/25
```

```
shutdown
```

```
#
```

```
interface GE1/0/26
```

```
shutdown
```

```
#
```

```
interface GE1/0/27
```

```
shutdown
```

```
#
```

```
interface GE1/0/28
```

```
shutdown
```

```
#
```

```
interface GE1/0/29
```

```
shutdown
```

#

interface GE1/0/30

shutdown

#

interface GE1/0/31

shutdown

#

interface GE1/0/32

shutdown

#

interface GE1/0/33

shutdown

#

interface GE1/0/34

shutdown

#

interface GE1/0/35

shutdown

#

interface GE1/0/36

shutdown

#

interface GE1/0/37

shutdown

#

interface GE1/0/38

shutdown

#

interface GE1/0/39

```
shutdown
#
interface GE1/0/40
shutdown
#
interface GE1/0/41
shutdown
#
interface GE1/0/42
shutdown
#
interface GE1/0/43
shutdown
#
interface GE1/0/44
shutdown
#
interface GE1/0/45
shutdown
#
interface GE1/0/46
shutdown
#
interface GE1/0/47
shutdown
#
interface NULL0
#
ospf 1 router-id 10.20.2.1
```


area 0.0.0.0

network 1.0.0.0 0.0.0.15

area 0.0.0.2

network 10.20.1.0 0.0.0.31

network 10.20.1.32 0.0.0.15

network 10.20.1.48 0.0.0.15

network 10.20.2.0 0.0.0.7

#

stelnet server enable

ssh authorization-type default aaa

#

ssh server cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc

#

ssh server dh-exchange min-len 1024

#

ssh client cipher aes256_gcm aes128_gcm aes256_ctr aes192_ctr aes128_ctr
aes256_cbc aes128_cbc 3des_cbc

#

user-interface con 0

#

user-interface vty 0 4

authentication-mode aaa

protocol inbound ssh

#

vm-manager

#

Return