

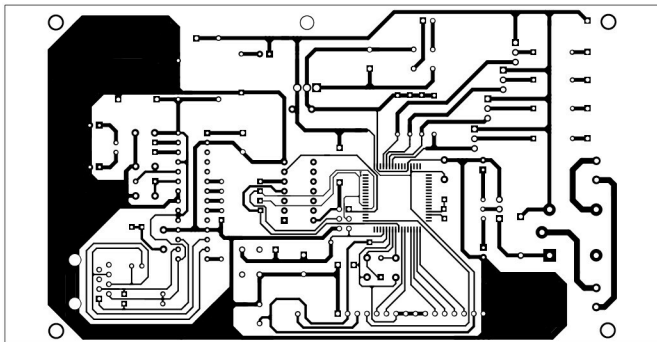


Fig. 5: An actual-size, single-side PCB for the Web-based water-level monitor and pump controller

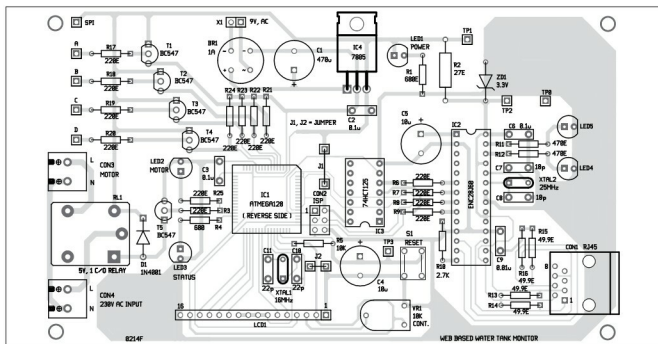


Fig. 6: Component layout for the PCB

it may get damaged. Second, you need an AVR programmer board and software tool to be installed in your PC. We used WinAVR2010 software for the same.

The ATmega128 comes with the following preloaded factory fuse settings:

Low fuse:E1

High fuse:99

Extended fuse:FD

The preloaded fuse setting makes use of the built-in 1MHz oscillator. In this project, we used a 16MHz crystal as clock source. So, before loading the hex code into the microcontroller, you need to change fuse bit settings. The fuse setting for this project is as follows:

Low fuse:CE

High fuse:D9

Extended fuse:FF

We have used AVR-ISP programmer manufactured by EmbeddedMarket.com for programming the fuse setting as well as loading the hex file into the microcontroller.

The fuse setting is changed by typ-