



Handheld Vibration & Sound Level Meter

Vibration / FFT Analyzer



- Works as vibration meter as well as analyzer.
- With graphical & digital display.
- For maintenance of equipments.
- For Product quality control application.
- Optional post analysis software.

Vibration Meter

- Integrated & extendable accelerometers and digital display.
- To measure acceleration, displacement and velocity.
- With hold function and auto power off.



Class 1 & Class 2 Sound Level Meters



- User friendly operations with 3 inch LCD color display.
- For field measurements with water resistant.
- Rechargeable batteries and data storage.

PUNE | AHMEDABAD | DELHI
CHENNAI | BANGALORE | MUMBAI

For more details please contact

Contact

M +91 83789 72199

Email

electrical@cyronics.com



**CYRONICS
INSTRUMENTS
PVT. LTD.**

Corporate office:

#11, Electronic Co-op. Estate, Pune-Satara Road,
Pune: 411 009, Maharashtra INDIA
Tel.: +91 20 2420 8200 Fax: +91 20 2420 8202

www.cyronics.com

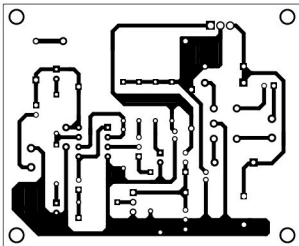


Fig. 2: Actual-size PCB of the charger

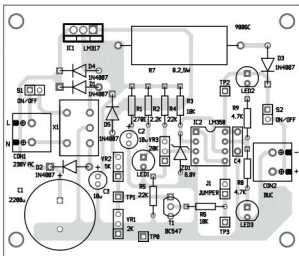


Fig. 3: Component layout of the PCB

For initial setup, remove jumper J1, switch off S2, switch on S1 and adjust potmeter VR2 to get 13.6V at test point TP2. Adjust potmeter VR3, so that LED2 begins to glow. Adjust potmeter VR1 to read 0.5V (difference of 14.1V and 13.6V) at test point TP1. Adjust VR2 to read 14.1V at test point TP2.

With these settings, TP2 should read 14.1V when there is low voltage at test point TP3, and 13.6V when there is high voltage at test point TP3. Connect jumper J1. The charger is now ready for use.

Connect the 12V battery under charging (BUC), with correct polarity, at CON2. Switch on S2; one of the LEDs out of LED2 and LED3 will light up (most likely it would be LED2).

If neither of these light up, check the connections; battery could be dead. Switch on S1 for charging. Fully charged status of the battery will be indicated by glowing of LED3.

Do not worry if you forget to switch off the charger. The charger is on floating voltage (13.6V) now and it can be kept in this charging mode forever.

Construction and testing

An actual-size, single-side PCB for the 12V battery absorb and float charger circuit is shown in Fig. 2 and its component layout in Fig. 3. Assemble the circuit on the PCB, except transformer X1 and the battery under charge (BUC).

Enclose the PCB in a small box. Fix the battery terminal

on the front of the box for connecting the BUC. Connect switches S1 and S2, potmeters VR1 through VR3, etc on the body of the box.

EFY notes. 1. Switch off S2 or disconnect battery terminals to avoid unnecessary discharge of battery when not charging, that is, when S1 is switched off.

2. Connect the battery with correct polarity.

3. Casing of IC1 should not be connected to ground, so use insulation. ●



Fayaz Hassan is manager at Visakhapatnam Steel Plant, Visakhapatnam, and is interested in microcontroller projects, mechatronics and robotics