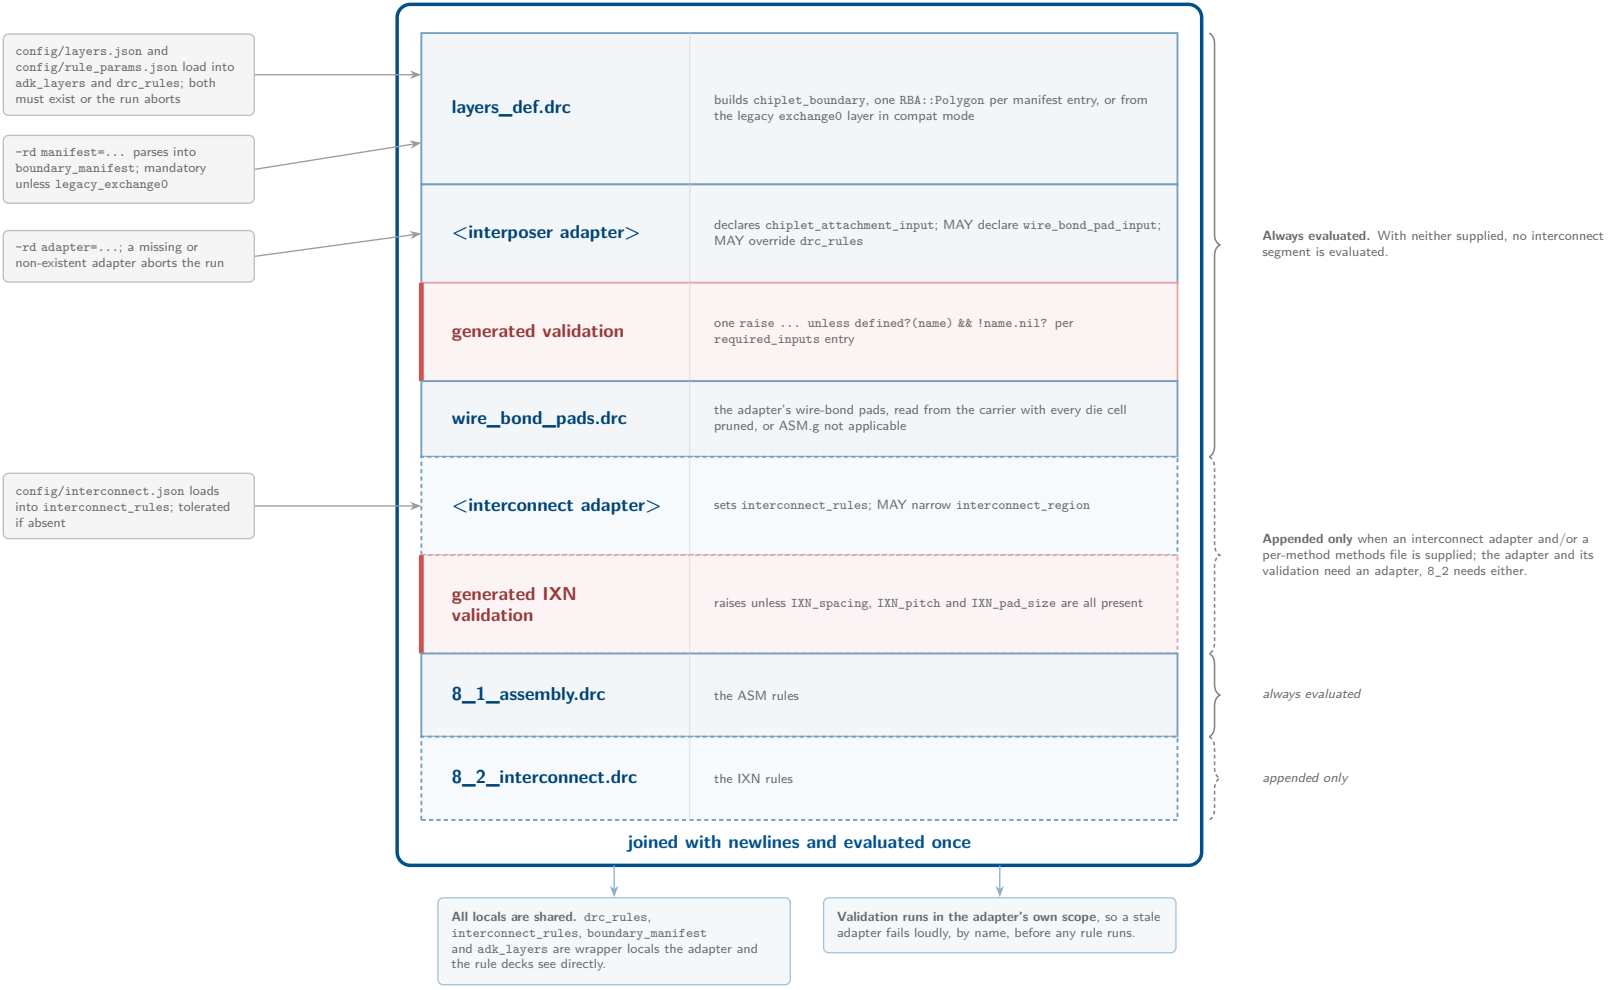

config/layers.json and config/rule_params.json load into adk_layers and drc_rules; both must exist or the run aborts
-rd manifest=... parses into boundary_manifest; mandatory unless legacy_exchange0
-rd adapter=...; a missing or non-existent adapter aborts the run
config/interconnect.json loads into interconnect_rules; tolerated if absent
layers_def.drc
builds chiplet_boundary, one RBA::Polygon per manifest entry, or from the legacy exchange0 layer in compat mode
<interposer adapter>
declares chiplet_attachment_input; MAY declare wire_bond_pad_input; MAY override drc_rules
generated validation
one raise ... unless defined?(name) && !name.nil? per required_inputs entry
wire_bond_pads.drc
the adapter's wire-bond pads, read from the carrier with every die cell pruned, or ASM.g not applicable
<interconnect adapter>
sets interconnect_rules; MAY narrow interconnect_region
generated IXN validation
raises unless IXN_spacing, IXN_pitch and IXN_pad_size are all present
8_1_assembly.drc
the ASM rules
8_2_interconnect.drc
the IXN rules
joined with newlines and evaluated once
Always evaluated. With neither supplied, no interconnect segment is evaluated.
Appended only when an interconnect adapter and/or a per-method methods file is supplied; the adapter and its validation need an adapter, 8_2 needs either.
always evaluated
appended only
All locals are shared. drc_rules, interconnect_rules, boundary_manifest and adk_layers are wrapper locals the adapter and the rule decks see directly.
Validation runs in the adapter's own scope, so a stale adapter fails loudly, by name, before any rule runs.