- □ case=allenrngs34803: STAGS overall axial bending NOT permitted: R=50 in; Node 1817; inward buckle
- O case=allenrngs34803: STAGS overall axial bending NOT permitted: R=50 in; Node 2527; outward buckle
- A case=allenrings: STAGS overall axial bending IS permitted: R=50 in; Node 1817; inward buckle + case=allenrings: STAGS overall axial bending IS permitted: R=50 in; Node 2527; outward buckle

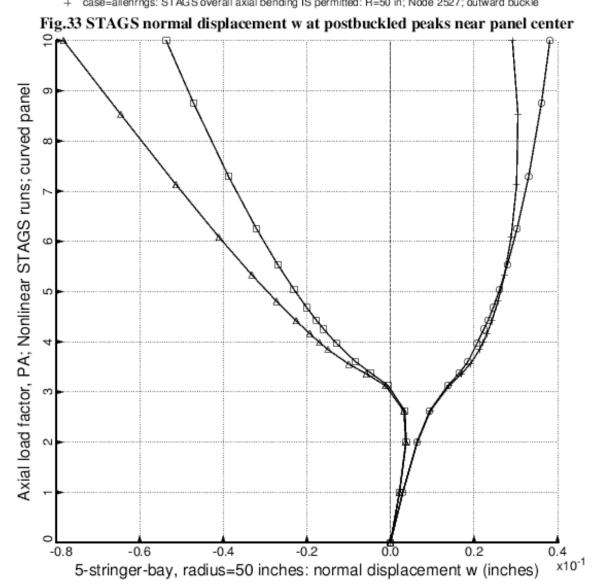


Fig. 33 STAGS predictions for inward (minus) and outward (plus) buckles for the curved panel with overall axial bending permitted and NOT permitted. (IBCX0XL = 1 in the *.STG file that, via execution of the PANDA2 processor, STAGSUNIT, generates the *.bin and *.inp input files for STAGS.) In-plane warping of the panel skin along the four panel edges is prevented. The third and fourth traces are taken from Fig. 26.