


H50.14.BKT Mode Status											
Motor Command Status											
0	00	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWB288 BKTY1~Moti on comman d	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWB308 BKTY2~Moti on comman d	MB055690	[MB055690] .../0027	H50.53/0105	
								Break Table Y Not Cmd			
1	30	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWB408 BKTY1~Moti on comman d	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWB488 BKTY2~Moti on comman d	MB055691	[MB055691] .../0028	H50.53/0106	
								Break Table Z Not Cmd			
2	60	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWB508 BKTY3~Moti on comman d	==	[WLFQD]SrcA 00000	[WLFQD]SrcB OWB588 BKTY1~Moti on comman d	MB055692	[MB055692] .../0029		
								Break Table T Not Cmd			
3	90	MB055690	MB055691	MB055692				MB055696	[MB055696] H50.53/0212 H50.53/0325 H50.53/0413	H50.53/0260 H50.53/0357 H50.53/0430	H50.53/0283 H50.53/0380 H50.53/0466
		Break Table Y Not Cmd	Break Table Z Not Cmd	Break Table T Not Cmd				Break Table Unit No Com mand			
Status											
Position											
4	130	MB056000	MB056020	MB056050				MB055740	[MB055740] H99.02/1677 L80.24/0427	H99.02/1717 L80.24/0484	L20.44/1231
		BKTY Waitin g Position	BKTY Waitin g Position	BKTY Waitin g Position				Break Table Waiting Posi tion			
5	170	MB056001	MB056021	MB056050				MB055741	[MB055741] L20.44/1238	L80.24/0455	
		BKTY Recei ve Before P osition	BKTY Recei ve Before P osition	BKTY Waitin g Position				Break Table Receive Bef ore Position			
6	210	MB056002	MB056022	MB056050				MB055742	[MB055742] L20.44/1245	L80.24/0483	
		BKTY Recei ve Position	BKTY Recei ve Position	BKTY Waitin g Position				Break Table Receive Posi tion			
7	250	MB056003	MB056023	MB056053				MB055743	[MB055743] H99.02/1505 H99.02/1732 L20.44/1252	H99.02/1582 H99.02/1755 L80.24/0509	H99.02/1597 H99.02/1764
		BKTY Breaki ng Start Posi tion	BKTY Breaki ng Start Posi tion	BKTY Breaki ng Start Posi tion				Break Table Breaking Sta rt Position			
8	290	MB056004	MB056024	MB056054				MB055744	[MB055744] H99.02/1599	L20.44/1259	
		BKTY Breaki ng End Posit ion	BKTY Breaki ng End Posit ion	BKTY Breaki ng End Posit ion				Break Table Breaking En d Position			
9	330	MB056005	MB056025	MB056050				MB055745	[MB055745] H99.02/1609 H99.02/1666	H99.02/1638 L20.44/1266	H99.02/1645
		BKTY Carry Out Position	BKTY Carry Out Position	BKTY Waitin g Position				Break Table Carry Out P osition			
10	370	MB056006	MB056020	MB056050				MB055746	[MB055746] L20.44/1273		
		BKTY Escap e Position	BKTY Waitin g Position	BKTY Waitin g Position				Break Table Escape Posi tion			
11	410	MB056008	MB056020	MB056050				MB055747	[MB055747] L20.44/1280		
		BKTY Recei ve Position (Last Dumm-	BKTY Waitin g Position	BKTY Waitin g Position				Break Table Receive Posi tion (Last -			
12	450	MB05600B	MB056020	MB056050				MB055748	[MB055748] L20.44/1287		
		BKTY Flatne ss Measure ment Positi-	BKTY Waitin g Position	BKTY Waitin g Position				Break Table Flatness Me asurement -			
Current Glass Status											
Current Table HyBrid / Normal Option Type (Glass Turn)											
13	490	MB047050						DB00001A			
		---						HyBrid Mode On			
Current Part's Number >= Total Part's Number											
14	510	>=	[WLFQD]SrcA MW15411	[WLFQD]SrcB GL21158 Total Part's Count				DB00001B			
								Last Pitch			
Break Table Vac On / Off											
Table Blow On Of Jog Moving											
15	530	==	[WLFQD]SrcA MW02782 Axis Index	[WLFQD]SrcB 00011			MB00005D	DB000020	[DB000020] .../0083		
							Running Ste p	JOG CMD			
		==	[WLFQD]SrcA MW02782 Axis Index	[WLFQD]SrcB 00012			MB000059				
							Jog Driving				
16	580	DB000020	MB030035	MB030036	MB00005C	DB000031		DB000080	[DB000080] .../0099w [DB000081] .../0100w	.../0101 .../0119	
		JOG CMD	P Work : Sc rube Chuck Y [SCT]	P Work : Bre ak Table [SC T]	Running AB S Search	Pls		Jog/Step Mo ving			
								DB000081			
								Jog/Step Sto p			
H50.14 : Mode Status_Unit4 (BKT)											
P00001											



23	107/199	Off Input				[MB05685F] H50.44/0984 H50.52/0504 H50.54/0357 H50.54/0390 H50.54/0492 H50.54/0561 L20.44/0124 L80.22/0182	H50.52/0380 H50.52/0568 H50.54/0368 H50.54/0407 H50.54/0522 H99.02/1660 L80.22/0114 L80.22/0216	H50.52/0439 H50.52/0681 H50.54/0379 H50.54/0423 H50.54/0543 H99.02/1718 L80.22/0148 L80.22/0248						
		MB056840	MB056841		MB05685F									
24	110/201	Off Output				[MB055840] .../0163w L10.54/0011w L20.44/0001 [MB055851] .../0176w L20.44/0013 [MB055841] .../0173w [MB055854] .../0186w [MB055844] .../0183w [MB055855] .../0196w [MB055845] .../0193w	H50.44/0640 L10.64/0160i H30.50/0389w H50.44/0651 H50.44/0862 H50.44/0684 H50.44/0873 H50.44/0695	L10.54/0006i L10.64/0211i H50.44/0827 L20.44/0009 L20.44/0037 L20.44/0033 L20.44/0045 L20.44/0041						
		MB05585F	MB05584F	DB000048										
		[Sol] SCT Break Table Vacuum All On												
		[Sol] SCT Break Table Vacuum All Off												
		EXPRESSION												
		'SCT Break Table Vacuum 1 Off' = 1 'SCT Break Table Vacuum 1 On' = 0 MB055850 = 1; MB055840 = 0; 'SCT Break Table Vacuum 2 Off' = 1 'SCT Break Table Vacuum 2 On' = 0 MB055851 = 1; MB055841 = 0; //MB055852 = 1; MB055842 = 0; //MB055853 = 1; MB055843 = 0; 'SCT Break Table Vacuum 5 Off' = 1 'SCT Break Table Vacuum 5 On' = 0 MB055854 = 1; MB055844 = 0; 'SCT Break Table Vacuum 6 Off' = 1 'SCT Break Table Vacuum 6 On' = 0 MB055855 = 1; MB055845 = 0;												
		Break Table Blow All Action MJ 12.13/ Area 1,2 -> 1,2,3,4 On Input												
25	114/230				STORE	[WLFQD]Src H003F	[WLFQD]Dest DW00043							
26	115/232	MB056860	MB056861	MB056862	[MB05686F] H50.44/1145 H50.52/0515 L20.44/0388	H50.52/0393 H50.52/0579	H50.52/0456 H50.52/0691							
		SCT Break Table Blow 1 On	SCT Break Table Blow 2 On	SCT Break Table Blow 3 On										
		DB000430	DB000431	DB000432										
		MB056863	MB056864											
		SCT Break Table Blow 4 On	SCT Break Table Blow 5 On											
		DB000433	DB000434											
		MB056865		MB05686F										
		SCT Break Table Blow 6 On		[Sensor] SCT Break Table Blow All -										
		DB000435												
		On Output												
27	128/219	MB05586F	DB000040		MB05587F	[MB05587F] .../0117w .../0325	.../0132w H50.44/1305	.../0249 L20.44/0393						
		[Sol] Break Table Blow All On			[Sol] SCT Break Table Blow All Off									
28	131/243	MB05586F	MB05587F	DB000041	[MB055870] .../0334w L10.54/0027w L10.64/0347i [MB055871] .../0340w [MB055872] .../0346w [MB055873] .../0352w L20.44/0297 [MB055874] .../0359w L20.44/0305 [MB055875] .../0364w L20.44/0313	H50.44/1155 L10.54/0028i L20.44/0264 H50.44/1165 H50.44/1175 H50.44/1185 H50.44/1195 H50.44/1205	L10.14/0420i L10.64/0254i L20.44/0265 L20.44/0276 L20.44/0277 L20.44/0288 L20.44/0289							
		[Sol] Break Table Blow All On	[Sol] SCT Break Table Blow All Off											
		DB000430												
		EXPRESSION												
		'SCT Break Table Blow 1 On' = 1 'SCT Break Table Blow 1,2 Off' = 0 MB055860 = 1; MB055870 = 0;												
		DB000431												
		EXPRESSION												
		'SCT Break Table Blow 2 On' = 1 'SCT Break Table Blow 3,4 Off' = 0 MB055861 = 1; MB055871 = 0;												
		DB000432												
		EXPRESSION												
		'SCT Break Table Blow 3 On' = 1 'SCT Break Table Blow 3 Off (sol)' = 0 MB055862 = 1; MB055872 = 0;												
		DB000433												
		EXPRESSION												
		'SCT Break Table Blow 4 On' = 1 'SCT Break Table Blow 4 Off (sol)' = 0 MB055863 = 1; MB055873 = 0;												
		DB000434												
		EXPRESSION												
		'Unit4 Blow 5 On (Sol)' = 1 'Unit4 Blow 5 Off (Sol)' = 0 MB055864 = 1; MB055874 = 0;												
		DB000435												
		EXPRESSION												
		'Unit4 Blow 6 On (Sol)' = 1 'Unit4 Blow 6 Off (Sol)' = 0 MB055865 = 1; MB055875 = 0;												
		</												

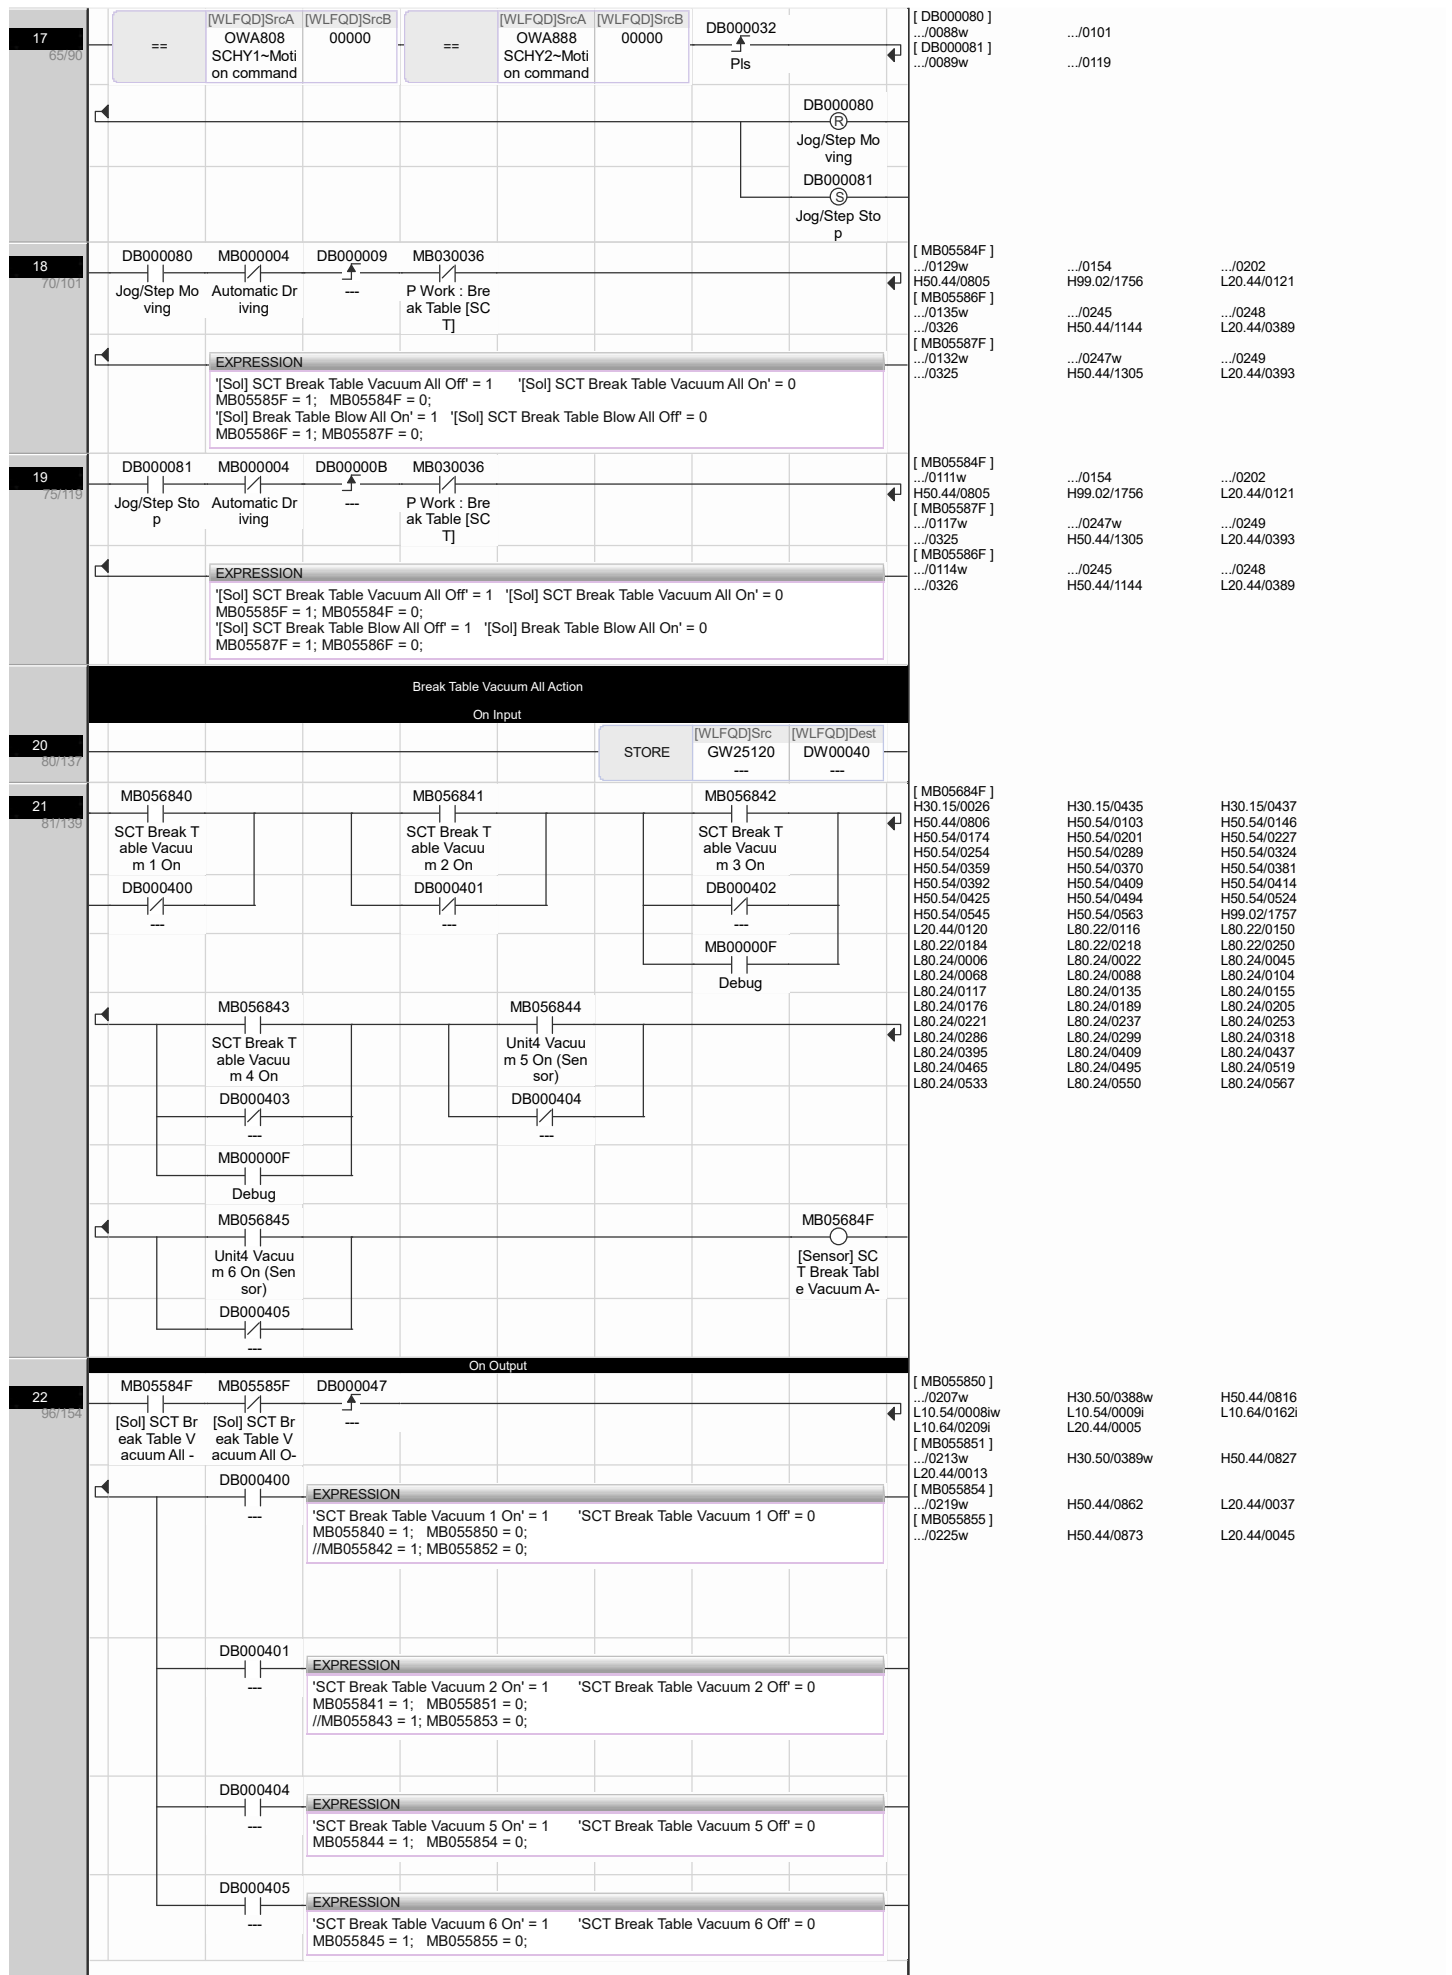