

SIP Channel Distributor — New Features (October 2026)

Oct 8, 2026 · @Someone

This release adds a calls-per-second (CPS) limit for each SIP trunk, 5-day CPU / RAM / storage graphs, a live Asterisk log in Diagnostics and shorter log retention. All four are live; no change is needed on your dialer side.

At a glance

Feature	Where to find it	What it does
Trunk CPS limit	SIP trunks → Add / Edit trunk → CPS	Caps new outbound calls per second on a trunk; bursts are paced instead of dropped
Resource history graphs	System → Server resources → graph icon on each tile	CPU, RAM and storage usage over the last 6 h, 24 h, 3 days or 5 days
Live Asterisk CLI log	Diagnostics → Asterisk log → Follow live	What the Asterisk console shows, refreshed every 3 s, with search
Log retention	Automatic	Asterisk logs kept 3 days; graphs and call history kept 5 days

Trunk CPS limit

Each SIP trunk now has a **CPS** setting: the most new outbound calls the distributor sends to that carrier in any one second. Use it to match the CPS your carrier allows, so they don't reject or block your calls.

How to set it


1. Open **SIP trunks** and click **Edit** on the trunk (or + **Add trunk**).
2. Under **Capacity**, enter a number in **CPS** (1-1000). **0 means unlimited**, which is the default for all existing trunks.
3. Save. The new limit applies from the next call; calls already connected are never affected.

The trunk card then shows “max N CPS” next to the host.

What happens to calls over the limit

- Calls are paced, not dropped. A call that arrives when this second's quota is full waits briefly and tries again in the next second.
- A call can wait up to **3 seconds**. If no slot frees up in that time, it is rejected with **SIP 503** and recorded as **TRUNK_LIMIT** in the CDR, the same result as a full trunk channel limit.
- The CPS check runs after the process and trunk channel limits and just before the call goes to the carrier.
- Inbound calls from the carrier are not counted or limited.

Calls over the CPS limit wait up to 3 s, then are rejected

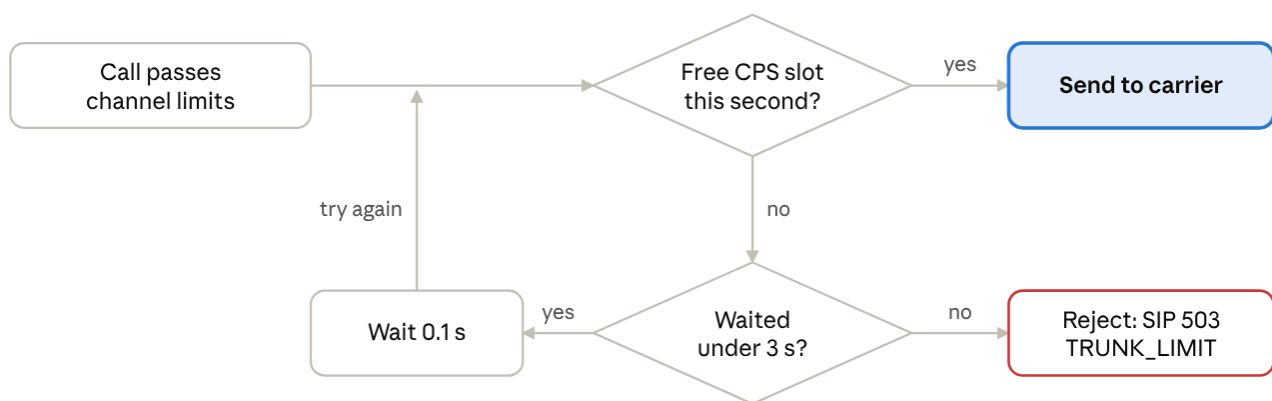

CPS pacing · 2 checks, 1 retry loop

A call keeps retrying every 0.1 s while a slot may still free up; only after 3 s without one is it rejected.

Example: a trunk set to 10 CPS receives a burst of 25 calls in the same second. 10 go out at once, 10 in the next second and 5 in the second after; none are rejected. The dialer only sees a short extra ring delay on the later calls.

Tip: if the Diagnostics page shows “Trunk limit reached” warnings but the trunk's channels aren't full, the CPS limit is the cause. Raise the CPS (if the carrier allows it) or have the dialer spread calls more evenly.

Server resource graphs

You can now see how CPU, RAM and storage usage changed over the last 5 days, not just the current value. Use it to spot load peaks during campaigns or a disk that is filling up.

How to open a graph

1. Go to **System**. The **Server resources** tiles show the current CPU, RAM and storage use, refreshed every 5 seconds.
2. Click the small graph icon in the top-right corner of a tile.
3. A window opens with that resource's history. Pick **6 h**, **24 h**, **3 days** or **5 days** at the top.
4. Move the mouse over the line to see the exact value and time at any point.

What is recorded

Graph	Value shown
CPU	% of all cores in use, averaged over each minute
RAM	% of memory in use (cache that can be freed counts as free)
Storage (one graph per disk, e.g. <code>/</code> and <code>/boot</code>)	% of the disk used

A sample is taken every minute and kept for 5 days; longer ranges show averages. A gap in the line means the service was stopped during that time. History started on 8 October 2026, so the 3- and 5-day views fill up over the following days.

Live Asterisk CLI log in Diagnostics

The live Asterisk log, the same lines an engineer sees on the Asterisk console, now sits with the other troubleshooting tools in **Diagnostics → Asterisk log**. It has moved off the System page.

Watching live

- **Follow live (every 3 s)** is ticked by default, so new lines appear on their own.
- Scroll up to read earlier lines and the view stays where you are. Scroll back to the bottom to follow again.
- Type in **Contains** (a phone number, IP address or trunk name) to show only matching lines.
- Tick or untick **ERROR**, **WARNING**, **NOTICE**, **VERBOSE** and **DTMF** to choose which kinds of line appear. **Lines** sets how many are shown (200–2000).

Searching

- Untick **Follow live** to stop refreshing, then press **Search**. This looks back through the most recent 32 MB of the log.

- Click a call ID such as `[C-0000001a]` in any line to show every line for that one call. Follow live turns off automatically so the result stays on screen.

Lines are coloured by level: errors red, warnings amber. Logs older than 3 days are removed; see the next section.

Log and data retention

Asterisk's detailed logs are now kept **3 days** to save disk space; graphs and call history stay at **5 days**. Older data is removed automatically and nothing needs to be done by hand.

What	Kept for	Removed
Asterisk CLI log (<code>full</code>)	3 days	Rotated nightly, compressed, oldest deleted
Asterisk warnings and errors (<code>messages.log</code>)	3 days	Rotated nightly, compressed, oldest deleted
CPU / RAM / storage graph data	5 days	Checked every hour
Call records (CDR report, call lookup) and audit log	5 days	Checked every 6 hours
Daily totals (Reports page)	Kept	Not removed

To keep calls longer, use **Export CSV** on the CDR report before they age out; copy any log lines you need from Diagnostics. Daily totals on the Reports page are never deleted.

Stability under high call volume

The distributor now listens only to the call events it needs from Asterisk, instead of every step of every call. In a load test at about 1,500 simultaneous calls, the old behaviour overloaded Asterisk until it stopped answering new SIP requests. With this fix, the live dashboard and call records work exactly as before, with much less work for Asterisk at high volume.

FAQ

Do I have to change anything on my dialer? No. CPS pacing happens inside the distributor. The dialer may see a short extra delay before ringing during bursts, and a SIP 503 only if a call waits more than 3 seconds.

What CPS should I set? The CPS your carrier allows on that trunk. If they don't state one, leave it at 0 (unlimited).

Does the CPS limit replace the channel limit? No, both apply. The channel limit caps how many calls are up at once; CPS caps how many new calls start each second.

Why do the 5-day graphs look empty? Recording started on 8 October 2026; the graphs fill in over the following days.

Where did the Asterisk log on the System page go? It moved to **Diagnostics → Asterisk log**. The System page header links to it.