

A380X fuel jettison

Jettison down to a gross weight set on the MFD, with the ECAM memo, the ABN PROC procedure and the COMPLETED alert (FCOM DSC-28-40)

Aircraft	A380X
Where to find it	Overhead FUEL panel: JETTISON ARM and ACTIVE pushbuttons; MFD FMS ACTIVE/FUEL&LOAD: JTSN GW ; ECP ABN PROC > FUEL > JETTISON
PR branch	pr/15-fuel-jettison (independent)
Status	Tested in the sim (September 2026).
Pictures	MFD and EWD in the local browser harness, running the builds installed in the sim; the EWD states are the ones the FWS sends in flight.

1. What it is for
2. 1. Set the jettison gross weight
3. 2. Run the procedure
4. 3. During the jettison
5. 4. When it stops
6. Limitations and why

1. What it is for

FBW had the overhead JETTISON ARM and ACTIVE pushbuttons, but they did nothing. The fuel management (FQMS) now jettisons the fuel of the transfer tanks down to the gross weight entered on the MFD, and the ECAM shows the memo and the procedures of the FCOM.

2. 1. Set the jettison gross weight

1. MFD FMS **ACTIVE/FUEL&LOAD** page. **JTSN GW** is shown when the active flight plan has its mandatory data.
2. Enter the gross weight at which the jettison must stop, in tonnes (or 1000 lb with the LBS unit).
3. Allowed range: from **ZFW + 11 000 lb** (5.0 t) to the maximum gross weight (FCOM DSC-22-FMS-20-100). Outside it: ENTRY OUT OF RANGE with the range.

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/FUEL&LOAD

GW

.-

T

CG

.-

%

FOB

.-

T

ZFW

300.0

T

ZFWCG

36.0

%

BLOCK

150.0

T

FUEL PLANNING *

TAXI

1.5

T

PAX NBR

000

TRIP

.-

T

.-

%

CI

RTE RSV

.-

T

5.0

%

JTSN GW

400.0

T

ALTN

0.0

T

.-

%

TOW

448.5

T

FINAL

6.0

T

00:30

LW

.-

T

TIME

EFOB

MIN FUEL AT DEST

DEST

NONE

.-

T

6.0

T

ALTN

NONE

.-

T

EXTRA

.-

T

.-

%

RETURN

MSG LIST

Figure 1. JTSN GW 400.0 t entered (ZFW 300.0 t).

FMS 1

ACTIVE

POSITION

SEC INDEX

DATA

ACTIVE/FUEL&LOAD

GW

.-

T

CG

.-

%

FOB

.-

T

ZFW

300.0

T

ZFWCG

36.0

%

BLOCK

150.0

T

FUEL PLANNING *

TAXI

1.5

T

PAX NBR

000

TRIP

.-

T

.-

%

CI

RTE RSV

.-

T

5.0

%

JTSN GW

400.0

T

ALTN

0.0

T

.-

%

TOW

448.5

T

FINAL

6.0

T

00:30

LW

.-

T

TIME

EFOB

MIN FUEL AT DEST

DEST

NONE

.-

T

6.0

T

ALTN

NONE

.-

T

EXTRA

.-

T

.-

%

RETURN

CLEAR INFO

ENTRY OUT OF RANGE
RNG: 305.0 TO 512.0 T

Figure 2. 290 t is below ZFW + 5.0 t: the range is shown in the message area.

CAUTION

Without a JTSN GW the FQMS has no target weight: the jettison then runs until the transfer tanks are empty (or a pushbutton is set OFF).

3. 2. Run the procedure

The ABN PROC procedure takes the crew through the steps. ECP **ABN PROC**, then FUEL, then JETTISON:

SMOKE / FUMES

EMER EVAC

EMER DESCENT

DITCHING

FORCED LANDING

UNRELIABLE AIRSPEED INDICATION

ENG

F/CTL

L/G

NAV

FUEL

MISCELLANEOUS

Figure 3. ABN PROC menu: FUEL selected.

ABNORMAL PROC

FUEL

JETTISON

FUEL LEAK

MAN BALANCING PROCEDURE

Figure 4. FUEL sub-menu: JETTISON.

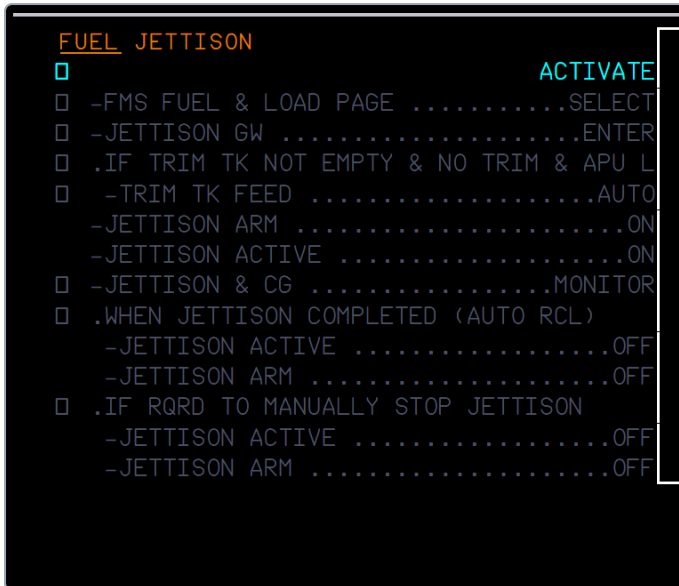


Figure 5. The procedure before ACTIVATE: all lines in grey.

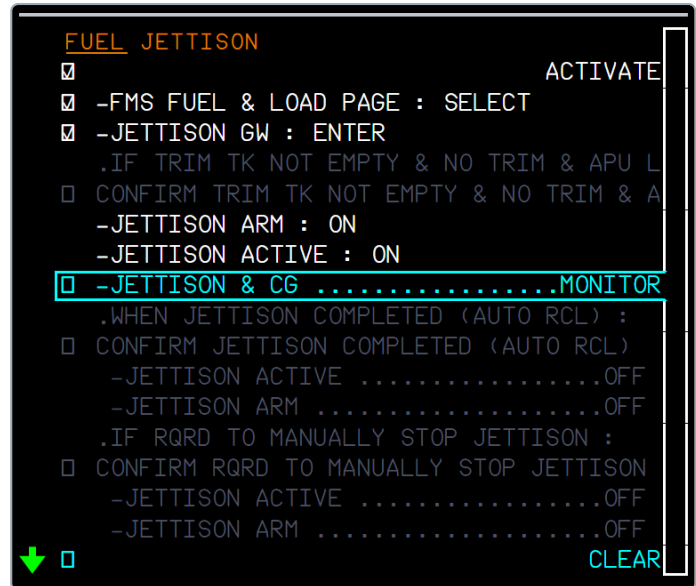


Figure 6. Activated: the FMS lines checked by the crew, JETTISON ARM and ACTIVE ticked by the FWS as the pushbuttons are set (sensed lines).

- FMS FUEL & LOAD PAGE ... SELECT, JETTISON GW ... ENTER: crew check lines.
- IF TRIM TK NOT EMPTY & NO TRIM & APU LINE FAULT: TRIM TK FEED AUTO (condition line, confirmed by the crew).
- **JETTISON ARM ON, JETTISON ACTIVE ON:** sensed, they tick themselves.
- JETTISON & CG ... MONITOR: watch the SD FUEL page and the CG.
- WHEN JETTISON COMPLETED (AUTO RCL) / IF RQRD TO MANUALLY STOP JETTISON: ACTIVE OFF then ARM OFF, sensed.

4. 3. During the jettison

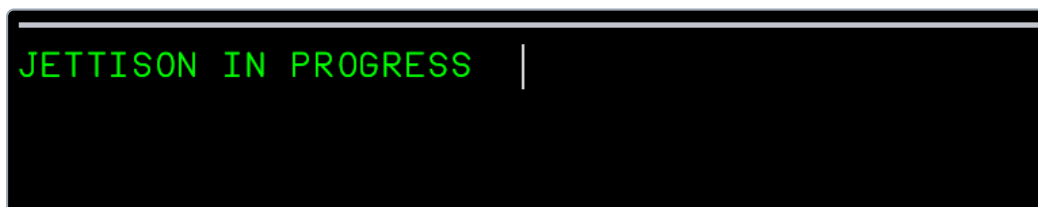


Figure 7. The EWD memo while the fuel is jettisoned.

- Memo **JETTISON IN PROGRESS** (green).
- Fuel leaves the **transfer tanks** (outer, mid, inner and trim) at the FCOM rate of **330 693 lb/h** (about 2.5 t per minute), in proportion to their content, so they empty together. The **feed tanks are never jettisoned**.
- The trim tank is held when the CG reaches the forward T.O/LDG limit, and resumes when the CG is 0.5 % aft of it.
- The other automatic transfers pause during the jettison.
- The SD FUEL page shows the two jettison valves open and the quantities decreasing.

5. 4. When it stops

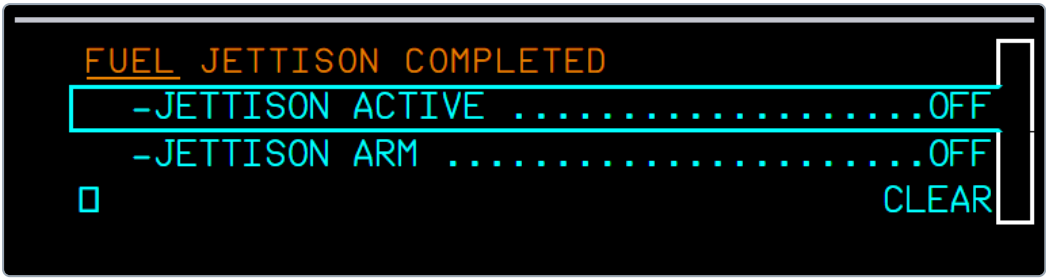


Figure 8. FUEL JETTISON COMPLETED: set ACTIVE then ARM OFF; the lines tick as the pushbuttons are released.

Situation	What you should see
Gross weight reaches the JTSN GW	The jettison stops, FUEL JETTISON COMPLETED shows, the ACTIVE ON light goes off.
All transfer tanks empty (or no JTSN GW entered)	Same: stops and COMPLETED.
ACTIVE or ARM set OFF by the crew	Stops at once (manual stop). No COMPLETED alert.
Both pushbuttons OFF after COMPLETED	The alert and the COMPLETED state clear; a new jettison can be started.
ACTIVE ON without ARM	Nothing: ARM is needed.
AC 1 bus not powered	No jettison (FQMS channel unpowered).

6. Limitations and why

Limitation	Why	What to do
JETTISON FAULT, VLV NOT CLOSED and the INOP SYS are not shown.	FBW has no jettison valve failures to trigger them.	-
The fuel does not leave through an outlet.	The MSFS fuel system has no overboard dump: the FQMS sets the tank quantities directly and opens valves 57 / 58 for the SD picture.	-
After an update, the first flight needs a full MSFS restart.	The change touches the behaviour XML of the overhead, which MSFS loads at start.	Restart MSFS once after installing.