

A380X ATC COM and datalink

The MFD ATC COM pages and the SD mailbox of the A380 FCOM on the FBW datalink, with a datalink that connects reliably, and ATC route clearances and constraints loaded into SEC 3

Aircraft	A380X (the ACARS provider connection is shared with the A32NX)
Where to find it	MFD system menu ATC COM (or the KCCU ATC COM key); the SD MAILBOX ; MFD FMS INIT (FLT NBR); flyPad > Settings > ATSU / AOC
Branch	core/a380x-atccom-datalink, based on core/a380x-mfd-fms (stacked: needs core/surveillance and core/a380x-mfd-fms merged first). core/printer builds on it.
Status	ATC COM pages and mailbox: tested in the sim 2026-09-27 (ATIS, frames, fixes), logon and MAYDAY 2026-09-28/29, PAN PAN PAN 2026-10-02. Flight number connection and SEND FAILED: OK 2026-09-28 and 2026-10-02. ACARS provider: seen working with BeyondATC 2026-09-29. Mailbox FILE FULL fix: OK 2026-10-02; @ markers: OK 2026-10-03. LOAD-SEC3: route clearance OK 2026-10-02; crossing constraints not sim-tested.
Pictures	Captain MFD and SD in the local browser harness, running the build installed in the sim; the messages come from the harness (no ATC network). flyPad page in the same harness. No pictures for the mailbox fixes and LOAD-SEC3.

1. ATC COM pages and the SD mailbox
2. Datalink connection with the flight number, and SEND FAILED
3. ACARS provider connection
4. SD mailbox fixes: FILE FULL after CANCEL, uplink @ markers
5. LOAD-SEC3: ATC route clearances and crossing constraints into SEC 3

1. ATC COM pages and the SD mailbox

Aircraft: A380X | **Where:** MFD ATC COM pages; SD MAILBOX | **Status:** Tested in the sim by the user: ATIS, REQUEST / OTHER REPORTS / EMERGENCY frames and the fixes of that test (frame delete, label layout, font sizes, ATIS time): OK (2026-09-27). Logon to BeyondATC (RJJJ) 2026-09-28, MAYDAY sent 2026-09-29, PAN PAN PAN sent 2026-10-02. Answering uplinks of a live controller (WILCO, UNABLE...) not recorded. Unit tests: 33.

What it is for

The A380 talks to ATC by datalink: the crew logs on to a center, sends requests and reports, receives clearances and answers them, and gets the airport ATIS as text. The FCOM describes the MFD **ATC COM** pages (DSC-46-10-20-30) and the SD **MAILBOX** (DSC-46-10-10-70). They are all built on their FCOM figures and connected to the FBW ATSU, the same datalink system as the A32NX DCDU.

NOTE

The network is chosen in the flyPad: Settings > ATSU / AOC (Hoppie, BeyondATC or SayIntentions). The datalink needs VHF3 in DATA mode on the RMP.

Page (header)	Use
CONNECT	Logon (NOTIFICATION), CONNECTION STATUS with ADS, MAX UPLINK DELAY.
REQUEST	Build a request from frames (climb, direct, offset, weather deviation, speed, clearances...) and send it to the mailbox.
REPORT & MODIFY	Position report, other reports, modify a prepared answer.
MSG RECORD	The record of the closed dialogues.
ATIS	Request and read the ATIS of three airports.
EMER	MAYDAY / PANPAN and the emergency reports.

Logging on: CONNECT

- 1. CONNECT > NOTIFICATION: type the **ATC CENTER** (4 letters) and press **NOTIFY**. The page shows NOTIFYING, then the center in NOTIFIED TO CENTERS (with the time), or NOTIFICATION FAILED.
- 2. When ATC accepts, CONNECTION STATUS shows the ACTIVE ATC (and the NEXT ATC after a transfer). DISCONNECT ends the connection.

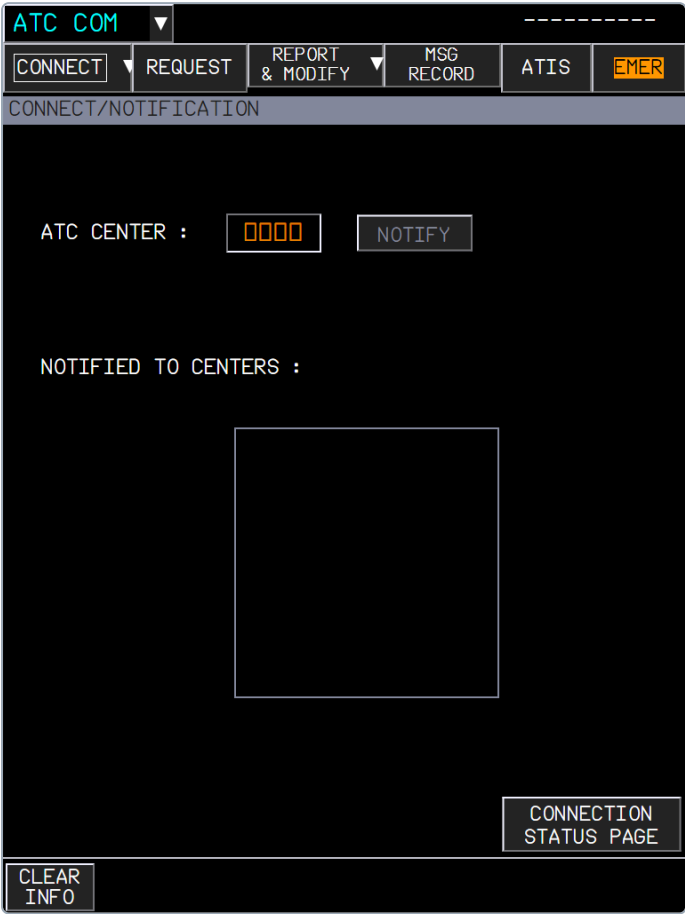


Figure 1. CONNECT / NOTIFICATION.

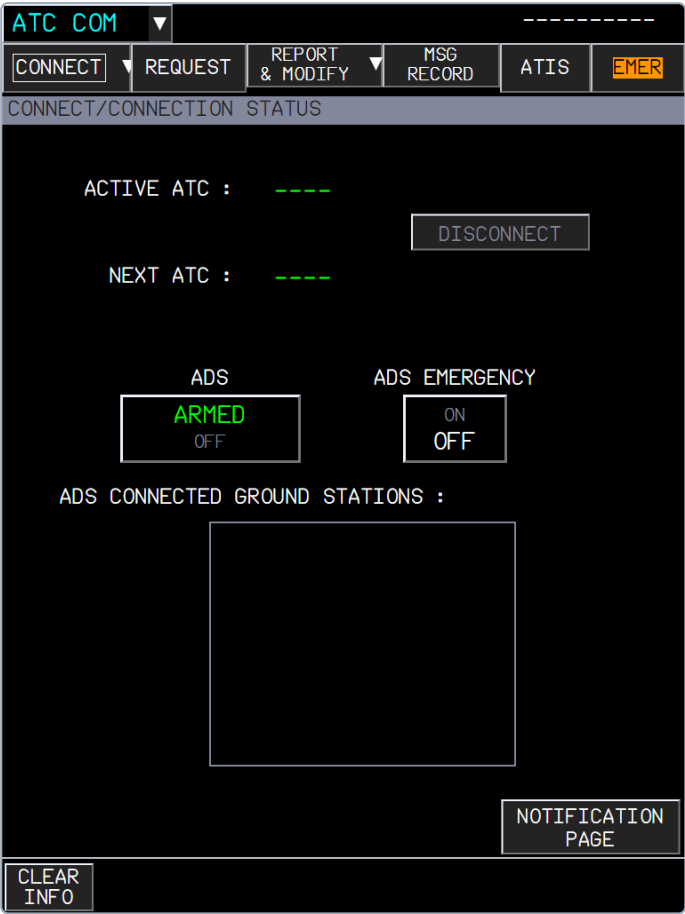


Figure 2. CONNECTION STATUS: active and next ATC, ADS ARMED / OFF, ADS EMERGENCY.

ATC COM

CONNECT

REQUEST

REPORT & MODIFY

MSG RECORD

ATIS

EMER

CONNECT/MAX UPLINK DELAY

MAX UPLINK DELAY :

☒ NONE

☐ SET MAX UPLINK DELAY TO

 (ONLY ON DEMAND OF ACTIVE ATC)

 ACTIVE ATC : ---

CLEAR INFO

Figure 3. MAX UPLINK DELAY: NONE, or a delay set on the demand of the active ATC.

Asking ATC: REQUEST

1. Open the menus on the right (VERTICAL, LATERAL, SPEED, CLEARANCE, WHEN CAN WE EXPECT, OTHER) and pick the frames you need; up to 5 frames, each with its fields.
2. Fill the fields (FCOM entry formats; amber boxes are mandatory). ADD TEXT adds free text. The bin deletes a frame.
3. Press **XFR TO MAILBOX**: the request goes to the SD mailbox, where you **SEND** it.

ATC COM

CONNECT

REQUEST

REPORT & MODIFY

MSG RECORD

ATIS

EMER

REQUEST

REQUEST DIR TO

TADEX

REQUEST CLB TO

FL360

AT

REQUEST OFFSET

0000

AT

REQUEST DEVIATION 20NM LEFT

DUE TO WEATHER

CANCEL

XFR TO MAILBOX

CLEAR INFO

VERTICAL

LATERAL

SPEED

CLEARANCE

WHEN CAN WE EXPECT

OTHER

ADD TEXT

Figure 4. A request of 5 frames: DIR TO TADEX, CLB TO FL360, OFFSET (amber: to fill), free text, DUE TO WEATHER.

ATC COM

CONNECT

REQUEST

REPORT & MODIFY

MSG RECORD

ATIS

EMER

REQUEST

DEPARTURE ARPT

0000

DESTINATION

0000

GATE

A/C TYPE

A388

ATIS CODE

0

VERTICAL

LATERAL

SPEED

CLEARANCE

WHEN CAN WE EXPECT

OTHER

ADD TEXT

CANCEL

XFR TO MAILBOX

CLEAR INFO

Figure 5. CLEARANCE > DEPARTURE: the departure clearance request (DCL): departure airport, destination, gate, aircraft type, ATIS code.

Reports: REPORT & MODIFY

ATC COM

CONNECTREQUESTREPORT & MODIFYMSG RECORDATISEMER

REPORT/AUTO & MANUAL POSITION

AUTO POSITION REPORT

ONOFF

		UTC	ALT
OVHD	MIPAK	0946 Z	32000 FT
PPOS	TAVUN	1005 Z	32000 FT
TO	PUT	1022 Z	
NEXT	DALAN		

	CAS	GROUND	VERTICAL
SPEED	310 KT	320 KT	0 FT/MIN
HEADING	135 °T	TRACK	132 °T
WIND	-----	SAT	-40 C
ICING	TRACE	TURBULENCE	LIGHT
ETA DEST	1133 Z	ENDURANCE	4 H30 MIN

☐DEVIATING

☐CLIMBING TO

☐DESCENDING TO

ERASE ALL FIELDS

REFRESH DATA

ADD FREETEXT

XFR TO MAILBOX

CLEAR INFO

Figure 6. AUTO & MANUAL POSITION: the position report filled by the FMS (overhead, present position, to, next, times, levels, speeds, wind, SAT, ETA, endurance); AUTO POSITION REPORT ON sends it at each reporting point.

ATC COM

CONNECTREQUESTREPORT & MODIFYMSG RECORDATISEMER

REPORT/OTHER REPORTS

BACK ON ROUTE

BACK ON ROUTE

PASSING POSITION

LEAVING ALTITUDE

LEVEL

REACHING ALTITUDE

REACHING BLOCK

ADD FREETEXT

CANCEL

XFR TO MAILBOX

CLEAR INFO

Figure 7. OTHER REPORTS: back on route, passing position, leaving / reaching altitude, level, reaching block, free text.

ATC COM

CONNECT

REQUEST

REPORT & MODIFY

MSG RECORD

ATIS

EMER

REPORT/MODIFY

PRESENT ALTITUDE 12500 FT

CANCEL

ADD FREETEXT

XFR TO MAILBOX

CLEAR INFO

NO FMS DATA

Figure 8. MODIFY: a prepared answer (here PRESENT ALTITUDE 12500 FT) that the crew can change before sending.

The SD MAILBOX

Every message to and from ATC goes through the mailbox at the bottom of the SD. It shows the active ATC, the ADS status, the message and the answer buttons the message expects.

SAT

XX °C

10:24: 00 GPS

GWCG

XX %

XX KG

ACTIVE ATC : LFBO

ADS OFF

RECALL

Figure 9. Mailbox without a message: ACTIVE ATC LFBO, ADS OFF.

SAT XX °C		10:24: 00 GPS	GW XX KG GWCG XX % FOB XX KG	
 MSG 1/3  RECALL	1425Z FROM KZAK CTL OPEN CLIMB TO REACH FL340 BY BERGI		WILCO STANDBY UNABLE PRINT	

Figure 10. An uplink: CLIMB TO REACH FL340 BY BERGI, OPEN, with WILCO / STANDBY / UNABLE. MSG 1/3: three messages are waiting.

SAT XX °C		10:24: 00 GPS	GW XX KG GWCG XX % FOB XX KG	
 RECALL	TO KZAK CTL REQUEST DEVIATION 20NM LEFT OF ROUTE DUE TO CB AHEAD WILL ADVISE WHEN CLEAR OF WEATHER THANKS		SEND CANCEL PRINT	

Figure 11. A request ready to go: SEND or CANCEL.

The message expects	Buttons
WILCO / UNABLE (a clearance)	WILCO, STANDBY, UNABLE
AFFIRM / NEGATIVE (a question)	AFFIRM, STANDBY, NEGATIVE
ROGER (information)	ROGER
A departure or oceanic clearance	ACK / REFUSE

UNABLE and NEGATIVE can add a reason (DUE TO WEATHER, A/C PERFORMANCE, TURBULENCE) and free text; MODIFY opens the answer on the MFD. The message colours follow the FCOM status legend.

MSG RECORD and ATIS

ATC COM

CONNECTREQUESTREPORT & MODIFYMSG RECORDATISEMER

MSG RECORD/LIST

1250ZFROM LFBO CTL
CLIMB TO FL380

1247ZFROM LFBO CTL
MAINTAIN M.86

1246ZFROM LFBO CTL
MAINTAIN M.85

1245ZFROM LFBO CTL
MAINTAIN M.84

1244ZFROM LFBO CTL
MAINTAIN M.83

1243ZFROM LFBO CTL
MAINTAIN M.82

1242ZFROM LFBO CTL
MAINTAIN M.81

1241ZFROM LFBO CTL
MAINTAIN M.80

WILCO

ROGER

UNABLE

NEGATIVE

AFFIRM

STANDBY

WILCO

ERASE ALL

PRINT ALL

CLEAR INFO

Figure 12. MSG RECORD: the closed dialogues with their time and the answer given; ZOOM shows one in full; ERASE ALL, PRINT ALL.

ATC COM

CONNECTREQUESTREPORT & MODIFYMSG RECORDATISEMER

ATIS/LIST

LFB0DEPR 1145Z

OPTIONS

LFB0 DEP ATIS R 1145Z EXP ARR RWY 32R AND
21L /DEP /SID 5 B. 5 P WIND CALM VIS 3500 M
- CB FEW 500 FT BKN 26000 FT /

LFP0ARR

SEND REQUEST

AUTO UPDATE

LFPGARRP 1200Z

SEND AGAIN

OPTIONS

LFPG ARR ATIS P 1200Z ATIS INFO ARR/DEP APCH
ILS APCH LDG 27L AND 26L / RWY 26 L WET TL
40 BIRD HAZARD AFTER VACATING RWY 26L HOLD
SHORT OF RWY 26R TKOF 27L AND 26R SID 8A 8B
8Y 8Z QNH 1013 TEMP 12 DEWPOINT 8

PRINT ALL

UPDATE ALL

CLEAR INFO

Figure 13. ATIS: three request areas (departure, arrival, alternate, following the FMS airports), each with its ATIS text, AUTO UPDATE, and SEND REQUEST / SEND AGAIN.

ATC COM

CONNECT

REQUEST

REPORT
& MODIFY

MSG
RECORD

ATIS

EMER

ATIS/RECEIVED

LFB0 DEP R 1145Z
LFB0 DEP ATIS R 1145Z EXP ARR RWY 32R AND
21L /DEP /SID 5 B. 5 P WIND CALM VIS 3500 M
- CB FEW 500 FT BKN 26000 FT /

RETURN
TO LIST

CLEAR
INFO

Figure 14. ATIS RECEIVED: the full text of an ATIS, RETURN TO LIST.

Emergency: EMER

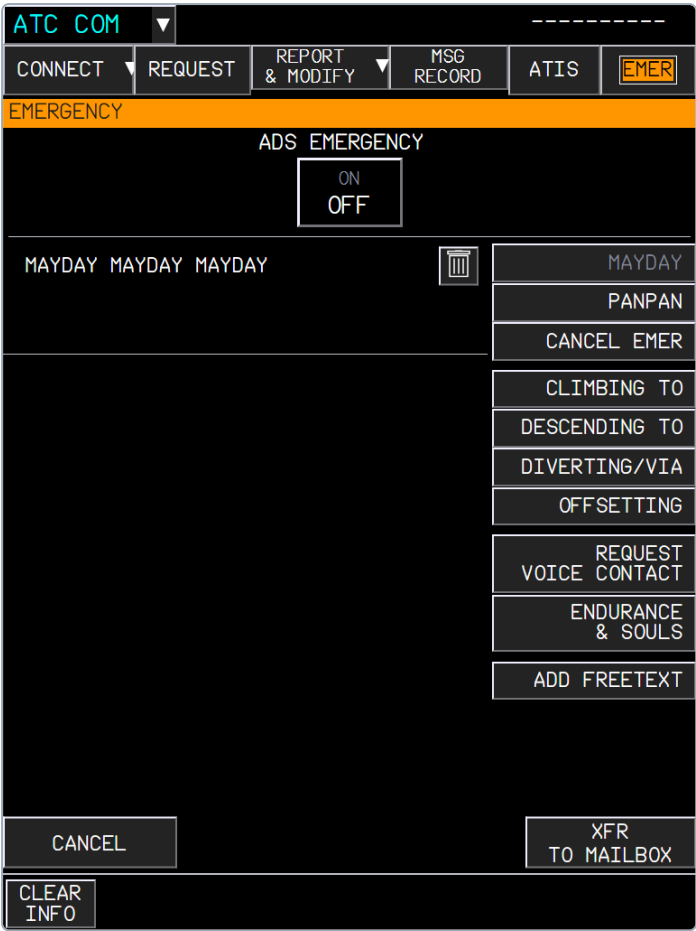


Figure 15. EMERGENCY (orange title): MAYDAY MAYDAY MAYDAY frame, PANPAN, CANCEL EMER and the emergency reports (climbing / descending to, diverting, offsetting, voice contact, endurance and souls). MAYDAY also switches the ADS to EMERGENCY.

What to expect

Situation	What you should see
NOTIFY with no network set	NOTIFICATION FAILED.
Request with an empty mandatory field	XFR TO MAILBOX stays greyed.
Uplink received	Mailbox message with its answer buttons.
Answer sent	The dialogue closes and goes to MSG RECORD.
ATIS requested	The text appears in its area; a newer version replaces it (AUTO UPDATE).
MAYDAY sent	ADS EMERGENCY ON.

Limitations and why

Limitation	Why	What to do
Needs an online datalink network.	ATC messages come from Hoppie, BeyondATC or SayIntentions through the flyPad ATSU settings.	Set the network in the flyPad.
No real ADS contracts.	The ATSU networks do not handle ADS-C; ADS ARMED / EMERGENCY is shown locally.	-
On this branch alone, every ATC COM PRINT says PRINTER NOT AVAIL.	Printing (ATIS, MSG RECORD, mailbox) is on core/printer , which builds on this branch.	-

Answering the uplinks of a live controller is not recorded as tested.	Tested in the sim: logon, MAYDAY and PAN PAN PAN downlinks, the ATIS, a route clearance uplink (LOAD-SEC3). The answer buttons were checked with harness messages.	Report any wrong answer element.
---	--	----------------------------------

NOTE

The A380X README (list of what is not implemented, ATC / datalink line) now says that the MFD ATC COM pages and the SD mailbox work through the FBW ATSU and its ACARS providers, and that the datalink functions outside those pages are not implemented.

How to use

1. Set the network in the flyPad (Settings > ATSU / AOC), VHF3 in DATA mode on the RMP, and your network callsign as FLT NBR on the MFD FMS INIT page.
2. MFD system menu > **ATC COM** > CONNECT > NOTIFICATION: type the ATC CENTER and press **NOTIFY**.
3. To ask ATC: REQUEST, pick the frames, fill them, **XFR TO MAILBOX**, then **SEND** in the SD mailbox.
4. To answer ATC: use the buttons of the message in the SD mailbox (WILCO / UNABLE, AFFIRM / NEGATIVE, ROGER...).
5. For the ATIS: ATIS page, airport of the request area, SEND REQUEST; tick AUTO UPDATE to get the new versions.
6. In an emergency: EMER, MAYDAY or PANPAN frame, XFR TO MAILBOX, SEND.

How to test

#	Do this	Expected result
1	A380X, any phase. flyPad > Settings > ATSU / AOC: ACARS provider set (Hopple with its logon code, or BeyondATC running); RMP VHF3 in DATA; MFD FMS INIT: FLT NBR = your network callsign. Open MFD system menu > ATC COM .	Header CONNECT / REQUEST / REPORT & MODIFY / MSG RECORD / ATIS / EMER; the REQUEST page opens.
2	CONNECT > NOTIFICATION: type a center (with BeyondATC: the one in its Frequencies tab, COM tuned to it), press NOTIFY .	NOTIFYING, then the center in NOTIFIED TO CENTERS with the time (or NOTIFICATION FAILED). Once ATC accepts, CONNECTION STATUS shows the ACTIVE ATC and the SD mailbox shows it too.
3	ATIS page: in the first request area type an airport, press SEND REQUEST .	The ATIS text in the area; its time is the time written in the ATIS (e.g. 1151Z), ---- when it has none. Opening it shows ATIS RECEIVED with the full text.
4	REQUEST: VERTICAL menu > a climb frame, type FL360; add a second frame and delete it with the bin symbol.	The labels and fields of a line follow each other without overlap; the bin removes the frame.
5	Press XFR TO MAILBOX .	The request in the SD mailbox with SEND and CANCEL.
6	Press SEND in the mailbox (logged on).	The request is sent; when the dialogue closes it goes to MSG RECORD with its time.
7	EMER page: MAYDAY MAYDAY MAYDAY frame, XFR TO MAILBOX, SEND.	The MAYDAY is sent and CONNECT shows ADS EMERGENCY. BeyondATC answers NO MESSAGE HANDLING AVAILABLE FOR THIS REQUEST (not supported on its side).
8	Receive an uplink (from a live controller, or self-sent, see LOAD-SEC3 below) and answer it.	The message in the mailbox with the buttons it expects; after the answer the dialogue closes and goes to MSG RECORD.

2. Datalink connection with the flight number, and SEND FAILED

Aircraft: A380X | **Where:** MFD FMS INIT (FLT NBR); FMS message area; SD MAILBOX | **Status:** Tested in the sim by the user: logon to BeyondATC after the FLT NBR fix OK (2026-09-28); flight number connection from the FMS and SEND FAILED without ATC OK (2026-10-02). FMS DATALINK NOT AVAIL not recorded as seen in the sim. Unit tests: 5.

What it is for

The INIT page FLT NBR field wrote the flight plan only: the field did not refresh and the entry never connected the datalink networks (FBW TELEX and the ACARS provider), so ATC logons and downlinks failed. And a message sent from the mailbox with no ATC center was dropped without a word. Now the FMS connects the networks whenever the flight number of the active flight plan changes, and the mailbox says SEND FAILED (A380 FCOM DSC-46-10-20-60).

What you see

The ATC COM pages send and receive through the aircraft datalink, which connects with the flight number of the active flight plan (FMS INIT, FLT NBR). It must be your callsign on the network (Hoppie, BeyondATC or SayIntentions: the one set in the flyPad, Settings > ATSU / AOC).

- The flight number connects the datalink however it gets there: typed on the INIT page, from the company flight plan (SimBrief), from an activated secondary flight plan, or already there when you reload the flight.
- If the connection is refused, or the datalink does not answer, the FMS message area shows **FMS DATALINK NOT AVAIL** (white). It goes away by itself once connected; typing the flight number again tries again.
- A message sent from the mailbox with no ATC center connected (no logon done, or the center logged you off) shows **SEND FAILED** instead of nothing.

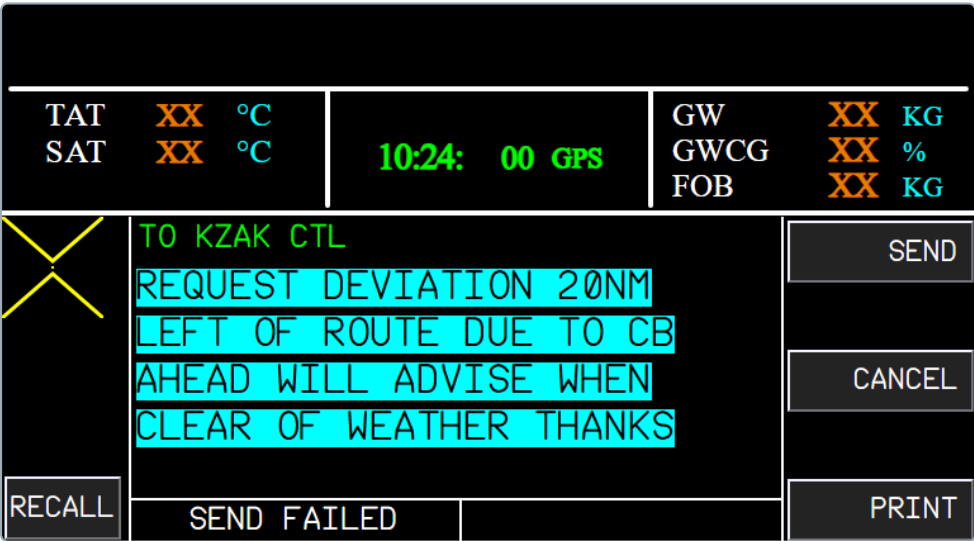


Figure 16. SEND FAILED under a message the mailbox could not send (no active ATC center).

NOTE
With BeyondATC: log on to the center shown in its Frequencies tab (e.g. RJJJ), above FL145. BeyondATC does not handle MAYDAY or PAN PAN by datalink: it answers NO MESSAGE HANDLING AVAILABLE FOR THIS REQUEST. Declare an emergency by voice with it.

How to use

1. Enter the flight number on the MFD FMS **INIT** page (FLT NBR), or get it with the company flight plan. It must be your callsign on the network.
2. If **FMS DATALINK NOT AVAIL** shows, check the ACARS provider, then type the flight number again to retry.
3. Log on (ATC COM > CONNECT) before sending: without an active ATC the mailbox says SEND FAILED.

How to test

#	Do this	Expected result
1	A380X on the ground, ACARS provider running and set in flyPad > Settings > ATSU / AOC. MFD FMS INIT : type the flight number in FLT NBR.	The field shows the new flight number at once. flyPad ATSU / AOC: the provider shows Connected (green).
2	ATC COM > CONNECT > NOTIFICATION: NOTIFY a center.	The logon goes out (NOTIFYING, then NOTIFIED TO CENTERS): the networks are connected.
3	Load a flight with the flight number already in the active flight plan (or activate a SEC plan with a flight number).	The datalink connects without typing the number again.
4	Without logon (no ACTIVE ATC), prepare a request (REQUEST, XFR TO MAILBOX) and press SEND in the SD mailbox.	SEND FAILED under the message (before: nothing happened).
5	If the connection is refused (for example FBW TELEX refuses the flight number), look at the FMS message area.	FMS DATALINK NOT AVAIL in white; it goes away once connected, and typing the flight number again retries.

3. ACARS provider connection

Aircraft: A32NX and A380X | **Where:** flyPad > Settings > ATSU / AOC | **Status:** Late start and close / restart of BeyondATC seen working in the user's flights (2026-09-29); not re-checked after the final build. Unit tests: 4.

What it is for

The ATC and company datalink of the aircraft (CPDLC logon, requests, messages, ATIS and METAR) goes through an ACARS provider you choose on the flyPad: Hoppie, BeyondATC or SayIntentions. The aircraft must find it, then connect your flight number to it.

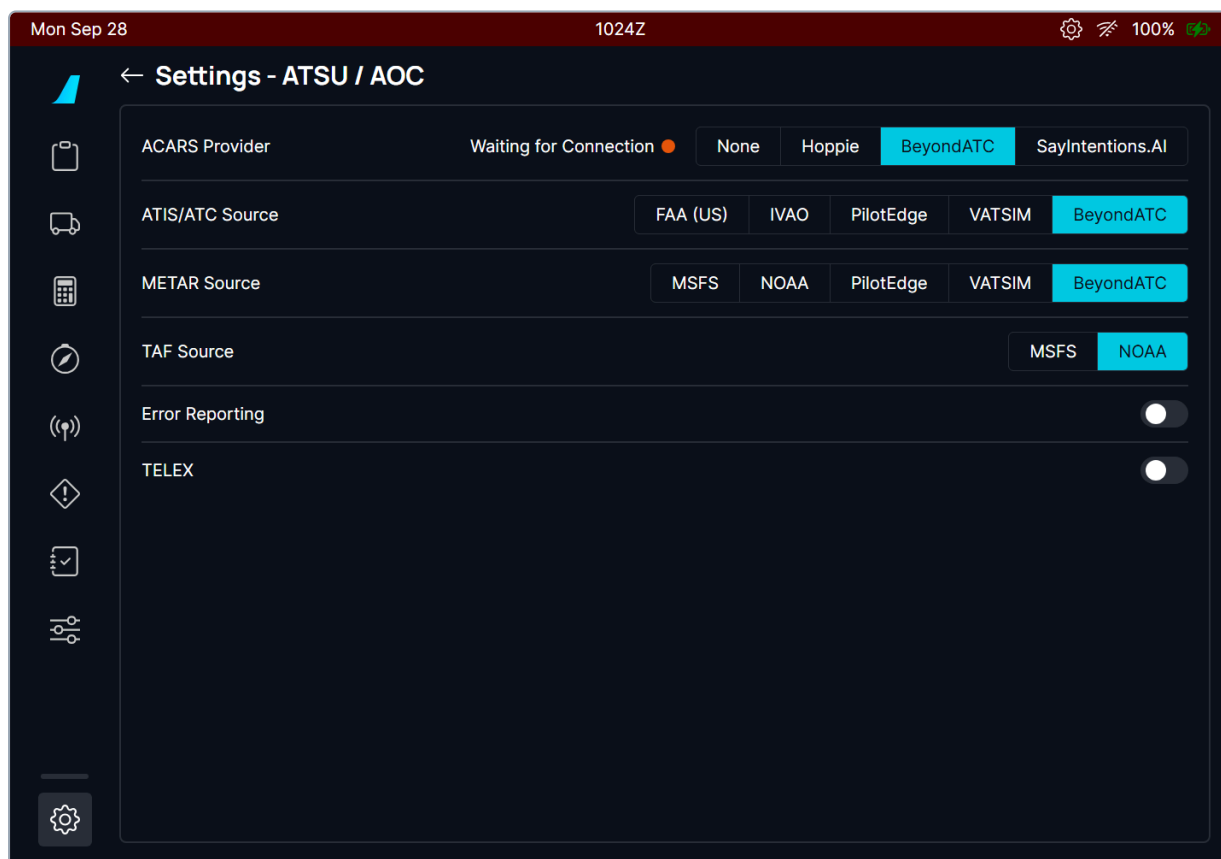


Figure 17. ACARS Provider: BeyondATC, "Waiting for Connection" until BeyondATC answers (then "Connected", green).

What happens now

- **Start the provider when you like.** The aircraft looks for it every 5 s for 5 minutes, then once a minute, without end. Your provider, ATIS and METAR settings are never changed.
- **Flight number.** Entered before the provider answers, it is connected as soon as it answers.
- **Provider closed.** Within about a minute the status goes back to "Waiting for Connection"; start it again and the aircraft connects your flight number again by itself. With BeyondATC, log on to the ATC center again (it forgets the logon when it closes).
- **TELEX on.** If FBW's TELEX service refuses your flight number, the ACARS provider is connected anyway (on the A380X, the FMS shows FMS DATALINK NOT AVAIL for the TELEX failure).

What to expect

- No extra traffic with Hoppie: once your flight number is connected, the regular polls (every 45 to 75 s) check the provider.
- Before this change, a provider started more than 5 minutes after the aircraft set the flyPad to NONE: select your provider again once if it shows NONE.

How to use

1. flyPad > Settings > **ATSU / AOC**: choose the ACARS provider (Hoppie, BeyondATC or SayIntentions).
2. Start the provider program whenever you like, before or after loading the aircraft.
3. Enter the flight number (MFD INIT on the A380X, MCDU INIT A on the A32NX): it is connected as soon as the provider answers.

How to test

#	Do this	Expected result
1	Load the aircraft with BeyondATC NOT running. flyPad > Settings > ATSU / AOC: ACARS provider BeyondATC.	"Waiting for Connection".
2	Wait more than 5 minutes, then start BeyondATC.	Within about a minute the status turns to "Connected" (green). The provider, ATIS and METAR settings are unchanged (not reset to NONE).
3	Enter the flight number before BeyondATC answers (restart the test with the flight number entered first).	The flight number is connected as soon as BeyondATC answers.
4	Close BeyondATC.	Within about a minute the status goes back to "Waiting for Connection".
5	Start BeyondATC again.	The aircraft connects the flight number again by itself; log on to the ATC center again (BeyondATC forgets the logon when it closes).

4. SD mailbox fixes: FILE FULL after CANCEL, uplink @ markers

Aircraft: A380X Where: SD MAILBOX; MFD ATC COM MSG RECORD Status: Tested in the sim by the user: FILE FULL no longer sticks after cancels, PAN PAN PAN sent to BeyondATC (2026-10-02); @ markers shown as cyan values (2026-10-03).
--

What it is for

Two mailbox problems found in the sim with BeyondATC:

- **FILE FULL for good.** The mailbox keeps at most five open messages per direction and holds the next ones back with FILE FULL. A cancelled downlink (CANCEL of a prepared message) left the ATC function but kept its place in

the mailbox file, so after five cancels the file stayed full: every new downlink, a PAN PAN PAN included, waited behind FILE FULL. A cancel now frees the place, the held messages move in, and FILE FULL goes when the file has room again (A380 FCOM DSC-46: "File no more full").

- **Triangles around values.** Hoppie and BeyondATC mark the variable fields of a free text uplink with @ (CLRD TO @CYVR@ RWY @06R@), and the A380 display font draws @ as a triangle. The mailbox now shows the marked fields as main parameters, in blue (FCOM DSC-46-10-10-70), without the markers, as the A32NX DCDU does; an unclosed marker runs to the end of the text, and a word glued to a field ("@4611@.") stays glued. MSG RECORD drops the markers too.

What you should see

Situation	What you should see
Five downlinks prepared and cancelled, then a new one	The new downlink is shown with SEND / CANCEL; no FILE FULL.
More than five open downlinks	FILE FULL for the extra ones, until a place is freed (sent, closed or cancelled).
BeyondATC departure clearance "CLRD TO @CYVR@ RWY @06R@ ..."	CLRD TO CYVR RWY 06R ..., the values in blue, no triangles.

How to use

1. Nothing to set: CANCEL a prepared downlink as usual, read the uplinks as usual.

How to test

#	Do this	Expected result
1	A380X, logged on (ATC COM > CONNECT). Prepare a request (REQUEST, XFR TO MAILBOX) and press CANCEL in the SD mailbox. Do it six times.	Each new request shows SEND / CANCEL; FILE FULL never stays.
2	Then prepare an emergency (EMER, PANPAN frame, XFR TO MAILBOX) and SEND.	The PAN PAN PAN is sent (no FILE FULL).
3	With BeyondATC, ask for a departure clearance (REQUEST > CLEARANCE > DEPARTURE, XFR TO MAILBOX, SEND).	The clearance uplink in the mailbox: values (destination, runway, squawk...) in blue, no triangle symbols.
4	Close the dialogue and open ATC COM > MSG RECORD .	The recorded text has no @ characters.

5. LOAD-SEC3: ATC route clearances and crossing constraints into SEC 3

Aircraft: A380X | **Where:** SD MAILBOX **LOAD-SEC3**; MFD FMS SEC INDEX | **Status:** Route clearance tested in the sim by the user (self-sent uplink): LOAD OK, ATC F-PLN INSERTED IN SEC 3 (2026-10-02). Crossing constraints and the REJECTED ATC INFO page not sim-tested. Unit tests: route clearance, constraints, mailbox logic.

What it is for

A route clearance or a crossing constraint received by CPDLC can be loaded into the FMS instead of being typed: the FCOM puts it in SEC 3, as a copy of the active flight plan with the clearance in it, for the crew to check and activate (A380 FCOM DSC-22-FMS-10-40, DSC-46-10-40). The mailbox has the **LOAD-SEC3** key in the 4th button position, on the uplinks that can be loaded only; it stays after WILCO, with CLOSE.

Uplink (CPDLC element)	What is loaded into SEC 3
------------------------	---------------------------

Route clearance: CLEARED TO ... VIA ... (UM79), CLEARED ... (UM80), AT ... CLEARED ... (UM83)	SID (not once airborne), airways, waypoints, lat/long points, STAR and a new destination. The rest of the en route part is replaced; a UM79 route ends at its clearance limit.
Crossing constraints (UM46 to 53, 55, 56, 58 to 61): CROSS ... AT / AT OR ABOVE / AT OR BELOW / BETWEEN ..., AT ... speed, AT ... time	An altitude constraint, a speed constraint (90 kt to VMO 340 kt, in knots) or an RTA on that waypoint of the flight plan. The RTA is kept per secondary flight plan and follows it on a swap or an activation; the VERT REV RTA panel now works on a SEC plan.

What you should see

Situation	What you should see
LOAD-SEC3 pressed	Mailbox information area: LOADING, then LOAD OK, LOAD PARTIAL or LOAD FAILED.
Everything loaded	FMS message ATC F-PLN INSERTED IN SEC 3. SEC 3 holds the active flight plan with the clearance.
Some elements rejected	ATC F-PLN INSERTED IN SEC 3 / REJECTED INFO SEE SEC / INDEX. SEC INDEX, SEC 3: REJECTED ATC INFO button, listing each element (description, value, AT fix) and why: NOT IN DATABASE, AWY/WPT MISMATCH, DATA NOT ALLOWED IN PHASE, NOT IN F-PLN, FORMAT ERROR, ENTRY OUT OF RANGE.
Nothing usable	RECEIVED ATC MSG NOT VALID.
No FMS answer within 30 s, or a second LOAD-SEC3 while loading	LOAD NOT AVAIL.
A speed as a Mach number (e.g. M.82)	Rejected: FORMAT ERROR (the FCOM speed format is in knots).

NOTE

The constraint upload awaits in a plain statement, not as an operand: the sim's JavaScript engine can reject an await used as an operand and then blanks the whole MFD. No visible change.

Limitations and why

Limitation	Why	What to do
A duplicate waypoint ident is taken as the one nearest to the previous point.	Design choice: no NON UNIQUE rejection.	Check the route in SEC 3 before activating it.
A constraint on an en route waypoint with no climb or descent leg type is set as a descent constraint in cruise, else from the second half of the en route part.	The FMS needs CLB or DES for a constraint; this is a guess.	Check the constraint in SEC 3.
Needs an uplink of one of these CPDLC elements.	Live controllers rarely send them; BeyondATC route clearances were not seen.	Send yourself the uplink (How to test).

How to use

1. Receive the clearance in the SD mailbox and press **LOAD-SEC3**.
2. Wait for LOAD OK (or LOAD PARTIAL), then read the FMS message.
3. MFD FMS: SEC INDEX, SEC 3: check the flight plan (and REJECTED ATC INFO if shown).
4. Answer the uplink (WILCO / UNABLE) and, if you accept the clearance, activate SEC 3 (or swap it).

How to test

#	Do this	Expected result
1	A380X with an active flight plan whose en route part has waypoints ahead, datalink connected (flight number entered). Send yourself a route clearance. With BeyondATC (tested way, ask the owner of the setup first): open its local relay <code>http://localhost:57698/acars/system/connect.html</code> with <code>from=CZUL&to=<callsign>&type=cpdlc&packet=/data2/1//WU/CLEARED TO @<DEST>@ VIA @<FIX1> DCT <FIX2>@</code> (URL-encoded). With Hoppie, send the same CPDLC packet to your callsign through its connect.html.	Within a minute (next poll) the uplink is in the SD mailbox, the values in blue, with LOAD-SEC3 in the 4th button position.
2	Press LOAD-SEC3 .	LOADING, then LOAD OK in the mailbox; FMS message ATC F-PLN INSERTED IN SEC 3.
3	MFD FMS > SEC INDEX > SEC 3 F-PLN.	The active route with the clearance: the cleared fixes joined, the waypoints after them removed, the route ending at the clearance limit.
4	Send a clearance with a fix that does not exist (e.g. VIA @ZZZZZ@).	LOAD PARTIAL (or LOAD FAILED); SEC INDEX shows REJECTED ATC INFO with ZZZZZ and NOT IN DATABASE.
5	Send a crossing constraint on a waypoint ahead (CPDLC UM46, e.g. CROSS <FIX> AT FL240) and press LOAD-SEC3.	SEC 3: an altitude constraint FL240 on that waypoint (not sim-tested yet).
6	Press LOAD-SEC3 on a second uplink while the first one is still LOADING.	LOAD NOT AVAIL on the second one.