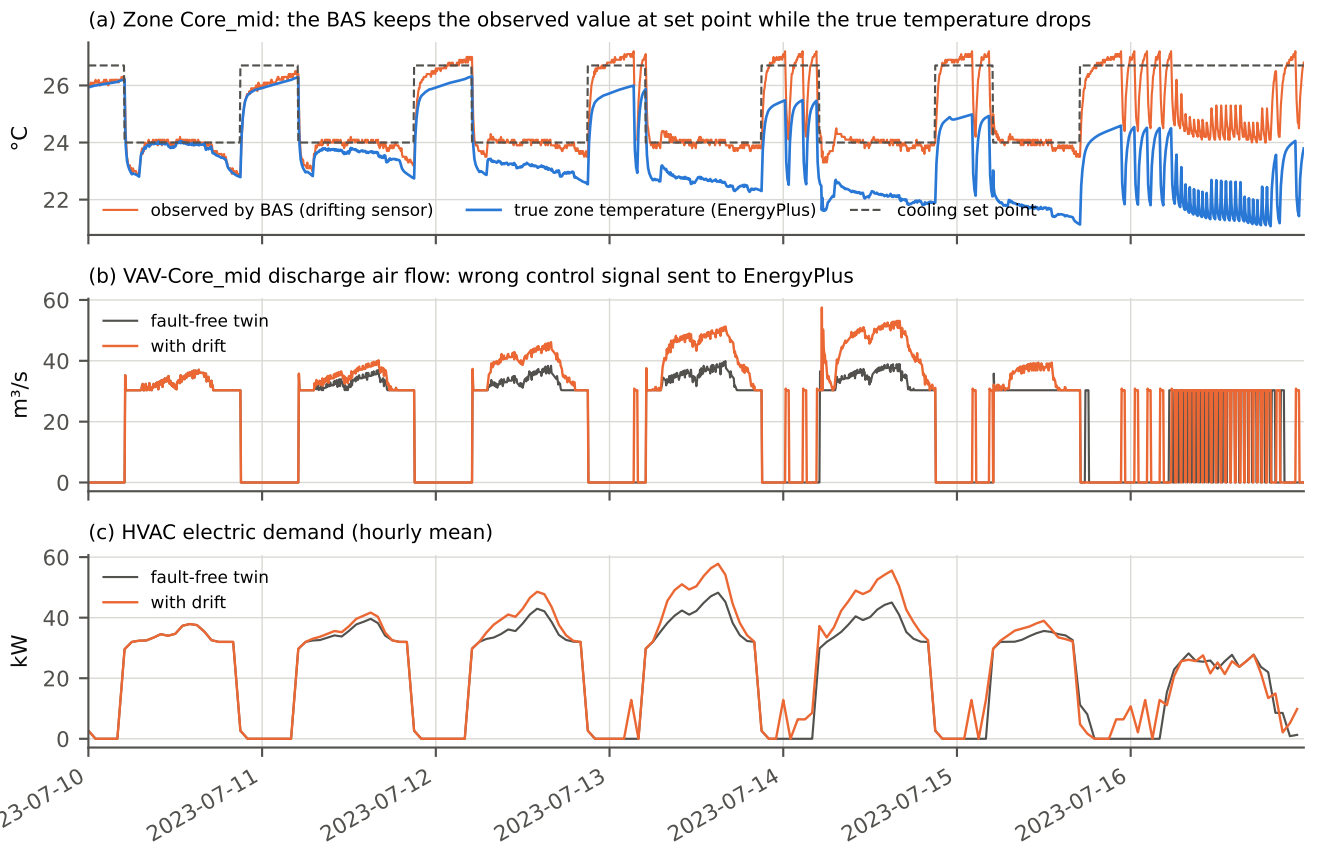
(a) Zone Core_mid: the BAS keeps the observed value at set point while the true temperature drops
°C
26
24
22
observed by BAS (drifting sensor)
true zone temperature (EnergyPlus)
cooling set point
(b) VAV-Core_mid discharge air flow: wrong control signal sent to EnergyPlus
m³/s
60
40
20
0
fault-free twin
with drift
(c) HVAC electric demand (hourly mean)
kW
60
40
20
0
fault-free twin
with drift
2023-07-10
2023-07-11
2023-07-12
2023-07-13
2023-07-14
2023-07-15
2023-07-16