# Phase 5 · B3 — Pull over if the ODD continues to fail

When degradation does not restore the envelope within a declared deadline, bring the vehicle out of the running lane to a standstill in a refuge — nominated by the HPC, or found by the island's camera.
The phase-5 drawing, unchanged: what B3 runs on — and the SHARED nodes every behaviour runs through — is in full colour, what it merely passes through is half-tone, and the rest of the island is faded.

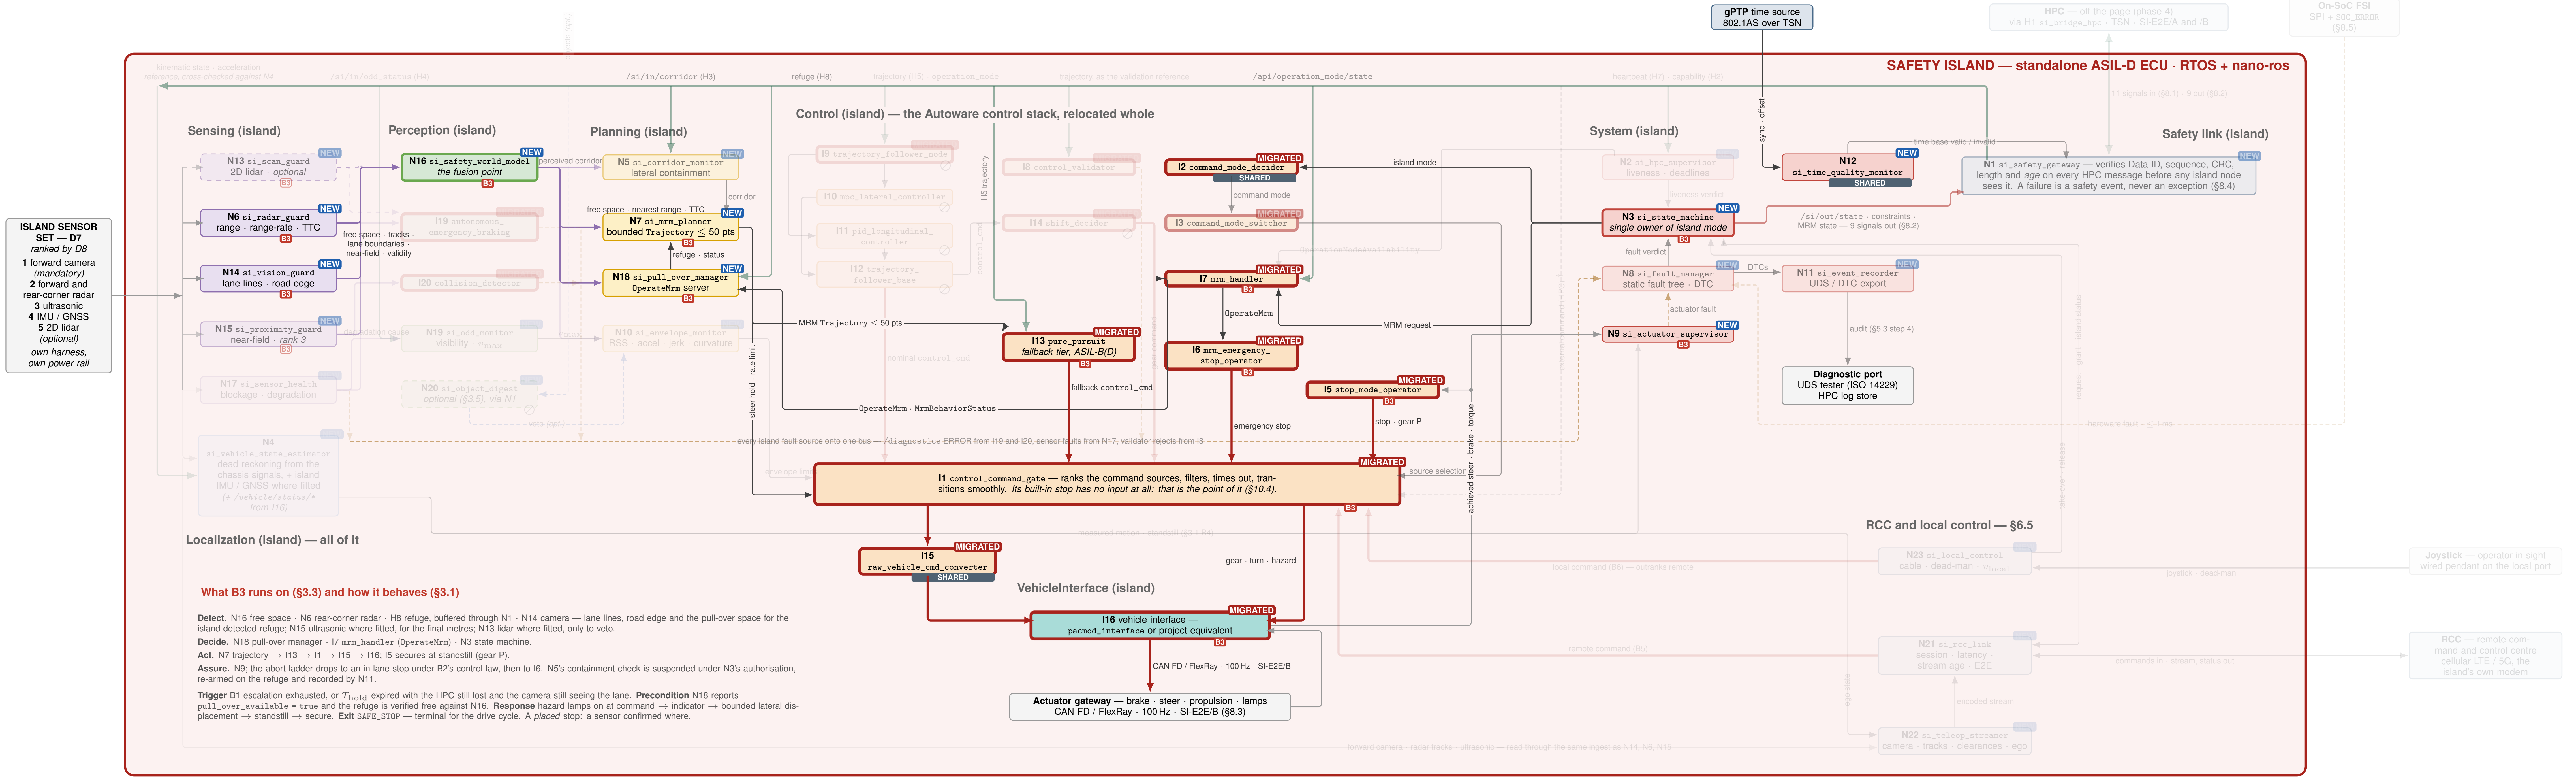
SAFETY ISLAND — standalone ASIL-D ECU · RTOS + nano-ros
ISLAND SENSOR SET — D7
ranked by D8
1 forward camera (mandatory)
2 forward and rear-corner radar
3 ultrasonic
4 IMU / GNSS
5 2D lidar (optional)
own harness, own power rail
gPTP time source
802.1AS over TSN
sync · offset
HPC — off the page (phase 4)
via H1 si_bridge_hpc · TSN · SI-E2E/A and /B
On-SoC FSI
SPI + SOC_ERROR (§8.5)
11 signals in (§8.1) · 9 out (§8.2)
kinematic state · acceleration reference, cross-checked against N4
/si/in/odd_status (H4)
/si/in/corridor (H3)
refuge (H8)
trajectory (H5) · operation_mode
trajectory, as the validation reference
/api/operation_mode/state
heartbeat (H7) · capability (H2)
objects (opt.)
Sensing (island)
N13 si_scan_guard
2D lidar · optional
N6 si_radar_guard
range · range-rate · TTC
N14 si_vision_guard
lane lines · road edge
N15 si_proximity_guard
near-field · rank 3
N17 si_sensor_health
blockage · degradation
NEW
B3
Perception (island)
N16 si_safety_world_model
the fusion point
I19 autonomous_emergency_braking
I20 collision_detector
N19 si_odd_monitor
visibility · $v_{max}$
N20 si_object_digest
optional (§3.5), via N1
free space · tracks · lane boundaries · near-field · validity
degradation cause
veto (opt.)
Planning (island)
N5 si_corridor_monitor
lateral containment
perceived corridor
corridor
free space · nearest range · TTC
N7 si_mrm_planner
bounded Trajectory ≤ 50 pts
refuge · status
N18 si_pull_over_manager
OperateMrm server
N10 si_envelope_monitor
RSS · accel · jerk · curvature
$v_{max}$
N4 si_vehicle_state_estimator
dead reckoning from the chassis signals, + island IMU / GNSS where fitted (+ /vehicle/status/* from I16)
Localization (island) — all of it
Control (island) — the Autoware control stack, relocated whole
I9 trajectory_follower_node
I10 mpc_lateral_controller
I11 pid_longitudinal_controller
I12 trajectory_follower_base
I8 control_validator
I14 shift_decider
H5 trajectory
control_cmd
nominal control_cmd
gear command
MRM Trajectory ≤ 50 pts
I13 pure_pursuit
fallback tier, ASIL-B(D)
fallback control_cmd
OperateMrm · MrmBehaviorStatus
steer hold · rate limit
envelope limit
I2 command_mode_decider
SHARED
command mode
I3 command_mode_switcher
MIGRATED
island mode
OperationModeAvailability
I7 mrm_handler
OperateMrm
MRM request
I6 mrm_emergency_stop_operator
emergency stop
I5 stop_mode_operator
stop · gear P
every island fault source onto one bus — /diagnostics ERROR from I19 and I20, sensor faults from N17, validator rejects from I8
I1 control_command_gate — ranks the command sources, filters, times out, transitions smoothly. Its built-in stop has no input at all: that is the point of it (§10.4).
source selection
achieved steer · brake · torque
external command (HPC) †
measured motion · standstill (§3.1 B4)
I15 raw_vehicle_cmd_converter
gear · turn · hazard
VehicleInterface (island)
I16 vehicle interface — pacmod_interface or project equivalent
CAN FD / FlexRay · 100 Hz · SI-E2E/B
Actuator gateway — brake · steer · propulsion · lamps
CAN FD / FlexRay · 100 Hz · SI-E2E/B (§8.3)
System (island)
N2 si_hpc_supervisor
liveness · deadlines
liveness verdict
N3 si_state_machine
single owner of island mode
fault verdict
N8 si_fault_manager
static fault tree · DTC
DTCs
N11 si_event_recorder
UDS / DTC export
actuator fault
N9 si_actuator_supervisor
audit (§5.3 step 4)
Diagnostic port
UDS tester (ISO 14229)
HPC log store
N12 si_time_quality_monitor
time base valid / invalid
/si/out/state · constraints · MRM state — 9 signals out (§8.2)
Safety link (island)
N1 si_safety_gateway — verifies Data ID, sequence, CRC, length and age on every HPC message before any island node sees it. A failure is a safety event, never an exception (§8.4)
hardware fault · ≤ 1 ms
request · grant · island status
take-over · release
RCC and local control — §6.5
N23 si_local_control
cable · dead-man · $v_{local}$
local command (B6) — outranks remote
joystick · dead-man
Joystick — operator in sight
wired pendant on the local port
N21 si_rcc_link
session · latency · stream age · E2E
remote command (B5)
commands in · stream, status out
RCC — remote command and control centre
cellular LTE / 5G, the island's own modem
ego state
encoded stream
N22 si_teleop_streamer
camera · tracks · clearances · ego
forward camera · radar tracks · ultrasonic — read through the same ingest as N14, N6, N15

### What B3 runs on (§3.3) and how it behaves (§3.1)

**Detect.** N16 free space · N6 rear-corner radar · H8 refuge, buffered through N1 · N14 camera — lane lines, road edge and the pull-over space for the island-detected refuge; N15 ultrasonic where fitted, for the final metres; N13 lidar where fitted, only to veto.

**Decide.** N18 pull-over manager · I7 `mrm_handler` (`OperateMrm`) · N3 state machine.

**Act.** N7 trajectory → I13 → I1 → I15 → I16; I5 secures at standstill (gear P).

**Assure.** N9; the abort ladder drops to an in-lane stop under B2's control law, then to I6. N5's containment check is suspended under N3's authorisation, re-armed on the refuge and recorded by N11.

**Trigger** B1 escalation exhausted, or $T_{\text{hold}}$ expired with the HPC still lost and the camera still seeing the lane. **Precondition** N18 reports `pull_over_available = true` and the refuge is verified free against N16. **Response** hazard lamps on at command → indicator → bounded lateral displacement → standstill → secure. **Exit** `SAFE_STOP` — terminal for the drive cycle. A *placed* stop: a sensor confirmed where.

## Stacks — the colours of `ArchitectureMain.pdf`

Sensing · Localization · Perception · Planning · Control
System · VehicleInterface · Vehicle · Safety link

## Where each node came from

MIGRATED — the same Autoware node, migrated

NEW — new — does not exist in Autoware

18 migrated + 19 new = **37**, plus the optional N20 — and N21–N23 of §6.5, outside the counts until their detailed design is done. Not drawn: I4, a header-only library with no topics, and I17 + I18, the legacy alternative of §4.3. I10 and I11 are plugins inside I9 and publish no topic of their own. † the HPC's external command reaches the gate (§5.2, §10.4) but has no row in the §8.1 table; B5's remote command arrives through N21 instead.

## Behaviours each node enables (§3.3)

*one fixed slot per behaviour* B3 — **B1** degrade the ADS · **B2** lane-keep hold after HPC loss · **B3** pull over · **B4** blind emergency stop · **B5** tele-operation · **B6** joystick. A filled tag means the node appears in that behaviour's Detect, Decide, Act or Assure cell of §3.3.

SHARED — **SHARED** — every behaviour runs through it, so §3.3 names it against none: I2 turns island mode into command mode, I15 converts whichever command wins the gate, N12 qualifies the time base behind every age and deadline check.

B3 — **Hollow tag** — not in §3.3, but §3.1 puts the node on that behaviour's path: N15 feeds I20, B2's independent last line, and is the near-field check behind B3's success criterion.

⌀ — **Used by no behaviour** — I9–I12 and I14 track the HPC's nominal trajectory, which B2–B4 deselect and B1 only constrains. N20 is optional (§3.5) and required by none.

## Messages

- → HPC-sourced, verified by N1
- → island sensor data
- → control command into the gate
- ⇢ fault · `/diagnostics`
- → actuator feedback
- → state · mode · decision
- ⇢ optional (§3.5)

Every edge on this page, with the design-document section it is taken from, is catalogued in `../messageflow/`, which draws the same 37 nodes coloured by execution partition instead.

## In this view — B3, pull over

🟥 **full colour** — named for B3 in §3.3 (Detect · Decide · Act · Assure), or SHARED (I2, I15, N12)

▨ **half-tone** — on B3's path by §3.1, but not named in §3.3

☐ **faded** — not used by B3. An edge is drawn at the weaker of its two ends. Only B3's own tag is drawn on each box.