






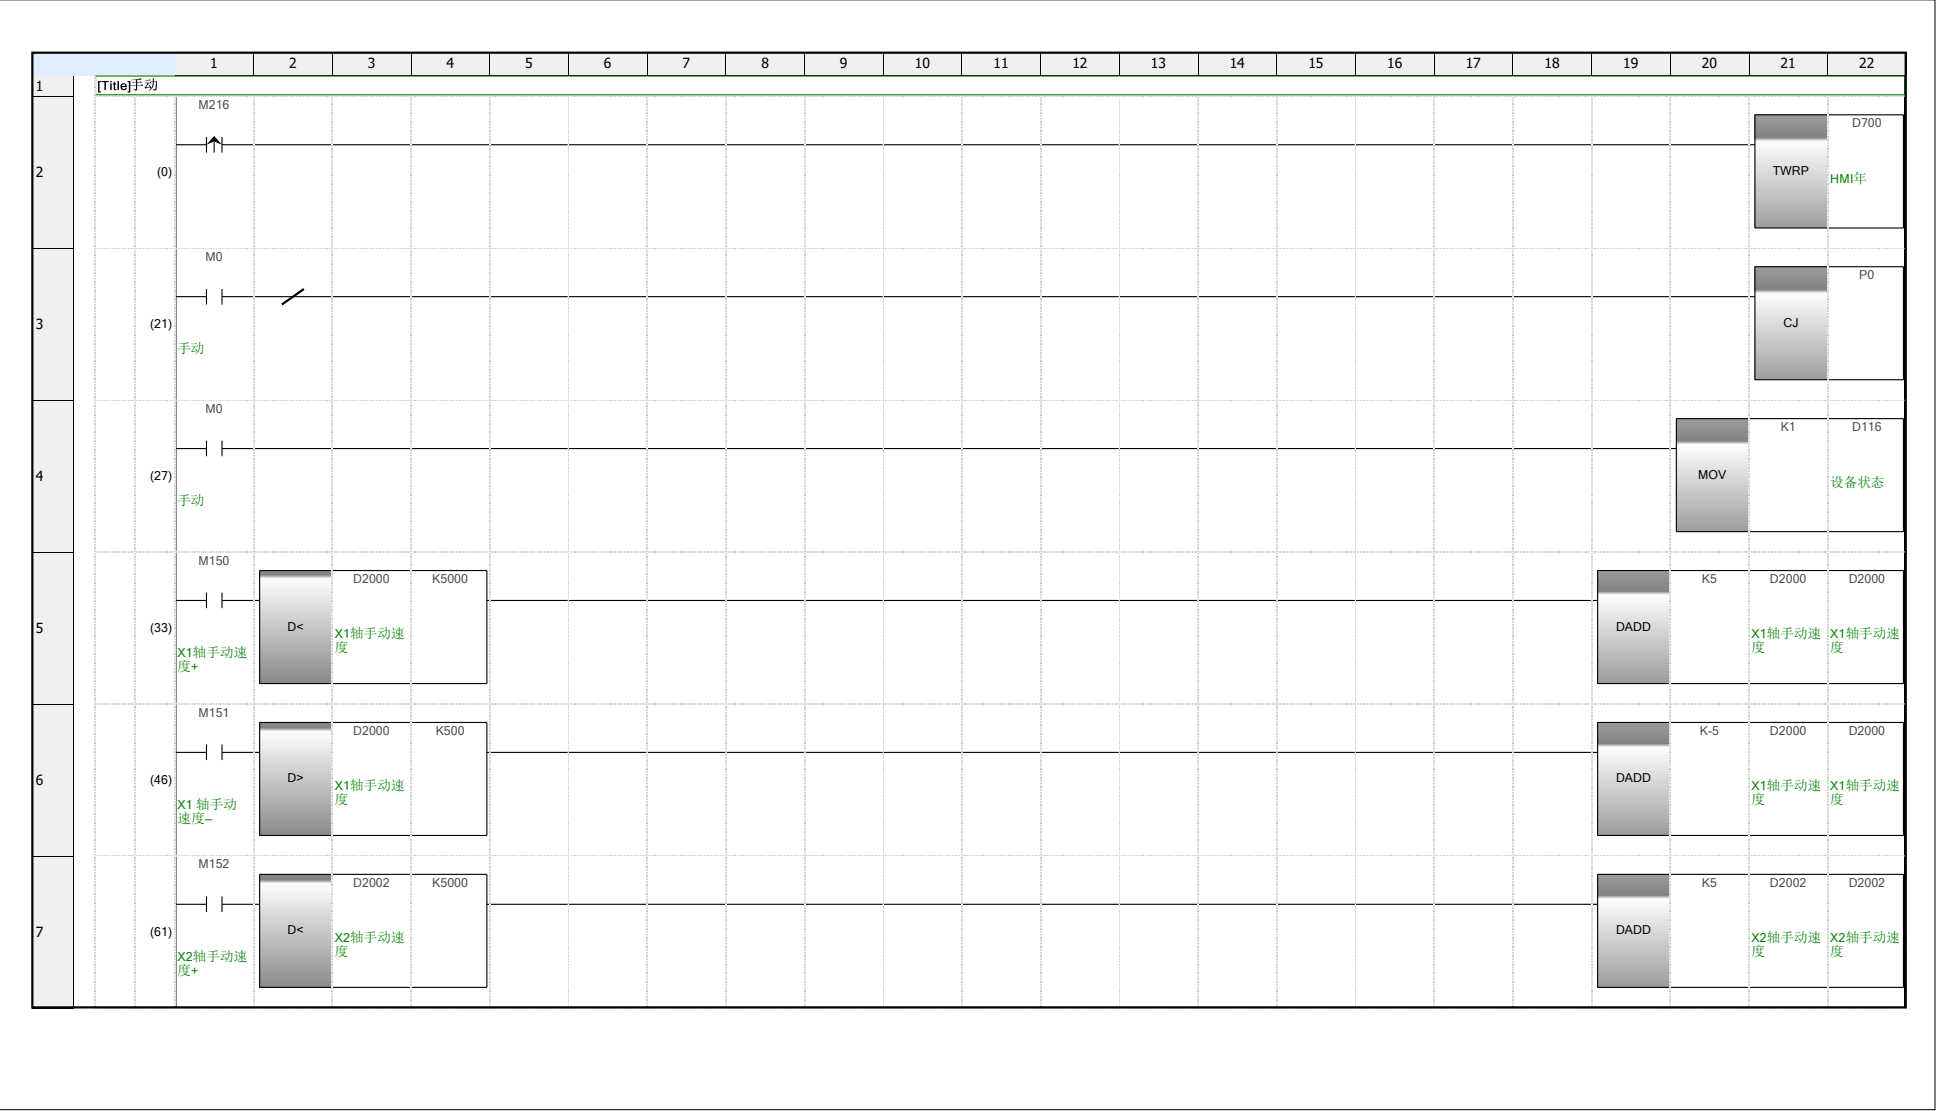

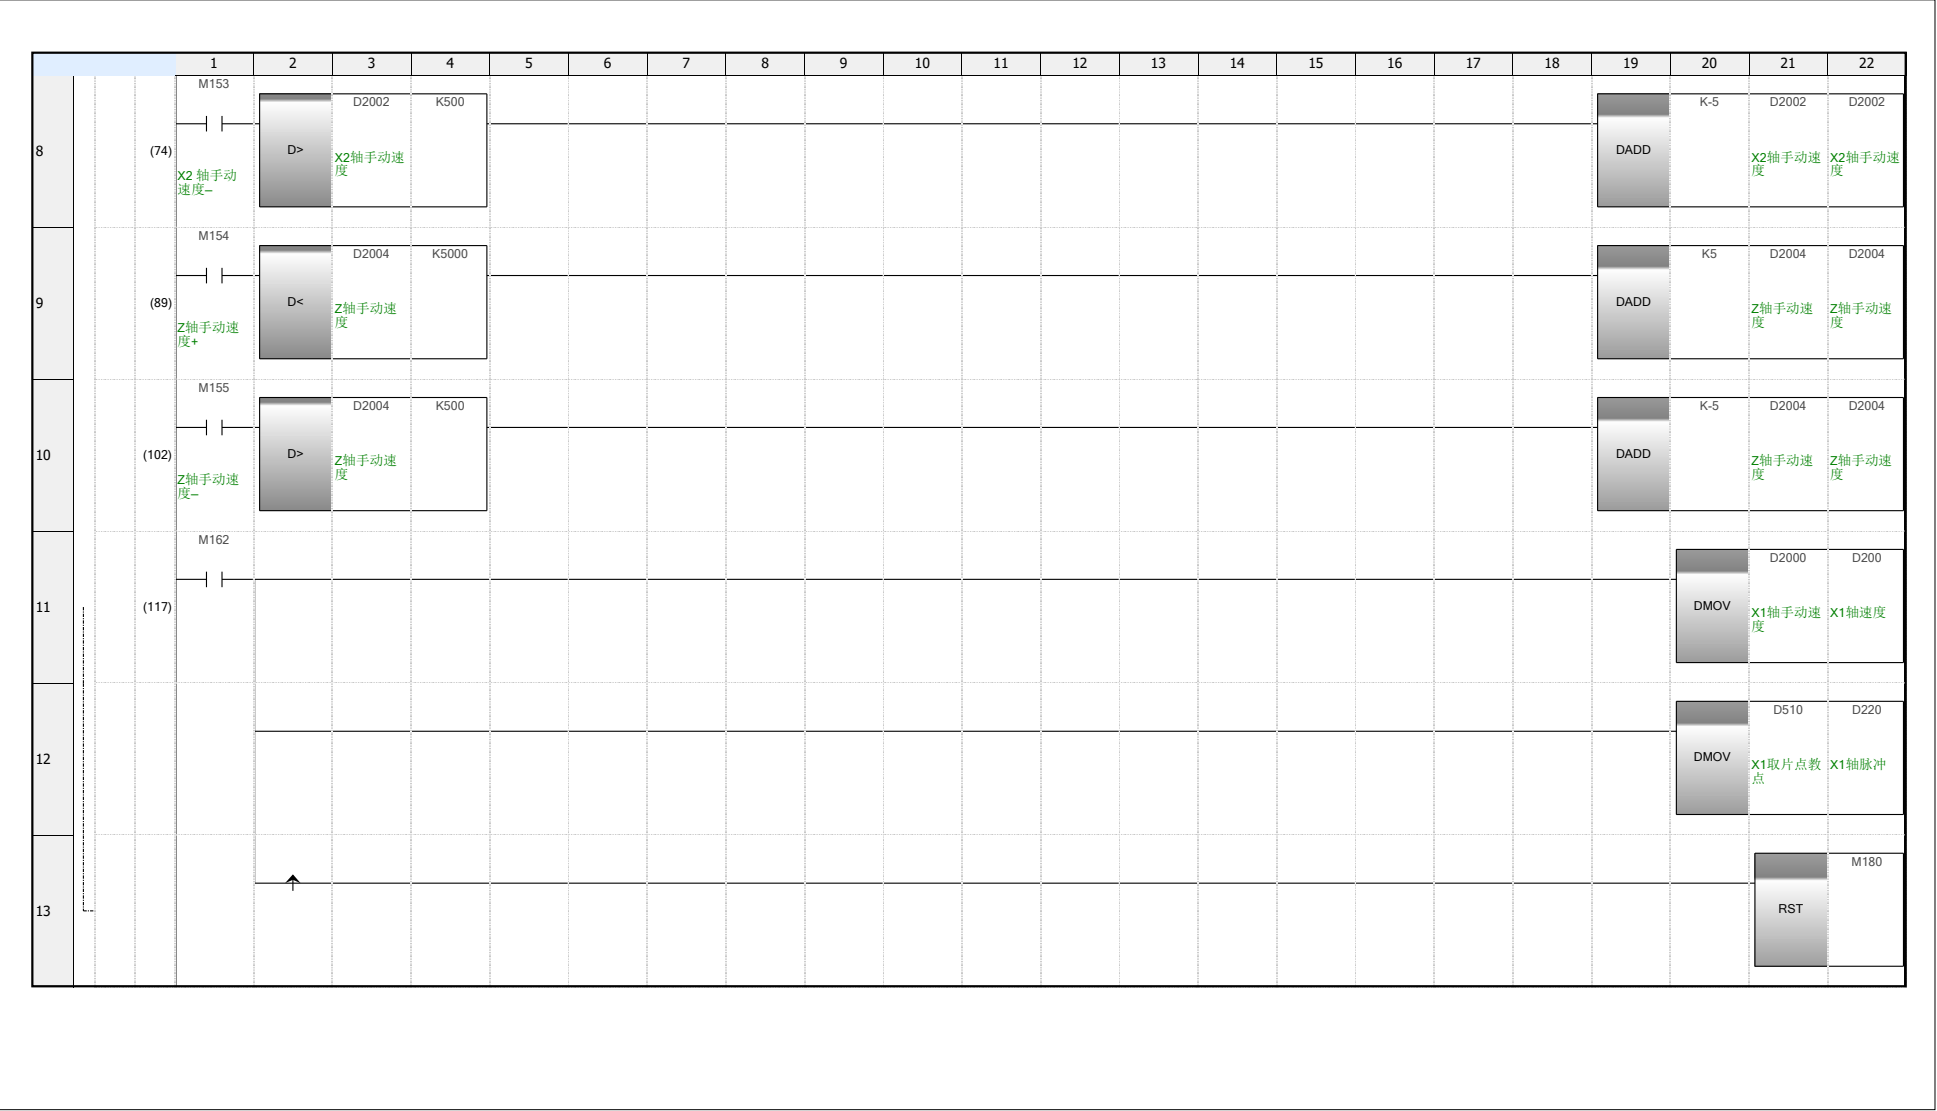


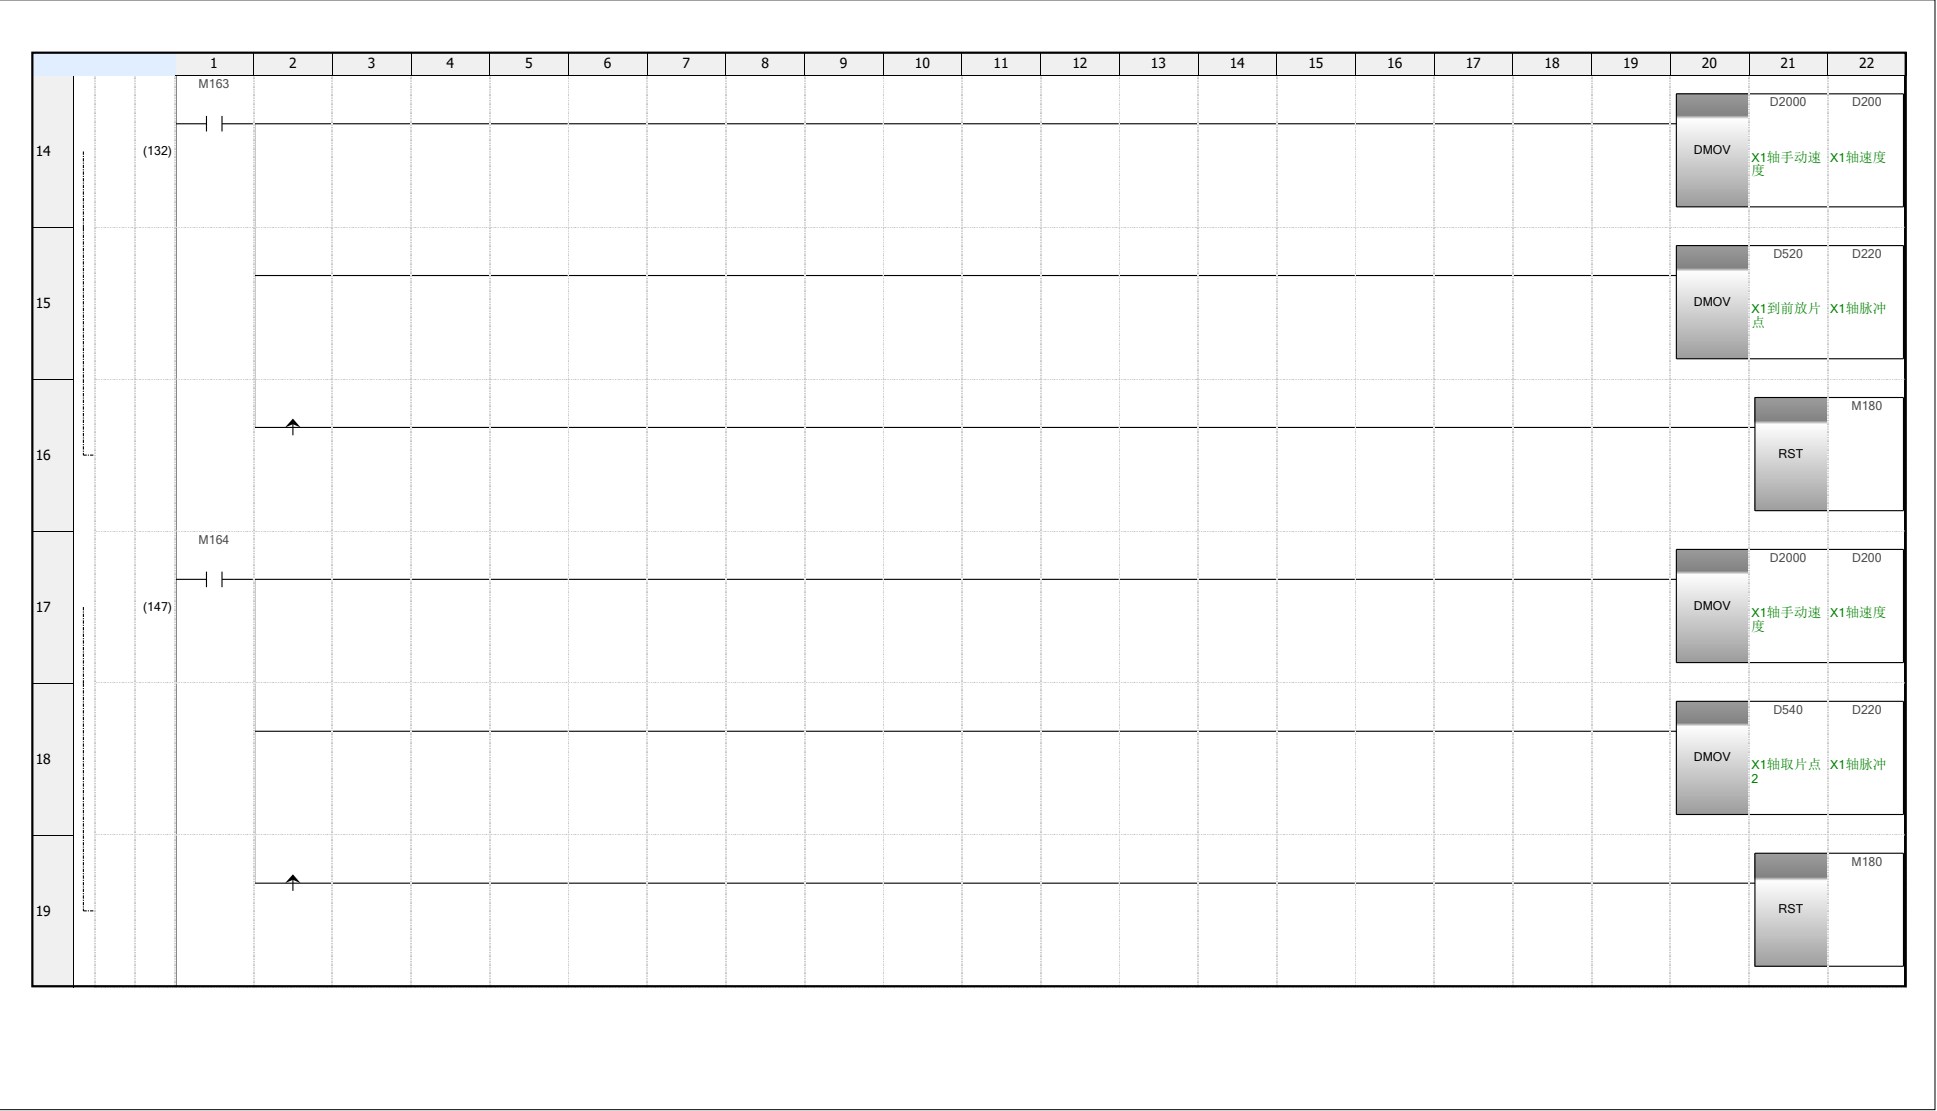


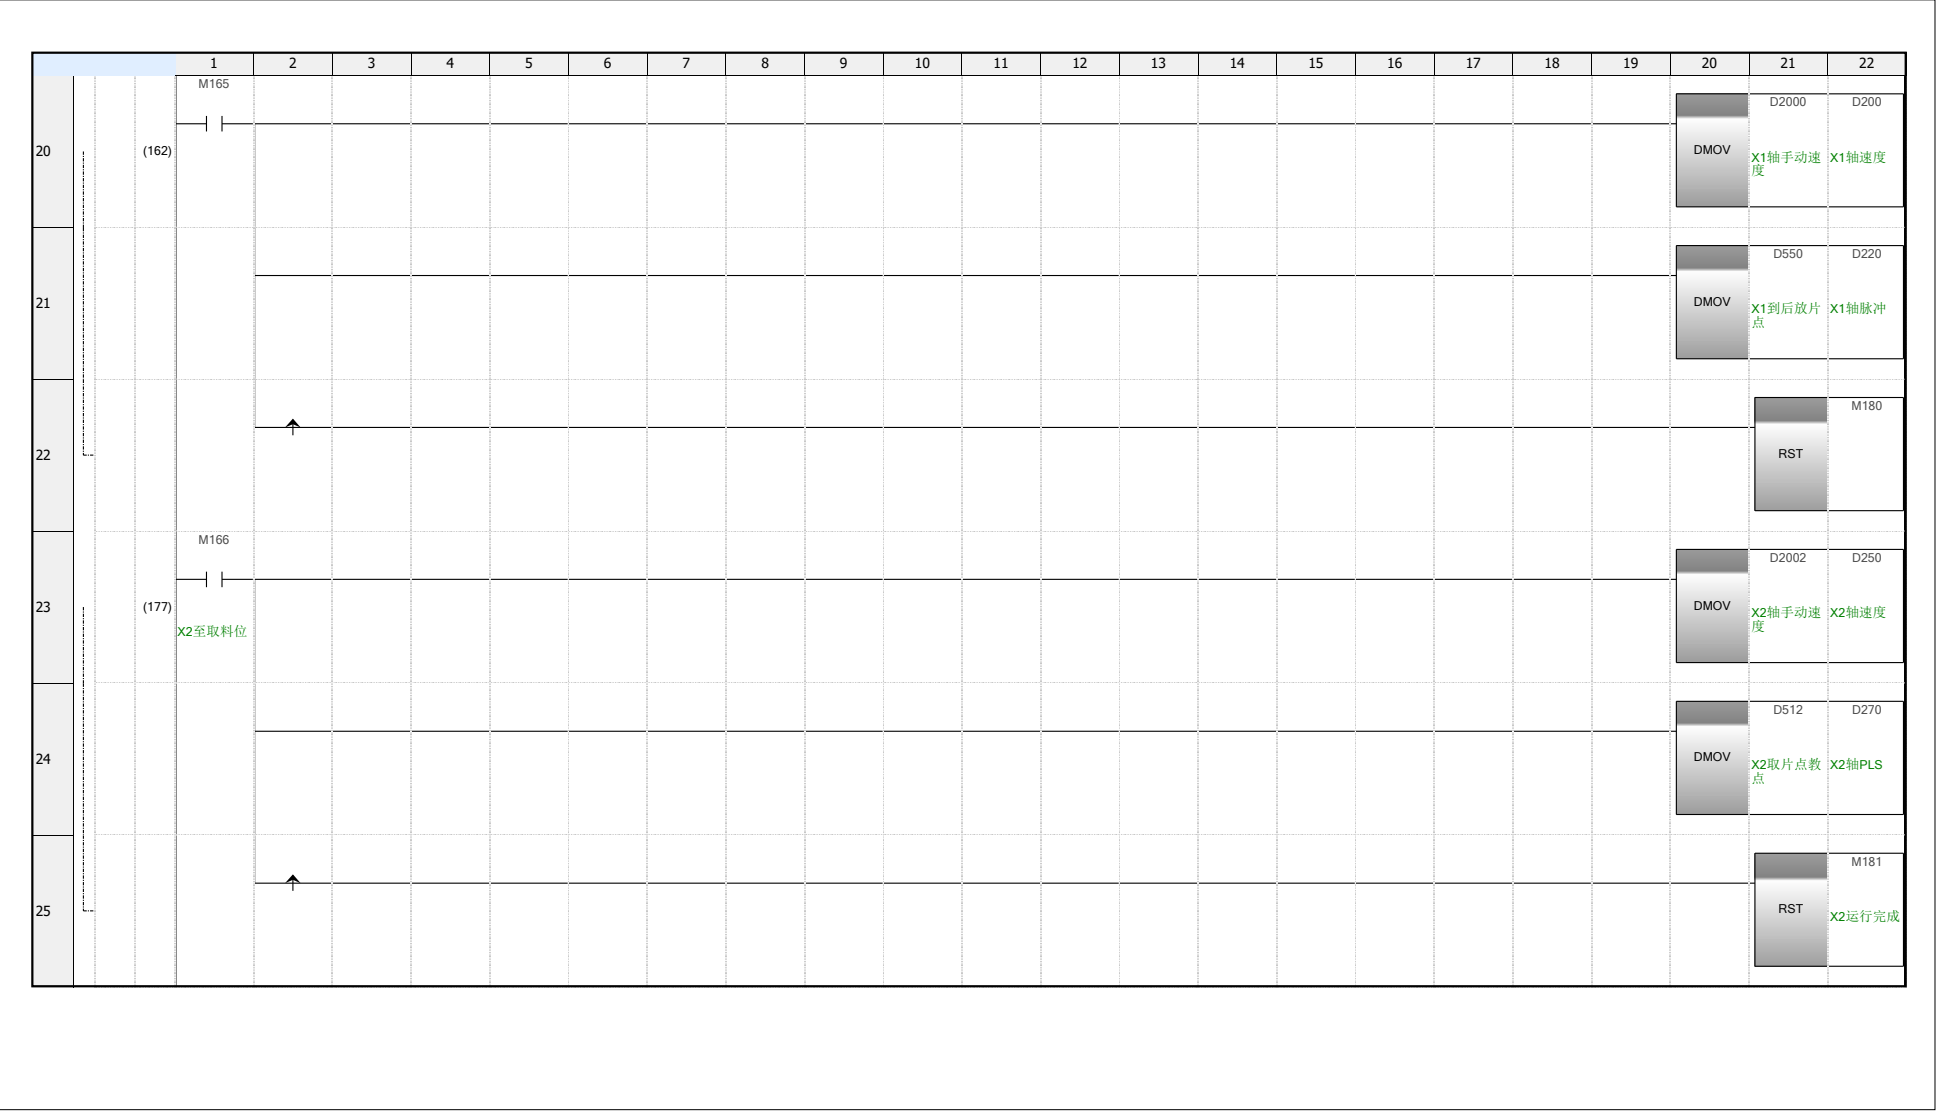

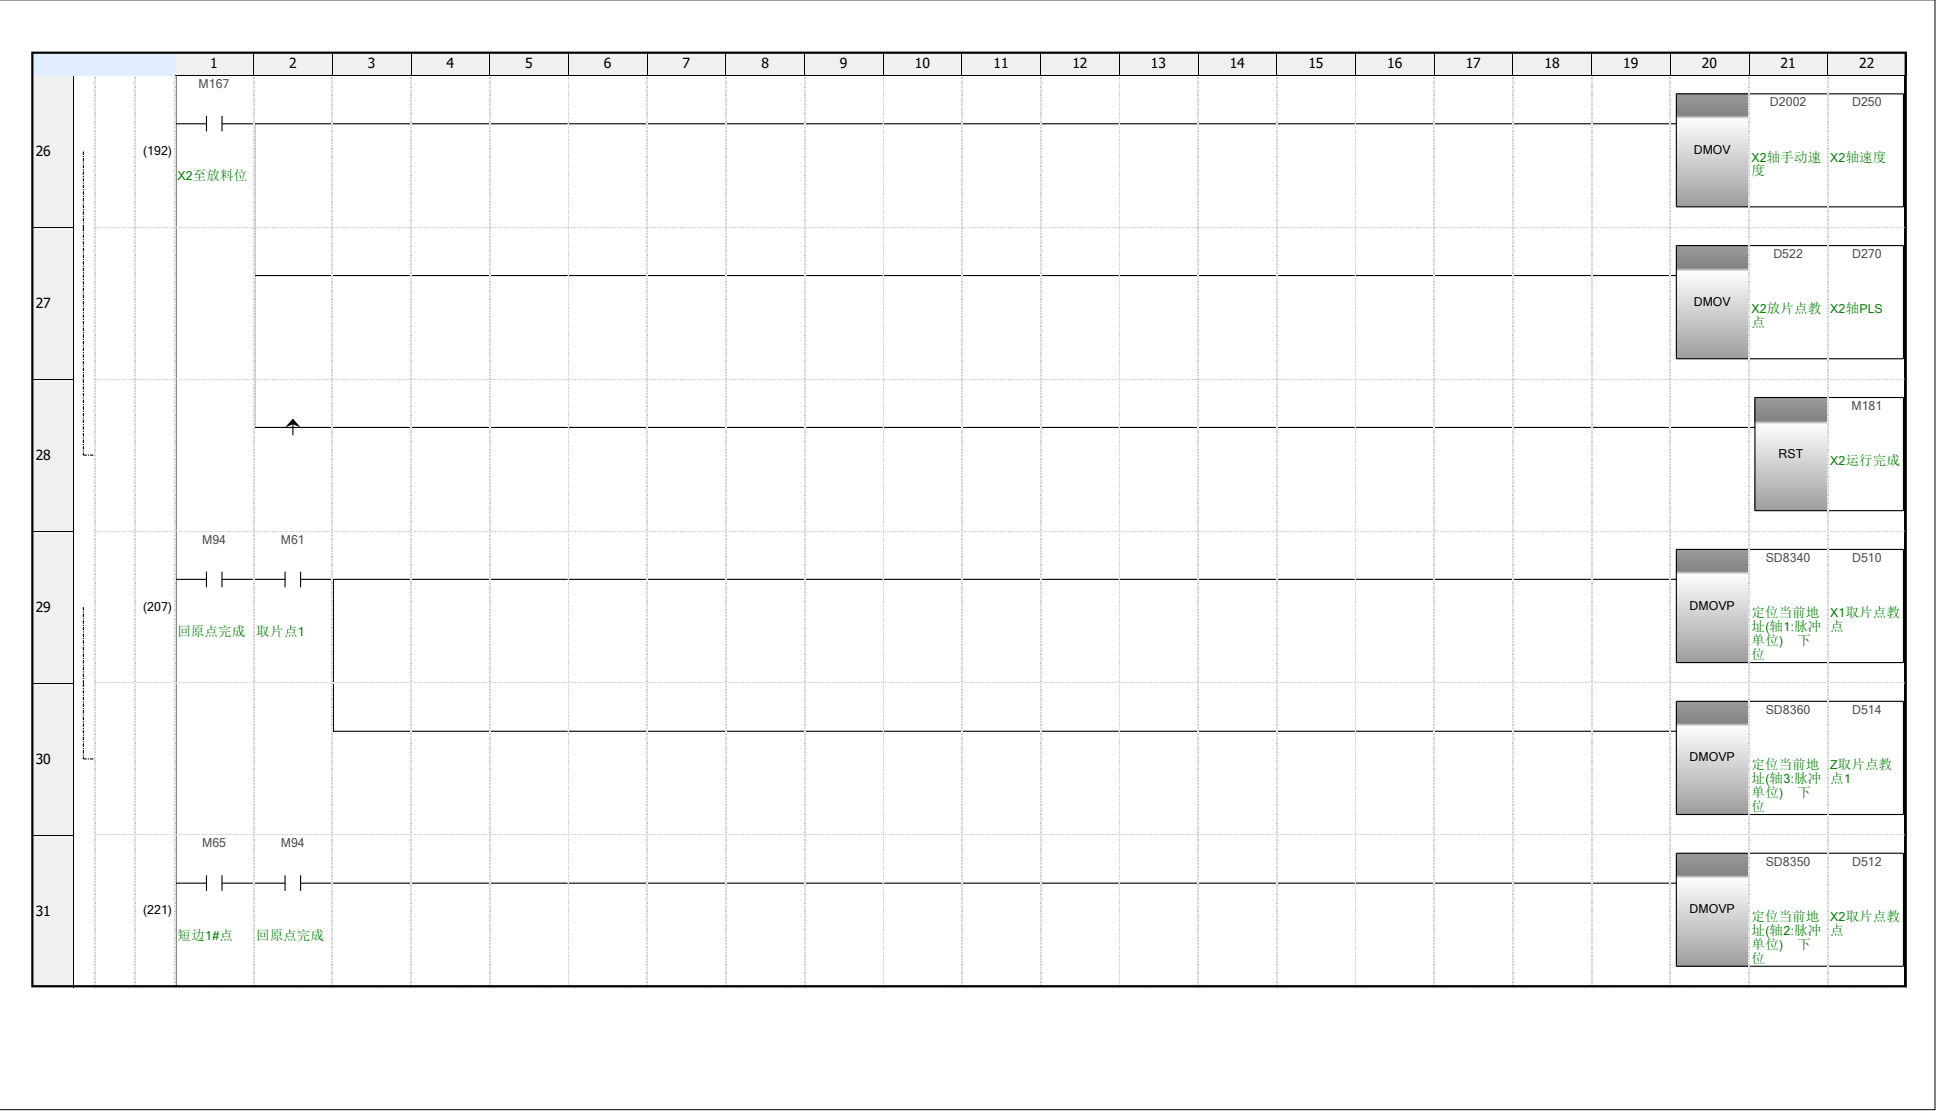



		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
32		M94 (230) 回原点完成	M62 放片点1																		DMOVP	SD8340 定位当前地址(轴1:脉冲单位) 下位	D520 X1到前放片点
33																					DMOVP	SD8360 定位当前地址(轴3:脉冲单位) 下位	D524 Z放片点教点
34		M94 (244) 回原点完成	M66 短边2#点																		DMOVP	SD8350 定位当前地址(轴2:脉冲单位) 下位	D522 X2放片点教点
35		M94 (253) 回原点完成	M63 取片点2																		DMOVP	SD8340 定位当前地址(轴1:脉冲单位) 下位	D540 X1轴取片点2
36																					DMOVP	SD8360 定位当前地址(轴3:脉冲单位) 下位	D544 Z取片点2
37		M94 (267) 回原点完成	M64 放片点2																		DMOVP	SD8340 定位当前地址(轴1:脉冲单位) 下位	D550 X1到后放片点

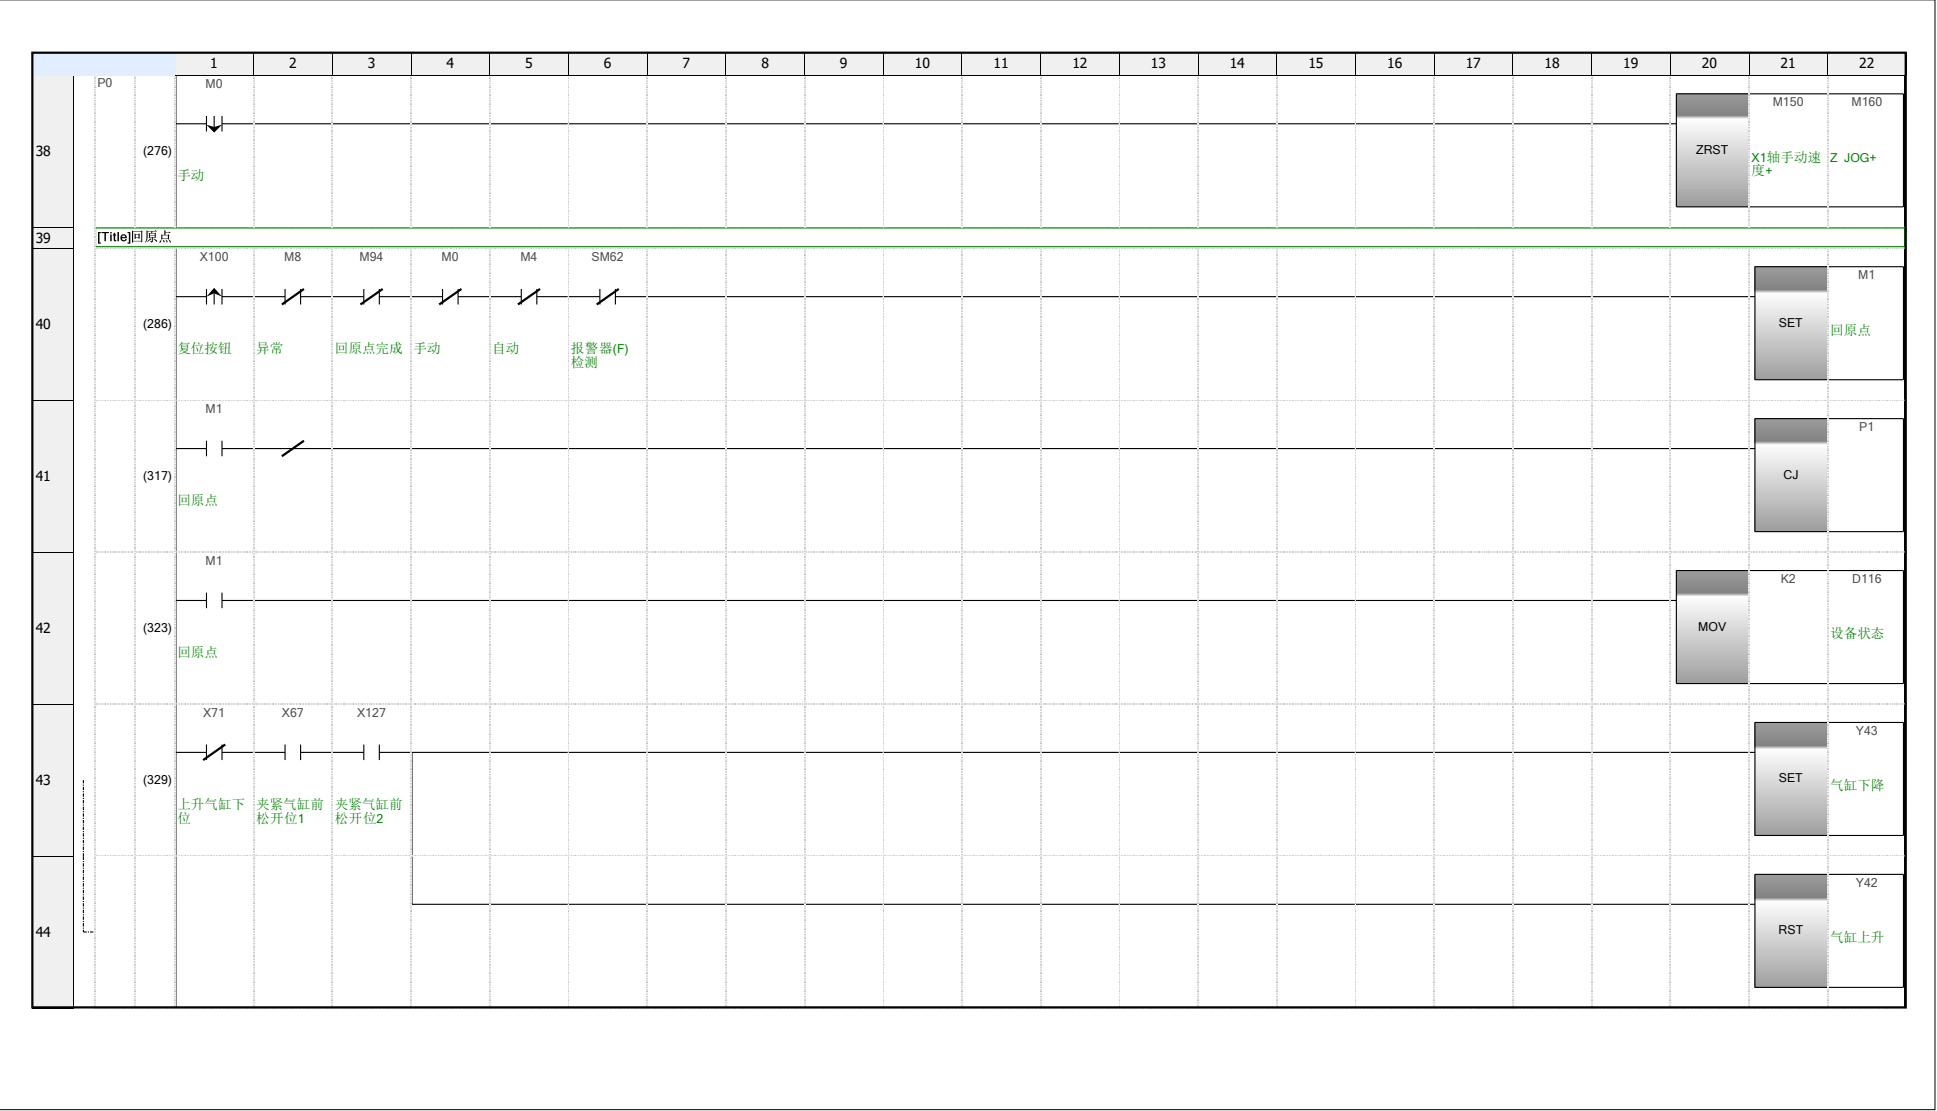


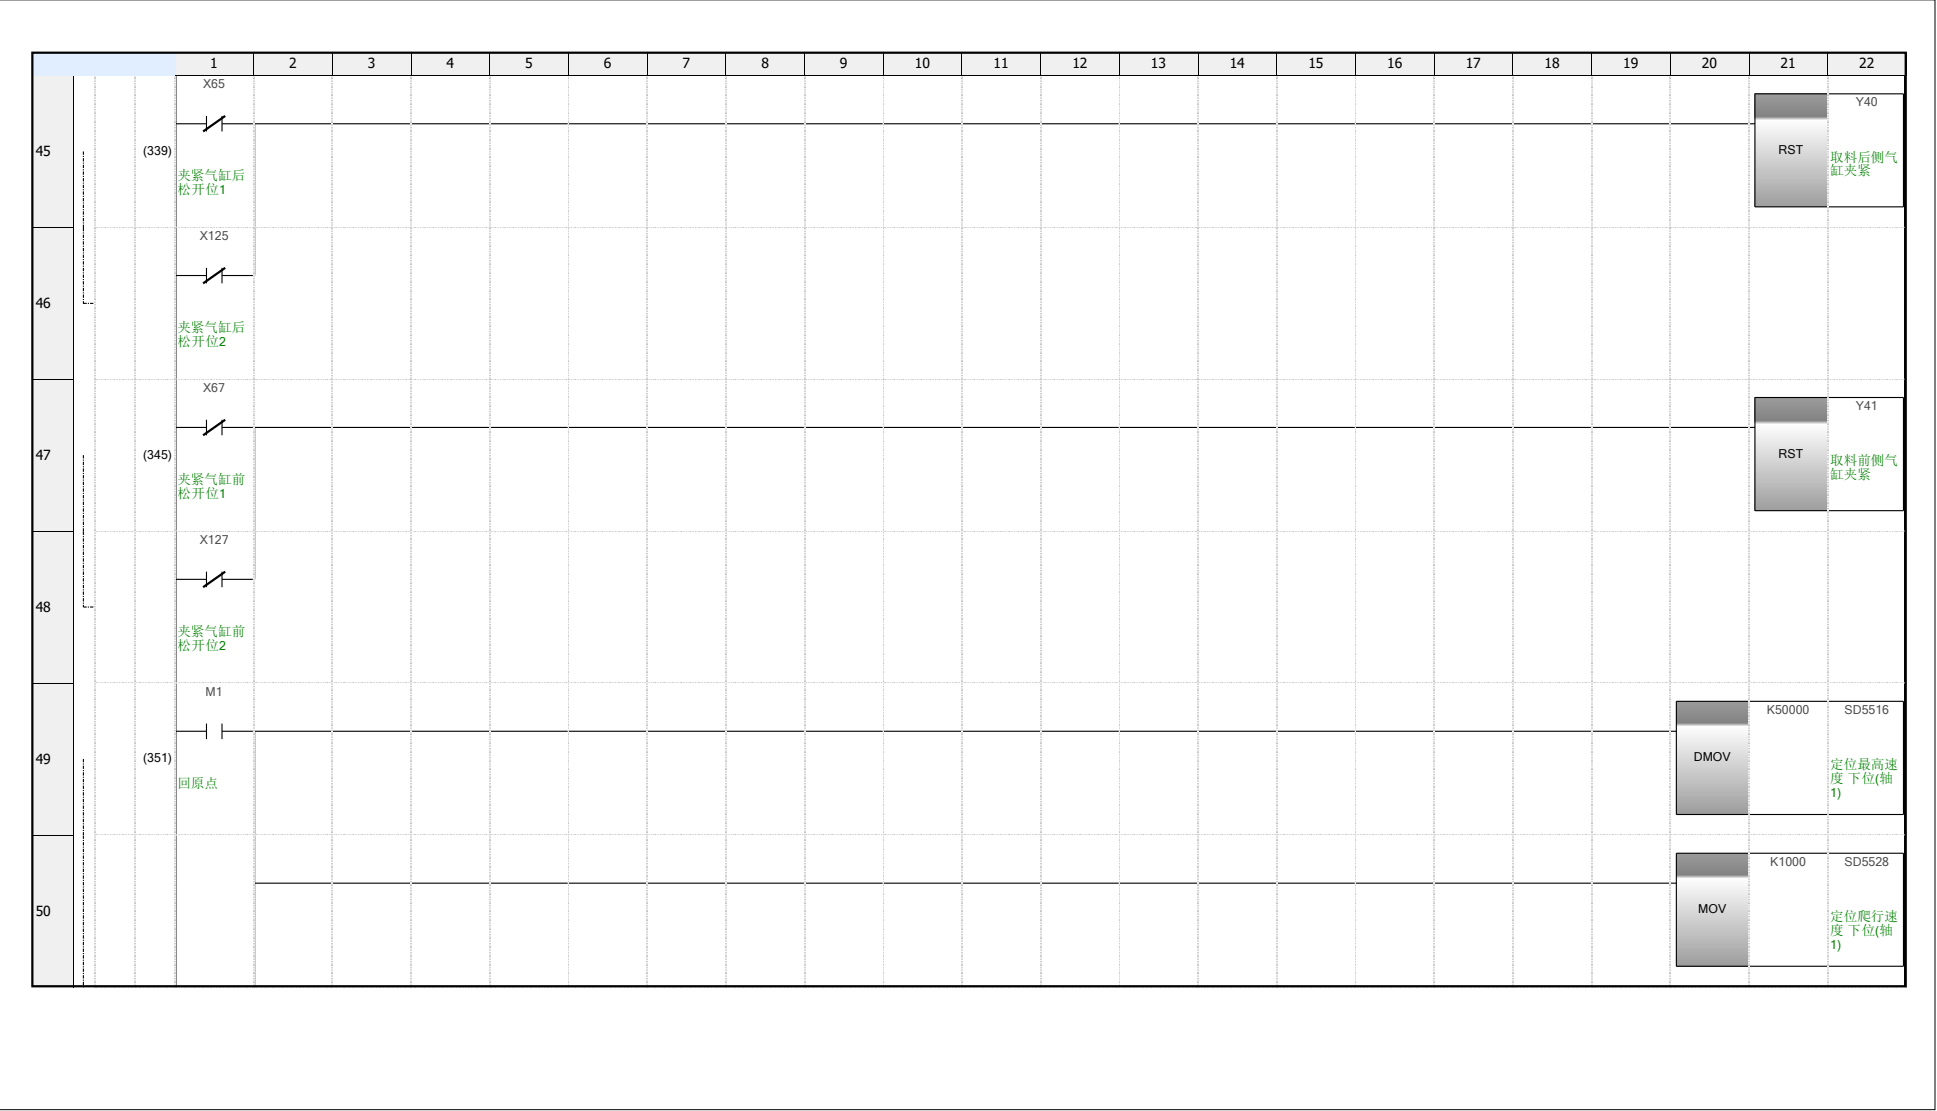



	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
51																				DMOV	K3000	SD5526 定位原点回 归速度 下位 (轴1)
52		M1 (370) 回原点																		DMOV	K100000	SD5556 定位最高速 度 下位(轴 2)
53																				MOV	K1000	SD5568 定位爬行速 度 下位(轴 2)
54																				DMOV	K5000	SD5566 定位原点回 归速度 下位 (轴2)
55		M1 (389) 回原点																		DMOV	K16000	SD5596 定位最高速 度 下位(轴 3)
56																				MOV	K500	SD5608 定位爬行速 度 下位(轴 3)

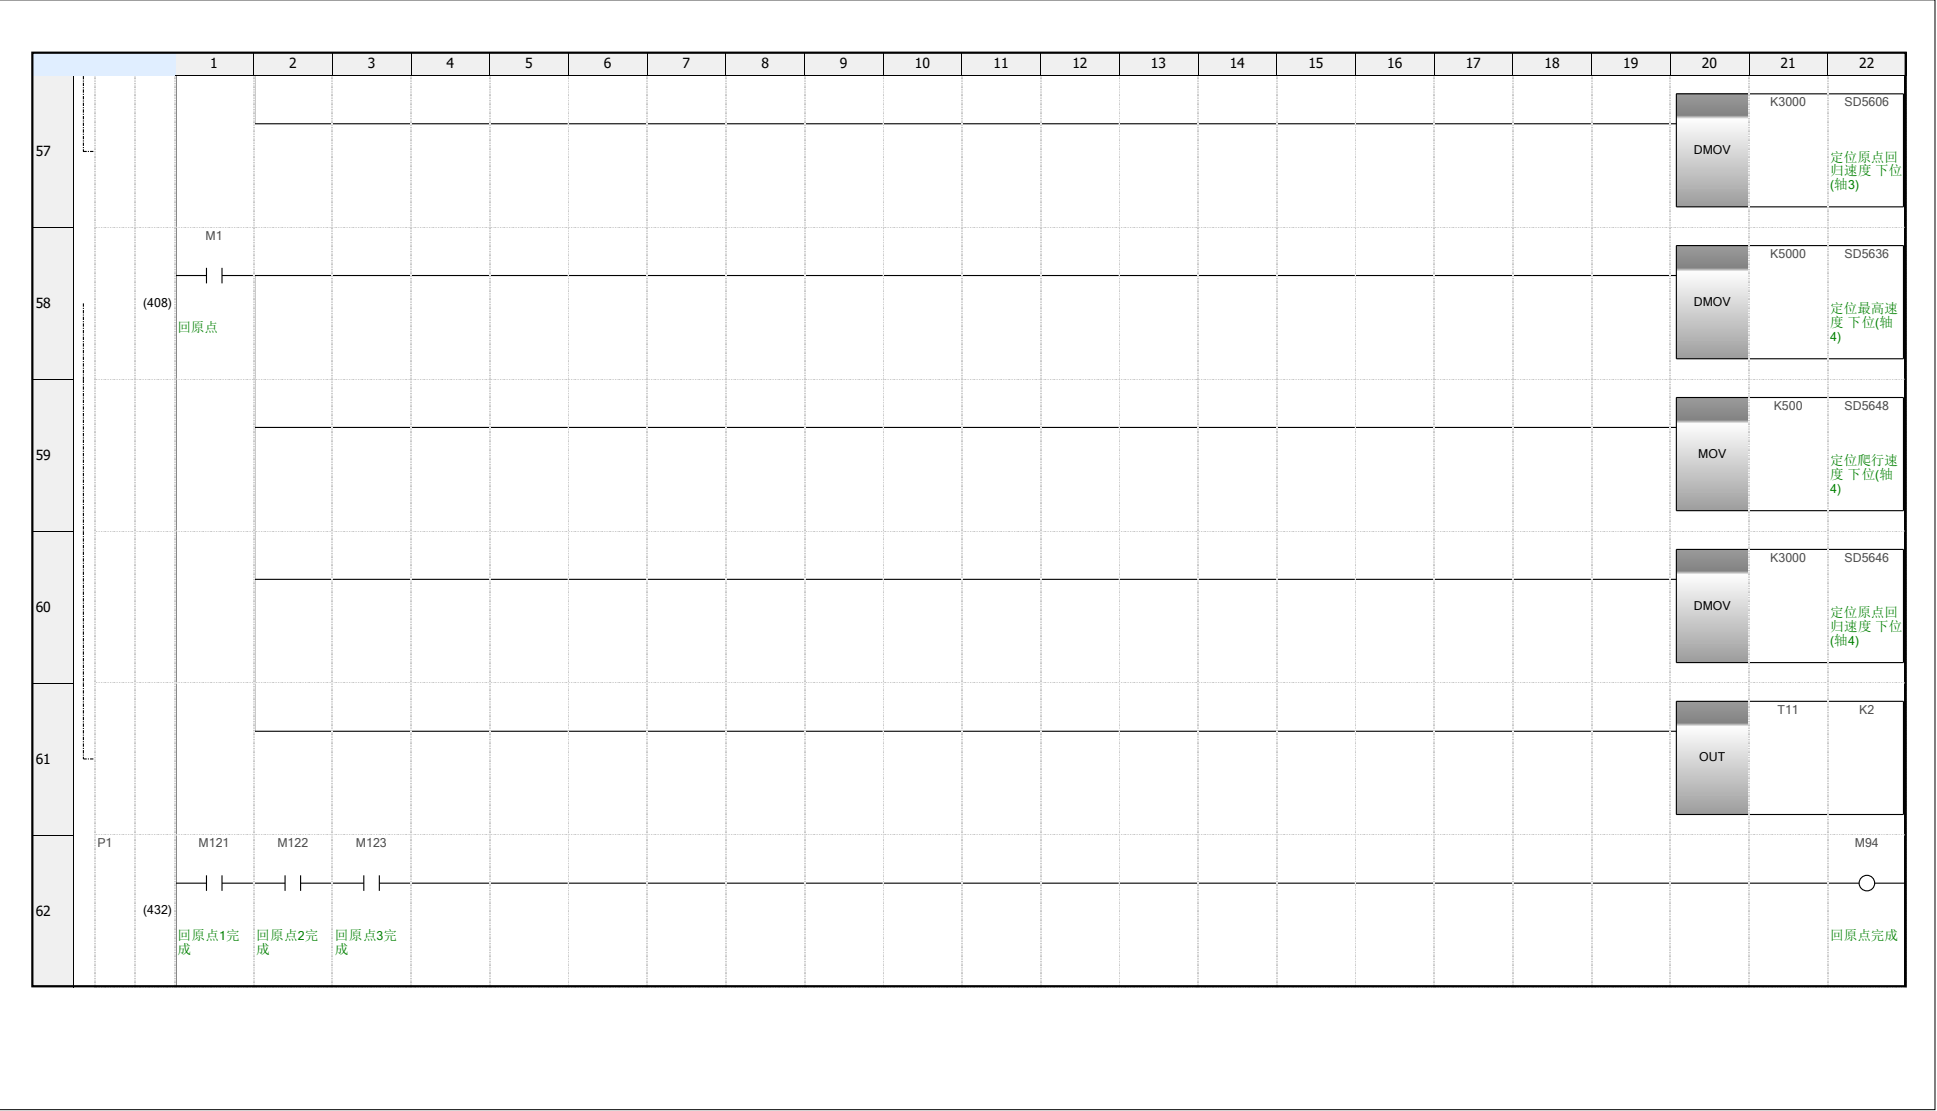


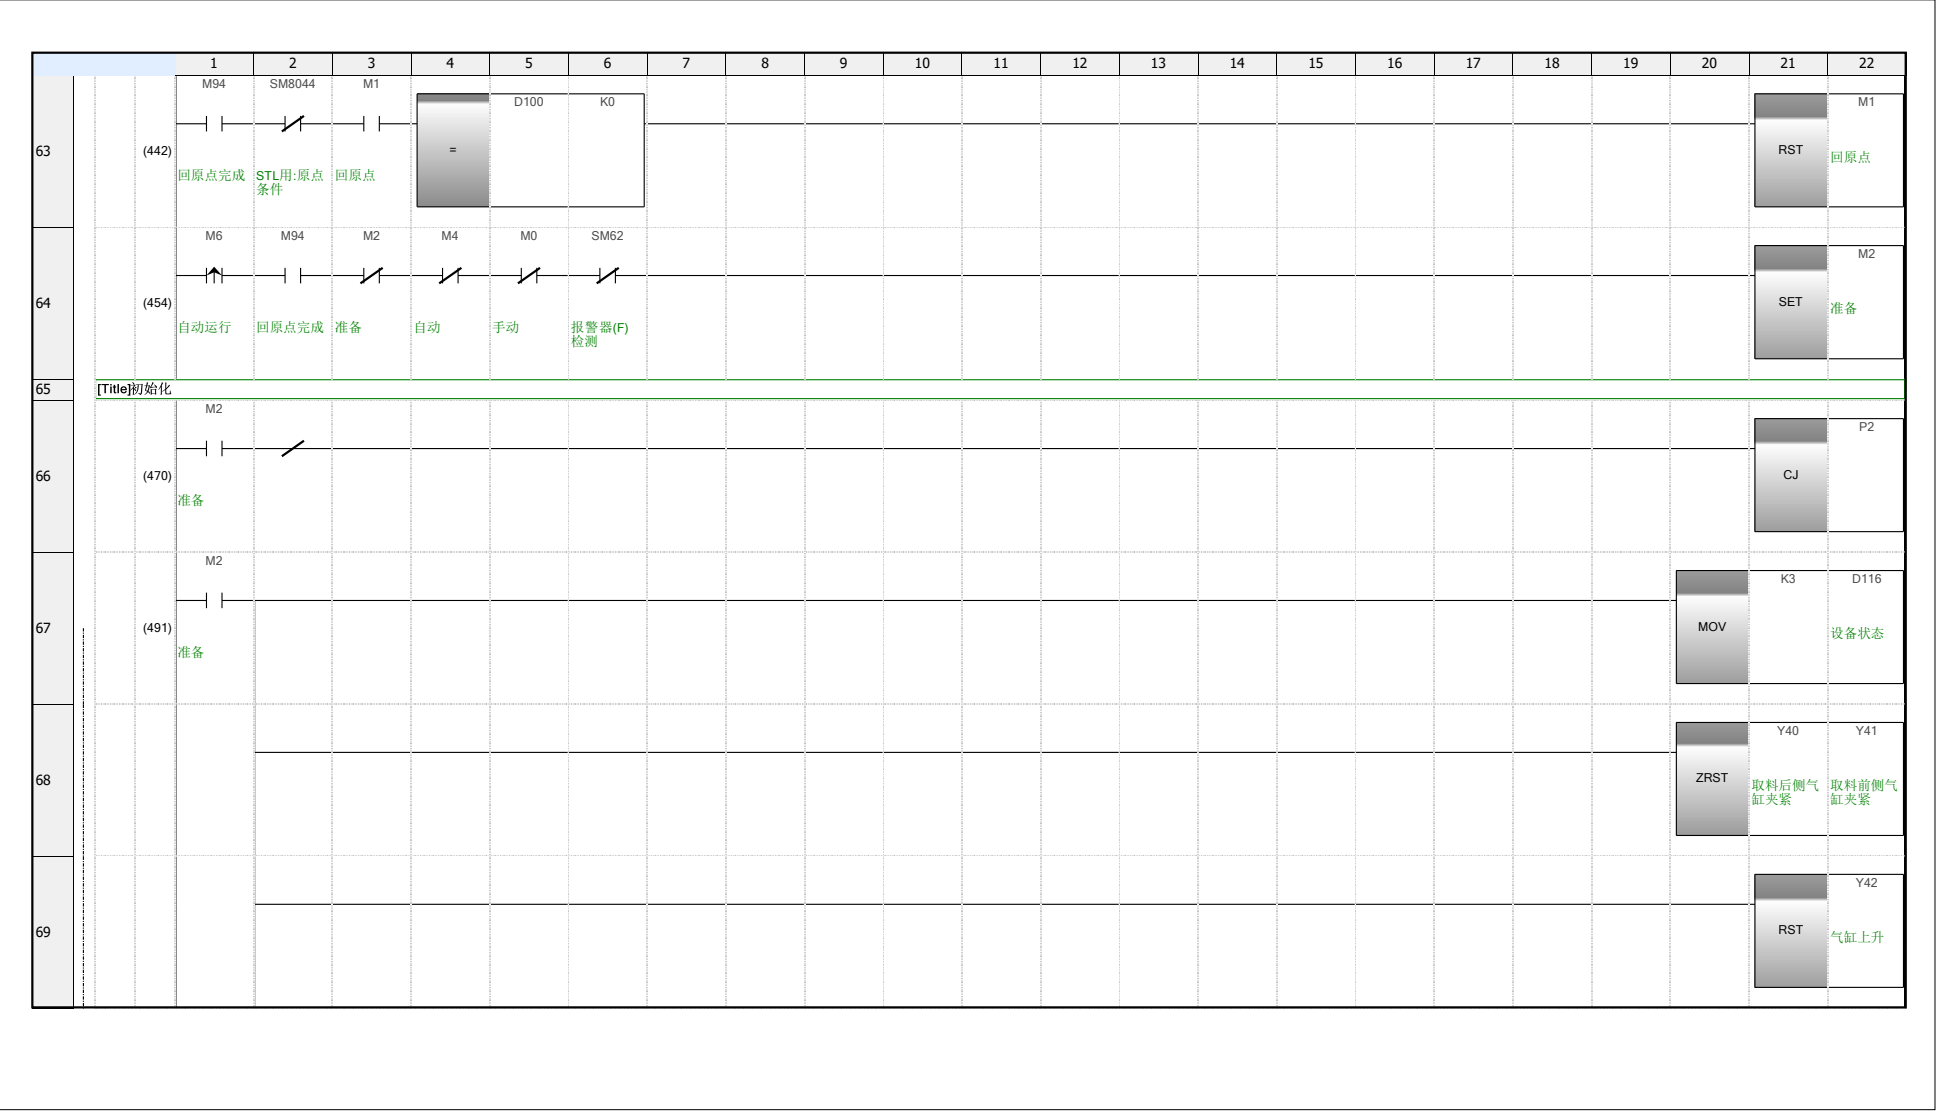


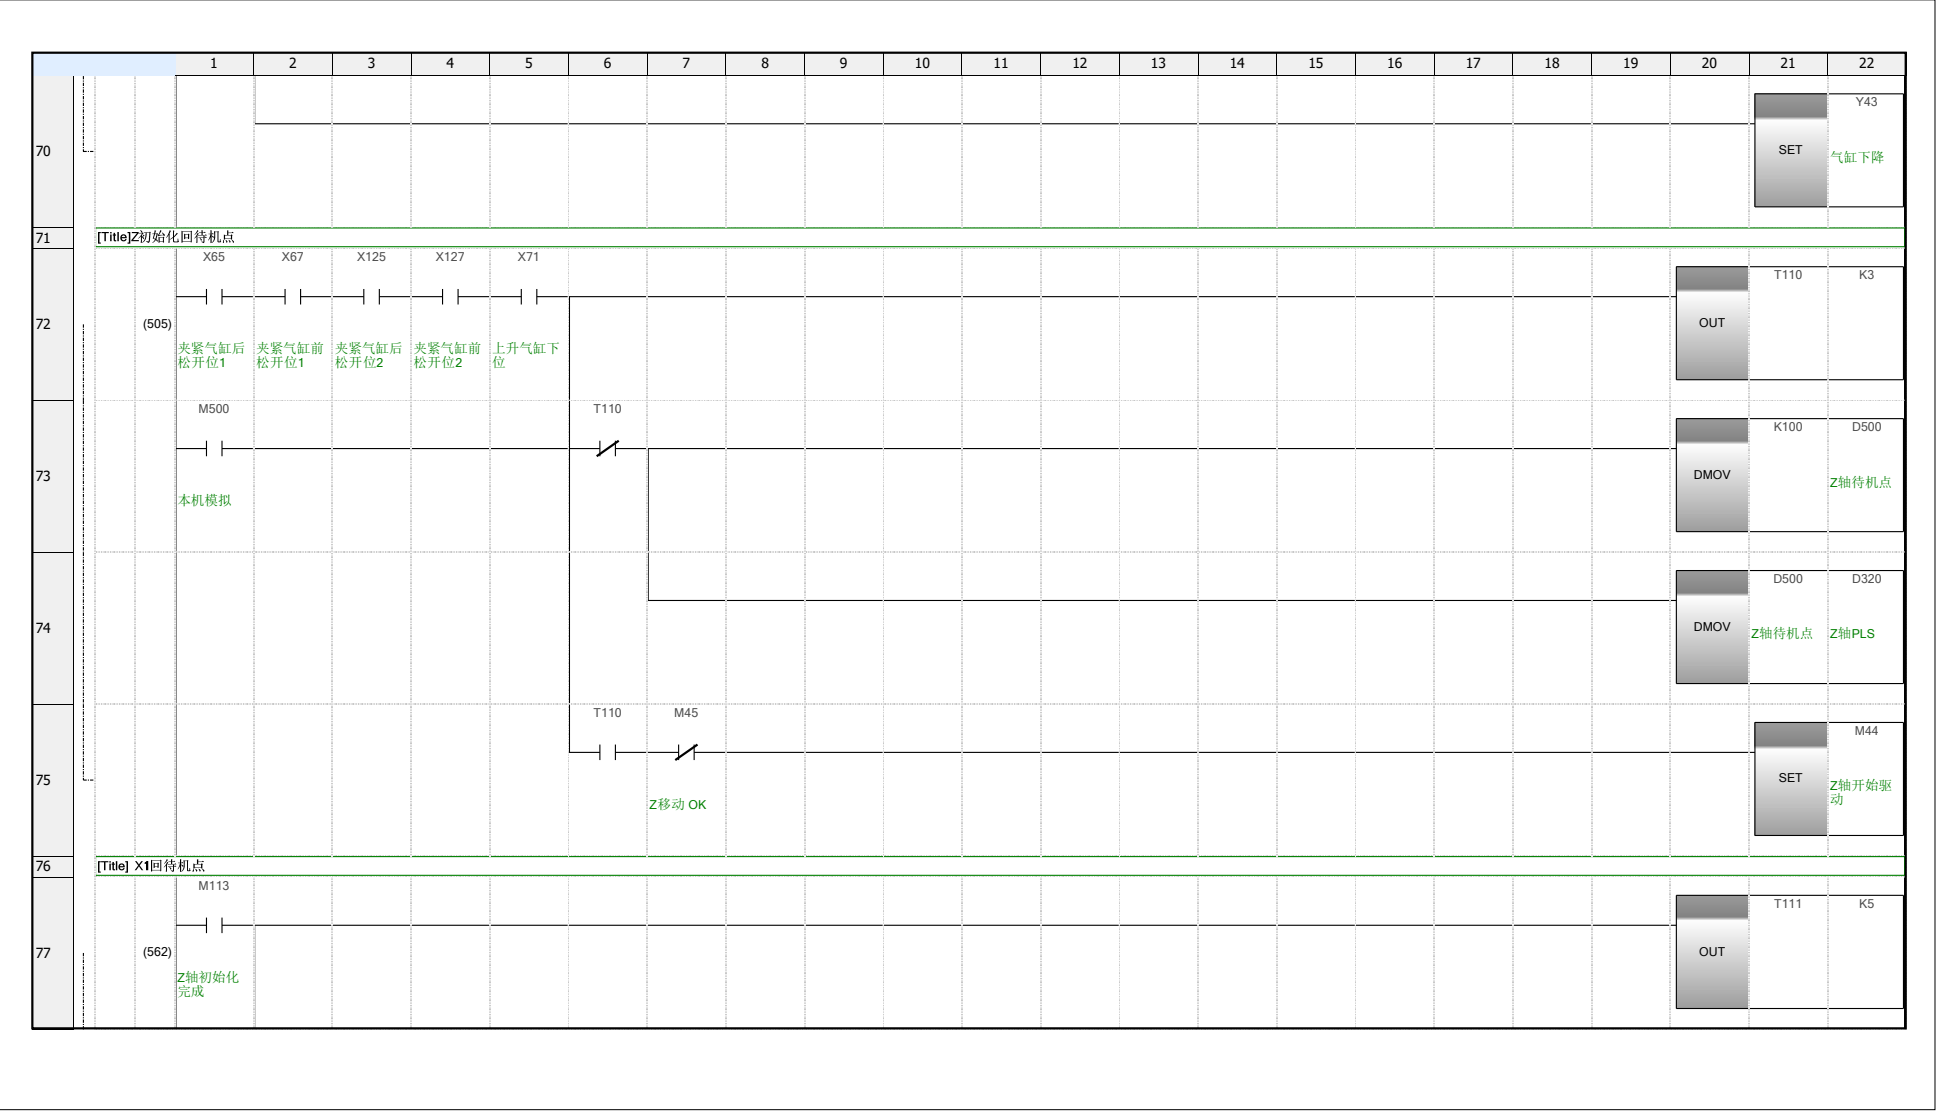

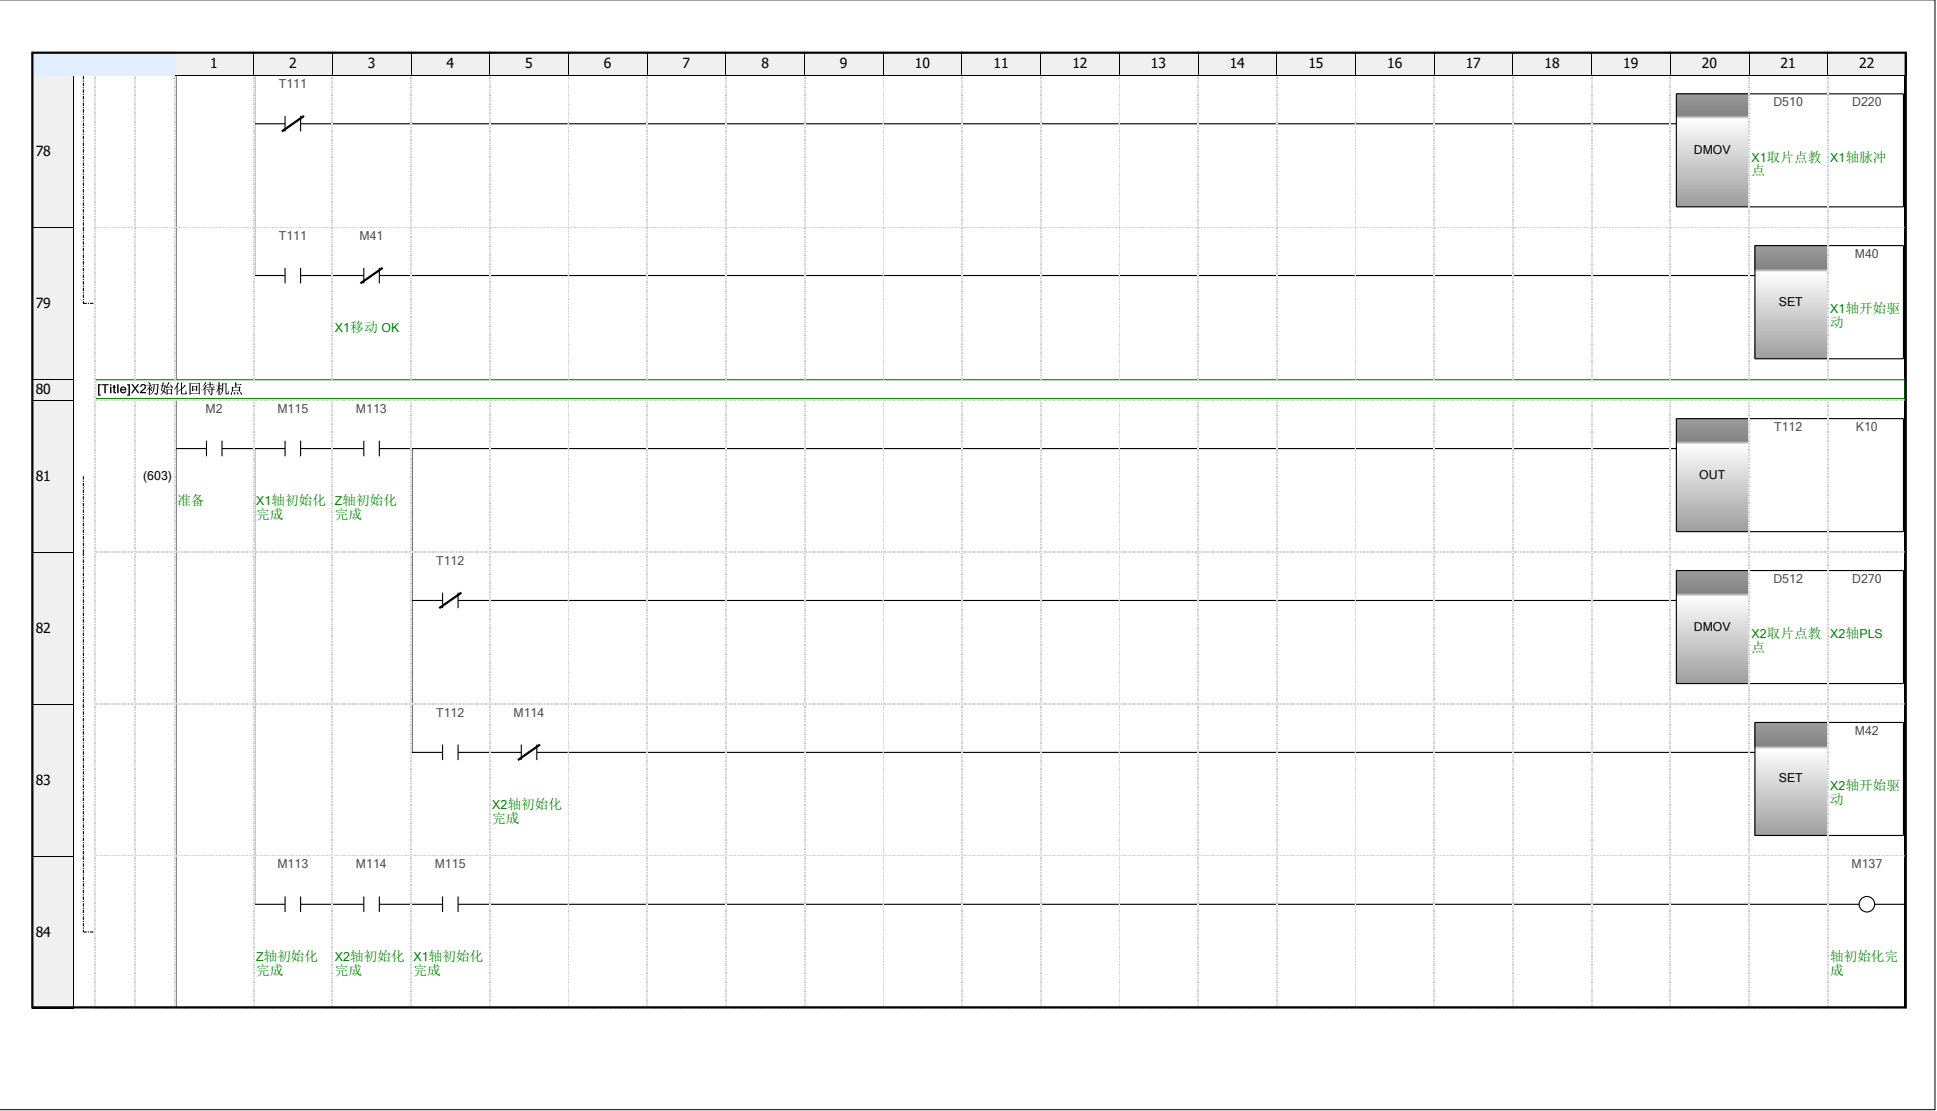


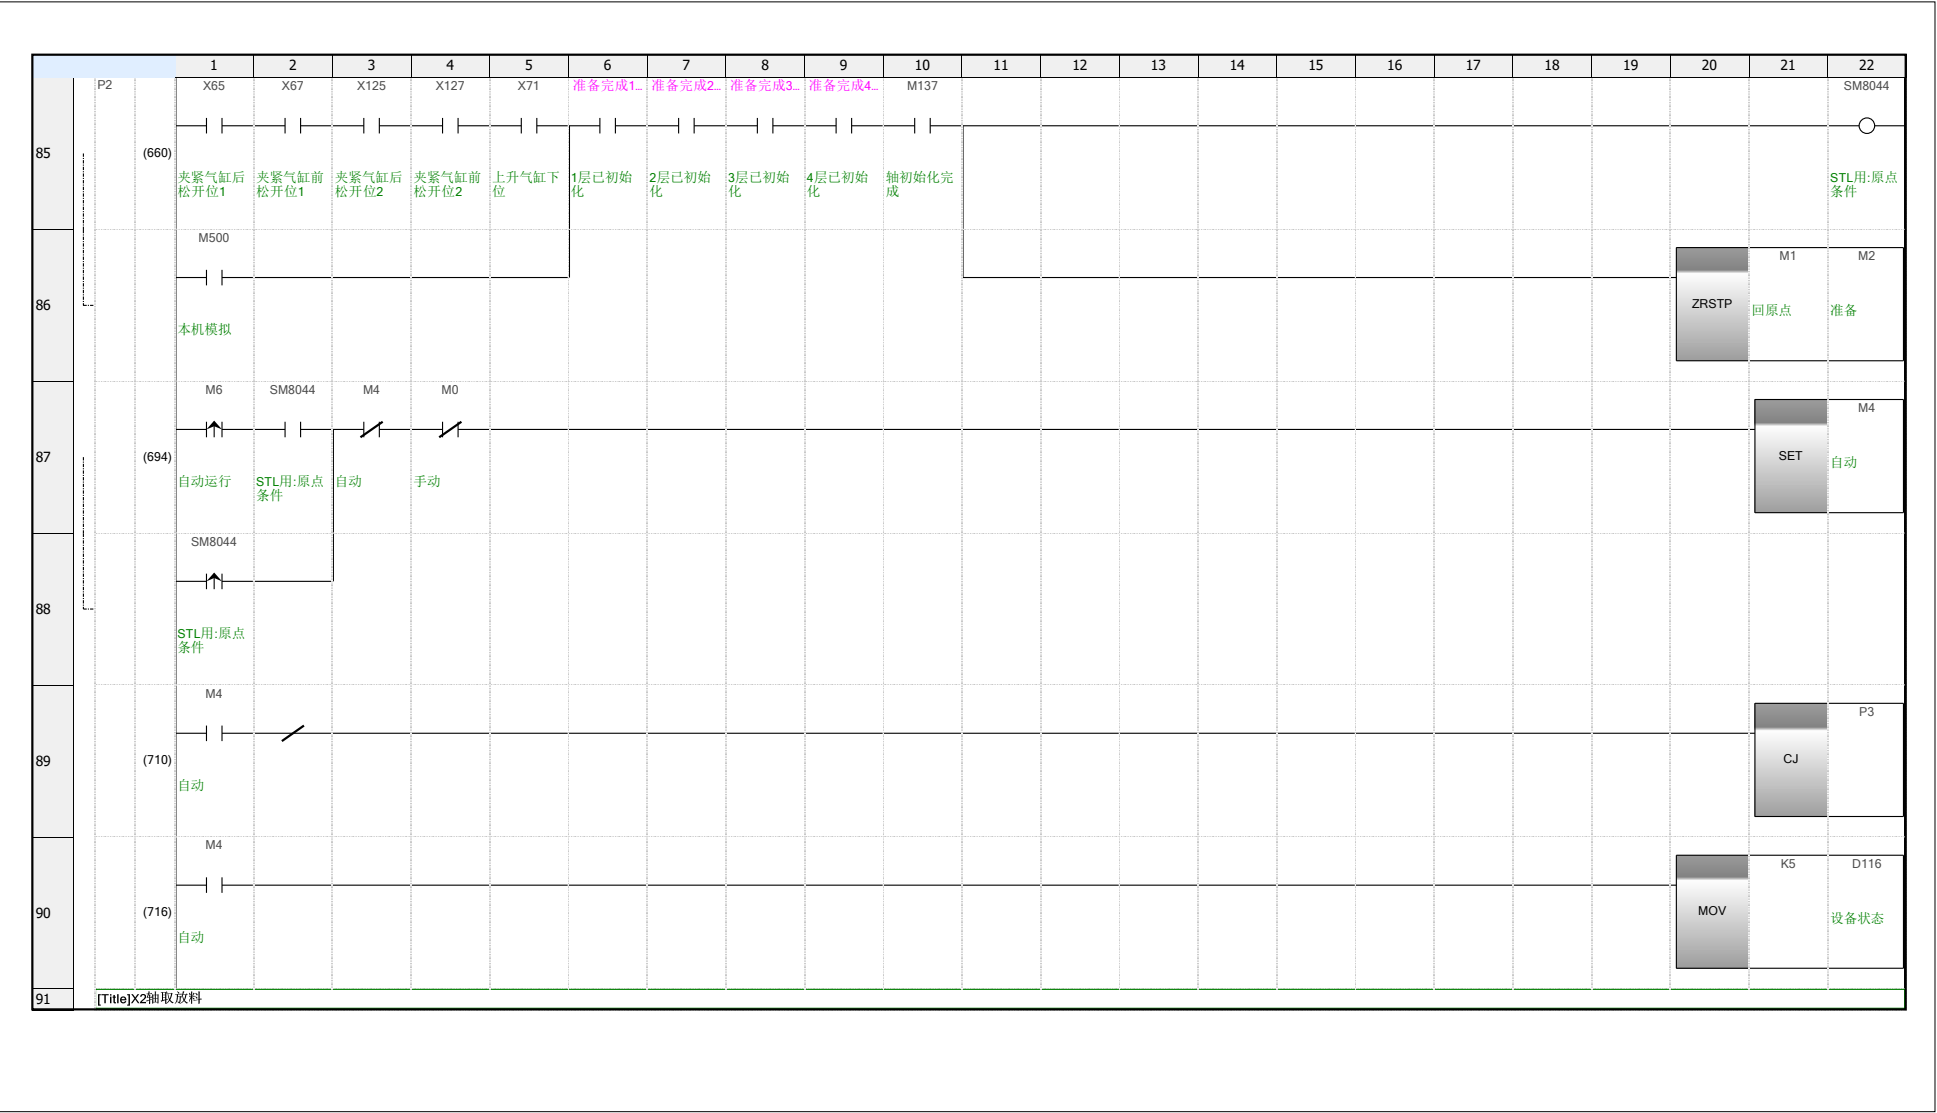


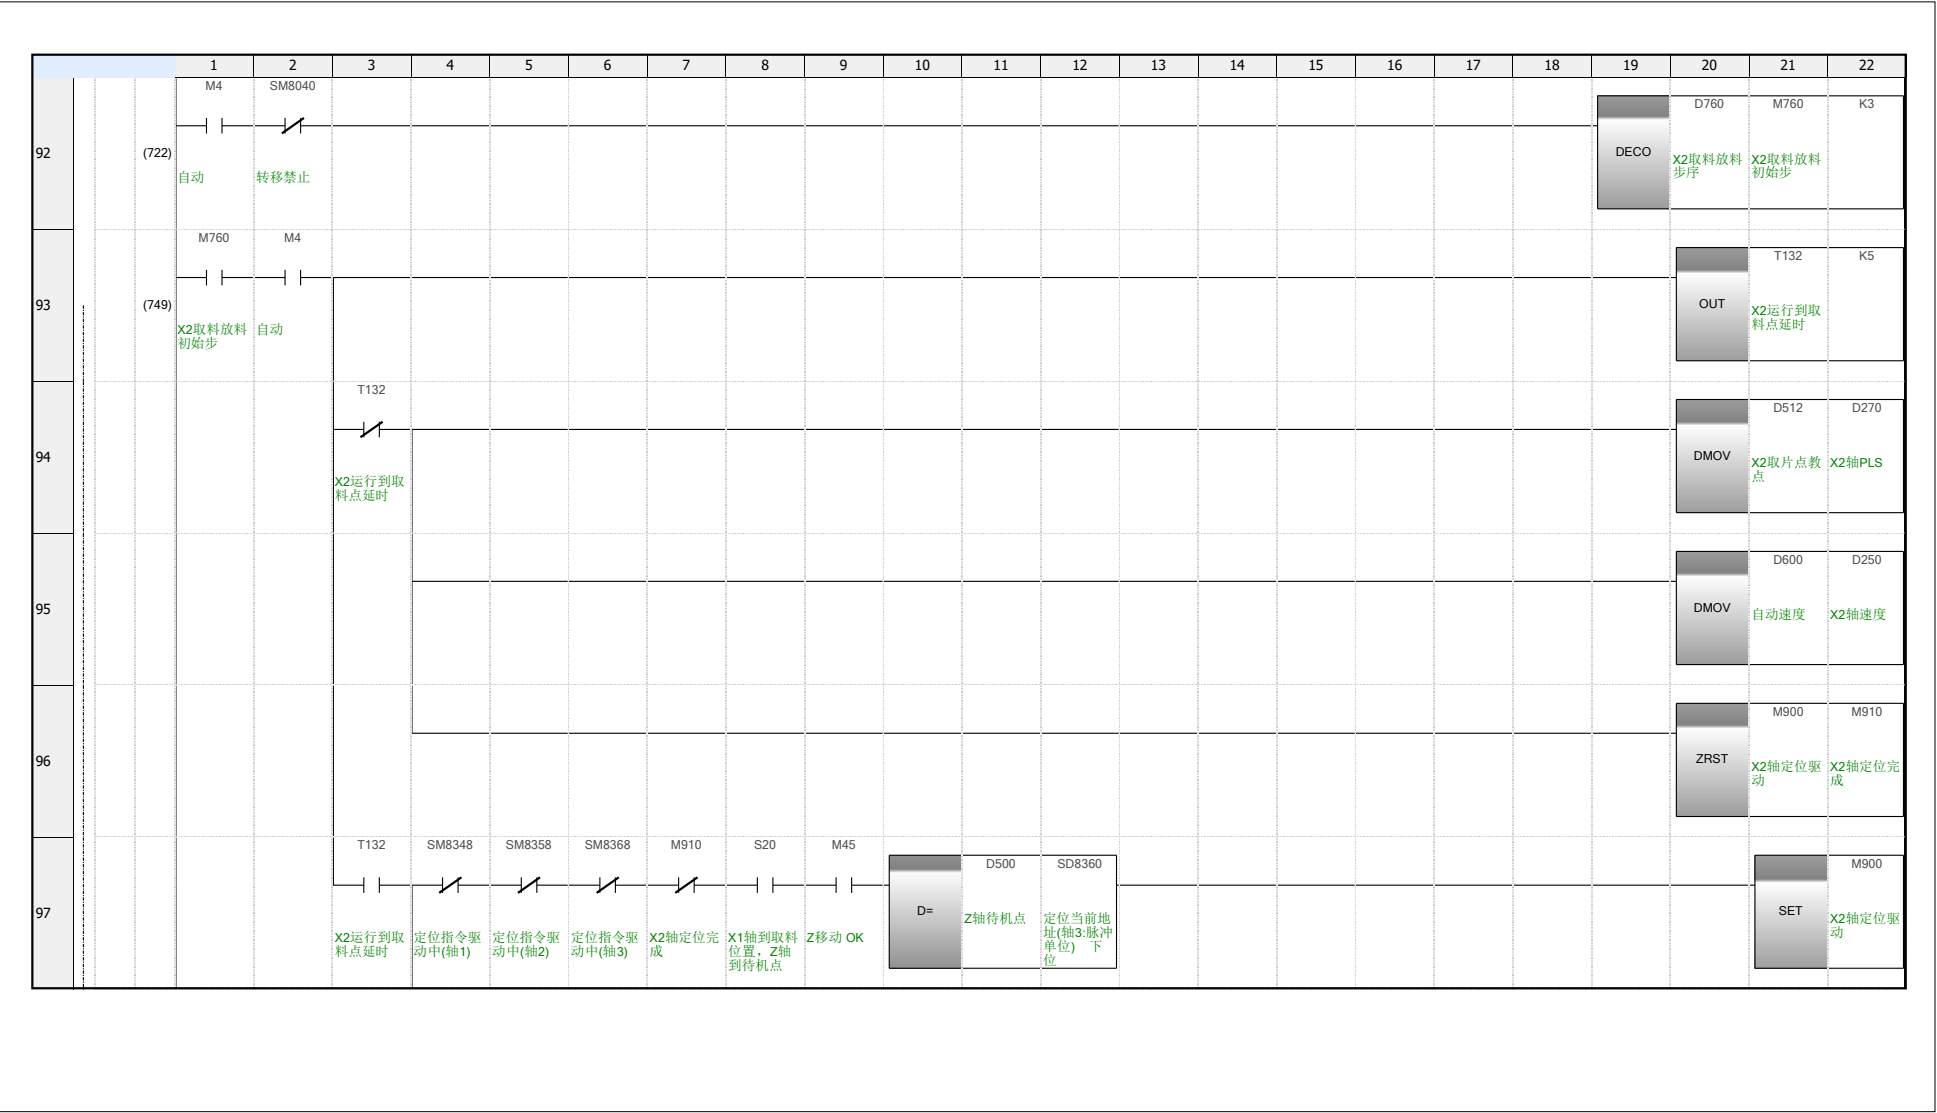


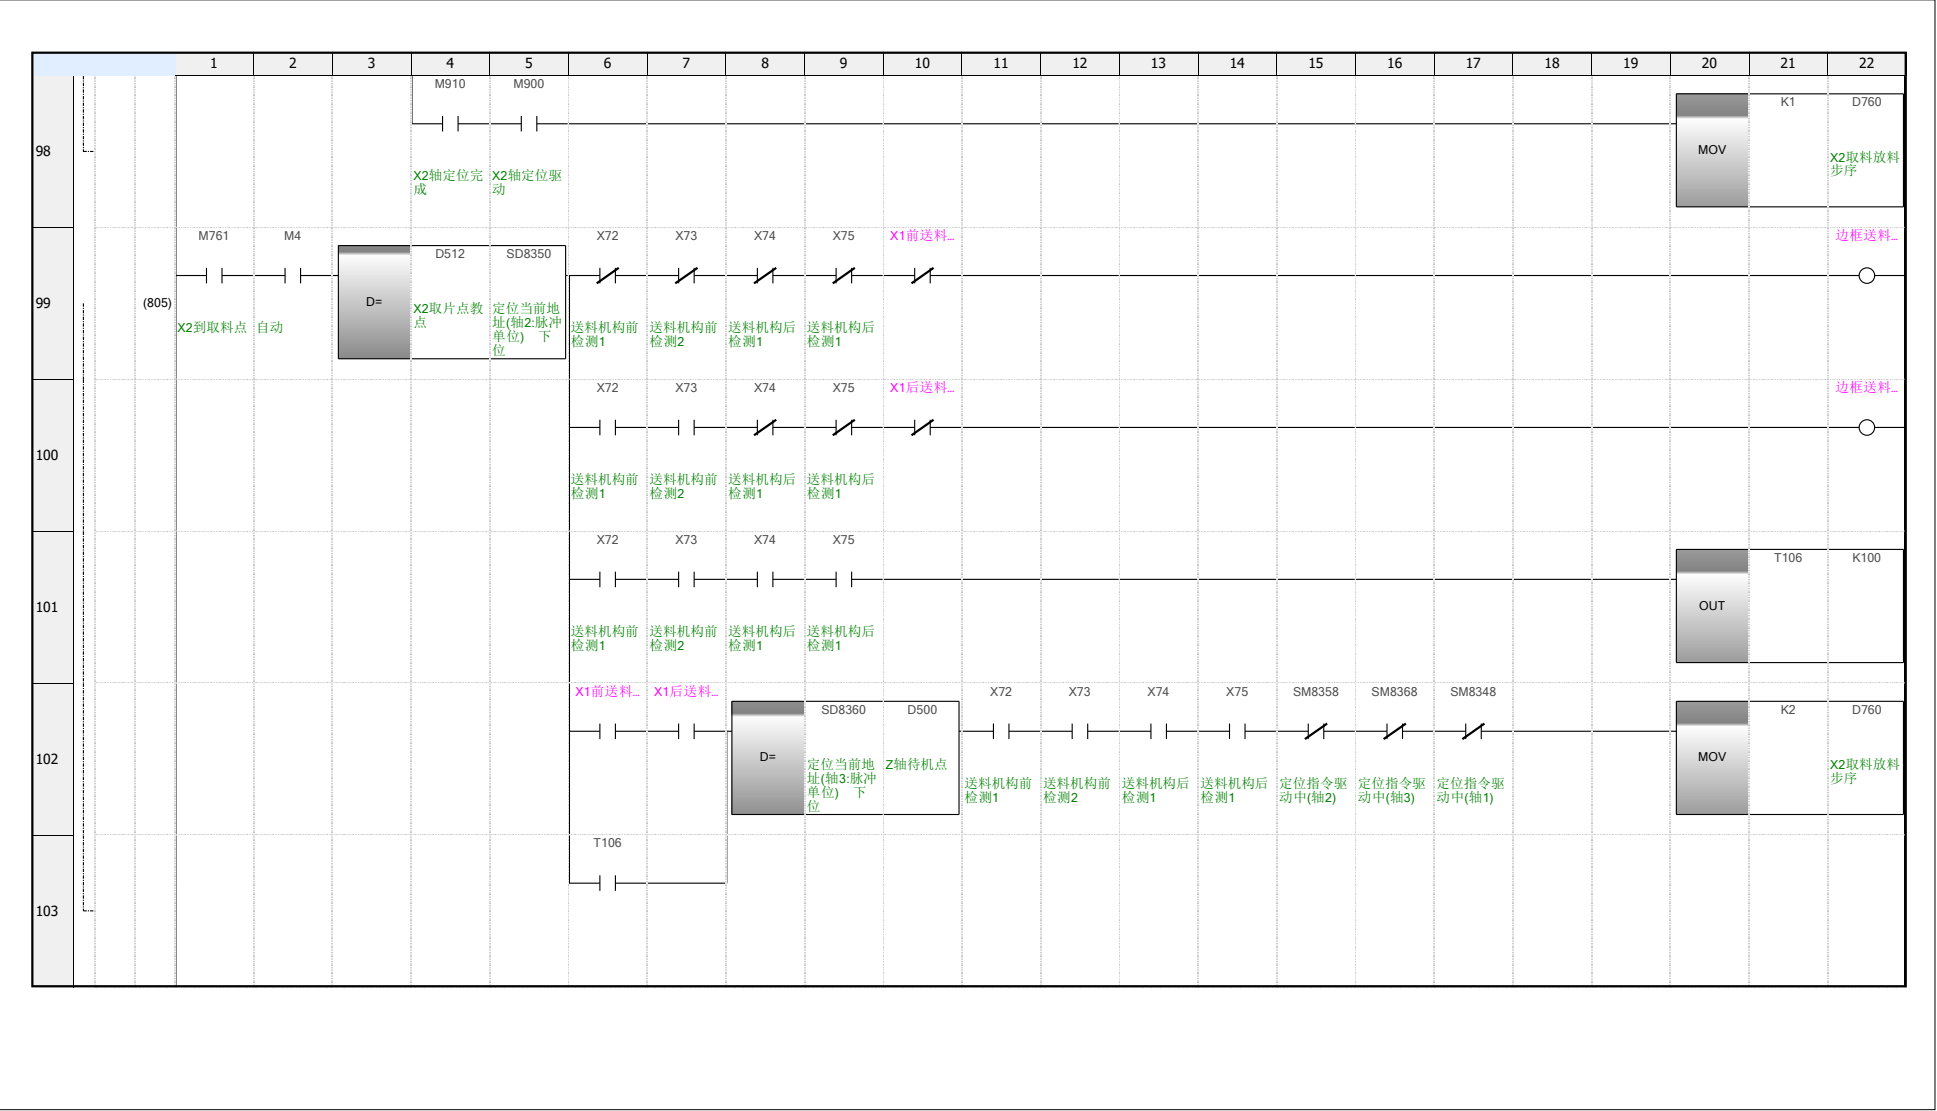


	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
104	M762 M4																			OUT	T133	K5
	(889)	X2到放料点 自动																			X2运行到放料点延时	
105			T133																	DMOV	D522	D270
			X2运行到放料点延时																		X2放片点教点	X2轴PLS
106																				DMOV	D600	D250
																					自动速度	X2轴速度
107																				ZRST	M900	M910
																					X2轴定位驱动	X2轴定位完成
108																				RST		X1前送料
109																				RST		X1后送料

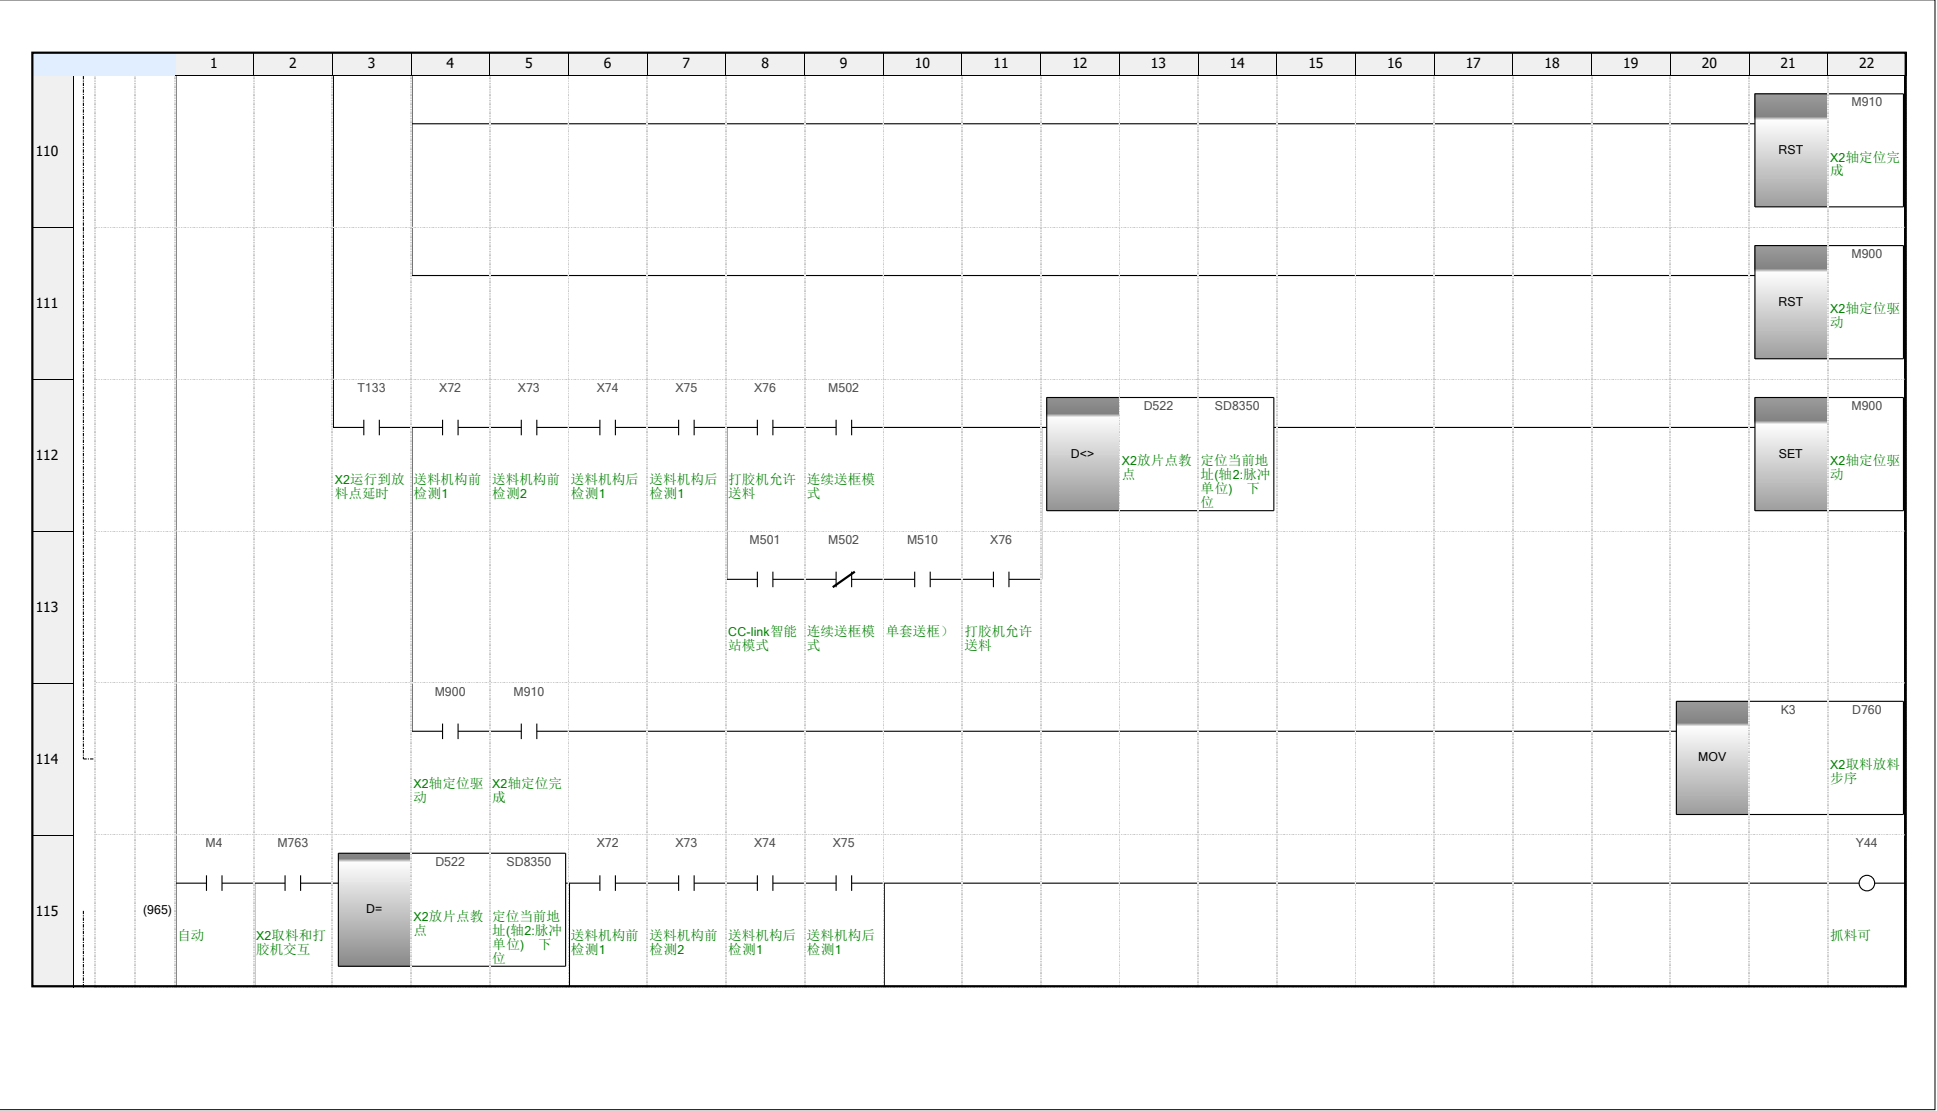


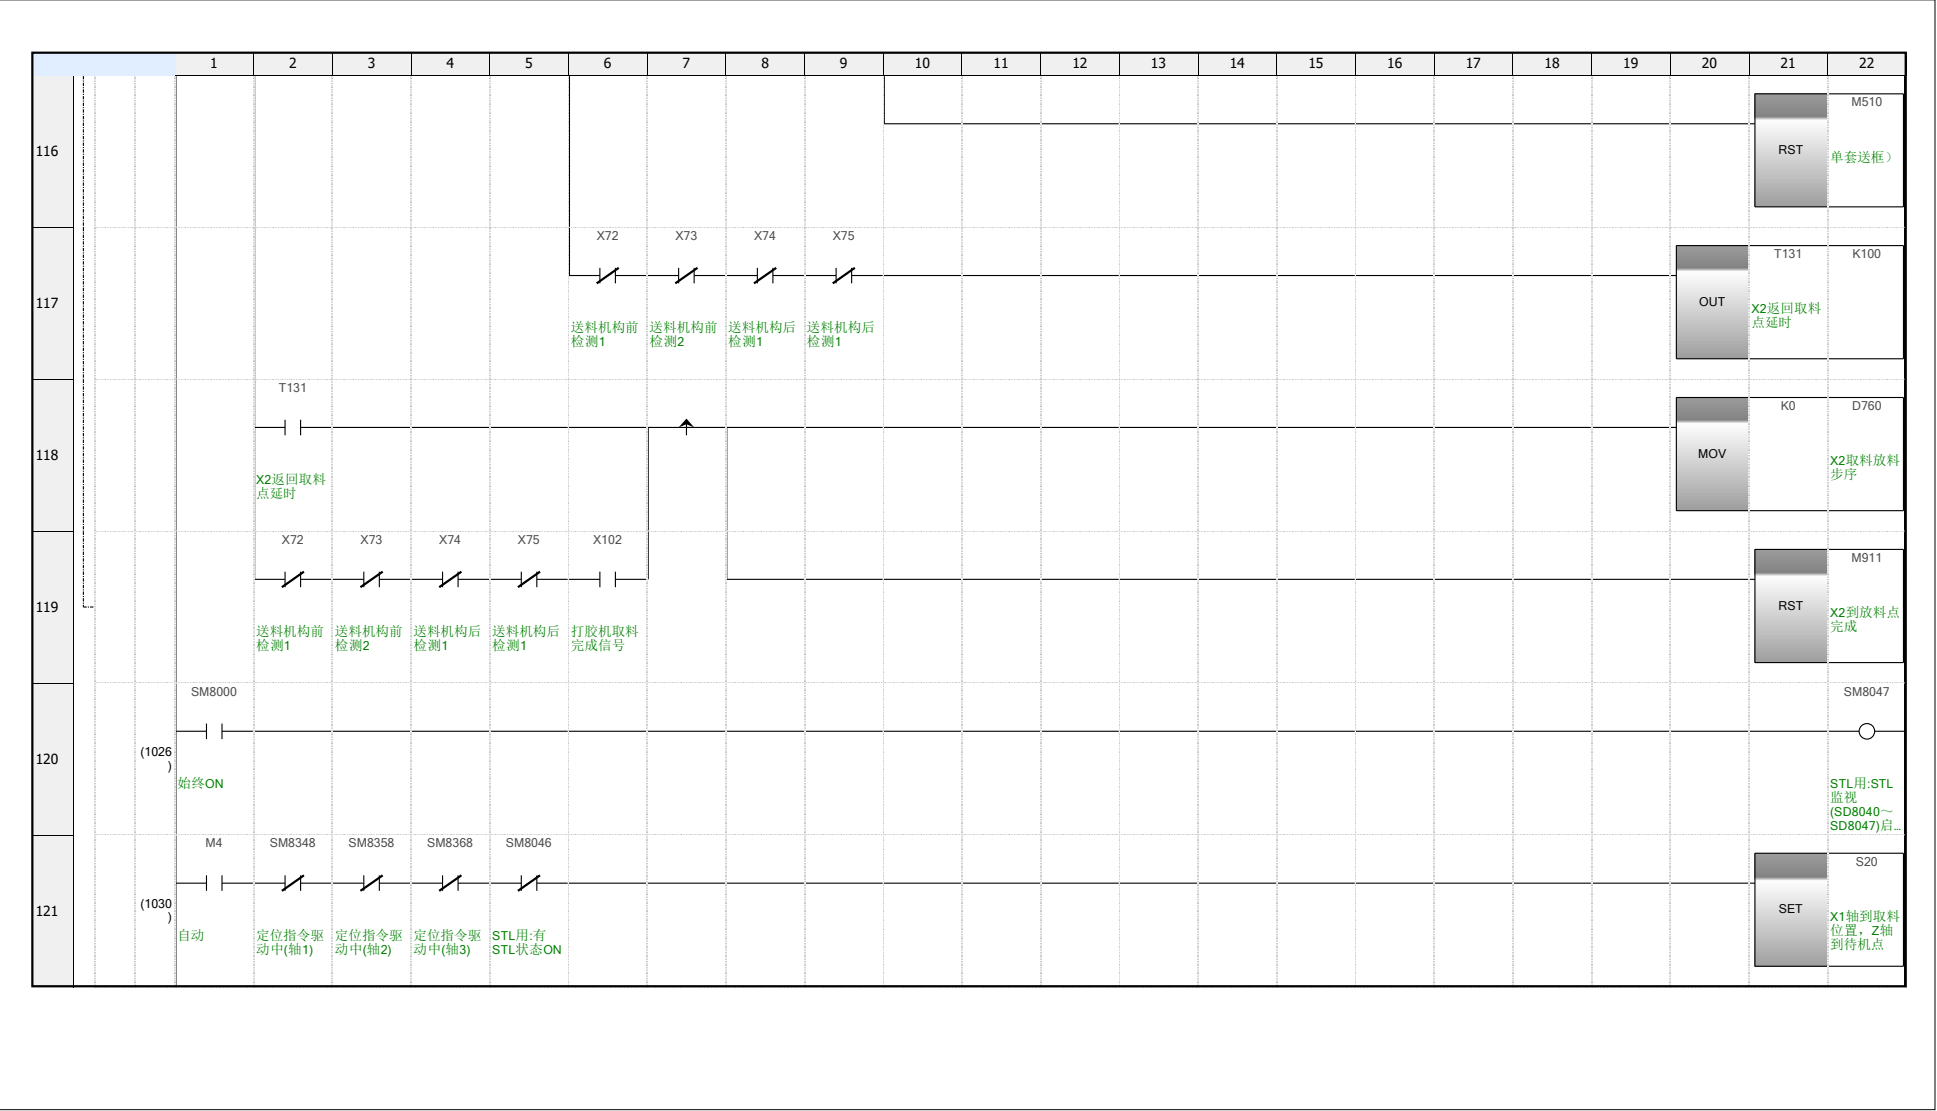


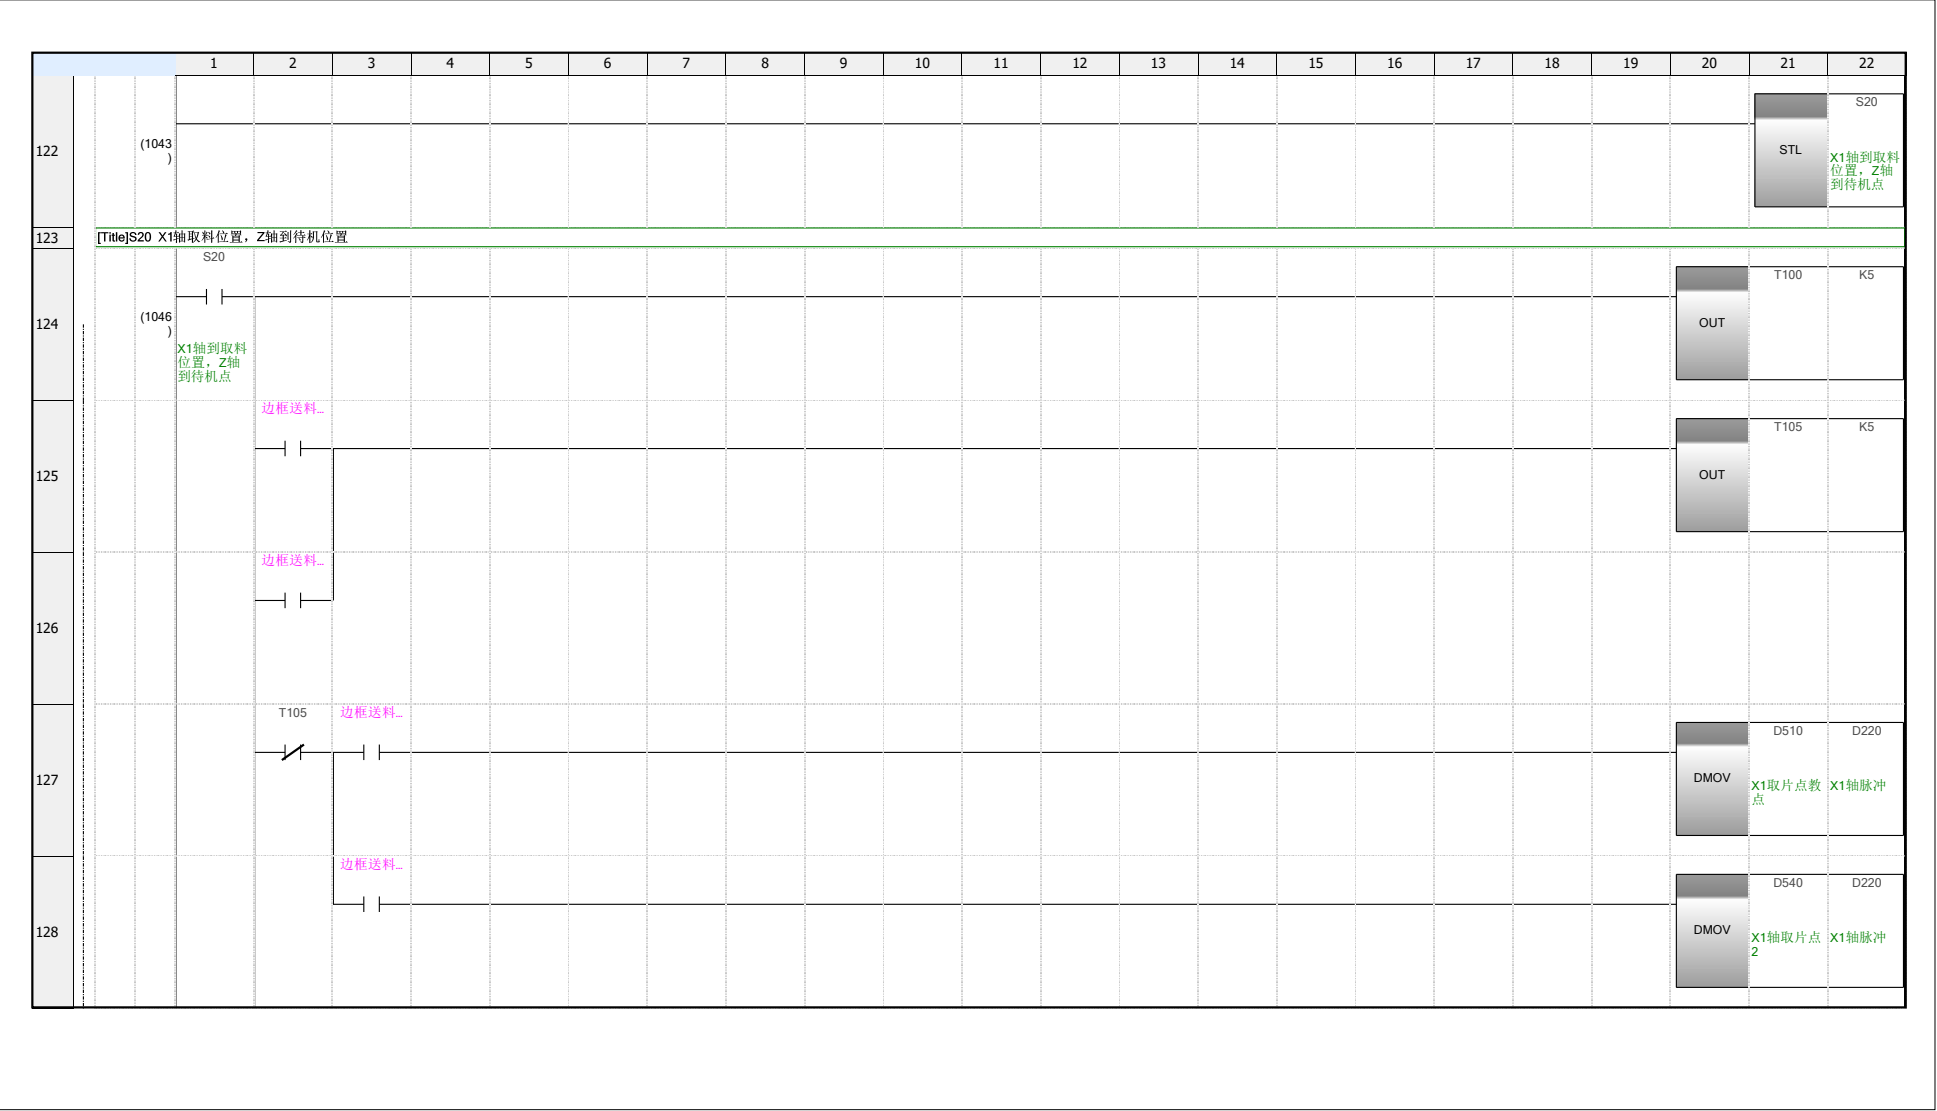



	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
129		T100 ↗																		ZRST	Y40 取料后侧气缸夹紧	Y41 取料前侧气缸夹紧
130																				DMOV	D600 自动速度	D200 X1轴速度
131																				RST	取料完成4. 4层边框已取走	
132																				RST	取料完成3. 3层边框已取走	
133																				RST	取料完成2. 2层边框已取走	
134																				RST	取料完成1. 1层边框已取走	

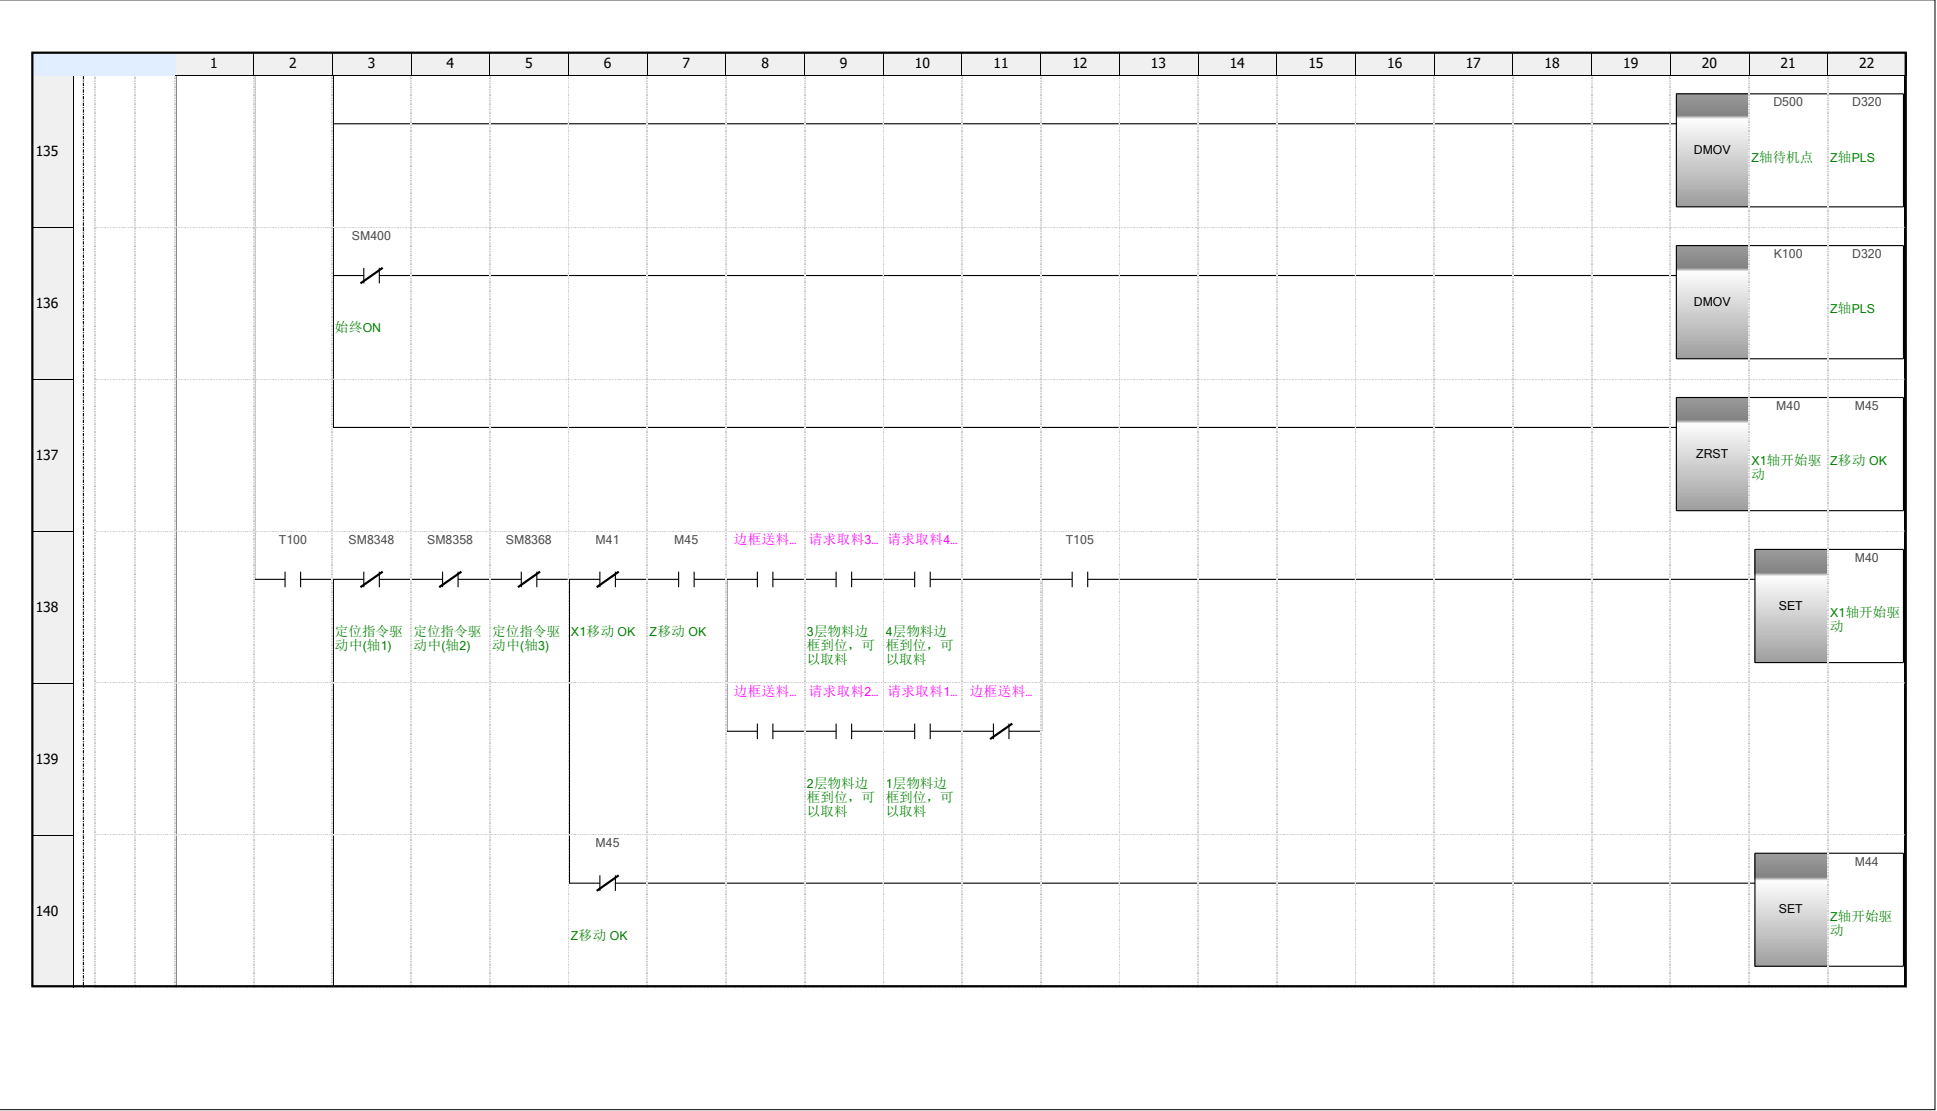

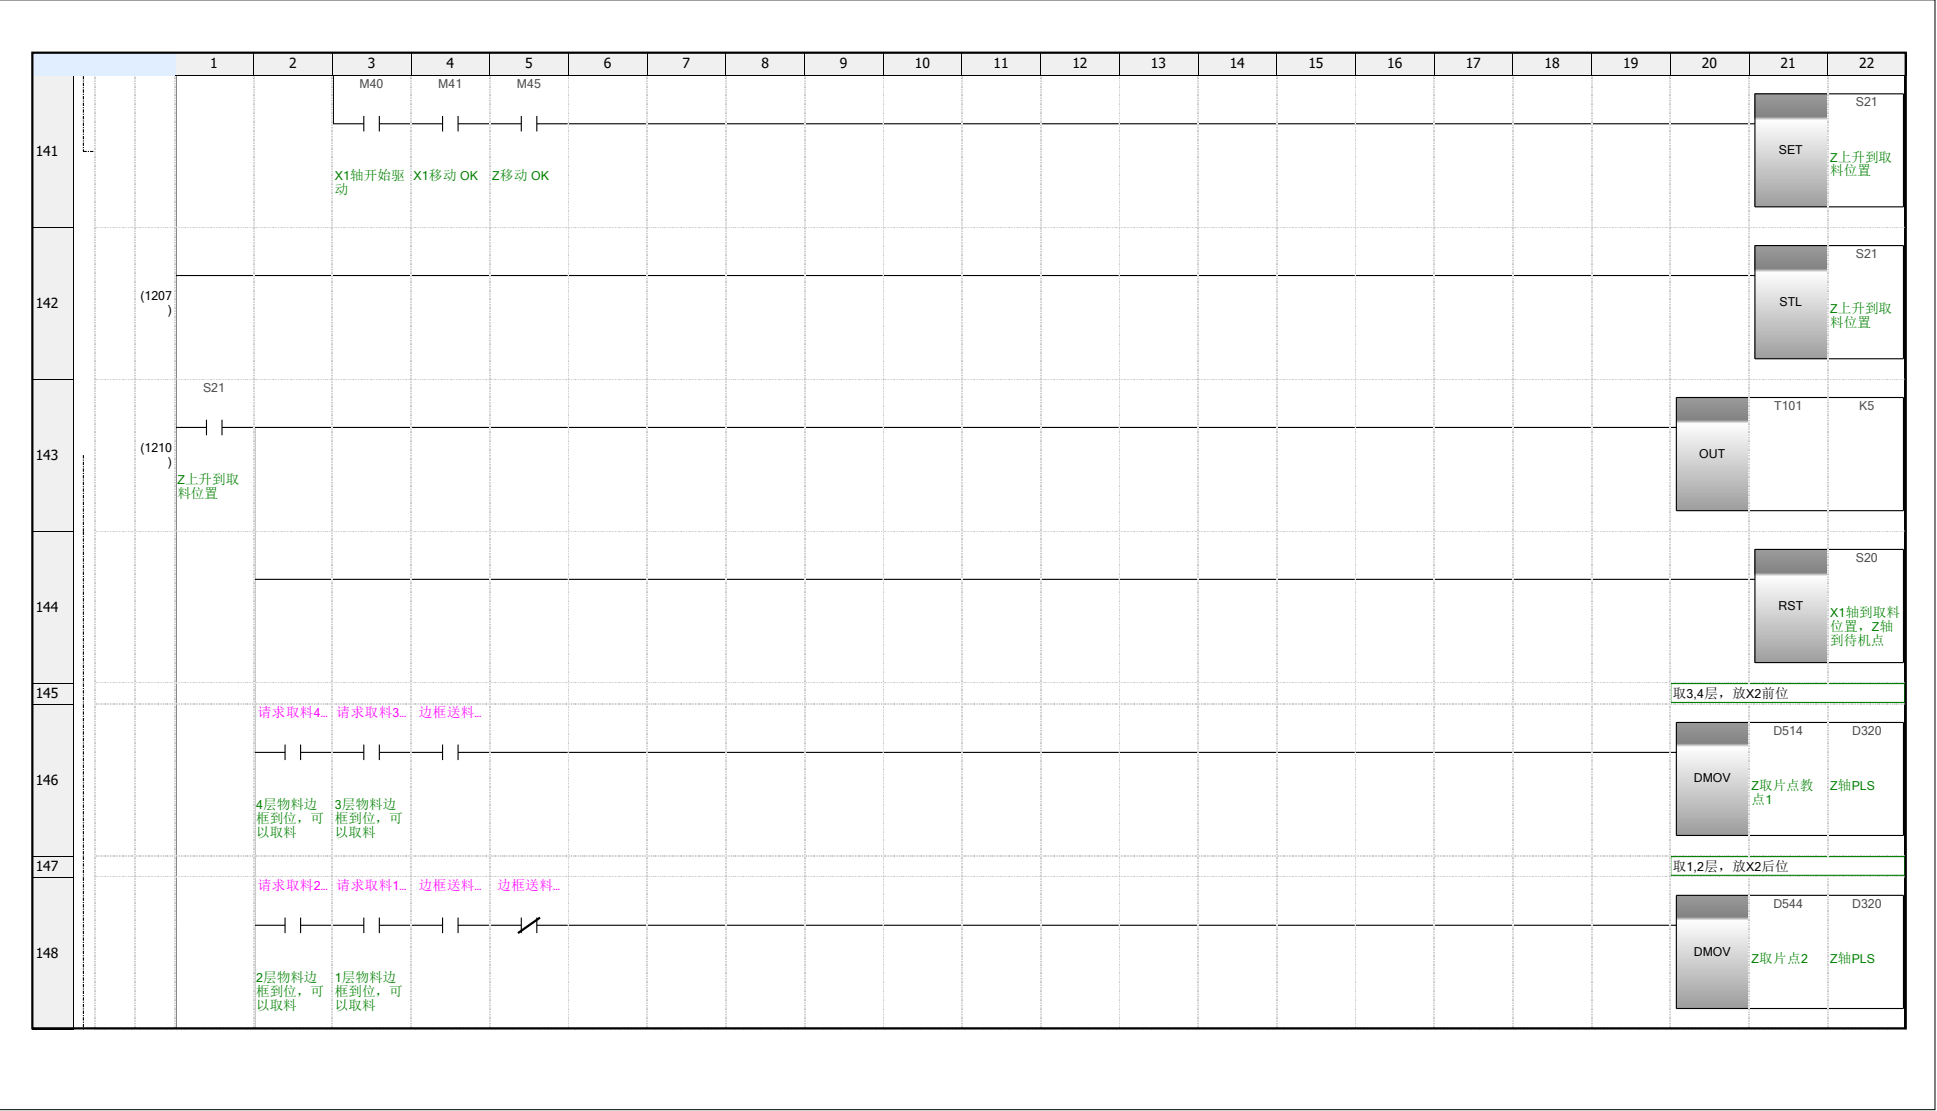


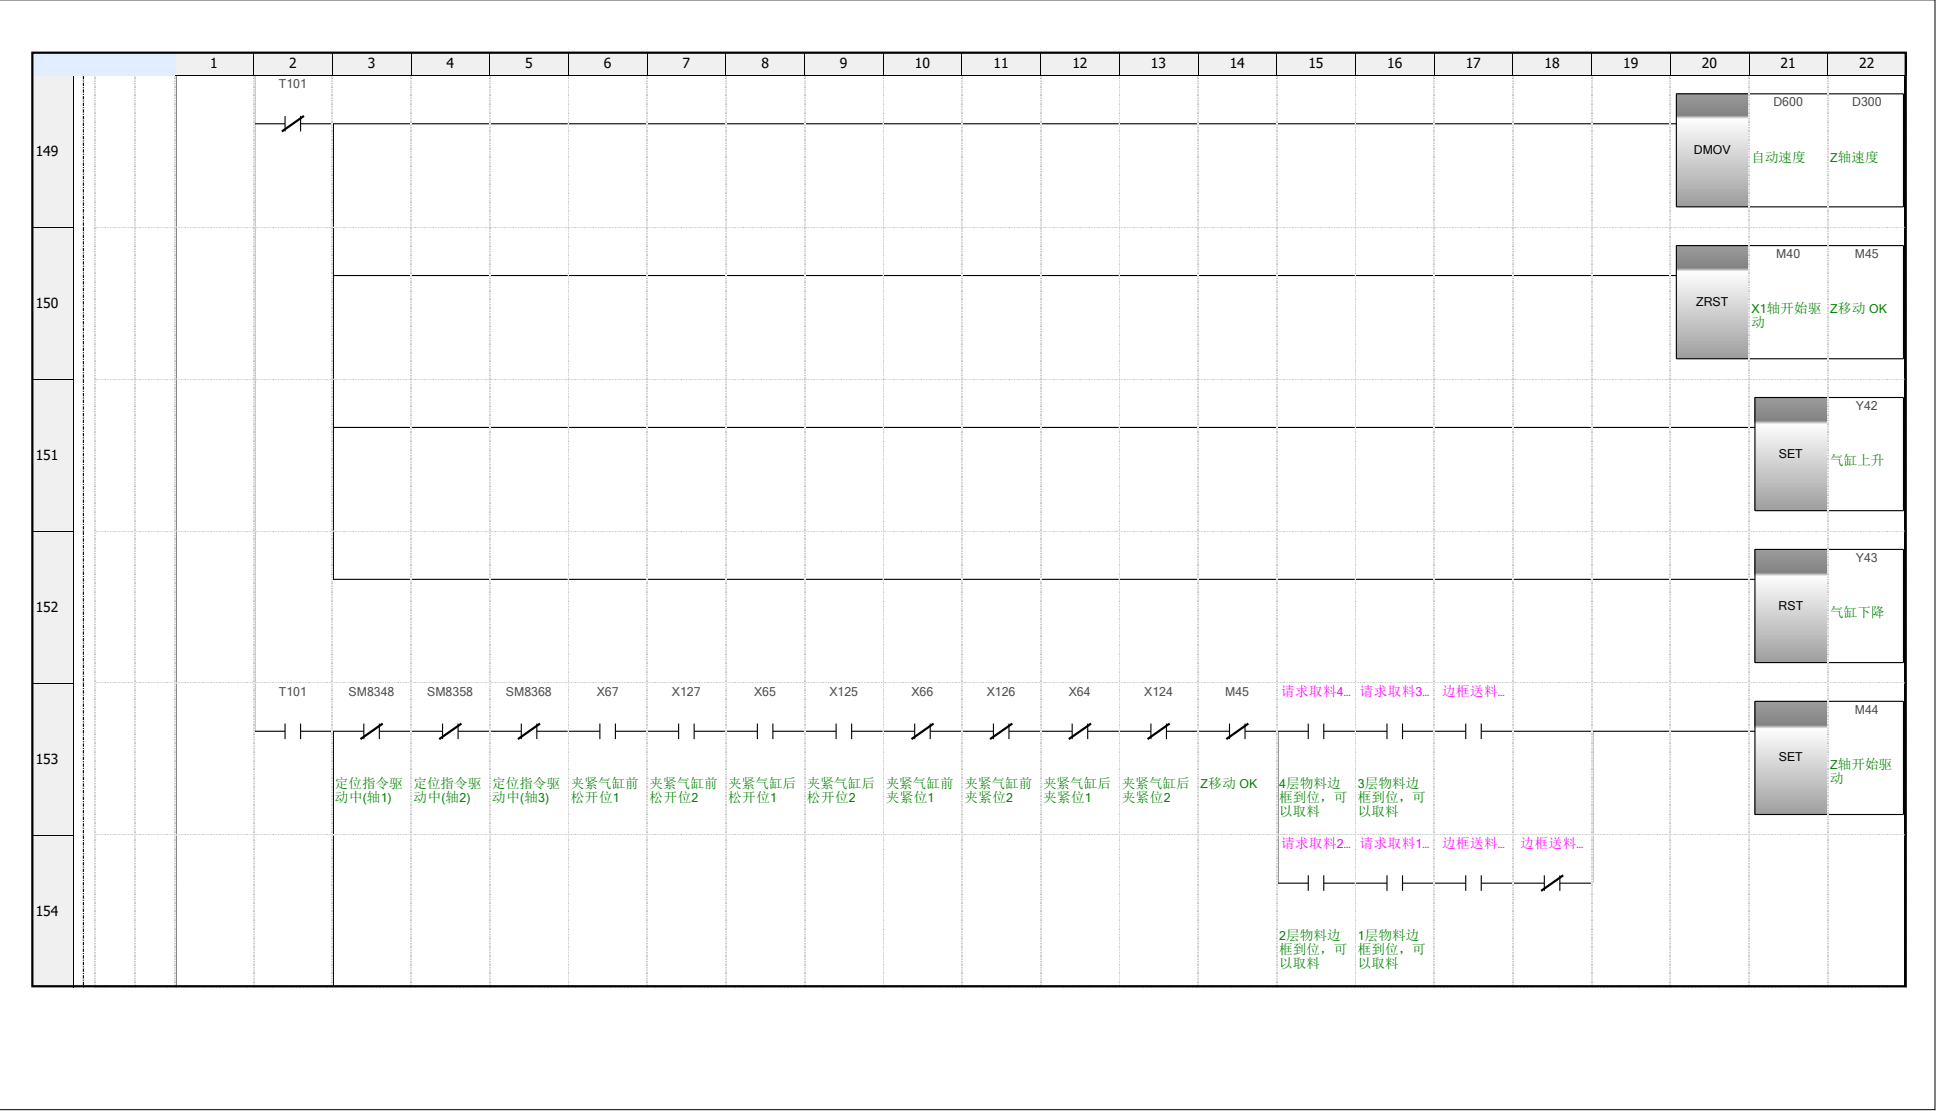


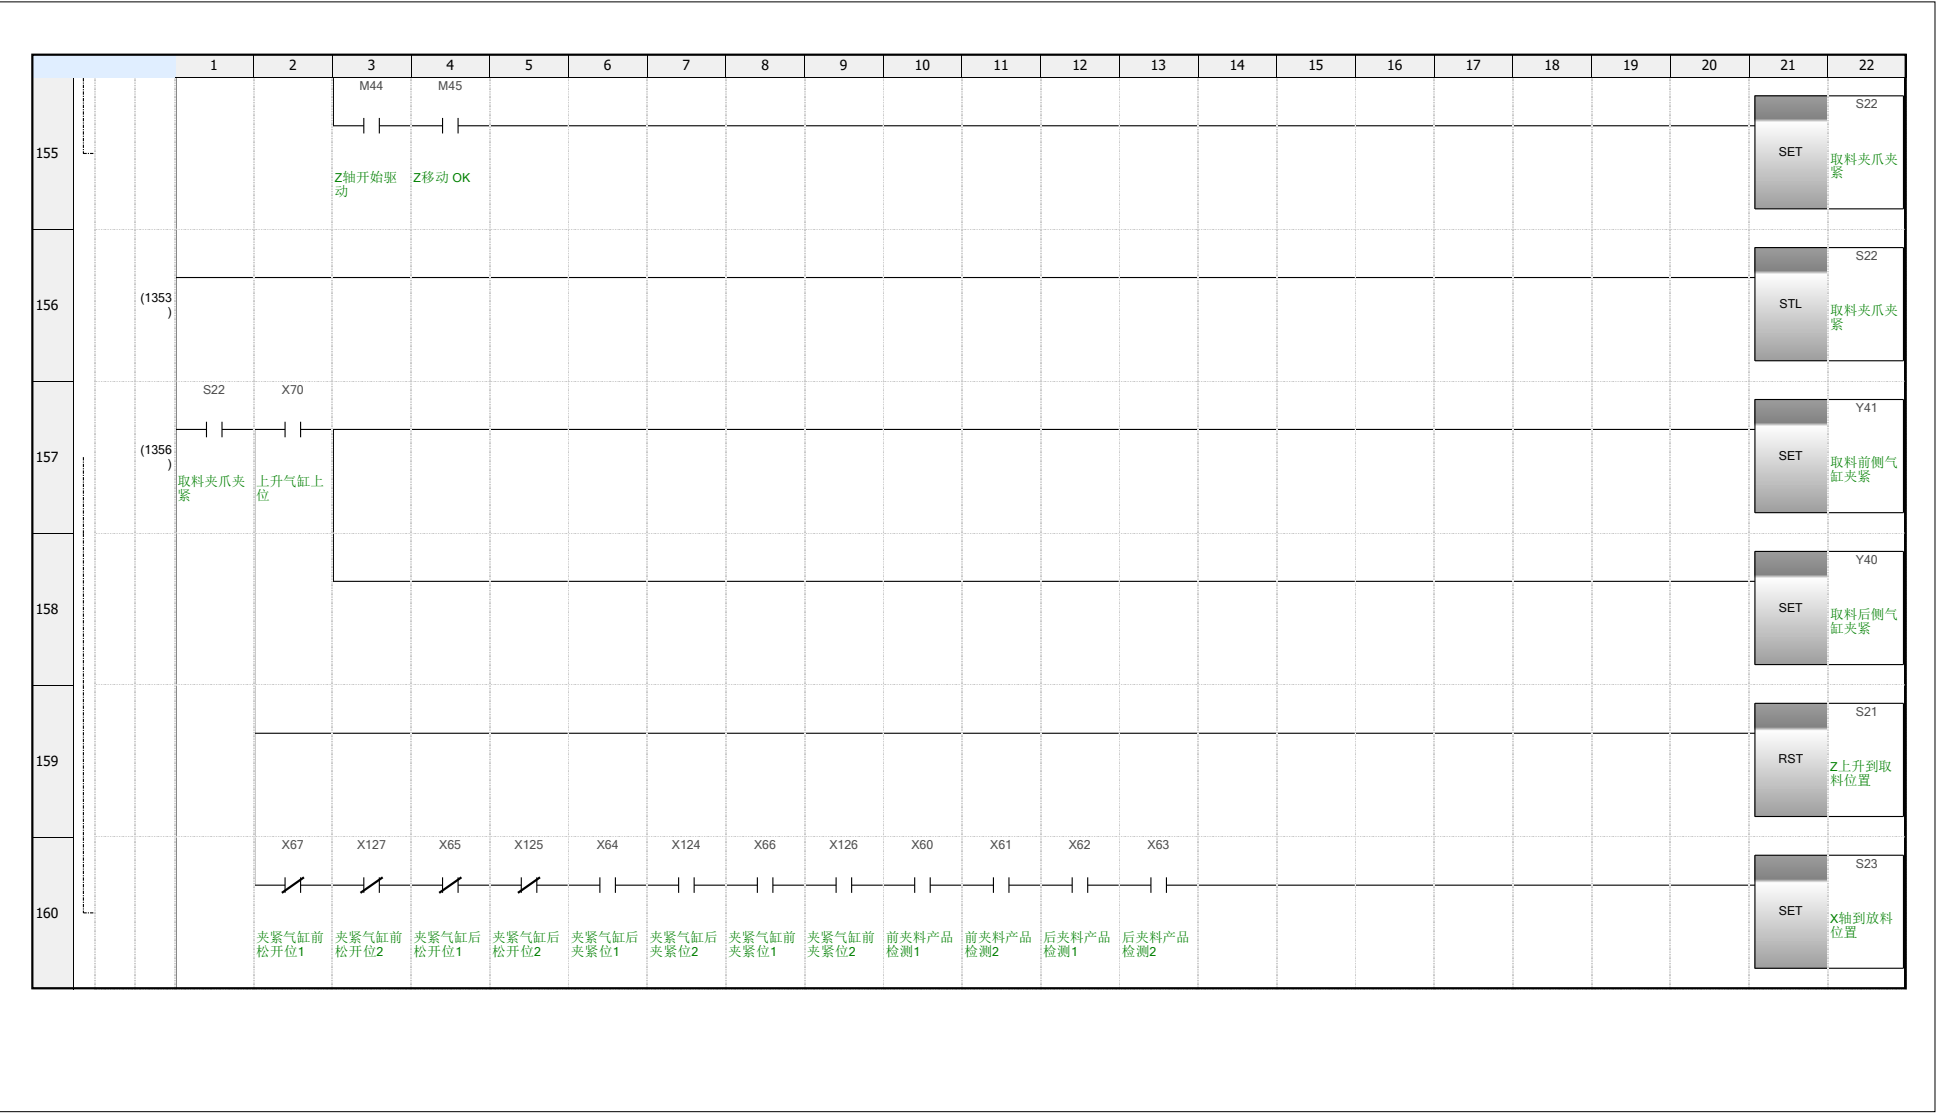


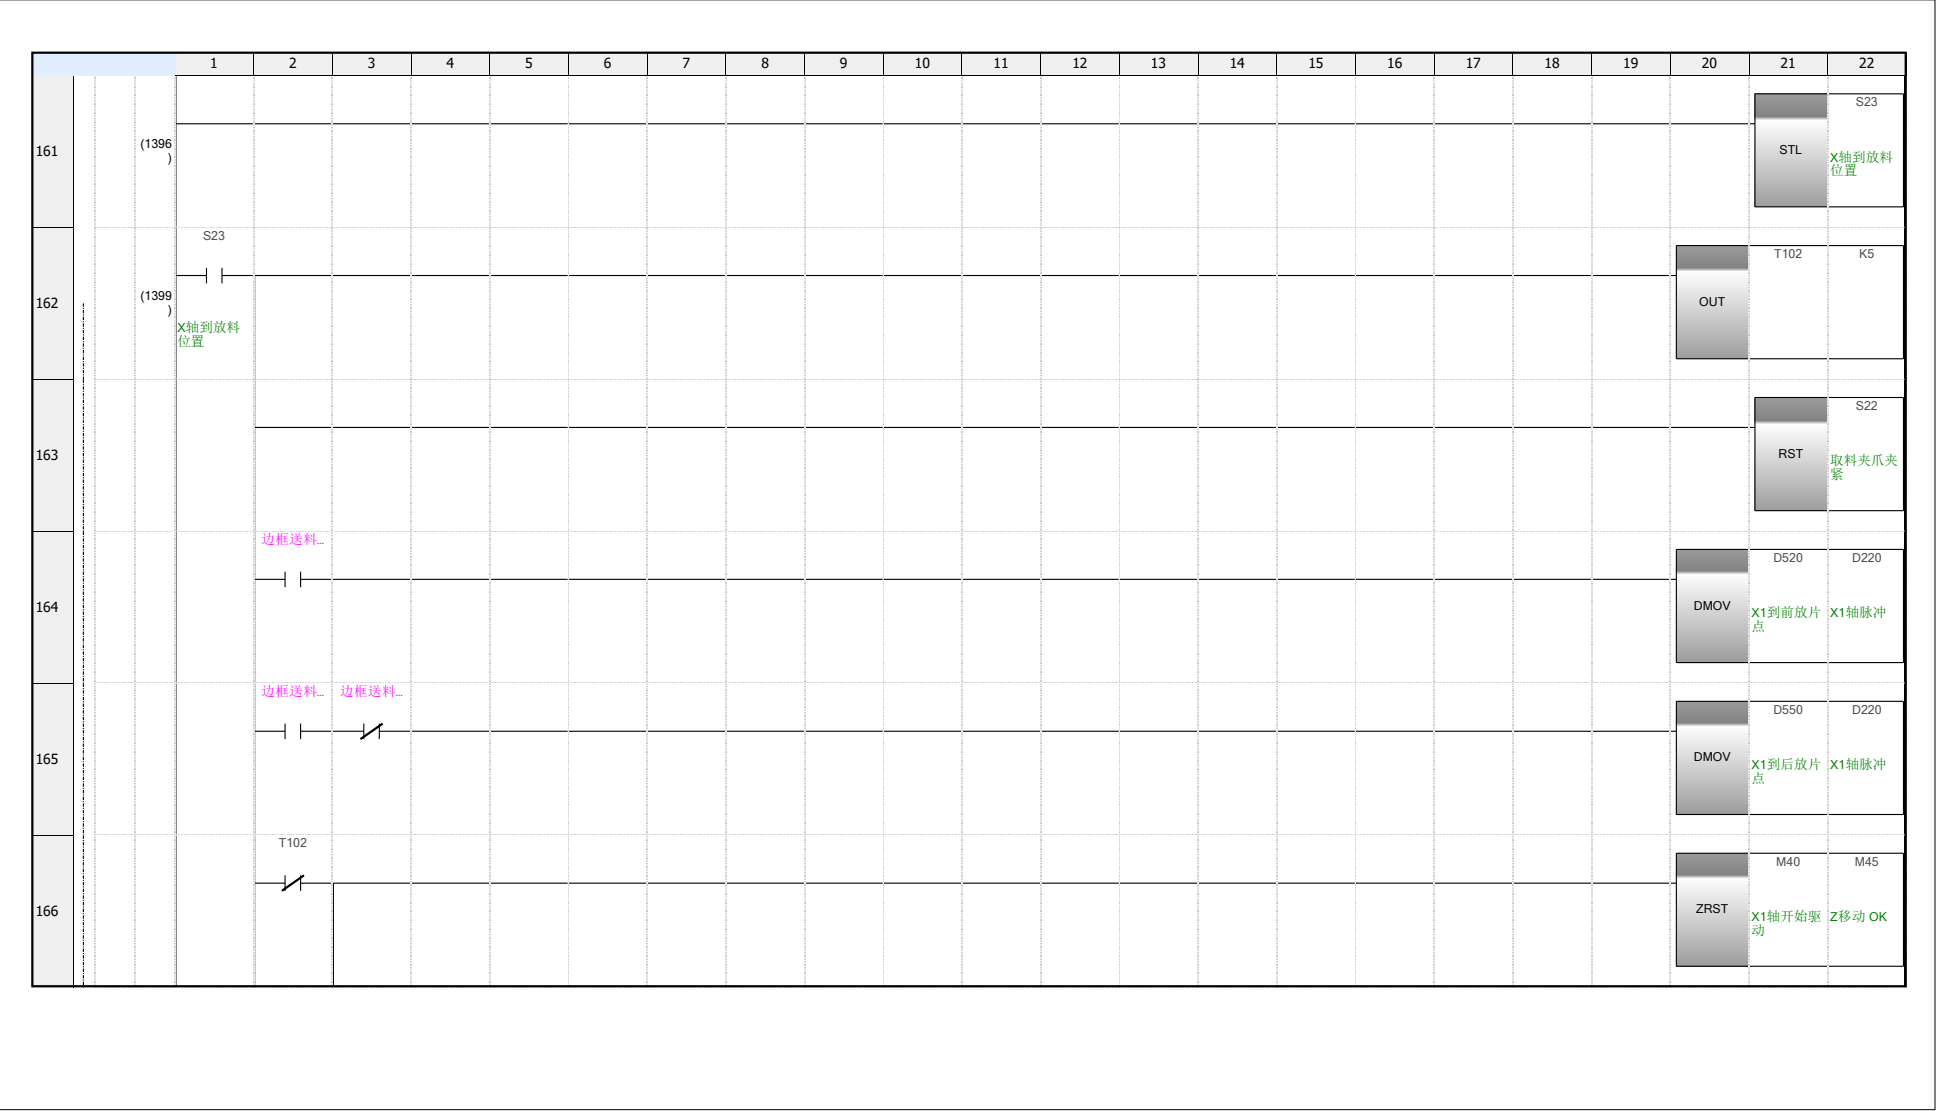





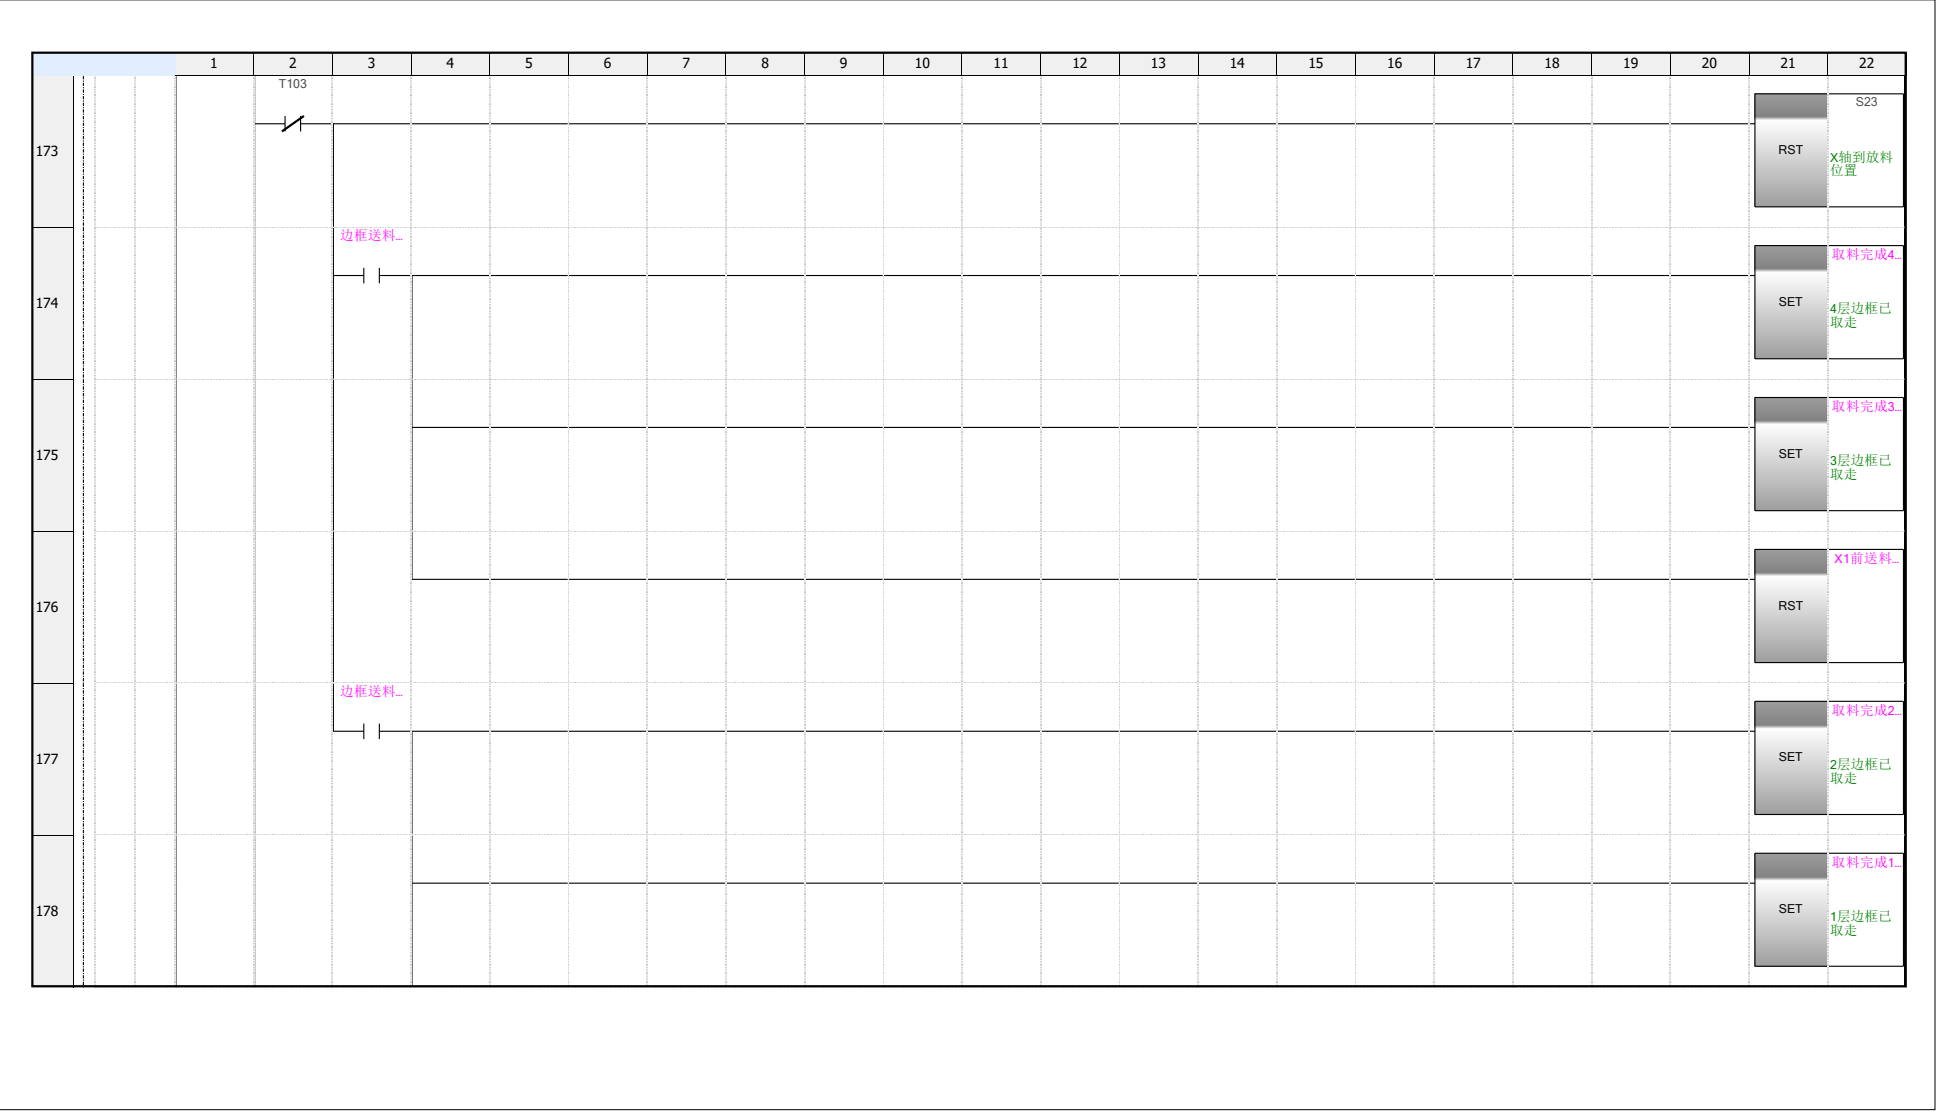


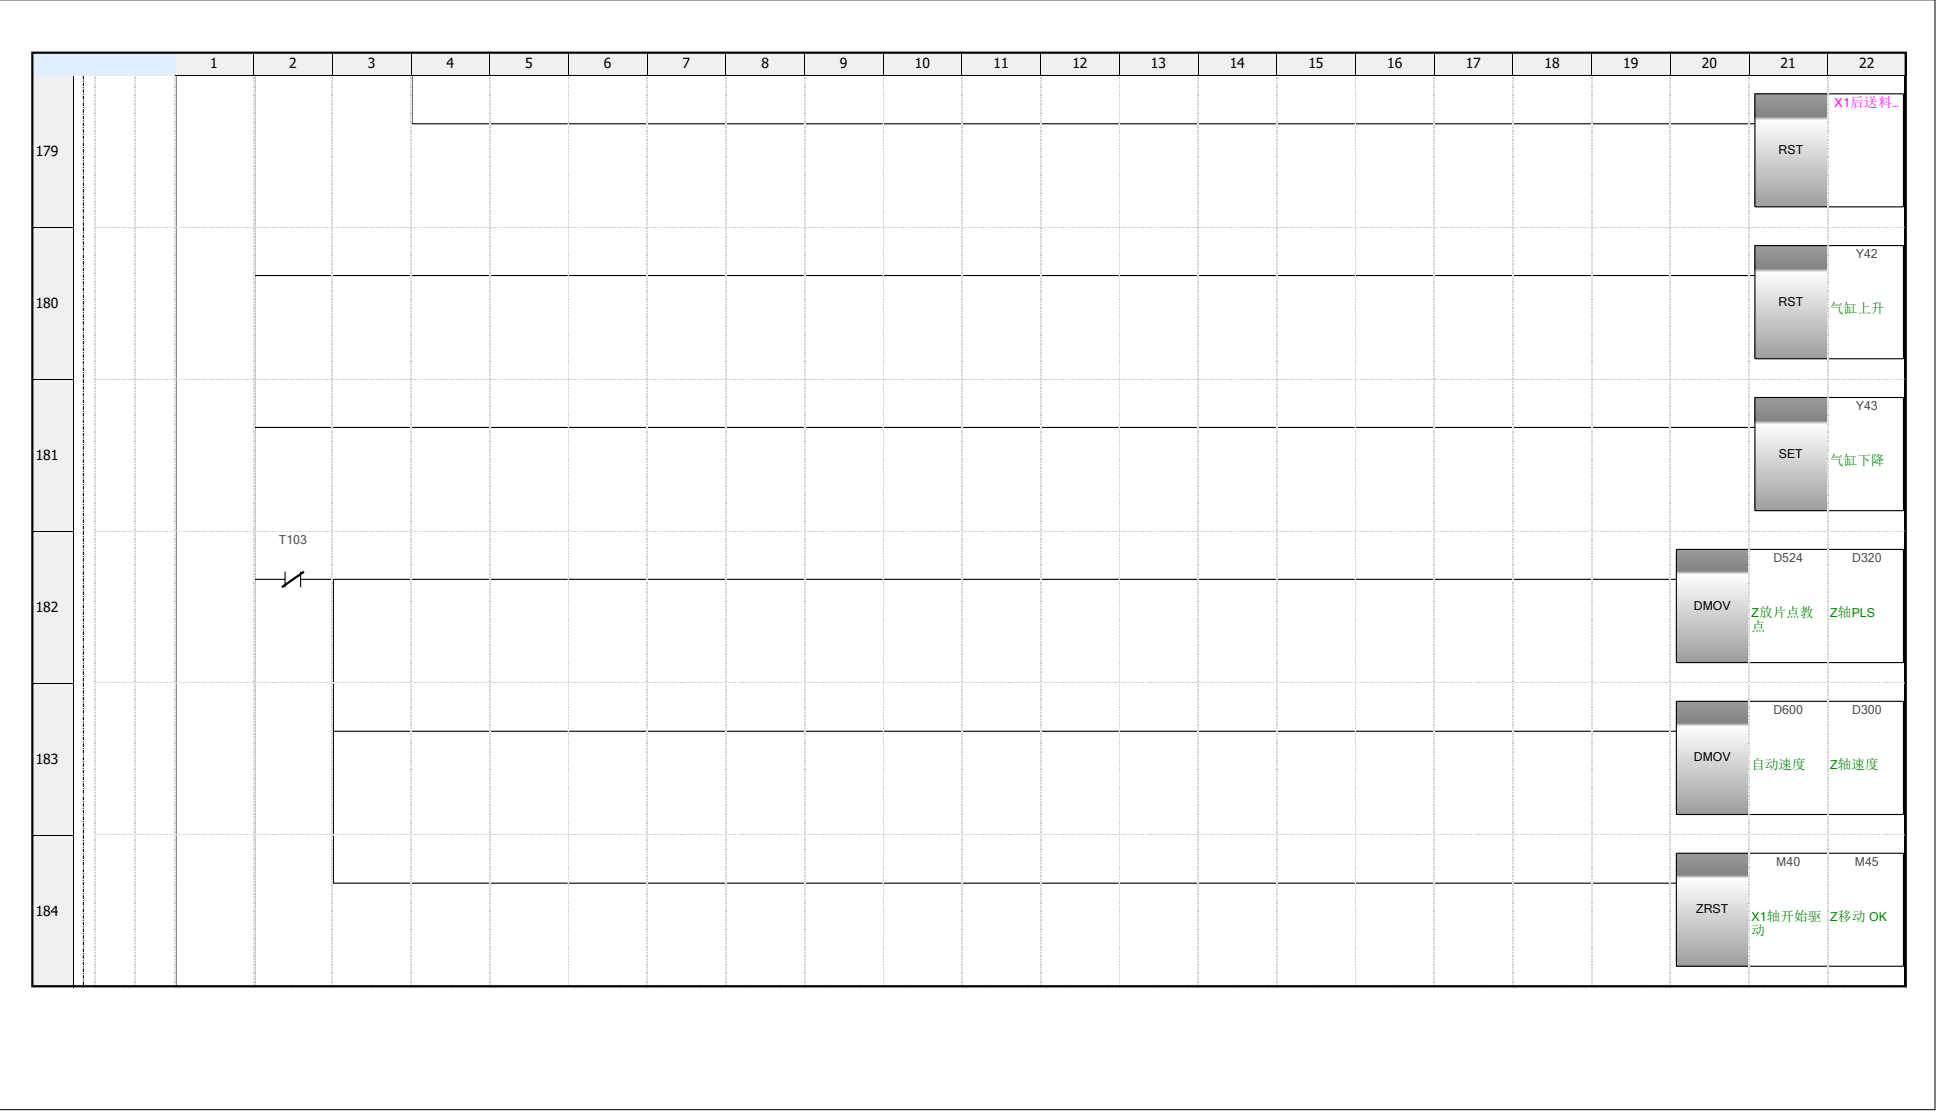


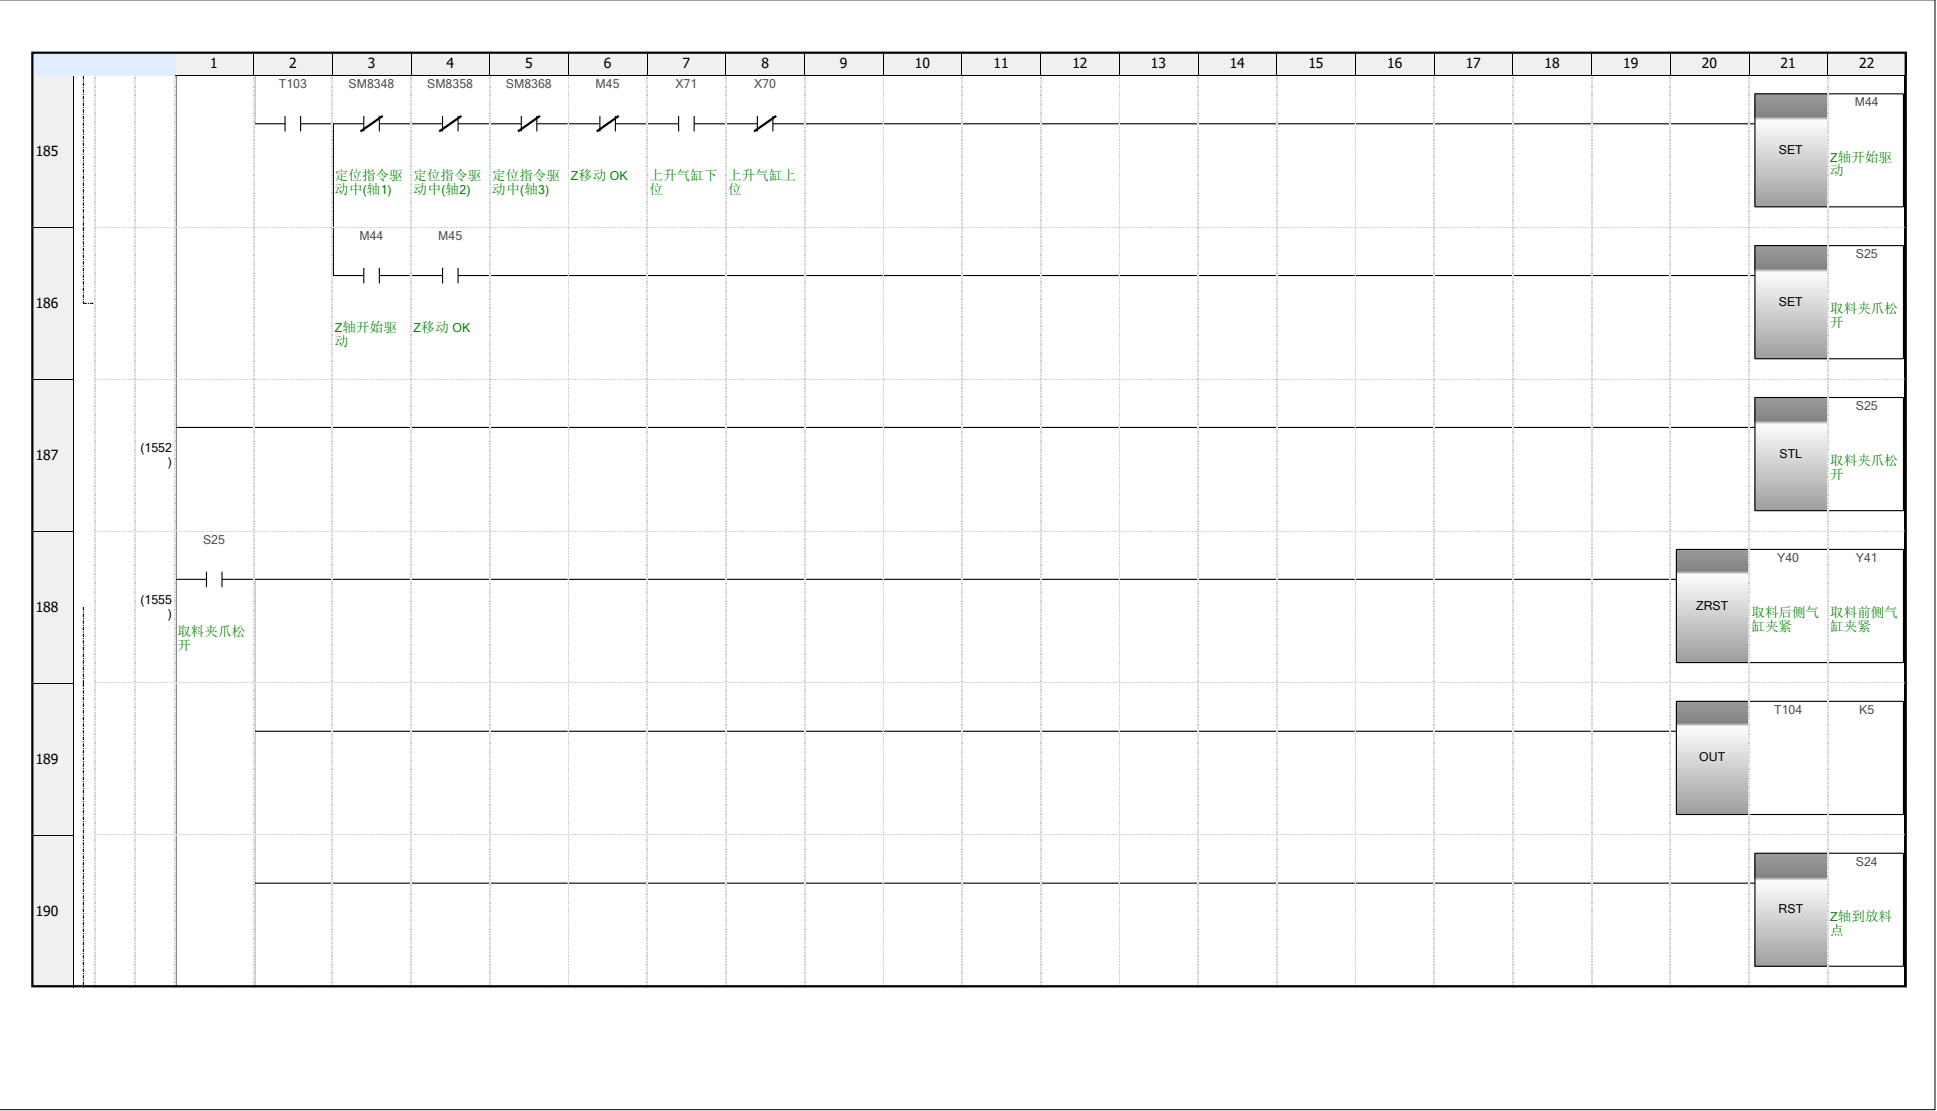

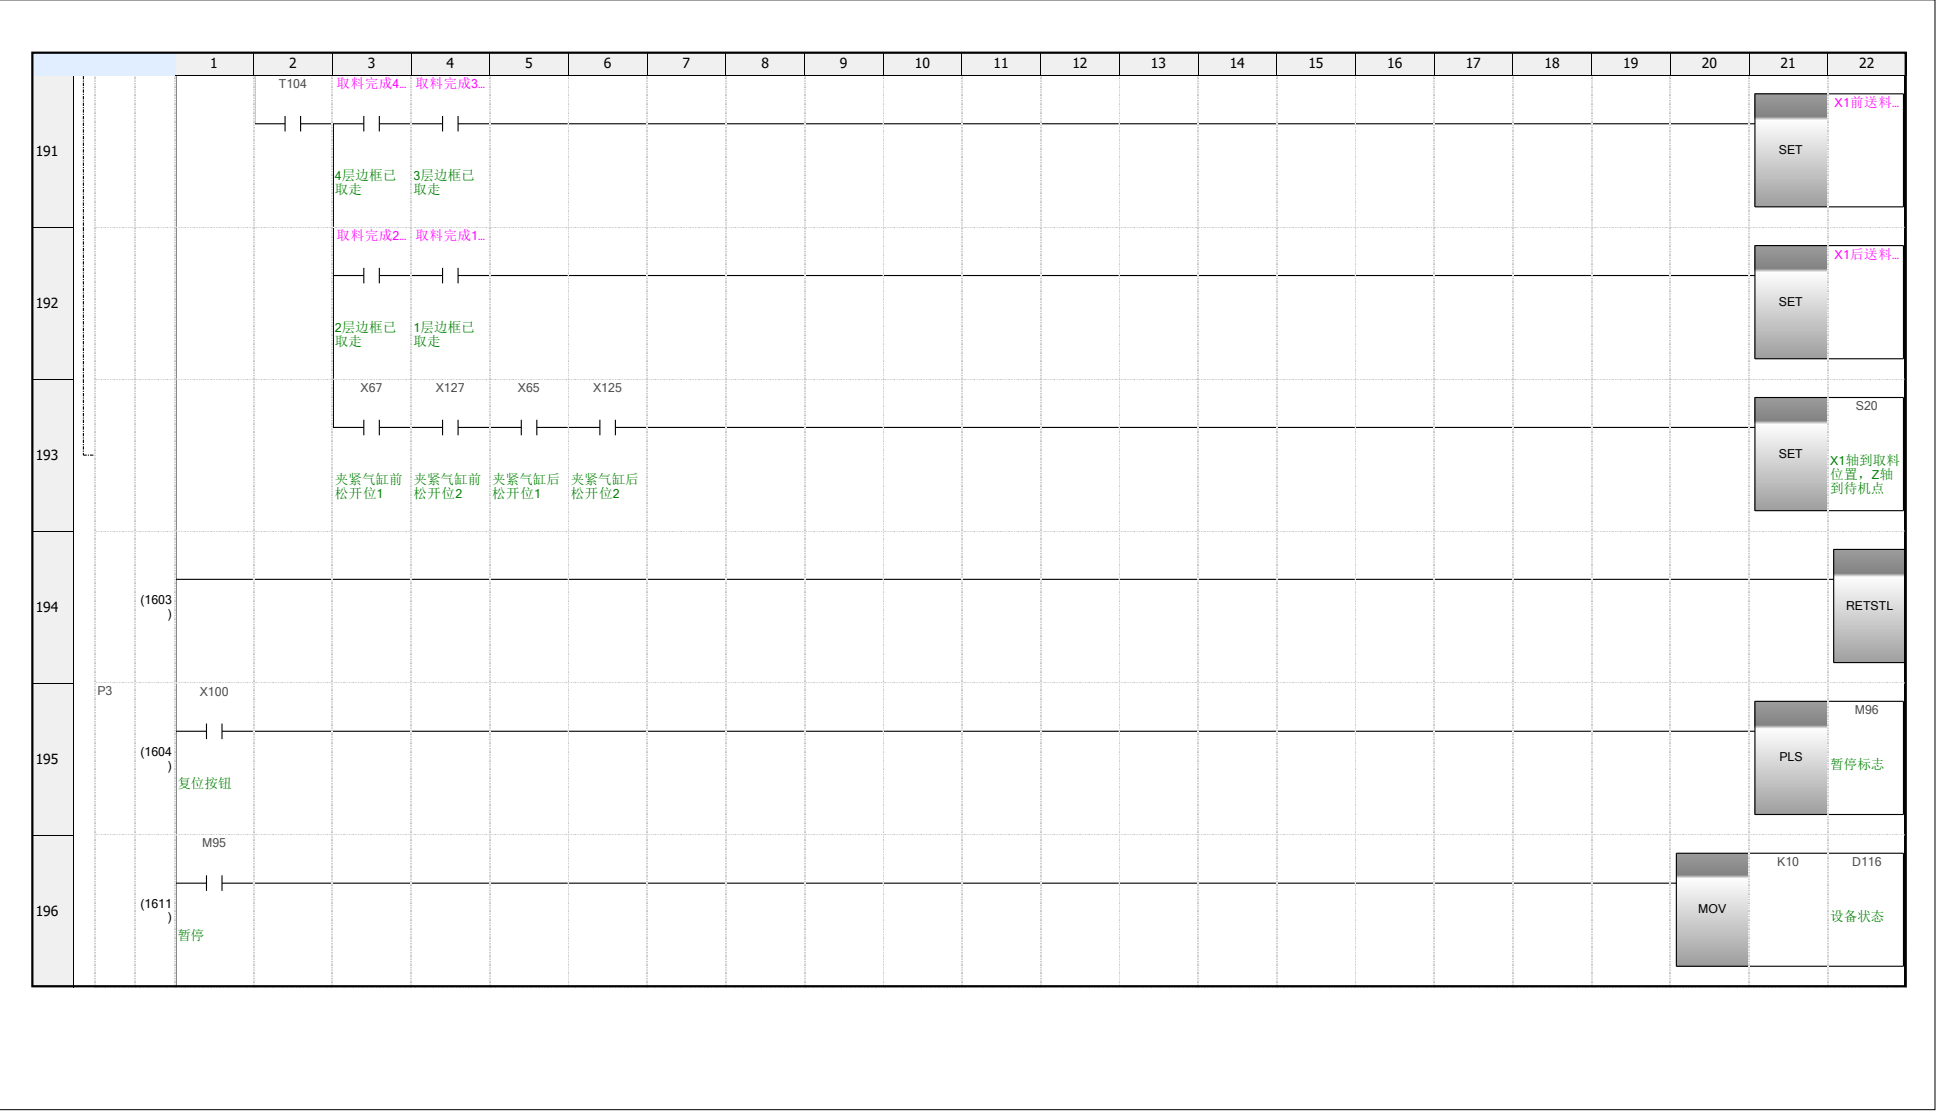

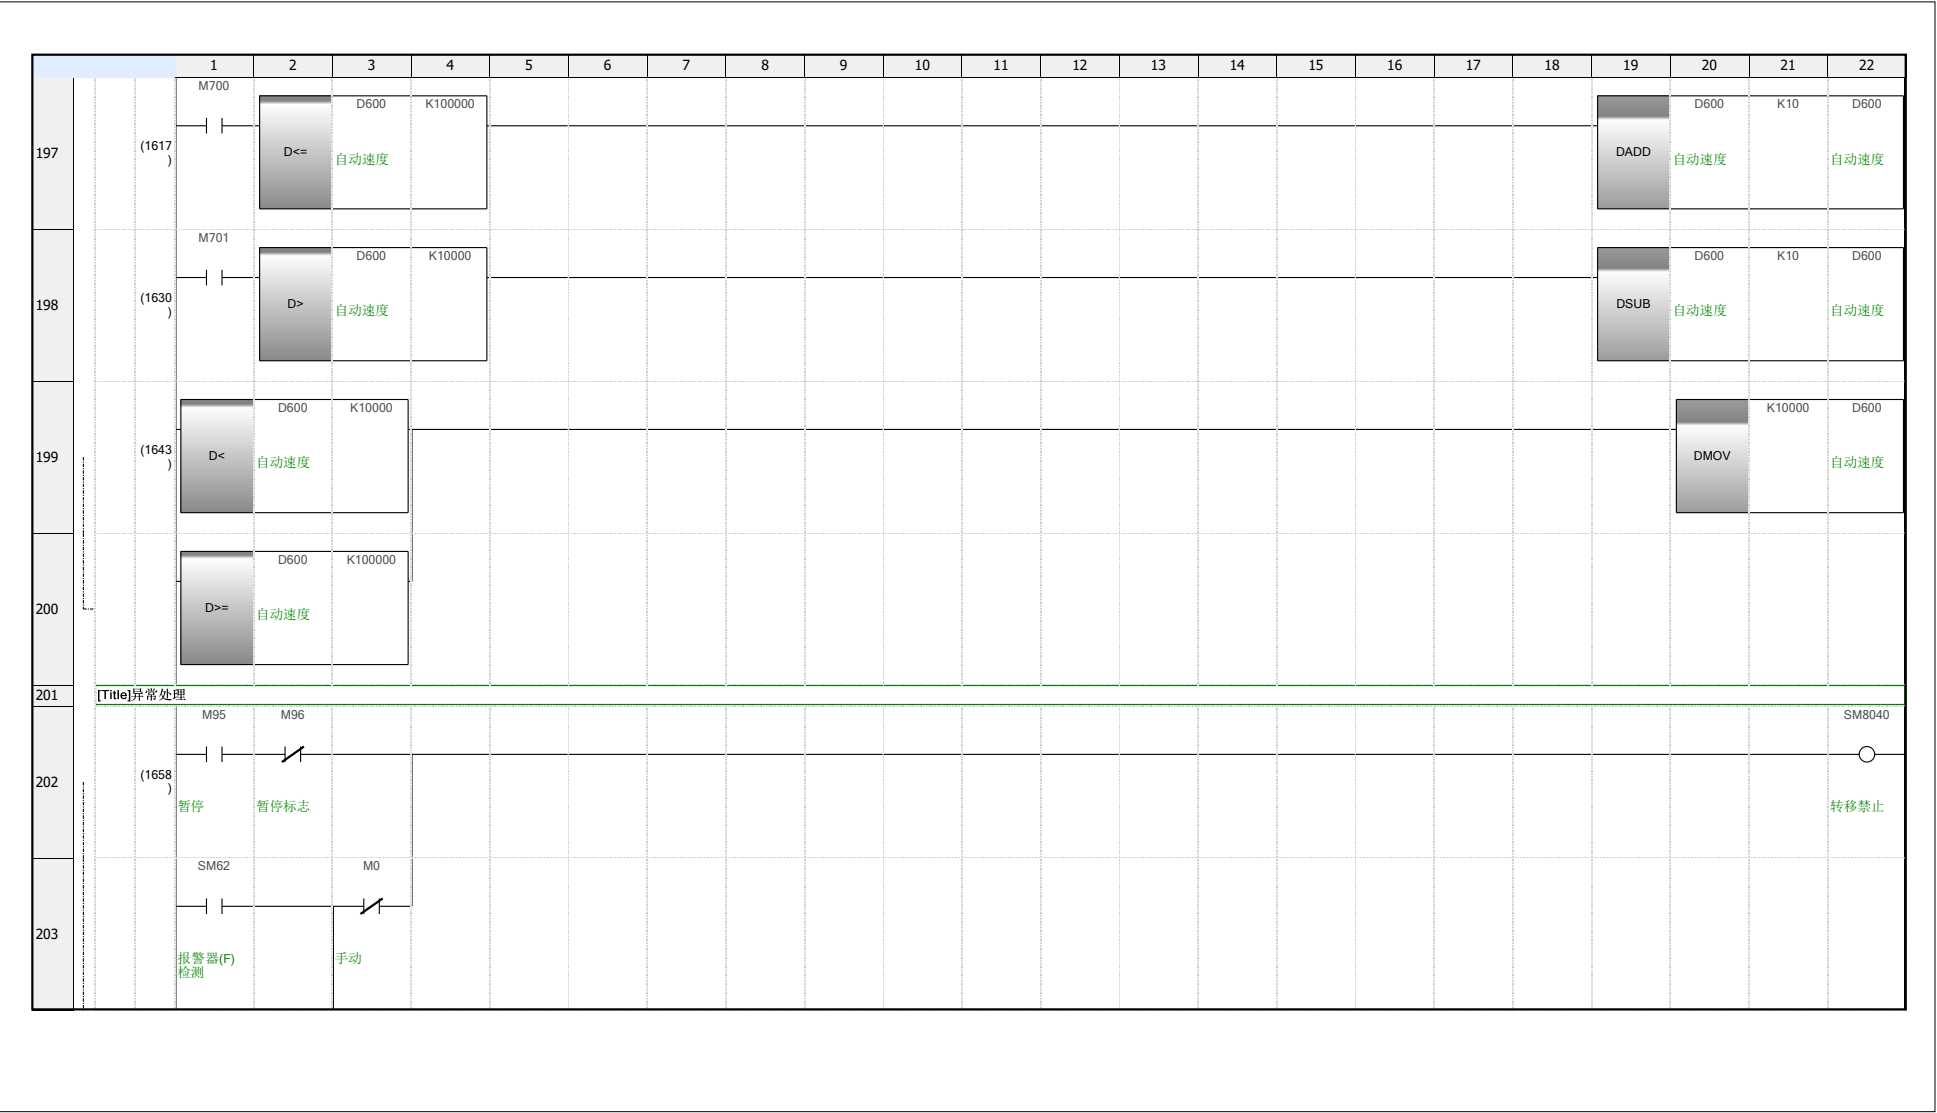

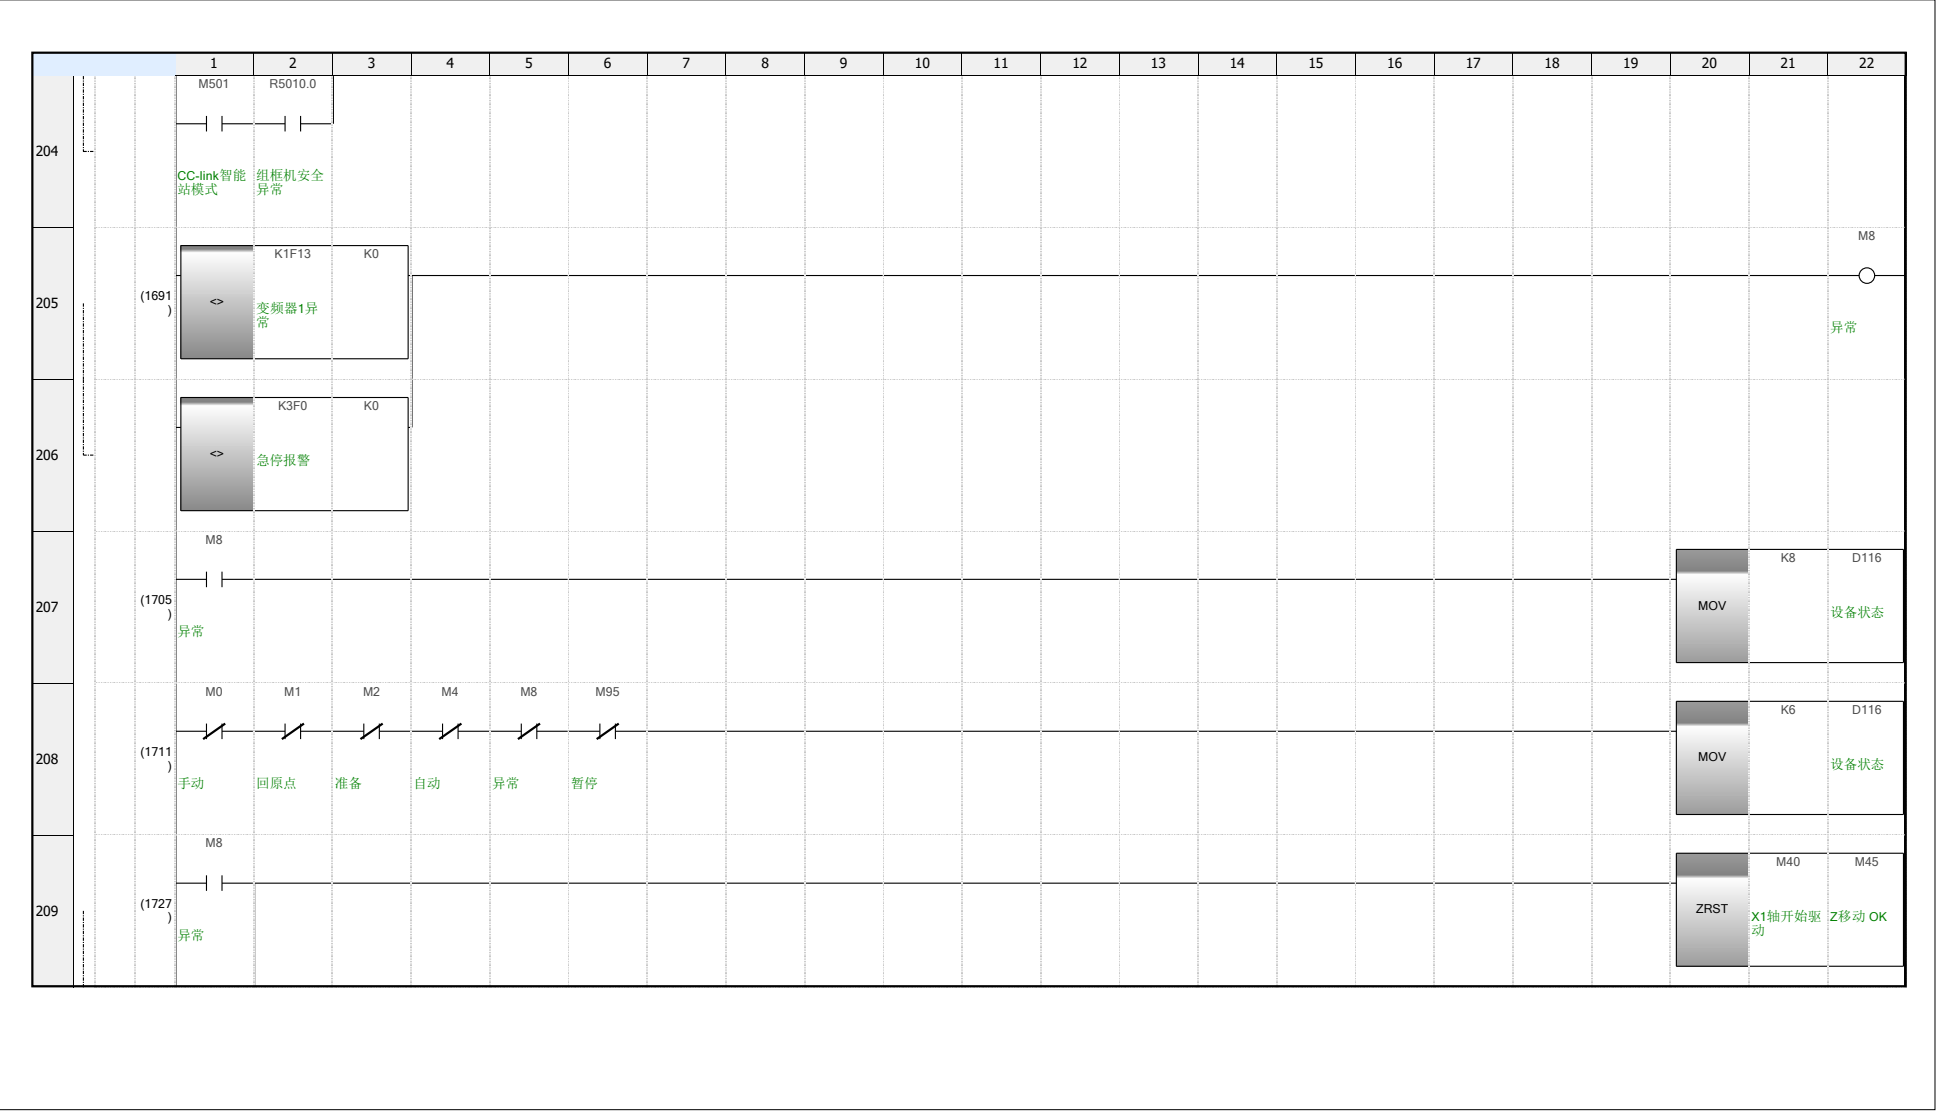

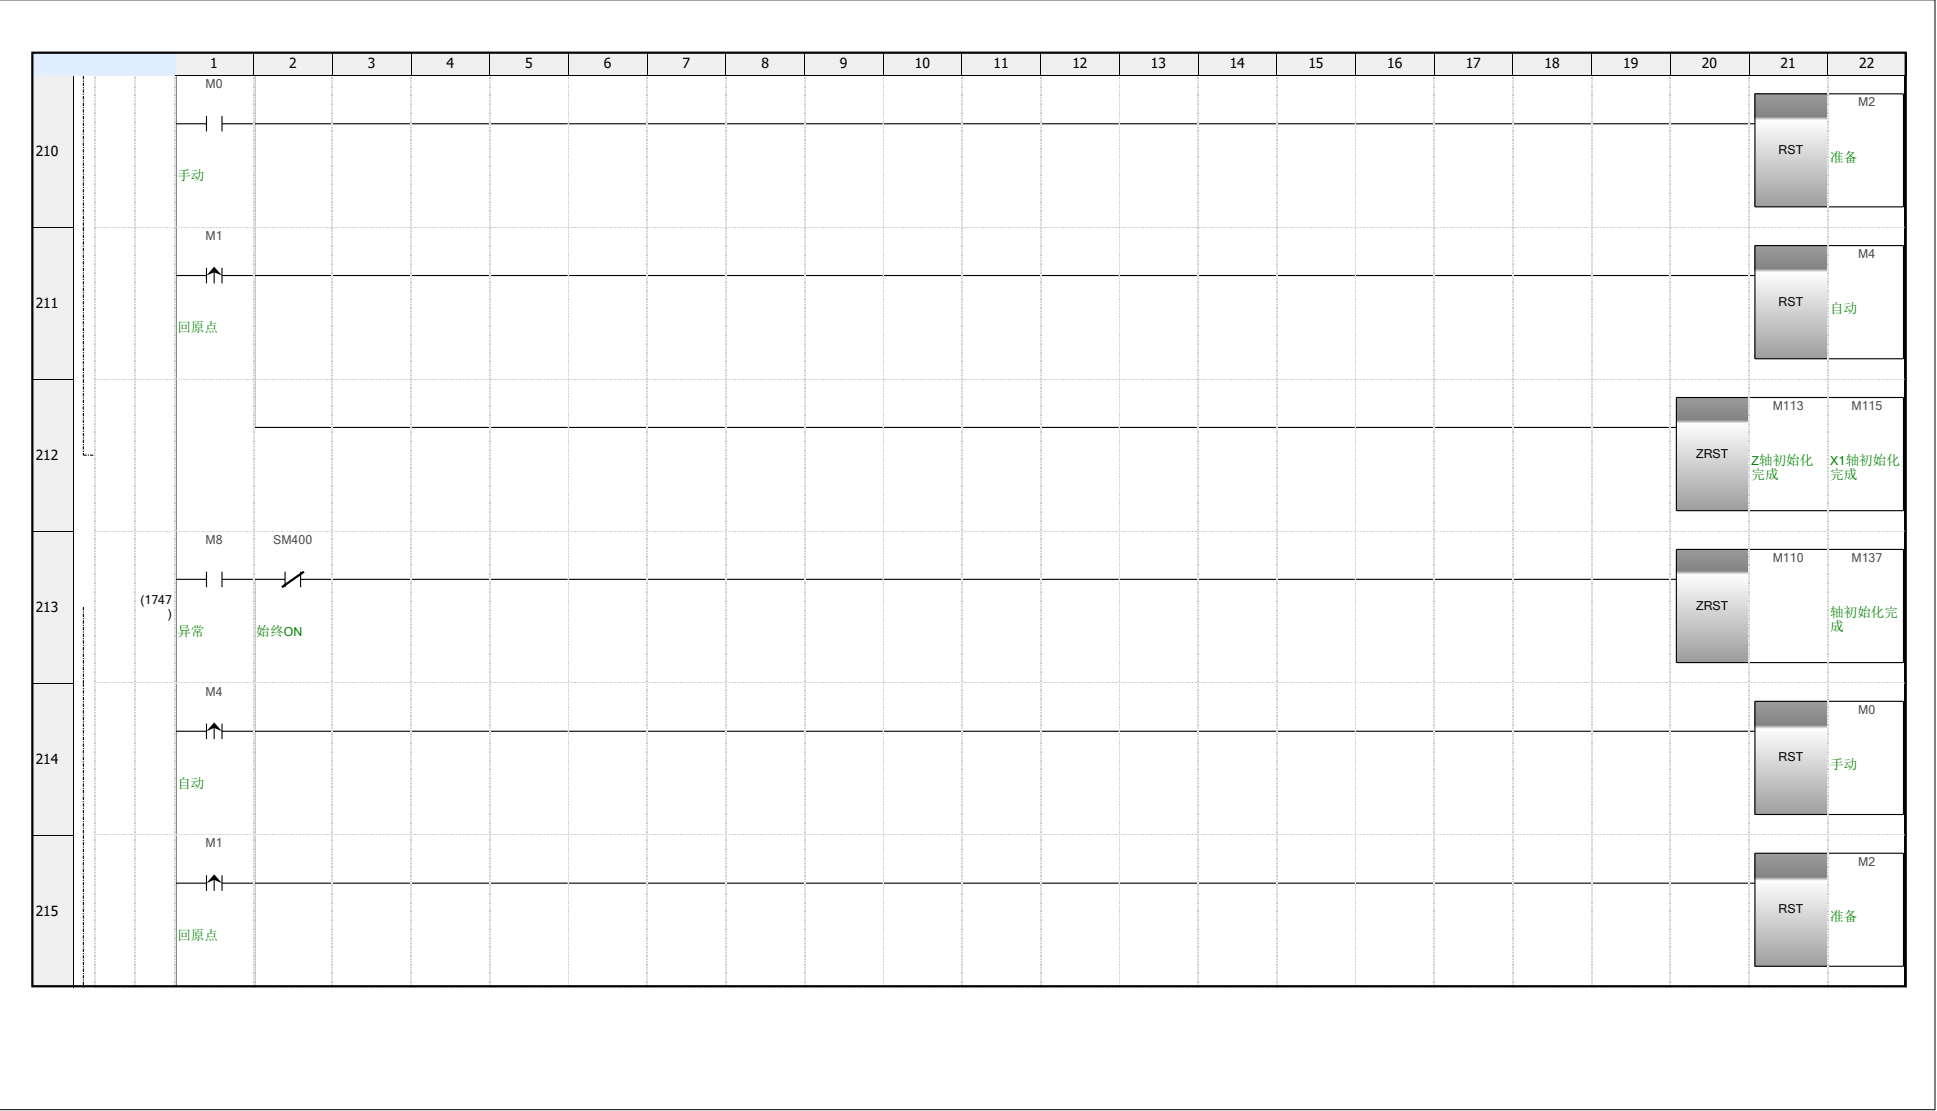

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
216	F12 HMI停止按下																					
217	M4 (1771) 自动																			MOV	K0	D760 X2取料放料步序
218	X101 急停按钮																			ZRST	M760 X2取料放料初始步	M767
219	M0 手动																			ZRST	M900 X2轴定位驱动	M901 X2运行到放料点
220	M8 异常																			ZRST	M910 X2轴定位完成	M911 X2到放料点完成
221	M0 手动																			ZRST	S20 X1轴到取料位置, Z轴到待机点	S40

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
222																				ZRST	T100	T150
223																					RST	M1 回原点
224																					RST	取料完成4. 4层边框已取走
225																					RST	取料完成3. 3层边框已取走
226																					RST	取料完成2. 2层边框已取走
227																					RST	取料完成1. 1层边框已取走

