batmonitor 0.58-c: heat pump matrix BM_WP_RULE (bm_logic.c)
D1 picks one row (first match top-down); the stacks cover min(share x WP, cap), the rest goes onto the charge point - make check: 442368 combinations = 0.56-c chains

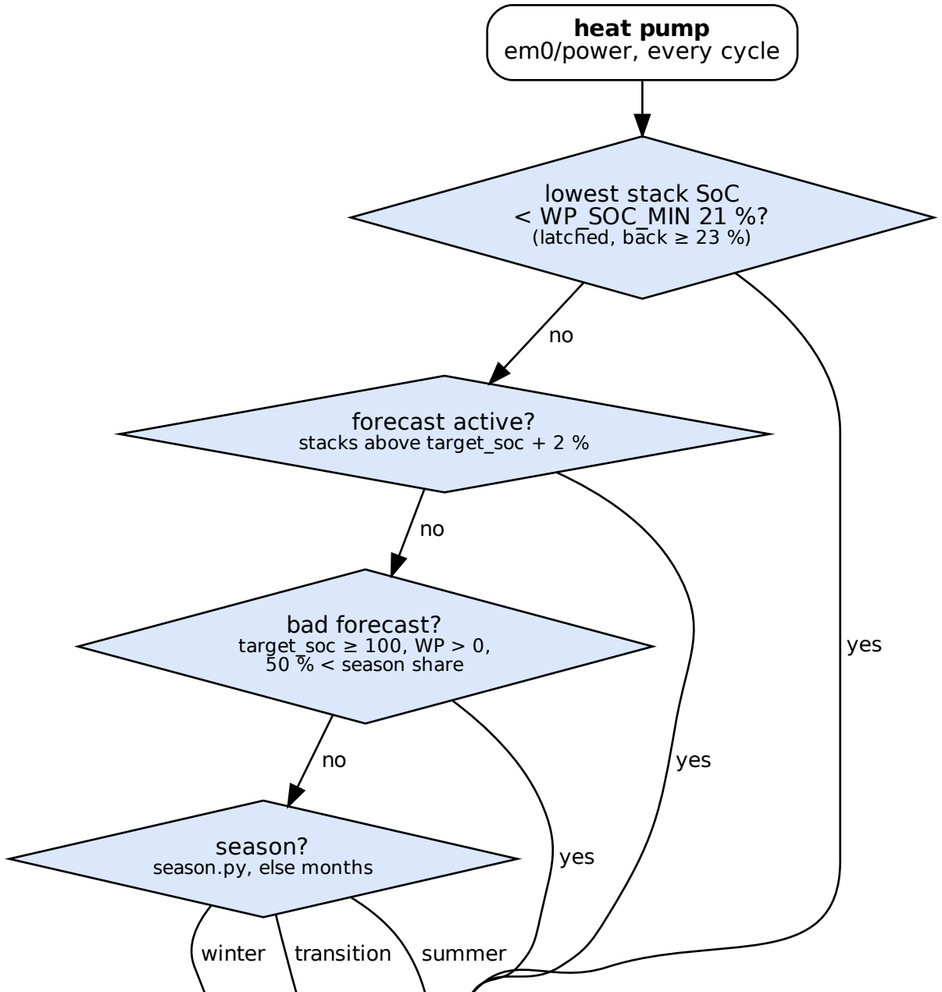

row	rule text (WP running)	share %	cap W	stacks give the WP (discharge) = min(share x WP, cap)	charge point z2 = PCC + the rest
LOWSOC	WP:LOWSOC	0	-	0 W	PCC + WP
FC	WP:FC	100	-	all	PCC (+ WPPV)
FCBAD	WP:FCBAD	WP_BAT_SHARE_BAD 50	-	50 %	PCC + 50 % WP
WINTER	WP:Z2	0	-	0 W	PCC + WP
TRANS	WP:ALL, WP:T1900 above the cap	100	WP_BAT_MAX_TRANSITION 1900	up to 1900 W	PCC + (WP - 1900)
SUMMER	WP:ALL	100	-	all	PCC (+ WPPV)

A cell is a number or a parameter (BATMONITOR_<NAME> in /data/batmonitor/env). WP < 300 W: text WP:OFF, em0 stale: WP:NA (winter / transition: discharge capped at WP_CAP 1 kW).
D6 WPPV (orange rows: share 100 %, no cap = the stacks would cover all): by day, no D4 export cap, PV covers house + WP (surplus > 200 W on, held ≥ 0):
the charge point gets + min(WP_PV_CHG_SHARE 50 % x WP, WP_PV_GRID_MAX 2000 W): the stacks charge it, the grid buys it as cheap heat power (rule text + WPPV).