



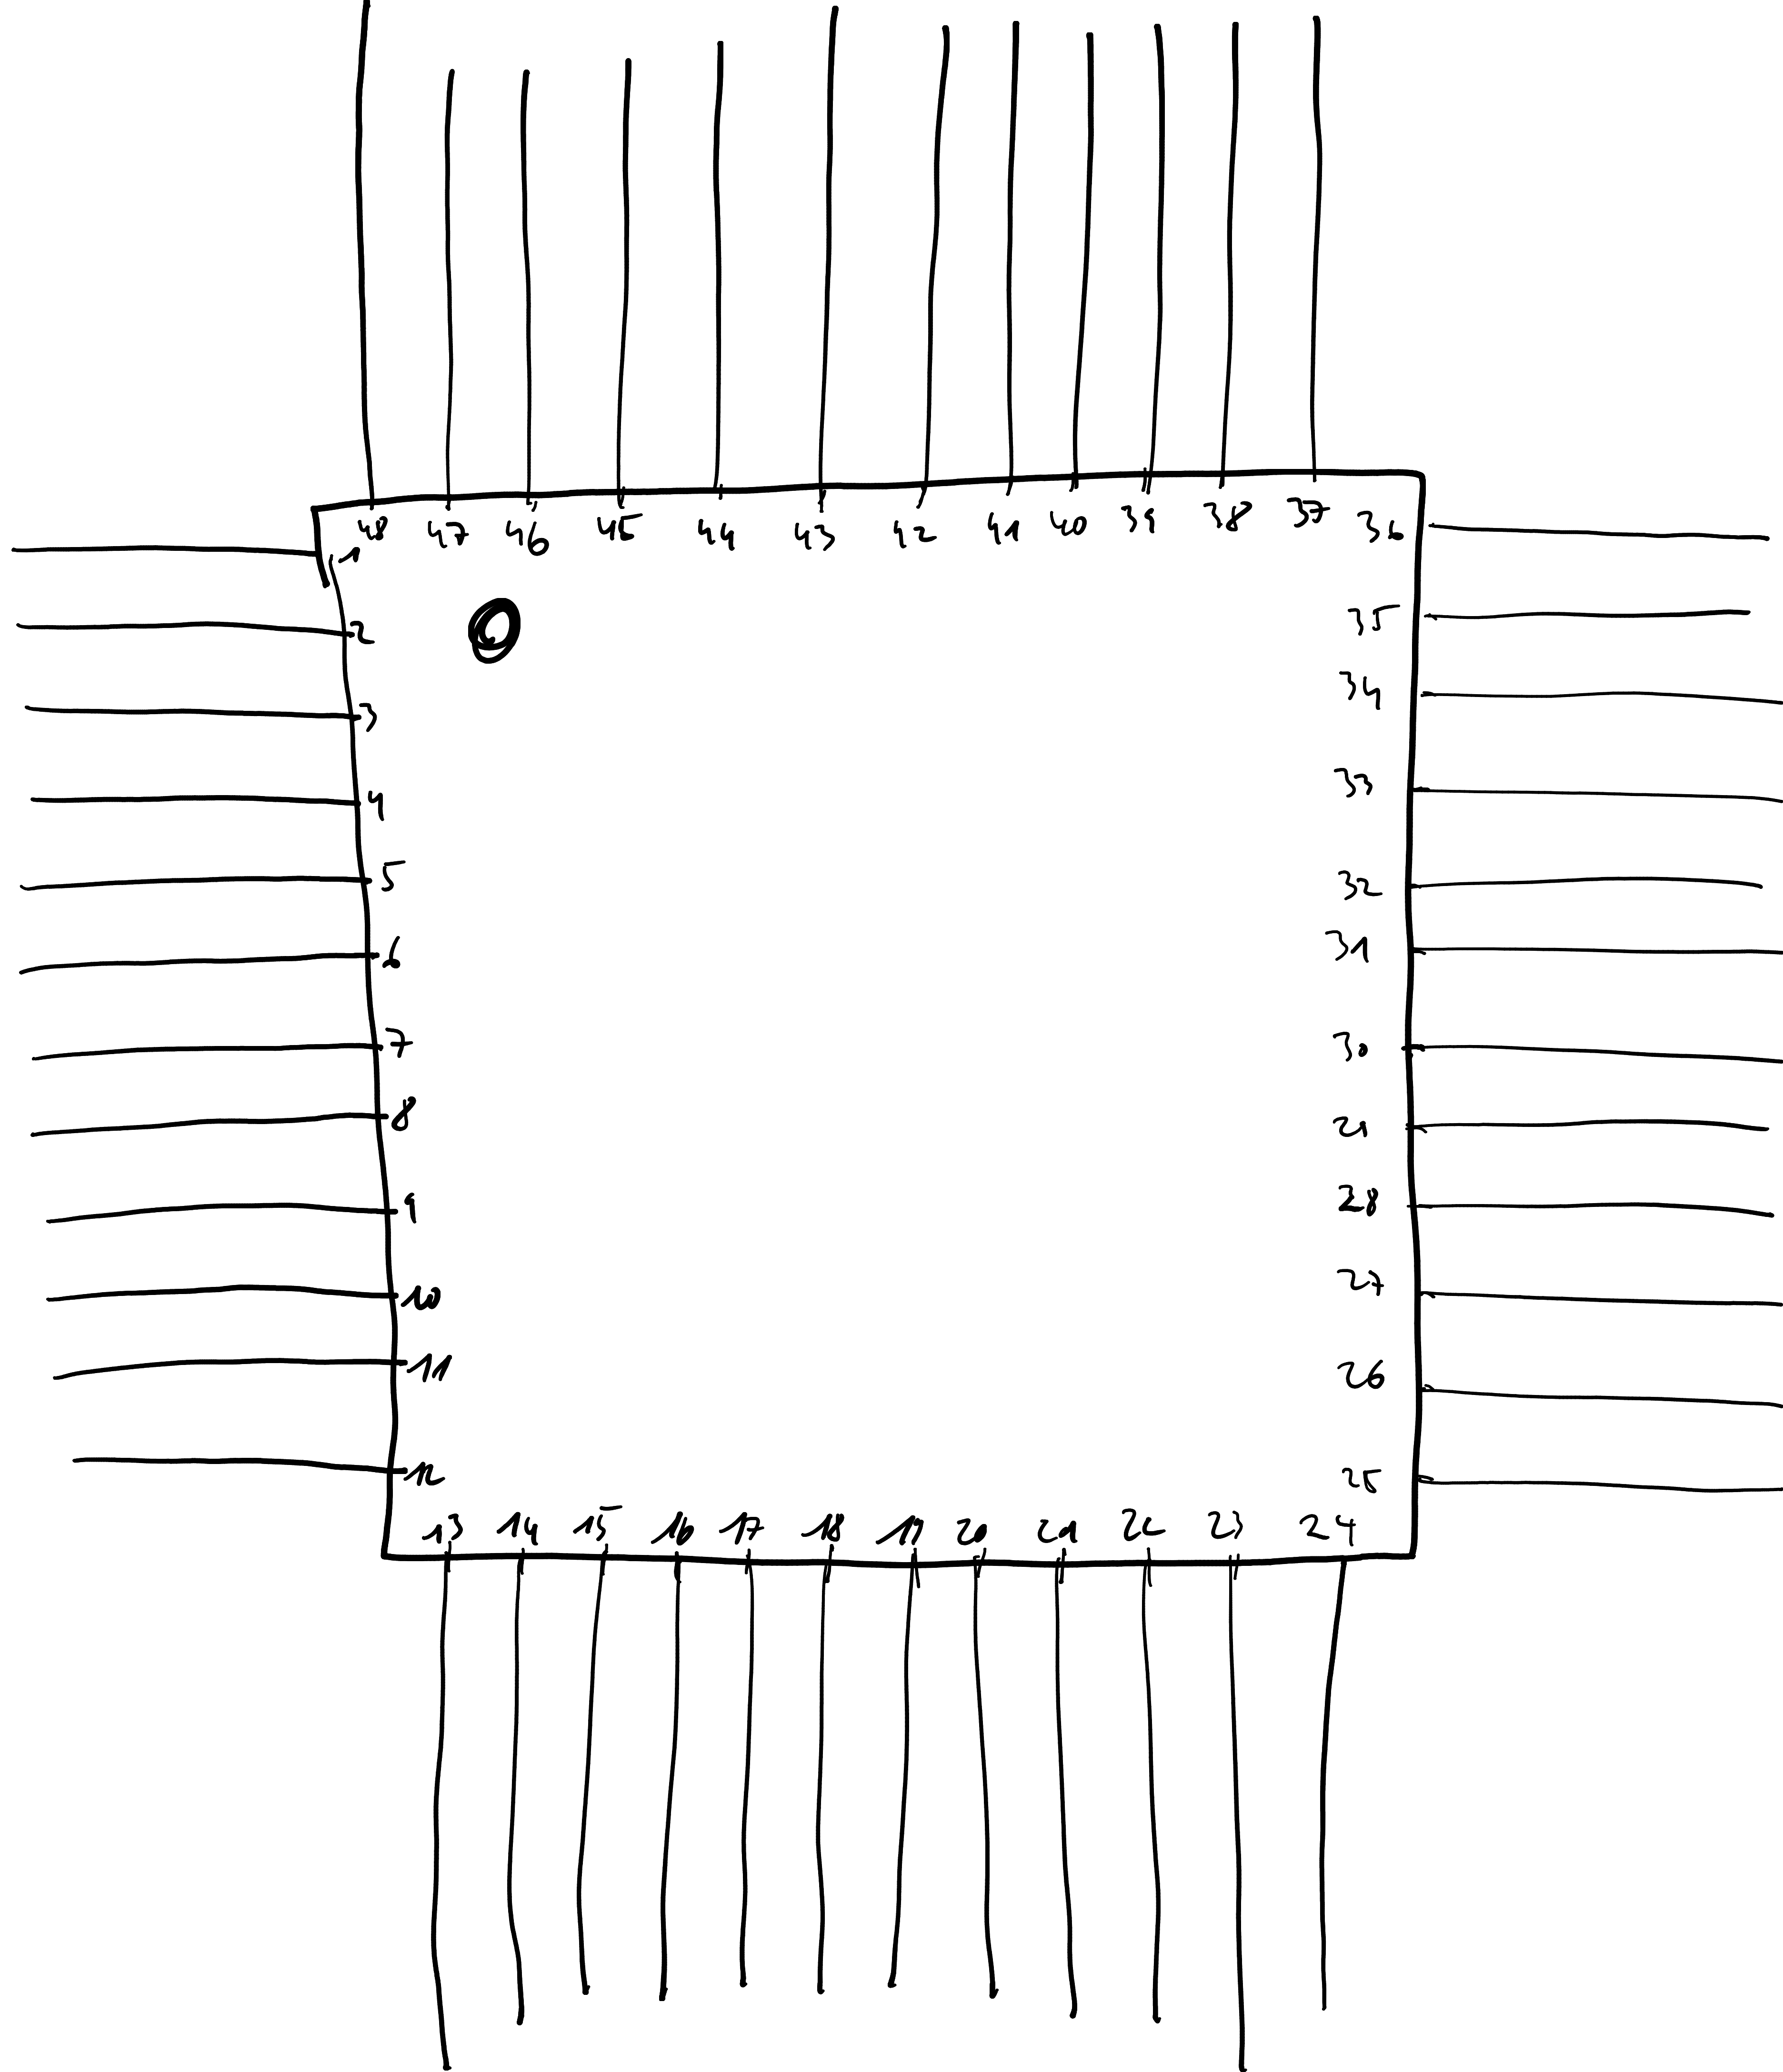

SN 327268 F

25	12	R1: L-CTRL L-SHIFT CAPS TAB ~ ESC
		VD48 VD25 VD4
24	13	R2: L-WIN K45 A Q 1
		VD49 VD26 VD5
12	14	R3: L-ALT Z S W 2 F1
		VD50 VD27 VD6
11	15	R4: X D E 3 F2
		VD51 VD28 VD7
10	16	R5: C F R 4 F3
		VD44 VD29 VD8
9	17	R6: V G T 5 F4
		VD52 VD30 VD9
8	18	R7: SPACE B H Y 6 F5
		VD53 VD31 VD10
7	19	R8: N J U 7 F6
		VD45 VD32 VD11
6	20	R9: M K I 8 F7
		VD54 VD33 VD12
5	21	R10: ' L O 9 F8
		VD55 VD34 VD13
4	22	R11: RALT : ; P 0 F9
		VD56 VD35 VD14
3	24	R12: FN ' ' E - F10
		VD57 VD36 VD15
2	25	R13: APP K56 K42 J = F11
		VD58 VD37 VD16
1	28	R14: R-CTRL R-SHIFT ENTER BS F11
		VD59 VD38 VD17
31	6	R15: K14 LEFT DEL PRT-SC INS
		VD63 VD39 VD18
32	5	R16: DOWN UP END HOME SCR LK
		VD60 VD40 VD19
30	7	R17: SLEEP RIGHT PGDN PGUP Pause
		VD3 VD41 VD20
29	8	R18: MMPrev NUM1 NUM4 NUM7 NUM LK
		VD1 VD46 VD23
27	10	R19: NUM. NUM3 NUM6 NUM9 MMNext NUM*
		62 43 22
26	11	R20: NUMENTER ENCTUT 2 NUM+ NUM-
		47 24
28	9	R21: NUM6 NUM2 NUM5 NUM8 MMPlay NUM/
		VD61 VD42 VD21

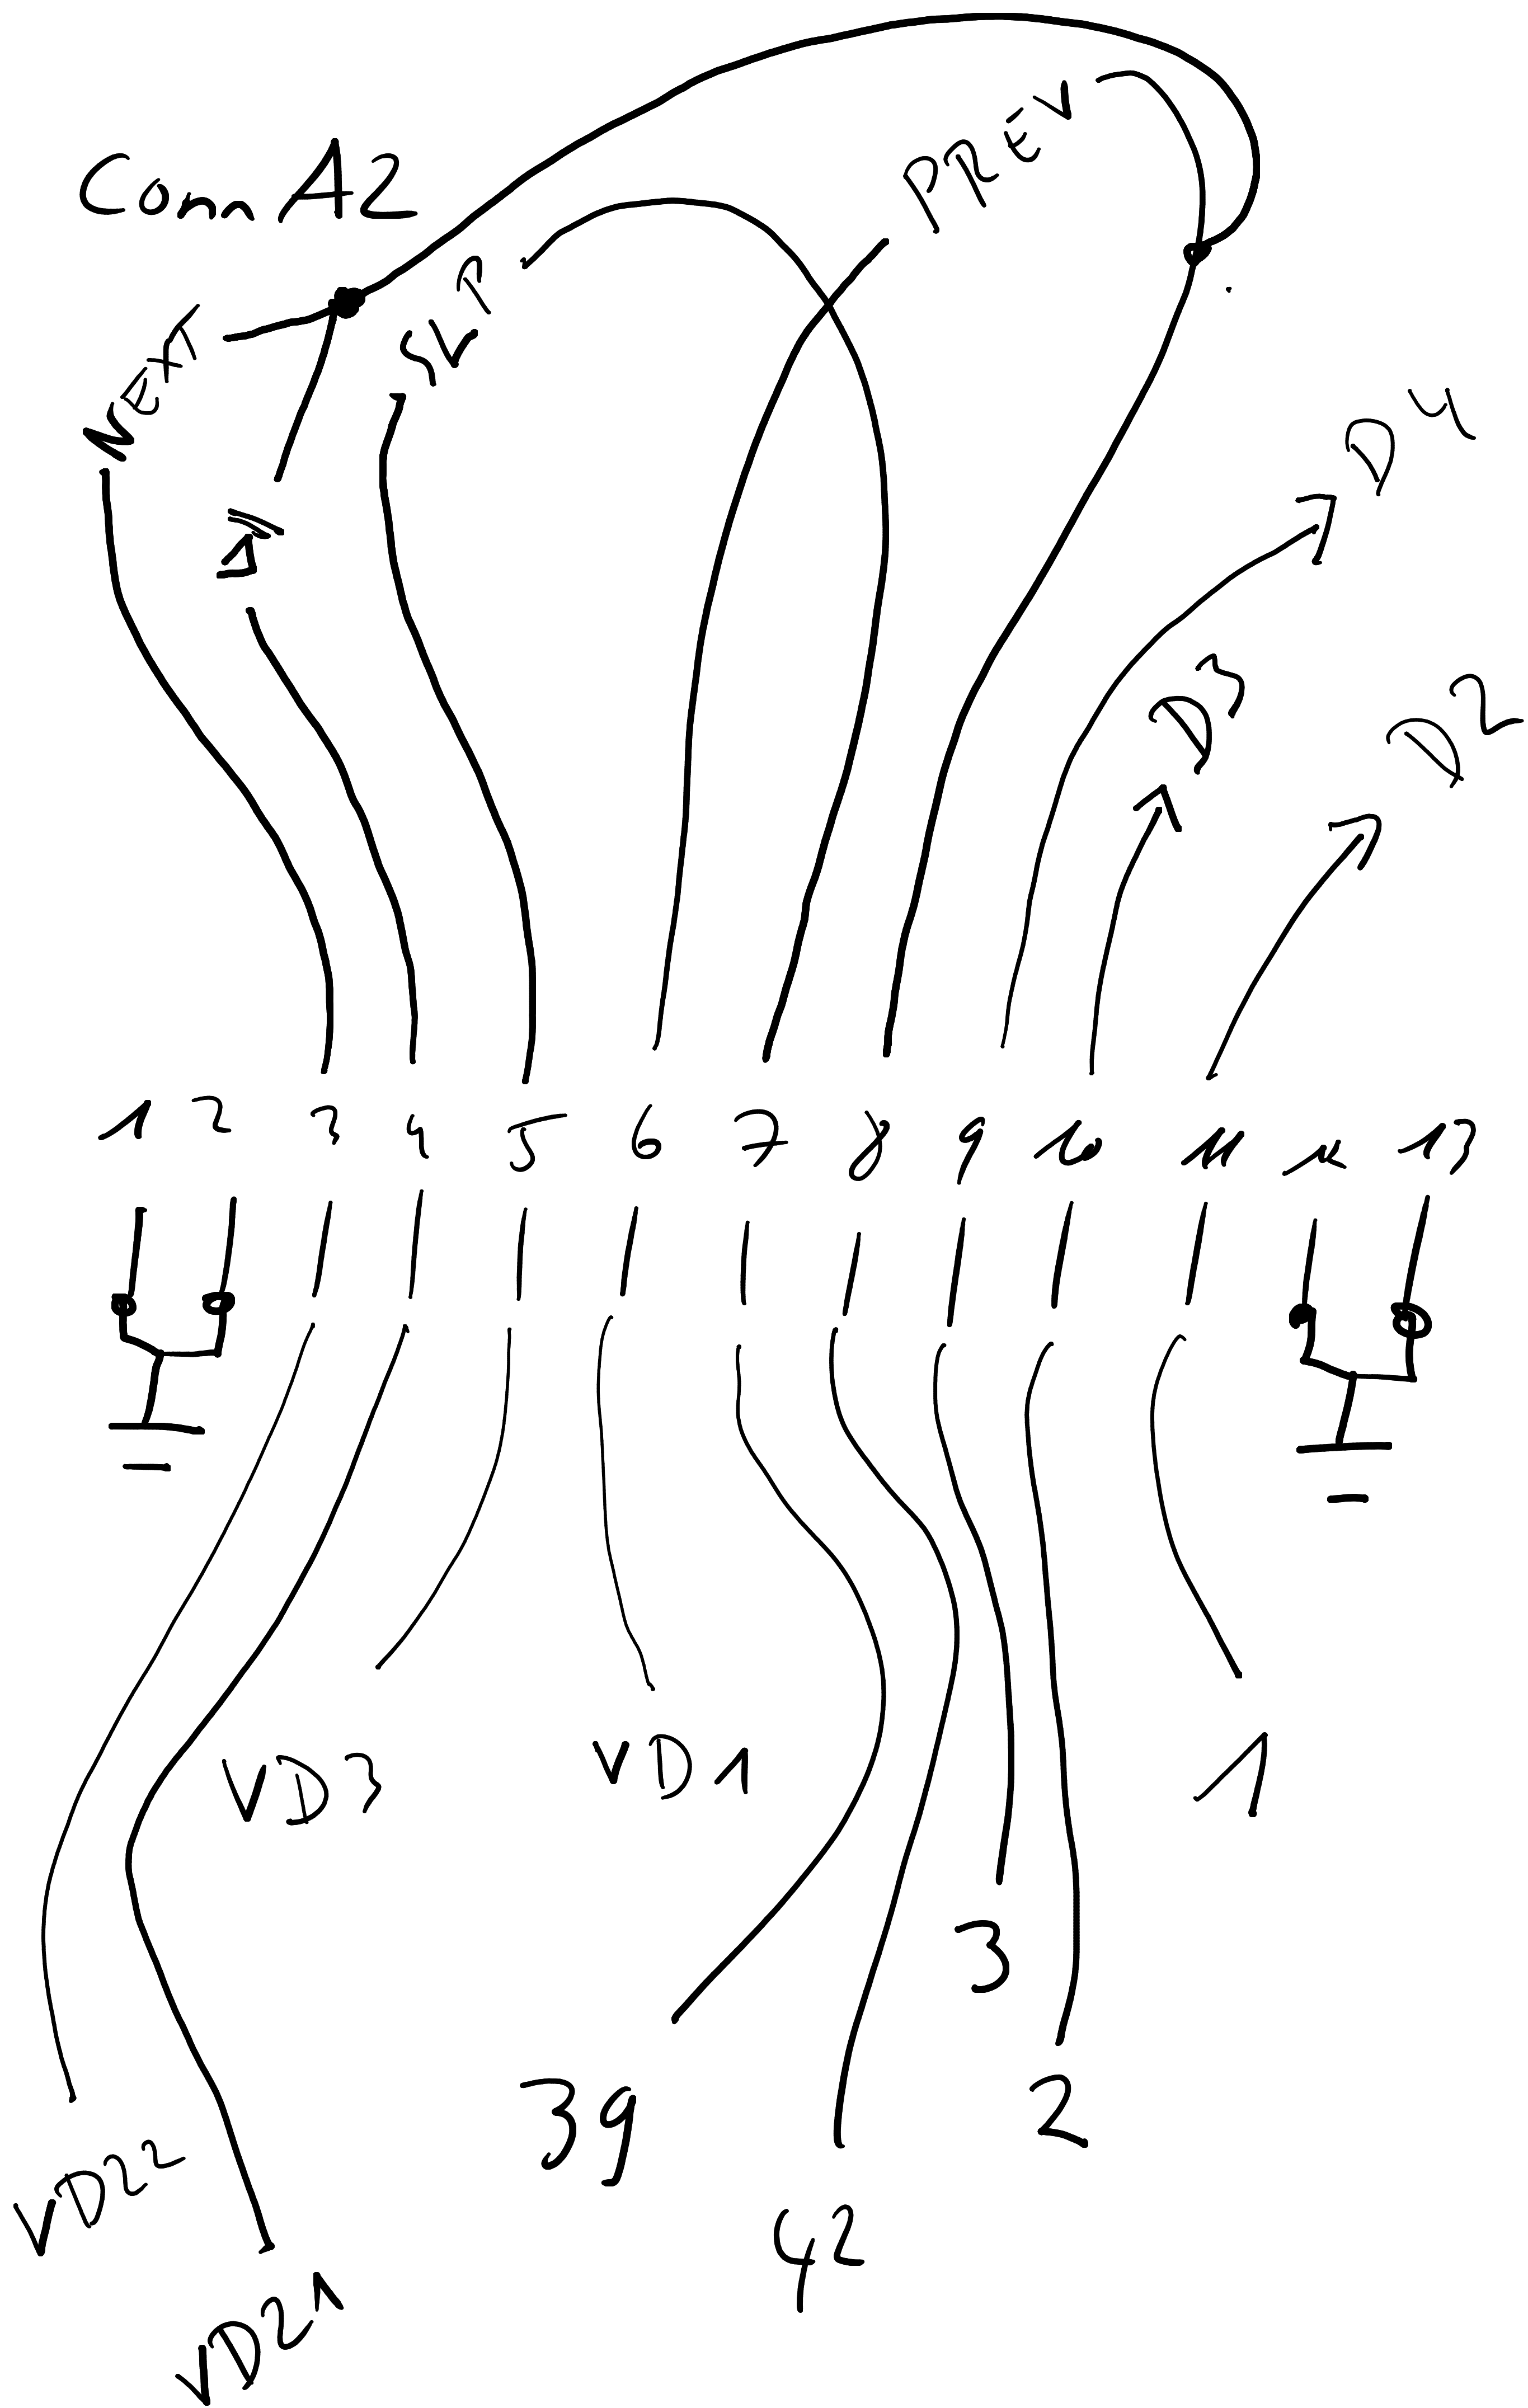

Multimedia/Indicator daughterboard connector

Rows

Tenasy 33 — 37 L CTRL ...

34 — 38 L SHIFT ...

35 — 39 CAPS ...

36 — 40 TAB ...

37 — 41 '~ ...


38 — 42 ESC ...

ENCODER

14 / 15

Backlight Power 5V

G(16)


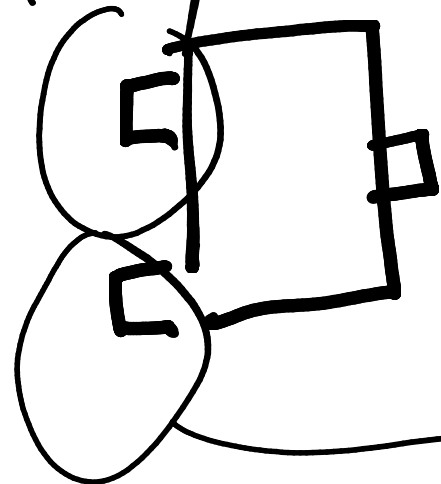


LEDs

col
↓

row
↓

LED-Power
"on" from Matrix
scan (col)

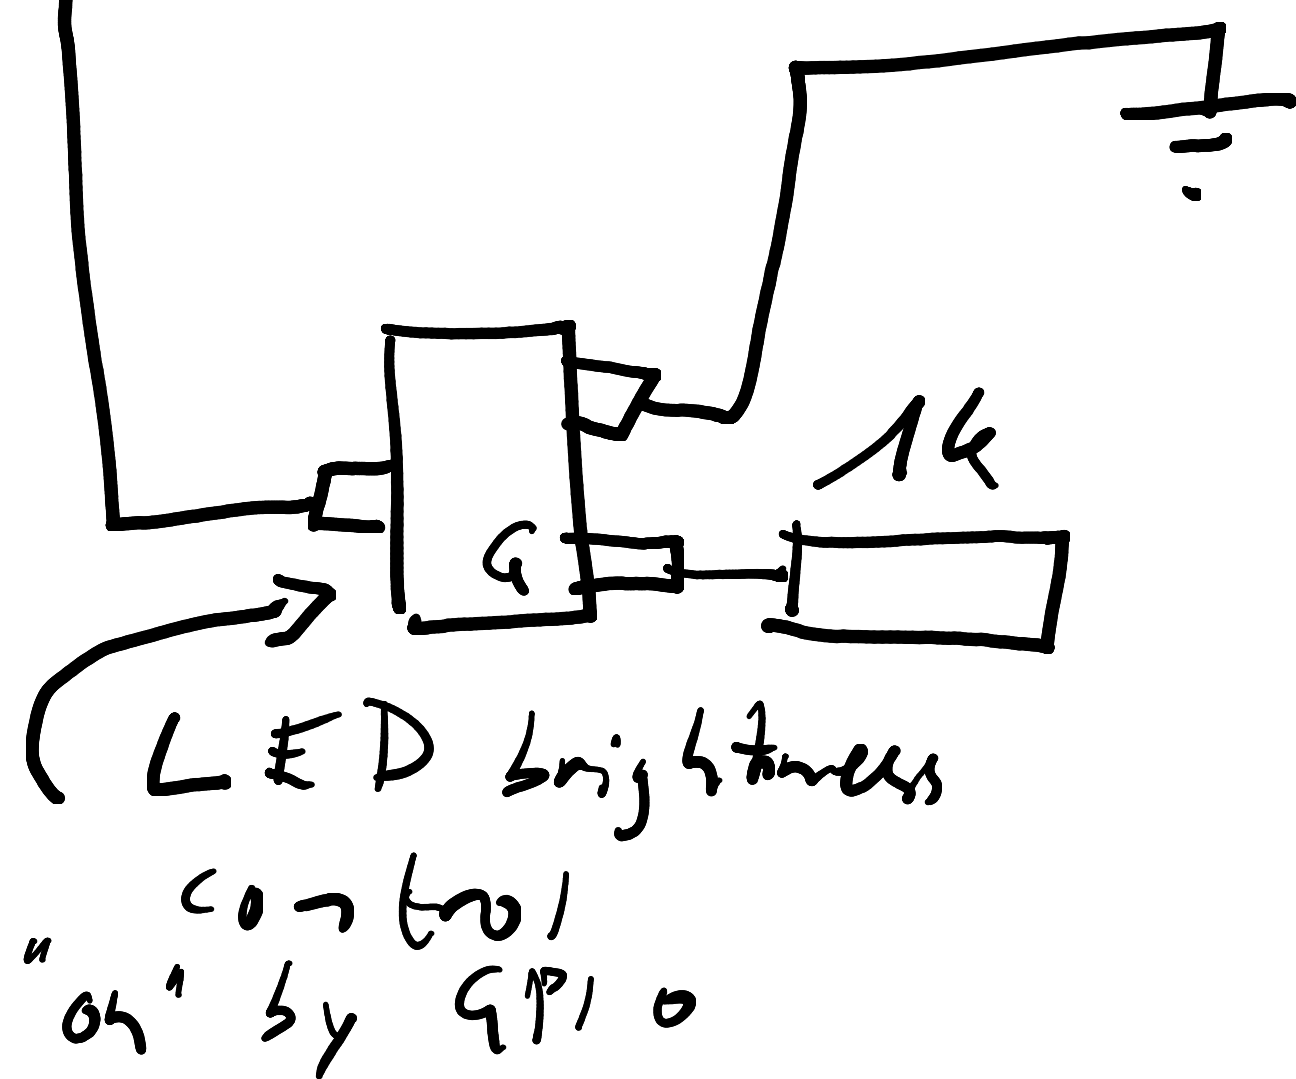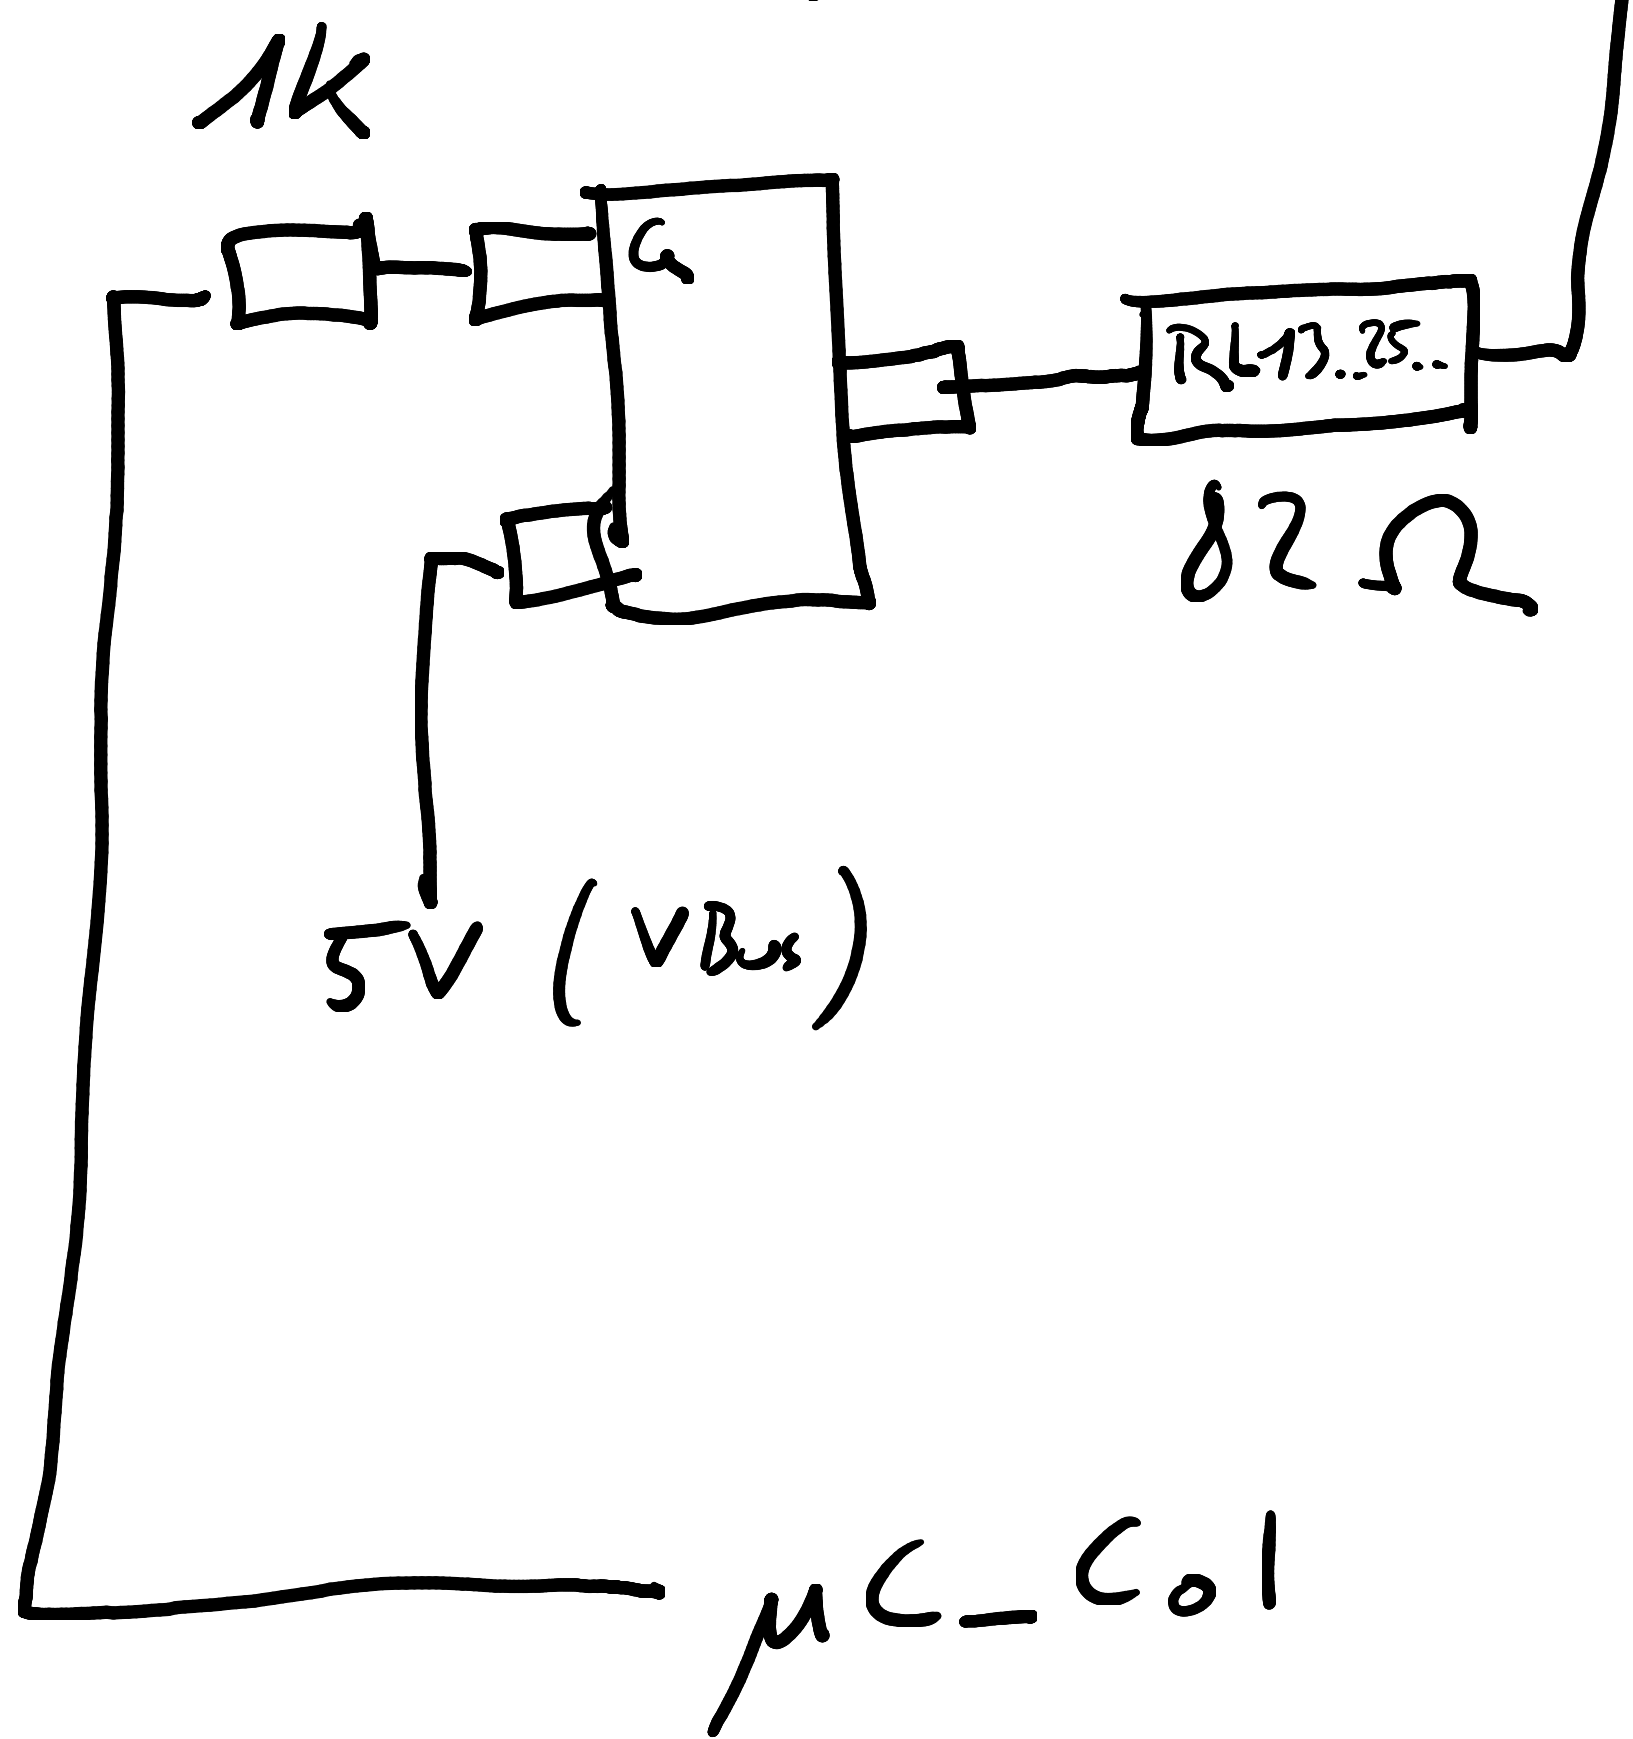

R1 (Q6 ("FN")) : 36

R2 (Q5 ("BN")) : 31

R3 (Q4 ("UJ")) : 32

R4 (Q3 ("U1")) : 33

R5 (Q2 ("89")) : 34

R6 (Q1 ("78")) : 35

Teensy PWM Pins (SD card slot removed)

<u>Teensy</u>		<u>OA</u>
42	—	31
43	—	32
44	—	33
45	—	34
46	—	35
47	—	36

Teensy Micro USB

