

Etisalat NFVI2

Etisalat NFVI2– Site Installation Document (AUH-A2E07-NEC-NFVI2)



NEC/NetCracker Technology Corporation

Version Number	2.4
Status	Draft
Document Date	17-Oct-18
Owner	NEC



© 2018 Netcracker Technology Corporation NEC/Netcracker Confidential and Proprietary
Disclose and distribute solely to those individuals with a need to know.

Disclaimer: This document and the information it contains is provided "AS IS," with all faults, and without any warranties, including, but not limited to, warranties of merchantability, performance or fitness for a particular purpose. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Netcracker assumes no liability resulting from technical or editorial errors or omissions or for any damages resulting from the furnishing, performance, or use of the information contained herein.



Table of Contents

1. List of Equipment's.....	4
1.1 Network.....	4
1.2 Servers.....	5
2. Serial Number/Service TAG	10
2.1 Device Details	10
2.2 SFP Details.....	11
2.3 Optical Conformity	17
3. Rack Population.....	18
3.1 Rack01- AUH-A2E07-NEC-NFVI2-RK01	18
3.2 Rack02- AUH-A2E07-NEC-NFVI2-RK02	19
3.3 Rack03- AUH-A2E07-NEC-NFVI2-RK03	20
3.4 Rack04- AUH-A2E07-NEC-NFVI2-RK04	21
3.5 ODF01- AUH-A2E07-NEC-NFVI2-ODF01	22
3.6 ODF02- AUH-A2E07-NEC-NFVI2-ODF02	23
4. Diagram's.....	24
4.1 Device Layout	24
4.2 Connectivity Layout.....	26
4.2.1 High Level Connectivity Diagram (Part 1/2)	26
4.2.2 High Level Connectivity Diagram (Part 2/2)	27
4.2.3 Core Racks to ODF	28
4.2.4 Server Racks to ODF	29
4.2.5 DC-Gateway to Spine Switch	30
4.2.6 Spine Switch to Leaf Switch.....	31
4.2.7 Management Switch Connectivity	32
4.2.8 Uplinks.....	33
5. Connectivity Matrix.....	34
5.1 Rack01- AUH-A2E07-NEC-NFVI2-RK01	34
5.2 Rack02- AUH-A2E07-NEC-NFVI2-RK02	45
5.3 Rack03- AUH-A2E07-NEC-NFVI2-RK03	56
5.4 Rack04- AUH-A2E07-NEC-NFVI2-RK04	68
5.5 ODF01- AUH-A2E07-NEC-NFVI2-ODF01	81
5.6 ODF02- AUH-A2E07-NEC-NFVI2-ODF02	83
5.7 End to End Connectivity (DCGW, SPINE, LEAF, MGMT).....	87
5.8 Uplinks	91
6. Power Connectivity.....	93
6.1 Power Cables.....	93
6.2 Grounding Cables.....	104



Revision History

Name	Revision Date	Version	Description of changes
Nilesh Pawar	15/07/2018	1.1	Initial Draft
Nilesh Pawar	19/07/2018	1.2	Enhancement with Etisalat Inputs
Nilesh Pawar	24/07/2018	1.3	Updated Diagrams
Nilesh Pawar	26/07/2018	1.4	Updated Additional Diagrams and Uplinks
Nilesh Pawar	05/08/2018	1.5	Added Uplink Diagram and E2E Diagram
Chinmoy Roy	05/08/2018	1.6	Document Review
Nilesh Pawar	06/08/2018	1.7	Updated E2E Connectivity detail section
Nilesh Pawar	11/08/2018	1.8	Changing Diagram sequence/Reformatting
Nilesh Pawar	11/09/2018	1.9	Latest Rack pictures, adding power/ground details, Modification of Connectivity Diagram
Nilesh Pawar	22/09/2018	2.0	Updated Diagrams and Connectivity details as per change in DCGW connectivity
Nilesh Pawar	08/10/2018	2.2	SID changes as requested by FFM Team during ATP
Nilesh Pawar	09/10/2018	2.3	Part Number revised as per requirement
Nilesh Pawar	11/10/2018	2.4	Additional Comments in SID from FFM Team



1. List of Equipment's

1.1 Network

Part Number	Device Description	Qty
MX10003	DC-Gateway (AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01, AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02)	2
JNP-FLTRDR-3RU-A	3RU Universal Chassis Cable Manager with air filter Base	1
JNP-MIC1	12x100G/12x40G/48x10G Universal MIC	1
JNP-PWR1100-DC	Universal DC Power Supply, 1100W, Configured in Base	6
JNP10003-CHAS-A	JNP10003 Chassis Base unit	1
JNP-QSFP-100G-PSM4	QSFP28 100GBase-PSM4 Optics for up to 2km transmission over parallel SMF	6
JNP-QSFP-100G-LR4	QSFP28 100GBase-L4 Optics for up to 10km transmission over serial SMF	4
QSFP-4X10GE-LR	QSFP+ 4x10GBASE LR Ethernet module	3
JNP10003-LC2103	JNP1003/MX10003 Modular PORT Concentrator, 6xQSFP+, 1 MIC Slot - R Mode	1
QFX5200-32C	Spine Switch (AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01, AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02)	2
QFX5200-32C	QFX5200, 32 QSFP+ ports, redundant fans, 2 DC power supplies, back to front airflow, SW license not included.	1
JNP-QSFP-100G-PSM4	QSFP28 100GBase-PSM4 Optics for up to 2km transmission over parallel SMF	12
QFX5200-32C	Leaf Switch - Core Rack (AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01, AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02, AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03, AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04)	4
QFX5200-32C	QFX5200, 32 QSFP+ ports, redundant fans, 2 DC power supplies, back to front airflow, SW license not included.	1
JNP-QSFP-100G-PSM4	QSFP28 100GBase-PSM4 Optics for up to 2km transmission over parallel SMF	4
QFX5200-32C	Leaf Switch - Servers Rack (AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05, AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06)	2
QFX5200-32C	QFX5200, 32 QSFP+ ports, redundant fans, 2 DC power supplies, back to front airflow, SW license not included.	1
JNP-QSFP-100G-PSM4	QSFP28 100GBase-PSM4 Optics for up to 2km transmission over parallel SMF	4
QFX5200-32C	Leaf Switch - FCAPS Rack (AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07, AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08)	2
QFX5200-32C	QFX5200, 32 QSFP+ ports, redundant fans, 2 DC power supplies, back to front airflow, SW license not included.	1



JNP-QSFP-100G-PSM4	QSFP28 100GBase-PSM4 Optics for up to 2km transmission over parallel SMF	4
QFX5100-48S	MGMT Switch - Core Rack AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01	1
QFX5100-48S	QFX5100, 48 SFP+/SFP ports, 6 QSFP ports, redundant fans, redundant power supplies, Built in PORT to PSU air flow.	1
QFX-SFP-10GE-LR	SFP+ 10GBase-LR 10 Gigabit Ethernet Optics, 1310nm for 10km transmission on SMF	6
QFX-SFP-1GE-T	SFP 1000Base-T Copper Transceiver Module for up to 100m transmission on Cat5	19
QFX5100-48S	MGMT Switch - Core Rack AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02	1
QFX5100-48S	QFX5100, 48 SFP+/SFP ports, 6 QSFP ports, redundant fans, redundant power supplies, Built in PORT to PSU air flow.	1
QFX-SFP-10GE-LR	SFP+ 10GBase-LR 10 Gigabit Ethernet Optics, 1310nm for 10km transmission on SMF	6
QFX-SFP-1GE-T	SFP 1000Base-T Copper Transceiver Module for up to 100m transmission on Cat5	16
EX4300-48T	MGMT Switch - Servers/FCAPS Rack (AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03, AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04)	2
EX4300-48T	EX4300, 48-PORT 10/100/1000BaseT + 550W DC PS	1
EX-SFP-10GE-LR	Small Form Factor Pluggable 10 Gigabit Ethernet (SFP+) LR Optics	2
EX-UM-4X4SFP	EX4300, 4-PORT 10G SFP+/4-PORT 1G SFP Uplink Module	1
JPSU-550-DC-AFO-A	EX4300, 550W DC Power Supply (Power Cord needs to be ordered separately), PSU-Side Airflow Exhaust	1

1.2 Servers

Part Number	Device Description	Qty
R640	Control Node (AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01 AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02 AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03)	3
338-BLUS	Intel Xeon Silver 4114 2.2G, 10C/20T, 9.6GT/s 2UPI, 14M Cache, Turbo, HT (85W) DDR4-2400	1
370-ADNF	32GB RDIMM 2666MT/s Dual Rank	4
374-BBPP	Intel Xeon Silver 4114 2.2G, 10C/20T, 9.6GT/s 2UPI, 14M Cache, Turbo, HT (85W) DDR4-2400	1
400-ASEM	400GB SSD SAS Write Intensive 12Gbps 512n 2.5in Hot-plug Drive, PX05SM,10 DWPD,7300 TBW	2
406-BBLD	Mellanox ConnectX-4 Lx Dual PORT 25GbE SFP28 Network Adapter, Low Profile	2
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1



R640	Undercloud Node (AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01 AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02)	2
329-BDKC	DELL PowerEdge R640 Server	1
338-BLMC	Intel Xeon Gold 6130 2.1G, 16C/32T, 10.4GT/s 2UPI, 22M Cache, Turbo, HT (125W) DDR4-2666	1
370-ADNF	32GB RDIMM 2666MT/s Dual Rank	4
374-BBNW	Intel Xeon Gold 6130 2.1G, 16C/32T, 10.4GT/s 2UPI, 22M Cache, Turbo, HT (125W) DDR4-2666	1
400-ARXC	1.8TB 10K RPM SAS 12Gbps 512e 2.5in Hot-plug Hard Drive	2
406-BBLD	Mellanox ConnectX-4 Lx Dual PORT 25GbE SFP28 Network Adapter, Low Profile	2
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1
R740	CEPH Node (AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01 AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02 AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03)	3
329-BDKH	DELL PowerEdge R740/R740XD Server	1
338-BLUT	Intel Xeon Silver 4116 2.1G, 12C/24T, 9.6GT/s 2UPI, 16M Cache, Turbo, HT (85W) DDR4-2400	1
370-ADND	16GB RDIMM, 2666MT/s, Dual Rank	4
374-BBPQ	Intel Xeon Silver 4116 2.1G, 12C/24T, 9.6GT/s 2UPI, 16M Cache, Turbo, HT (85W) DDR4-2400	1
400-ASEI	240GB SSD SATA Mix Use 6Gbps 512n 2.5in Hot-plug Drive, SM863a,3 DWPD,1314 TBW	2
400-ASFI	960GB SSD SAS Mix Use 12Gbps 512n 2.5in Hot-plug Drive, PX05SV,3 DWPD,5256 TBW	4
400-ARXC	1.8TB 10K RPM SAS 12Gbps 512e 2.5in Hot-plug Hard Drive	16
406-BBLE	Mellanox ConnectX-4 Lx Dual PORT 25GbE SFP28 Network Adapter	2
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1
R640	JUMP Server (AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01)	1
329-BDKC	DELL PowerEdge R640 Server	1
338-BLUS	Intel Xeon Silver 4114 2.2G, 10C/20T, 9.6GT/s 2UPI, 14M Cache, Turbo, HT (85W) DDR4-2400	1
370-ADNF	32GB RDIMM 2666MT/s Dual Rank	2
374-BBPP	Intel Xeon Silver 4114 2.2G, 10C/20T, 9.6GT/s 2UPI, 14M Cache, Turbo, HT (85W) DDR4-2400	1
400-ASGQ	300GB 15K RPM SAS 12Gbps 512n 2.5in Hot-plug Hard Drive	2
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1
R640	SDN Controller	3



	(AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01 AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02 AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03)	
329-BDKC	DELL PowerEdge R640 Server	1
338-BLMC	Intel Xeon Gold 6130 2.1G, 16C/32T, 10.4GT/s 2UPI, 22M Cache, Turbo, HT (125W) DDR4-2666	1
370-ADNF	32GB RDIMM 2666MT/s Dual Rank	4
374-BBNW	Intel Xeon Gold 6130 2.1G, 16C/32T, 10.4GT/s 2UPI, 22M Cache, Turbo, HT (125W) DDR4-2666	1
400-ARXC	1.8TB 10K RPM SAS 12Gbps 512e 2.5in Hot-plug Hard Drive	2
400-ASEI	240GB SSD SATA Mix Use 6Gbps 512n 2.5in Hot-plug Drive, SM863a,3 DWPD,1314 TBW	2
406-BBLD	Mellanox ConnectX-4 Lx Dual PORT 25GbE SFP28 Network Adapter, Low Profile	2
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1
R740	Compute Node (AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01 AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02 AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03 AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04 AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05 AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06 AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07 AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08 AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09)	9
329-BDKH	DELL PowerEdge R740 Server	1
338-BLMJ	Intel Xeon Gold 6140 2.3G, 18C/36T, 10.4GT/s 2UPI, 24.75M Cache, Turbo, HT (140W) DDR4-2666	1
370-ADNF	32GB RDIMM 2666MT/s Dual Rank	8
374-BBOE	Intel Xeon Gold 6140 2.3G, 18C/36T, 10.4GT/s 2UPI, 24.75M Cache, Turbo, HT (140W) DDR4-2666	1
400-ARXC	1.8TB 10K RPM SAS 12Gbps 512e 2.5in Hot-plug Hard Drive	2
540-BCCM	Intel XXV710 Dual Port 25GbE SFP28 PCIe Adapter, Low Profile	3
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1
R740	FCAPS CEPH Server (AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04 AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05 AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06)	3
329-BDKH	DELL PowerEdge R740 Server	1
338-BLUT	Intel Xeon Silver 4116 2.1G, 12C/24T, 9.6GT/s 2UPI, 16M Cache, Turbo, HT (85W) DDR4-2400	1
370-ADND	16GB RDIMM, 2666MT/s, Dual Rank	4
374-BBPQ	Intel Xeon Silver 4116 2.1G, 12C/24T, 9.6GT/s 2UPI, 16M Cache, Turbo, HT (85W) DDR4-2400	1



400-ASEI	240GB SSD SATA Mix Use 6Gbps 512n 2.5in Hot-plug Drive, SM863a,3 DWPD,1314 TBW	2
400-ASFI	960GB SSD SAS Mix Use 12Gbps 512n 2.5in Hot-plug Drive, PX05SV,3 DWPD,5256 TBW	4
400-ARXC	1.8TB 10K RPM SAS 12Gbps 512e 2.5in Hot-plug Hard Drive	16
406-BBLE	Mellanox ConnectX-4 Lx Dual PORT 25GbE SFP28 Network Adapter	2
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1
R640	FCAPS Server (AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01 AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02 AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03 AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04)	4
329-BDKC	DELL PowerEdge R640 Server	1
338-BLMC	Intel Xeon Gold 6130 2.1G, 16C/32T, 10.4GT/s 2UPI, 22M Cache, Turbo, HT (125W) DDR4-2666	1
370-ADNF	32GB RDIMM 2666MT/s Dual Rank	4
374-BBNW	Intel Xeon Gold 6130 2.1G, 16C/32T, 10.4GT/s 2UPI, 22M Cache, Turbo, HT (125W) DDR4-2666	1
400-ARXC	1.8TB 10K RPM SAS 12Gbps 512e 2.5in Hot-plug Hard Drive	2
406-BBLD	Mellanox ConnectX-4 Lx Dual PORT 25GbE SFP28 Network Adapter, Low Profile	2
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1
R740	ELK Server (AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01 AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02 AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03 AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04)	4
329-BDKH	DELL PowerEdge R740 Server	1
338-BLUT	Intel Xeon Silver 4116 2.1G, 12C/24T, 9.6GT/s 2UPI, 16M Cache, Turbo, HT (85W) DDR4-2400	1
370-ADNF	32GB RDIMM 2666MT/s Dual Rank	4
374-BBPQ	Intel Xeon Silver 4116 2.1G, 12C/24T, 9.6GT/s 2UPI, 16M Cache, Turbo, HT (85W) DDR4-2400	1
400-ARXC	1.8TB 10K RPM SAS 12Gbps 512e 2.5in Hot-plug Hard Drive	12
406-BBLE	Mellanox ConnectX-4 Lx Dual PORT 25GbE SFP28 Network Adapter	2
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1
R740	MANO NODE (AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01 AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02 AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03)	3
329-BDKH	DELL PowerEdge R740 Server	1
338-BLMJ	Intel Xeon Gold 6140 2.3G, 18C/36T, 10.4GT/s 2UPI, 24.75M Cache, Turbo, HT (140W) DDR4-2666	1



370-ADNF	32GB RDIMM 2666MT/s Dual Rank	8
374-BBOE	Intel Xeon Gold 6140 2.3G, 18C/36T, 10.4GT/s 2UPI, 24.75M Cache, Turbo, HT (140W) DDR4-2666	1
400-ARXC	1.8TB 10K RPM SAS 12Gbps 512e 2.5in Hot-plug Hard Drive	2
406-BBLE	Mellanox ConnectX-4 Lx Dual PORT 25GbE SFP28 Network Adapter	3
450-ADIJ	Dual, Hot-plug, Redundant DC Power Supply (1+1), 1100W -48VDC Only	1
540-BBCB	Intel Ethernet i350 QP 1Gb Network Daughter Card	1

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

2. Serial Number/Service TAG

2.1 Device Details

Manufacture	Part Number	Hostname	Serial Number - Service Tag
Juniper	MX10003	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01	JN1262C94JCB
Juniper	MX10003	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02	JN1261906JCB
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01	WH0218080408
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02	WH0218080358
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01	WH0218080230
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02	WH0218080394
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03	WH0218080287
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04	WH0218080416
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05	WH0218080378
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06	WH0218080340
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07	WH0218080407
Juniper	QFX5200-32C	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08	WH0218080343
Juniper	QFX5100-48S	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01	TA3717320213
Juniper	QFX5100-48S	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02	TA3717320127
Juniper	EX4300-48T	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03	PE3718020143
Juniper	EX4300-48T	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04	PE3718020635
DELL	R640	AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01	209M3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01	20YQ3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01	228M3N2
DELL	R740xd	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01	204M3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01	HX4S3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02	205L3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02	223T3N2
DELL	R740xd	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02	204S3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02	HX5K3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03	210N3N2
DELL	R740xd	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03	210P3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03	HX4T3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09	205Q3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08	206M3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07	20FL3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06	20JK3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05	20HK3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04	20GQ3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03	20FQ3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02	20DQ3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01	204P3N2
DELL	R740xd	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06	20YS3N2

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

DELL	R740xd	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05	20YM3N2
DELL	R740xd	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04	211K3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04	20GT3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03	20FT3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02	20FN3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01	20GP3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04	229K3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03	225Q3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02	224S3N2
DELL	R640	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01	226M3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03	209K3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02	207K3N2
DELL	R740	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01	204R3N2

2.2 SFP Details

Parent Device	Port Number	SFP Part Number	SFP Serial Number
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01	ET-0/1/0	QSFP-100G-PSM4	1LUQ32420SJ
	ET-0/1/1	QSFP-100G-PSM4	1LUQ32420KG
	ET-0/1/2	QSFP-100G-PSM4	1LUQ32420MM
	ET-0/1/4	QSFP-100G-PSM4	1LUQ32420KL
	ET-0/1/5	QSFP-100G-PSM4	1LUQ32420KS
	ET-0/1/6	QSFP-100G-PSM4	1LUQ32420P1
	ET-0/1/8	QSFP-100GBASE-LR4	1FCQA24800Z
	ET-0/1/9	QSFP-100GBASE-LR4	1FCQA30100F
	ET-0/1/10	QSFP-100GBASE-LR4	1FCQA248018
	ET-0/1/11	QSFP-100GBASE-LR4	
	XE-0/0/0:0,1,2,3	QSFP-4X10GE-LR	1FCPB3030A4
	XE-0/0/1:0,1,2,3	QSFP-4X10GE-LR	1FCPB3030AD
	XE-0/0/2:0,1,2,3	QSFP-4X10GE-LR	1FCPB3030AF
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02	ET-0/1/0	QSFP-100G-PSM4	1LUQ32420M6
	ET-0/1/1	QSFP-100G-PSM4	1LUQ324402W
	ET-0/1/2	QSFP-100G-PSM4	1LUQ324300F
	ET-0/1/4	QSFP-100G-PSM4	1LUQ32420RG
	ET-0/1/5	QSFP-100G-PSM4	1LUQ32440A0
	ET-0/1/6	QSFP-100G-PSM4	1LUQ324402X
	ET-0/1/8	QSFP-100GBASE-LR4	1FCQA301004
	ET-0/1/9	QSFP-100GBASE-LR4	1FCQA24806S
	ET-0/1/10	QSFP-100GBASE-LR4	1FCQA30107K
	ET-0/1/11	QSFP-100GBASE-LR4	
	XE-0/0/0:0,1,2,3	QSFP-4X10GE-LR	1FCPB3030AR
	XE-0/0/1:0,1,2,3	QSFP-4X10GE-LR	1FCPB3030BW
	XE-0/0/2:0,1,2,3	QSFP-4X10GE-LR	1FCPB3030AG



Parent Device	Port Number	SFP Part Number	SFP Serial Number
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01	0/0/0	QSFP-100G-PSM4	1LUQ32420L0
	0/0/1	QSFP-100G-PSM4	1LUQ32420Q4
	0/0/2	QSFP-100G-PSM4	1LUQ32420LX
	0/0/3	QSFP-100G-PSM4	1LUQ32420L9
	0/0/4	QSFP-100G-PSM4	1LUQ32420QF
	0/0/5	QSFP-100G-PSM4	1LUQ32420E3
	0/0/6	QSFP-100G-PSM4	1LUQ32420FF
	0/0/7	QSFP-100G-PSM4	1LUQ324305R
	0/0/26	QSFP-100G-PSM4	1LUQ32420L5
	0/0/27	QSFP-100G-PSM4	1LUQ32420KK
	0/0/28	QSFP-100G-PSM4	1LUQ32420H9
	0/0/29	QSFP-100G-PSM4	1LUQ32420PN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02	0/0/0	QSFP-100G-PSM4	1LUQ32420MQ
	0/0/1	QSFP-100G-PSM4	1LUQ324407N
	0/0/2	QSFP-100G-PSM4	1LUQ32420JN
	0/0/3	QSFP-100G-PSM4	1LUQ324402C
	0/0/4	QSFP-100G-PSM4	1LUQ3244026
	0/0/5	QSFP-100G-PSM4	1LUQ32440CD
	0/0/6	QSFP-100G-PSM4	1LUQ32420S7
	0/0/7	QSFP-100G-PSM4	1LUQ32420MH
	0/0/26	QSFP-100G-PSM4	1LUQ324400D
	0/0/27	QSFP-100G-PSM4	1LUQ32420LP
	0/0/28	QSFP-100G-PSM4	1LUQ32420L7
	0/0/29	QSFP-100G-PSM4	1LUQ32420KR
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01	0/0/0:0,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03779
	0/0/0:1,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03711
	0/0/26	QSFP-100G-PSM4	1LUQ324401N
	0/0/27	QSFP-100G-PSM4	1LUQ32420L4
	0/0/28	QSFP-100G-PSM4	1LUQ324302Q
	0/0/29	QSFP-100G-PSM4	1LUQ32420LN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02	0/0/0:0,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03540
	0/0/0:1,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03772
	0/0/26	QSFP-100G-PSM4	1LUQ32420MR
	0/0/27	QSFP-100G-PSM4	1LUQ32420KP
	0/0/28	QSFP-100G-PSM4	1LUQ32420R0
	0/0/29	QSFP-100G-PSM4	1LUQ324401H
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03	0/0/0:0,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03708
	0/0/0:1,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03723
	0/0/26	QSFP-100G-PSM4	1LUQ32420LW
	0/0/27	QSFP-100G-PSM4	1LUQ32420HK
	0/0/28	QSFP-100G-PSM4	1LUQ32420KN
	0/0/29	QSFP-100G-PSM4	1LUQ324401E



Parent Device	Port Number	SFP Part Number	SFP Serial Number
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03552
	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03717
	0/0/26	QSFP-100G-PSM4	1LUQ321010H
	0/0/27	QSFP-100G-PSM4	1LUQ32100VL
	0/0/28	QSFP-100G-PSM4	1LUQ321010F
	0/0/29	QSFP-100G-PSM4	1LUQ321010J
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03554
	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03775
	0/0/0:2,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03776
	0/0/0:3,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03773
	0/0/0:4,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03191
	0/0/0:5,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03707
	0/0/0:6,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03547
	0/0/0:7,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03774
	0/0/0:8,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03725
	0/0/0:9,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03777
	0/0/0:10,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03698
	0/0/26	QSFP-100G-PSM4	1LUQ324302T
	0/0/27	QSFP-100G-PSM4	1LUQ324403S
	0/0/28	QSFP-100G-PSM4	1LUQ32420PM
	0/0/29	QSFP-100G-PSM4	1LUQ324405R
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03771
	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03705
	0/0/0:2,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03778
	0/0/0:3,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03710
	0/0/0:4,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03728
	0/0/0:5,1,2,3	QSFP28-100G-AOC-3M	MT1804FT06721
	0/0/0:6,1,2,3	QSFP28-100G-AOC-3M	MT1804FT06711
	0/0/0:7,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03184
	0/0/0:8,1,2,3	QSFP28-100G-AOC-3M	MT1804FT06781
	0/0/0:9,1,2,3	QSFP28-100G-AOC-3M	MT1804FT06756
	0/0/0:10,1,2,3	QSFP28-100G-AOC-3M	MT1804FT06782
	0/0/26	QSFP-100G-PSM4	1LUQ3243004
	0/0/27	QSFP-100G-PSM4	1LUQ32420PE
	0/0/28	QSFP-100G-PSM4	1LUQ32420PG
	0/0/29	QSFP-100G-PSM4	1LUQ32420JQ



Parent Device	Port Number	SFP Part Number	SFP Serial Number
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03556
	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03697
	0/0/0:2,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03703
	0/0/0:3,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03712
	0/0/0:4,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03541
	0/0/0:5,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03183
	0/0/0:6,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03538
	0/0/26	QSFP-100G-PSM4	1LUQ324403R
	0/0/27	QSFP-100G-PSM4	1LUQ3243044
	0/0/28	QSFP-100G-PSM4	1LUQ32420JS
	0/0/29	QSFP-100G-PSM4	1LUQ3243033
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03770
	0/0/0:1,2,3	QSFP28-100G-AOC-3M	MT1803FT03716
	0/0/0:2,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03722
	0/0/0:3,1,2,3	QSFP28-100G-AOC-3M	MT1804FT06754
	0/0/0:4,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03539
	0/0/0:5,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03709
	0/0/0:6,1,2,3	QSFP28-100G-AOC-3M	MT1803FT03557
	0/0/26	QSFP-100G-PSM4	1LUQ32420PL
	0/0/27	QSFP-100G-PSM4	1LUQ32420Q0
	0/0/28	QSFP-100G-PSM4	1LUQ324305C
	0/0/29	QSFP-100G-PSM4	1LUQ32420G8



Parent Device	Port Number	SFP Part Number	SFP Serial Number
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01	0/0/00	SFP+-10G-LR	HCN2007367
	0/0/01	SFP+-10G-LR	HCN2007354
	0/0/16	SFP-T	H412111
	0/0/17	SFP-T	H412120
	0/0/18	SFP-T	H412101
	0/0/19	SFP-T	H411642
	0/0/20	SFP-T	H411503
	0/0/21	SFP-T	H412130
	0/0/22	SFP-T	H411672
	0/0/23	SFP-T	H411701
	0/0/24	SFP-T	H411439
	0/0/25	SFP-T	H411496
	0/0/26	SFP-T	H412401
	0/0/27	SFP-T	H410442
	0/0/28	SFP-T	H412108
	0/0/29	SFP-T	H412131
	0/0/30	SFP-T	H412070
	0/0/31	SFP-T	H342041
	0/0/32	SFP-T	H344386
	0/0/33	SFP-T	H344388
	0/0/34	SFP-T	H342456
	0/0/40	SFP+-10G-LR	HCN2007373
	0/0/41	SFP+-10G-LR	HCN2007046
	0/0/44	SFP+-10G-LR	HCN2006991
	0/0/45	SFP+-10G-LR	HCN2007022



Parent Device	Port Number	SFP Part Number	SFP Serial Number
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02	0/0/00	SFP+-10G-LR	HCN2007366
	0/0/01	SFP+-10G-LR	HCN2006901
	0/0/16	SFP-T	H412095
	0/0/17	SFP-T	H412113
	0/0/18	SFP-T	H373489
	0/0/19	SFP-T	H412105
	0/0/20	SFP-T	H412044
	0/0/21	SFP-T	H412058
	0/0/22	SFP-T	H412050
	0/0/23	SFP-T	H412110
	0/0/24	SFP-T	H373228
	0/0/25	SFP-T	H412140
	0/0/26	SFP-T	H412103
	0/0/27	SFP-T	H412048
	0/0/28	SFP-T	H412063
	0/0/29	SFP-T	H342344
	0/0/30	SFP-T	H343861
	0/0/31	SFP-T	H342584
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03	0/0/40	SFP+-10G-LR	HCN2006933
	0/0/41	SFP+-10G-LR	HCN2006841
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04	0/0/44	SFP+-10G-LR	HCN2006909
	0/0/45	SFP+-10G-LR	AD1730500HK
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03	0/0/48	SFP+-10G-LR	HCH2006080
	0/0/49	SFP+-10G-LR	HCN2006885
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04	0/0/48	SFP+-10G-LR	HCN2006914
	0/0/49	SFP+-10G-LR	HCN2006955




2.3 Optical Conformity

The SFP modules should be conforming to the following specification:


SFPs	Transceiver Type	Transmitter wavelengths (range)	Distance	Transmitter output power (Min)	Transmitter output power (Max)	Receiver input power (Min)	Receiver input power (Max)
EX-SFP-10GE-LR	SFP+	1310 nm	10 km	-8.2 dBm	0.5 dBm	-14.4 dBm	0.5 dBm
JNP-QSFP-100G-PSM4	QSFP	1295 nm through 1325 nm	2 m to 500 m	-9.4 dBm	2.0 dBm	-12.66 dBm	2.0 dBm
Juniper QSFP-100GBASE-LR4	QSFP	1308.09 through 1310.19 nm	9/125 SMF cable, 10 km	-4.3 dBm	4.5 dBm	-10.6 dBm	4.5 dBm
Juniper QSFP-4X10GE-LR	QSFP+	1260 nm through 1355 nm	2 m to 10 km	-8.2 dBm	0.5 dBm	-14.4 dBm	0.5 dBm

3. Rack Population


3.1 Rack01- AUH-A2E07-NEC-NFVI2-RK01

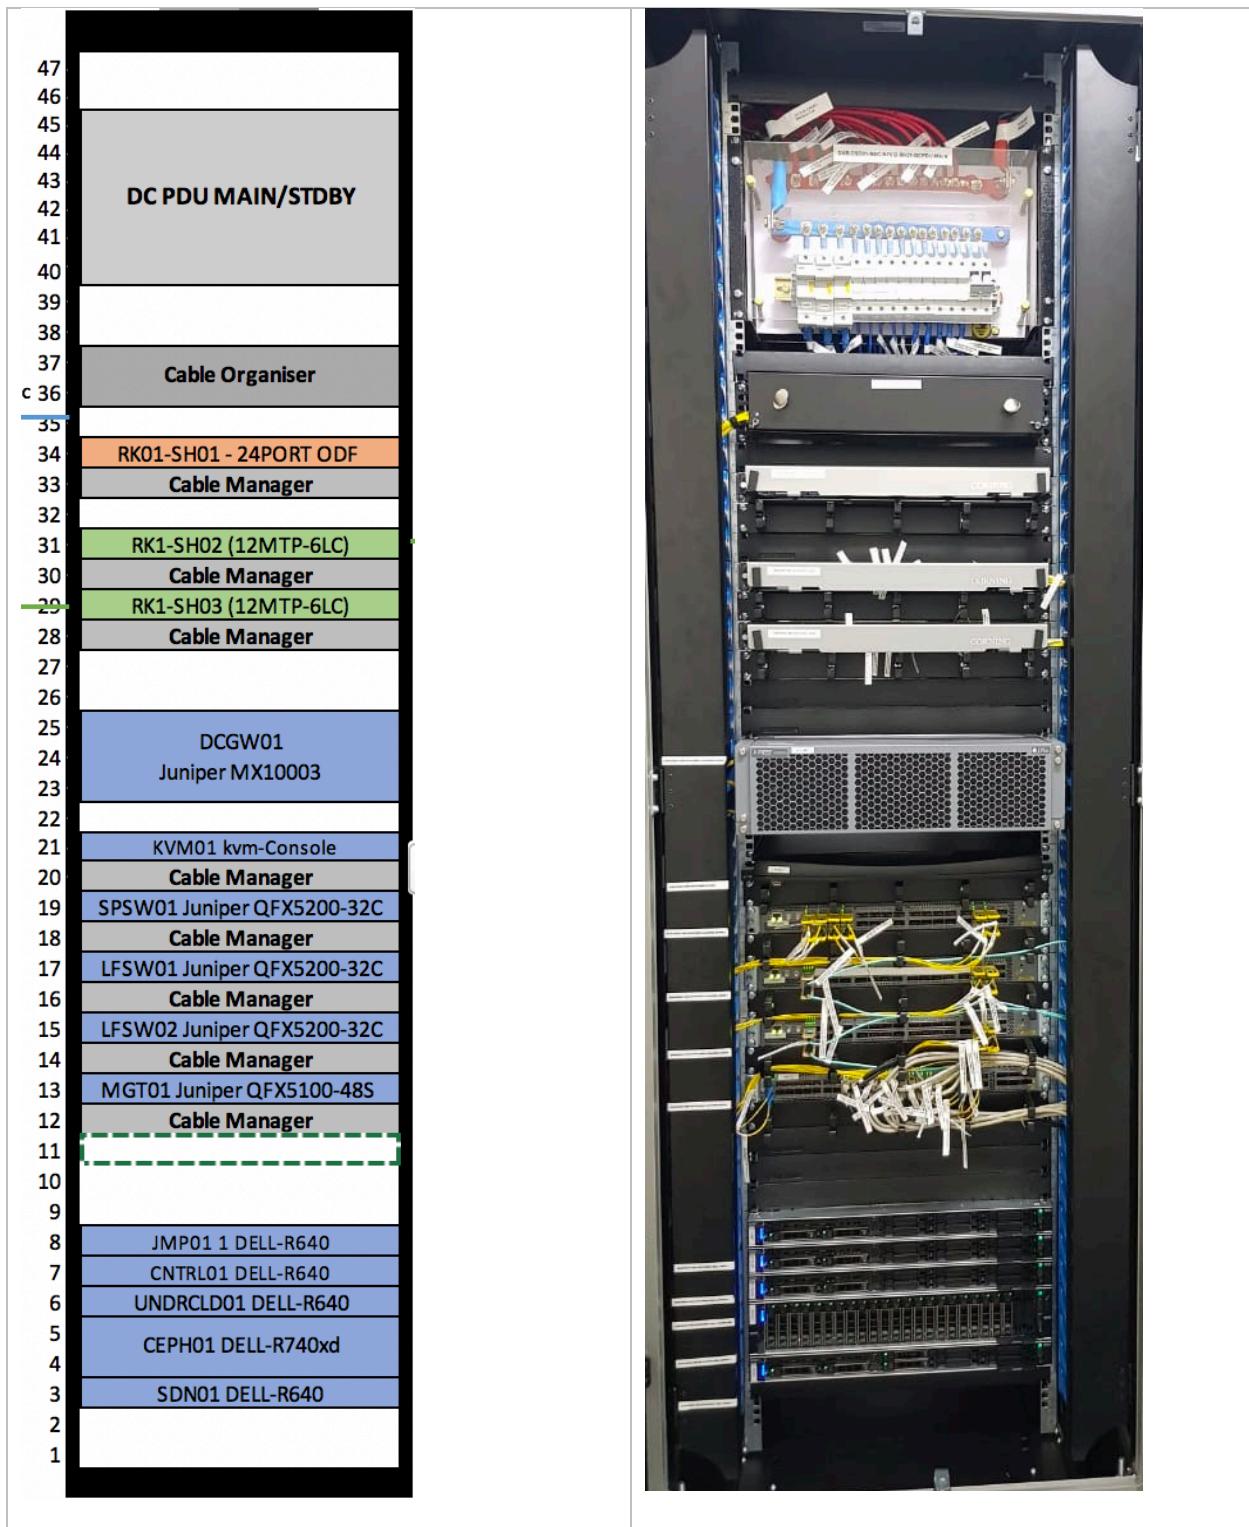

3.2 Rack02- AUH-A2E07-NEC-NFVI2-RK02

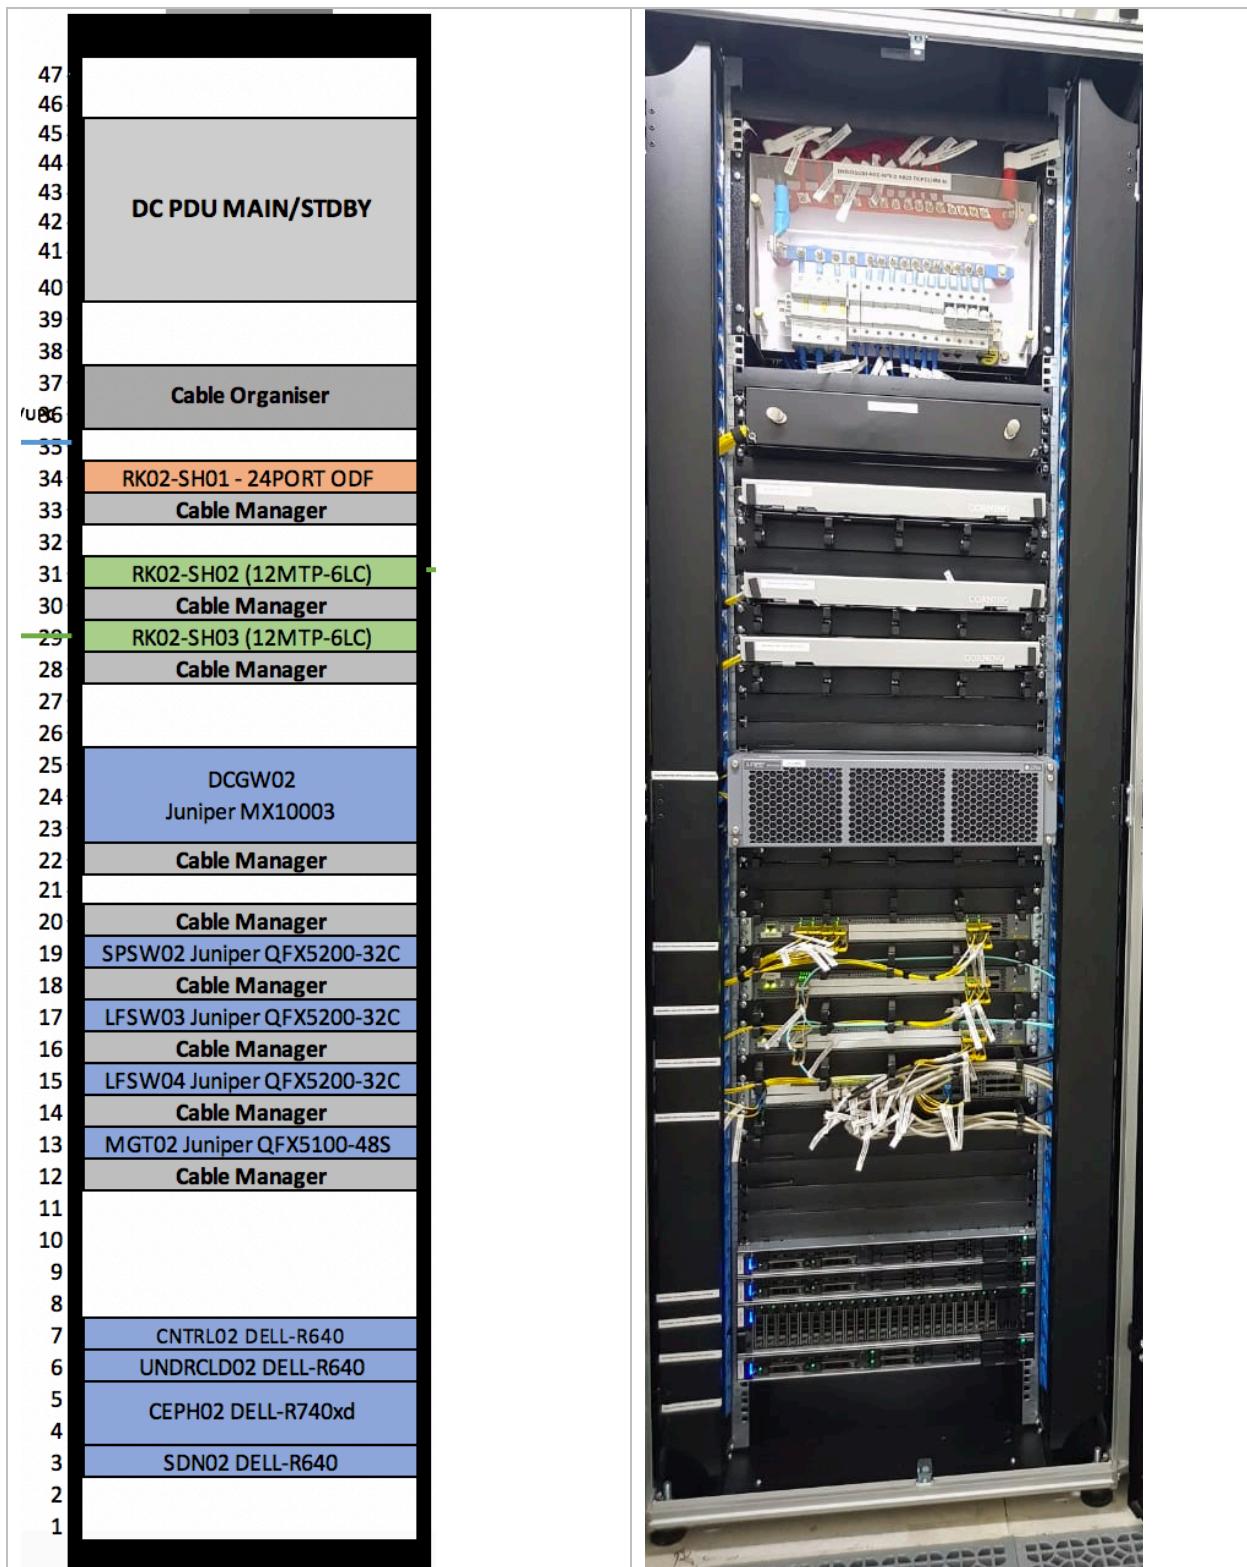


3.3 Rack03- AUH-A2E07-NEC-NFVI2-RK03

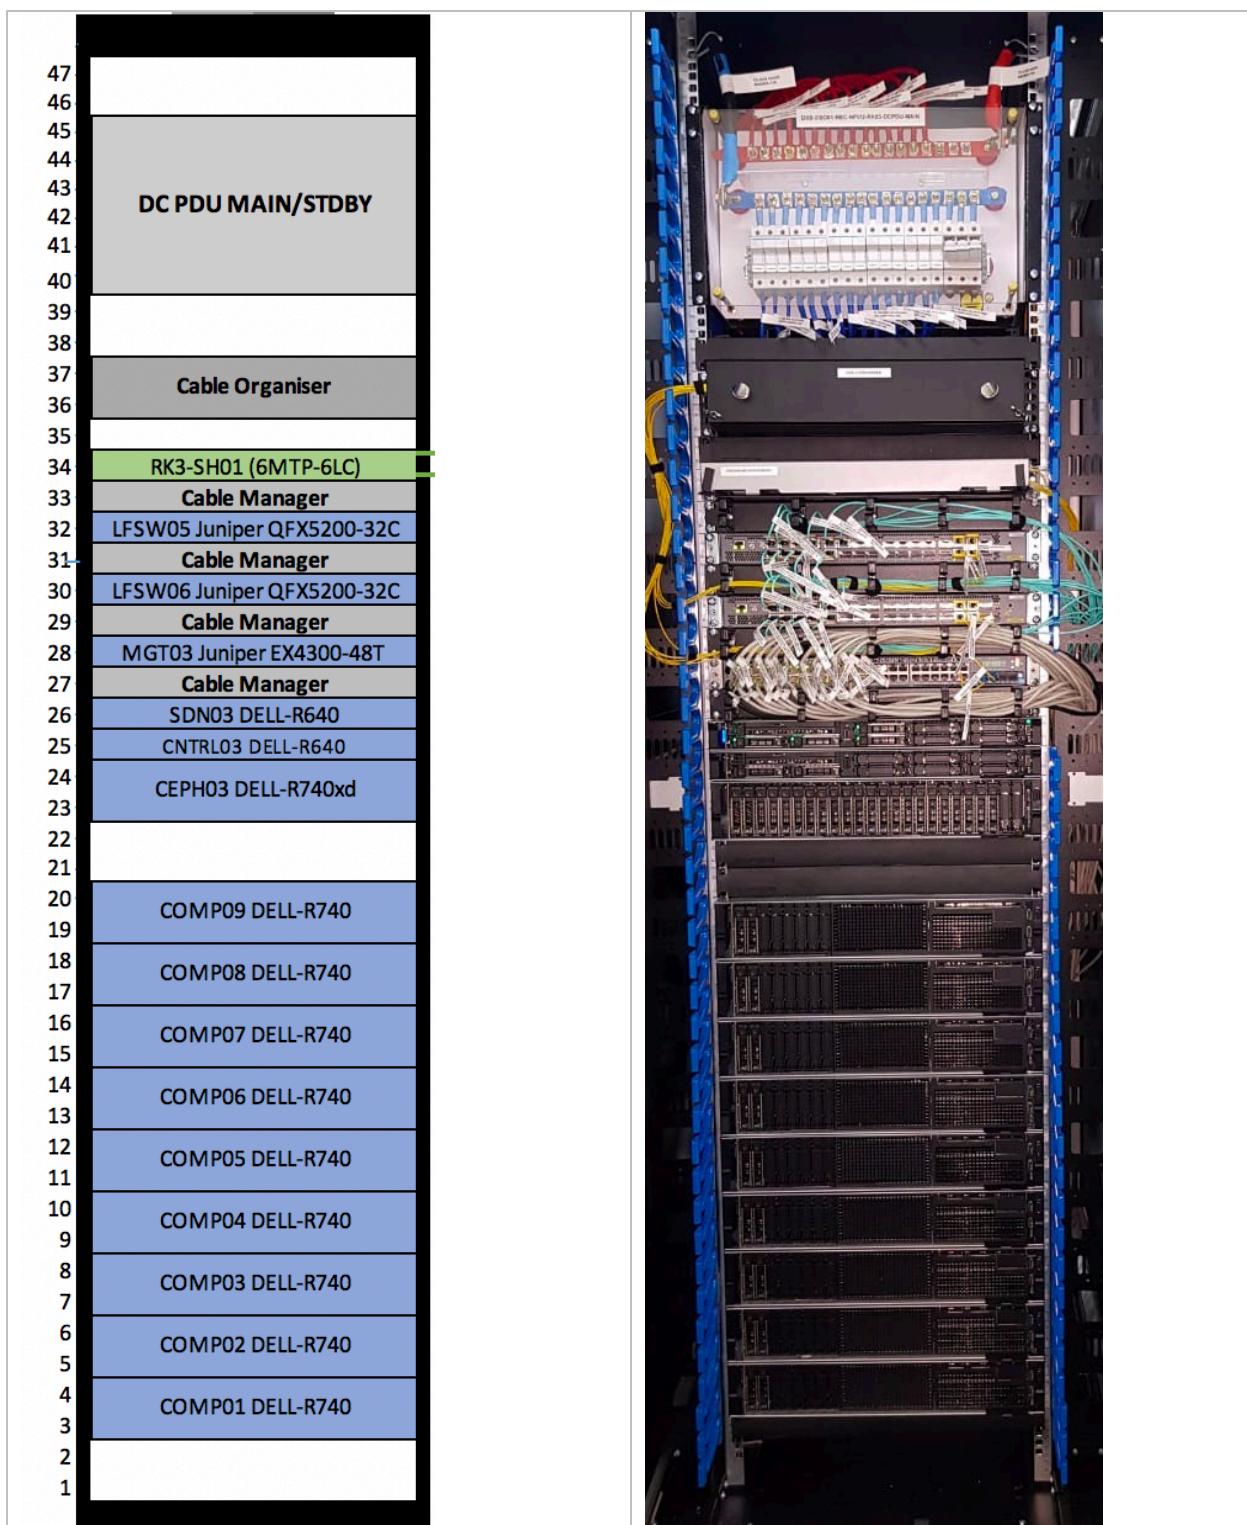



3.4 Rack04- AUH-A2E07-NEC-NFVI2-RK04

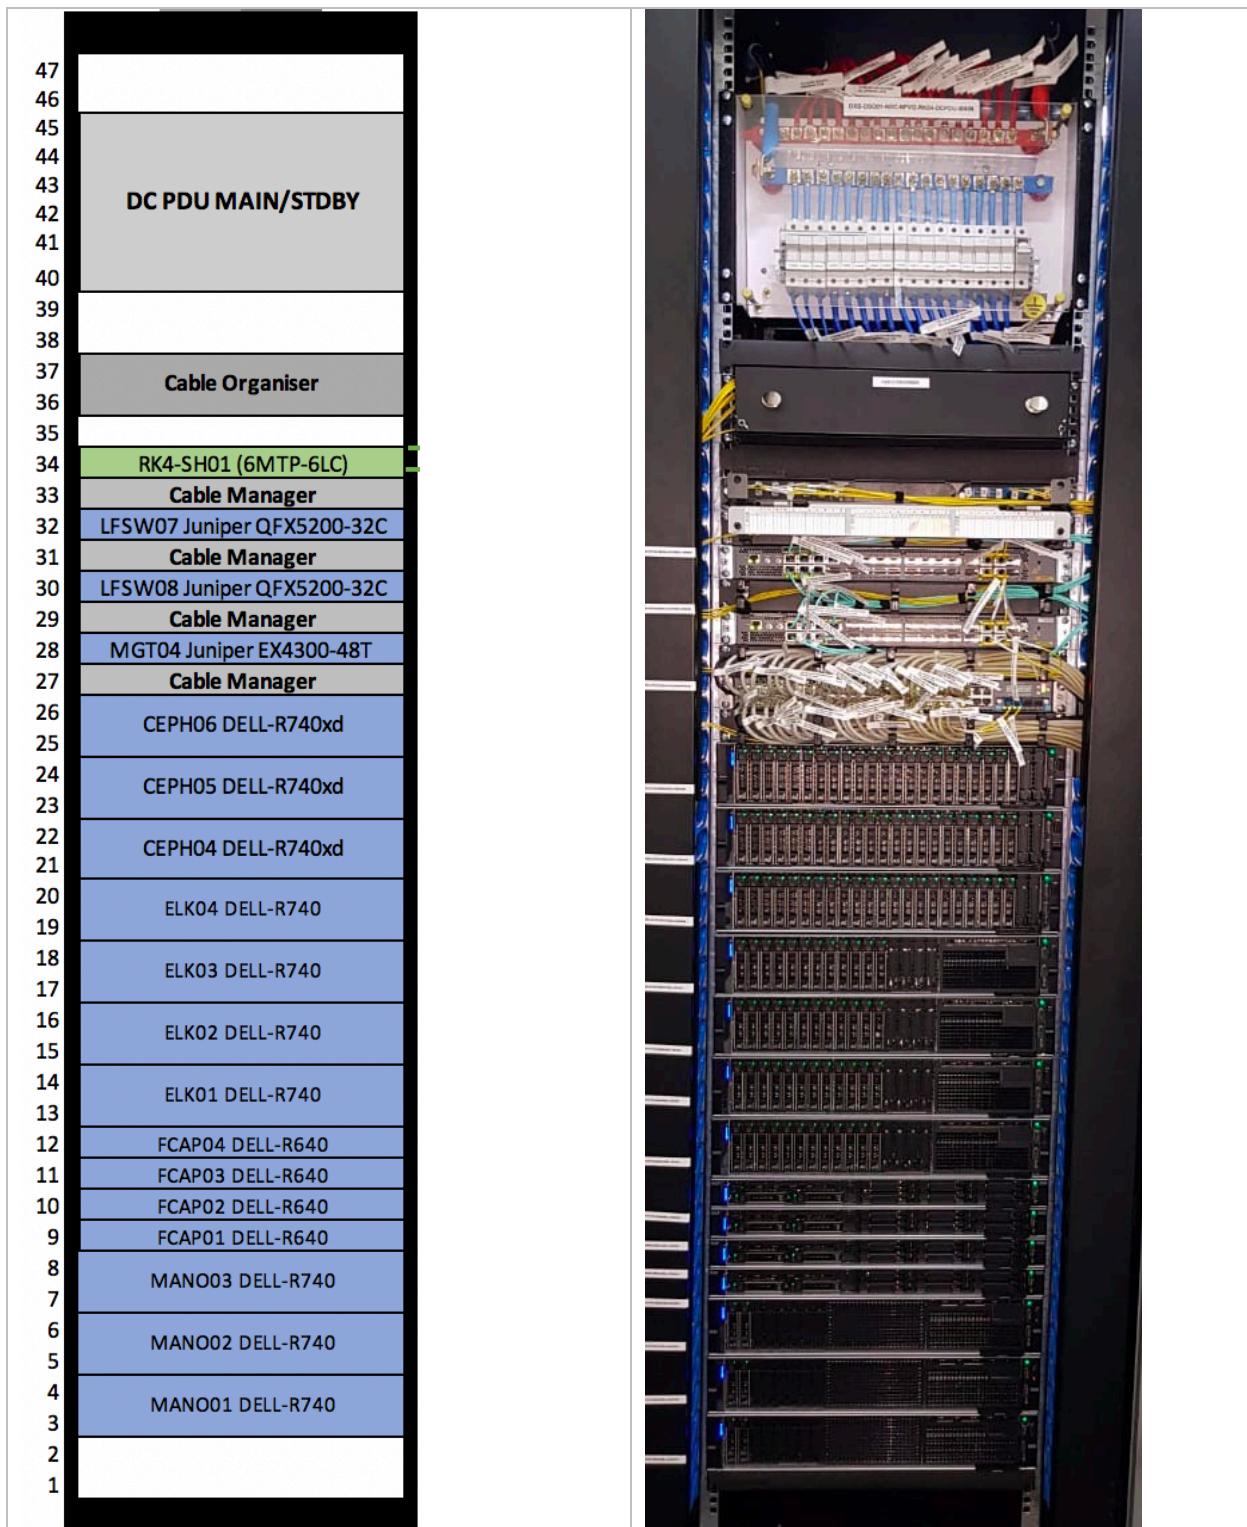

3.5 ODF01- AUH-A2E07-NEC-NFVI2-ODF01



3.6 ODF02- AUH-A2E07-NEC-NFVI2-ODF02






4. Diagram's

4.1 Device Layout


Datacentre Gateway (DC-GW, Juniper MX10003)

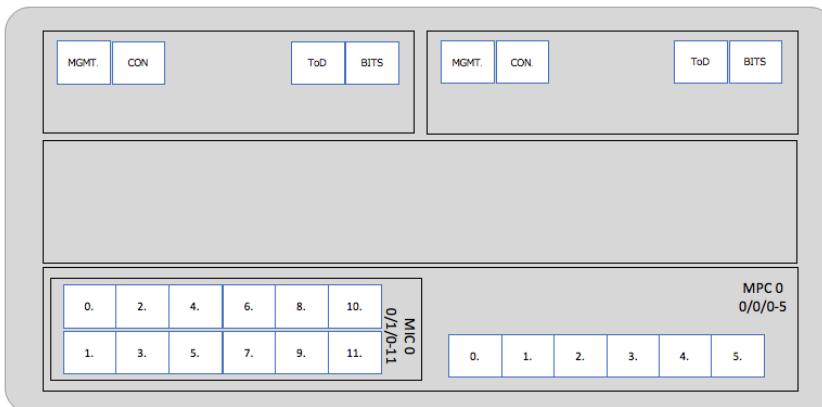

Spine/Leaf Switch (SPSW, Juniper QFX5200-32C)




Core Management Switch (MGMT, Juniper QFX5100-48S)







Management Switch (MGMT, Juniper EX4300-48T)



DELL PowerEdge R740/R740xd 2U Server

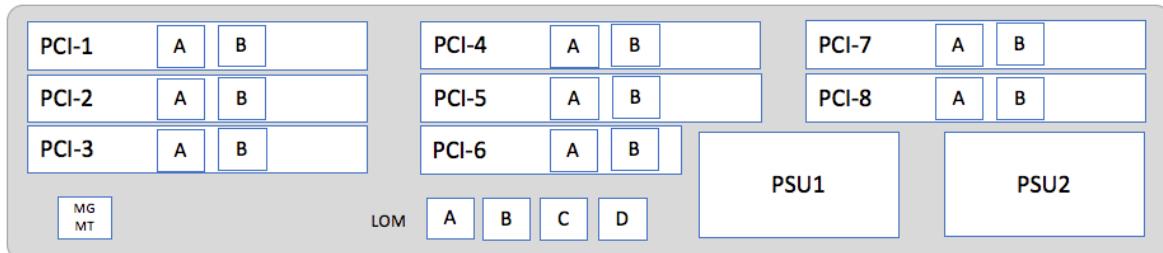


DELL PowerEdge R640 1U Server

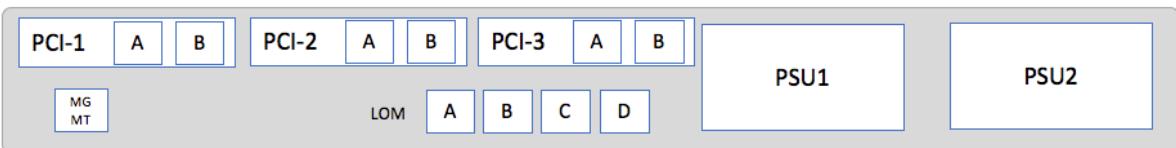


4.2 Connectivity Layout


4.2.1 High Level Connectivity Diagram (Part 1/2)

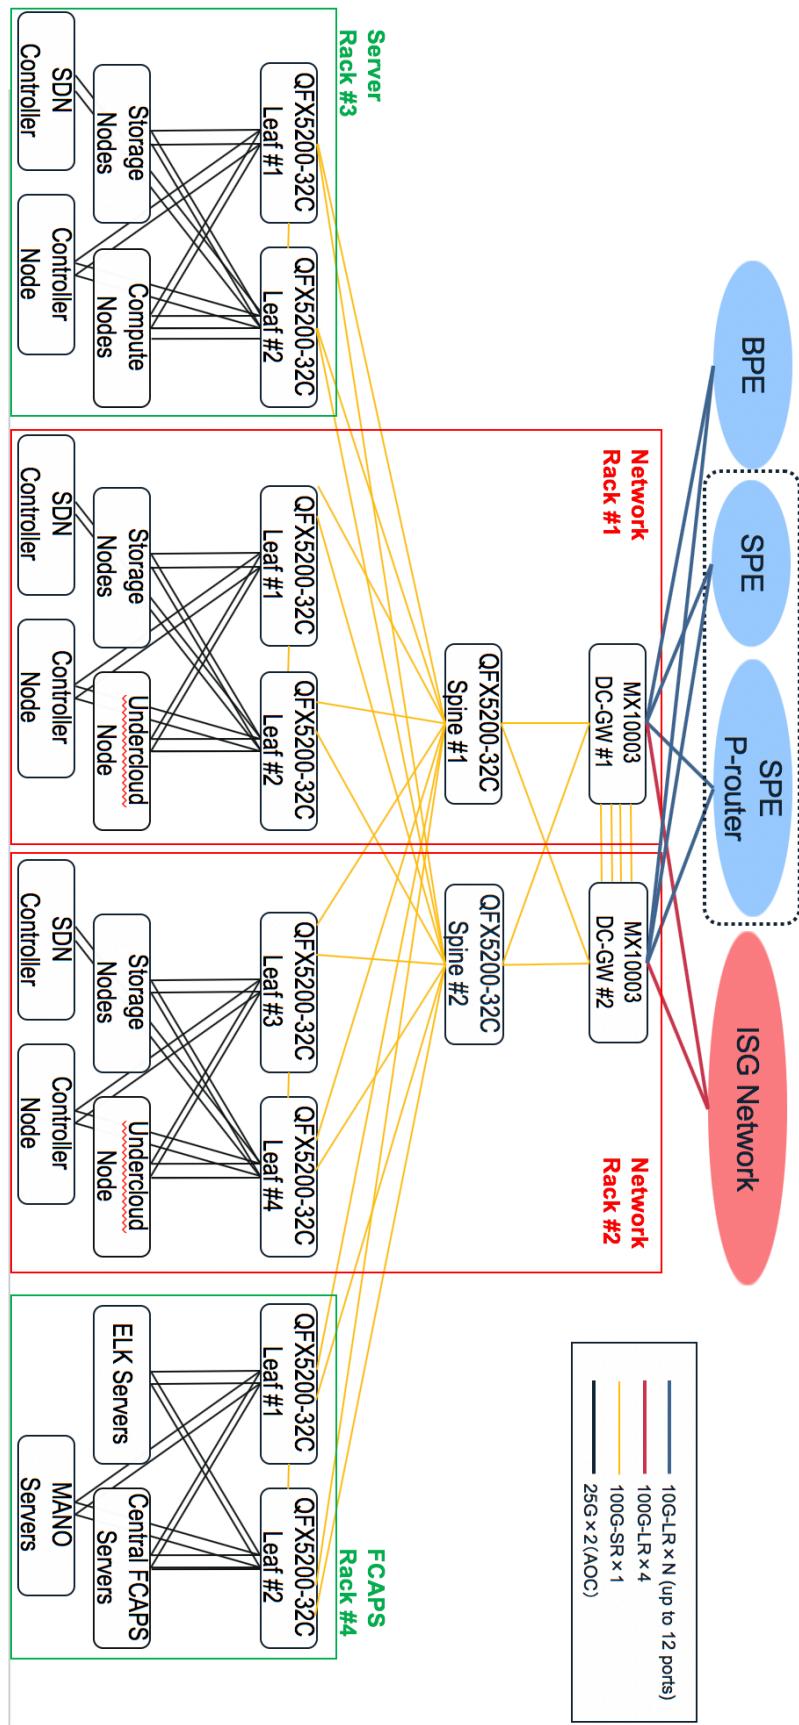


4.2.2 High Level Connectivity Diagram (Part 2/2)

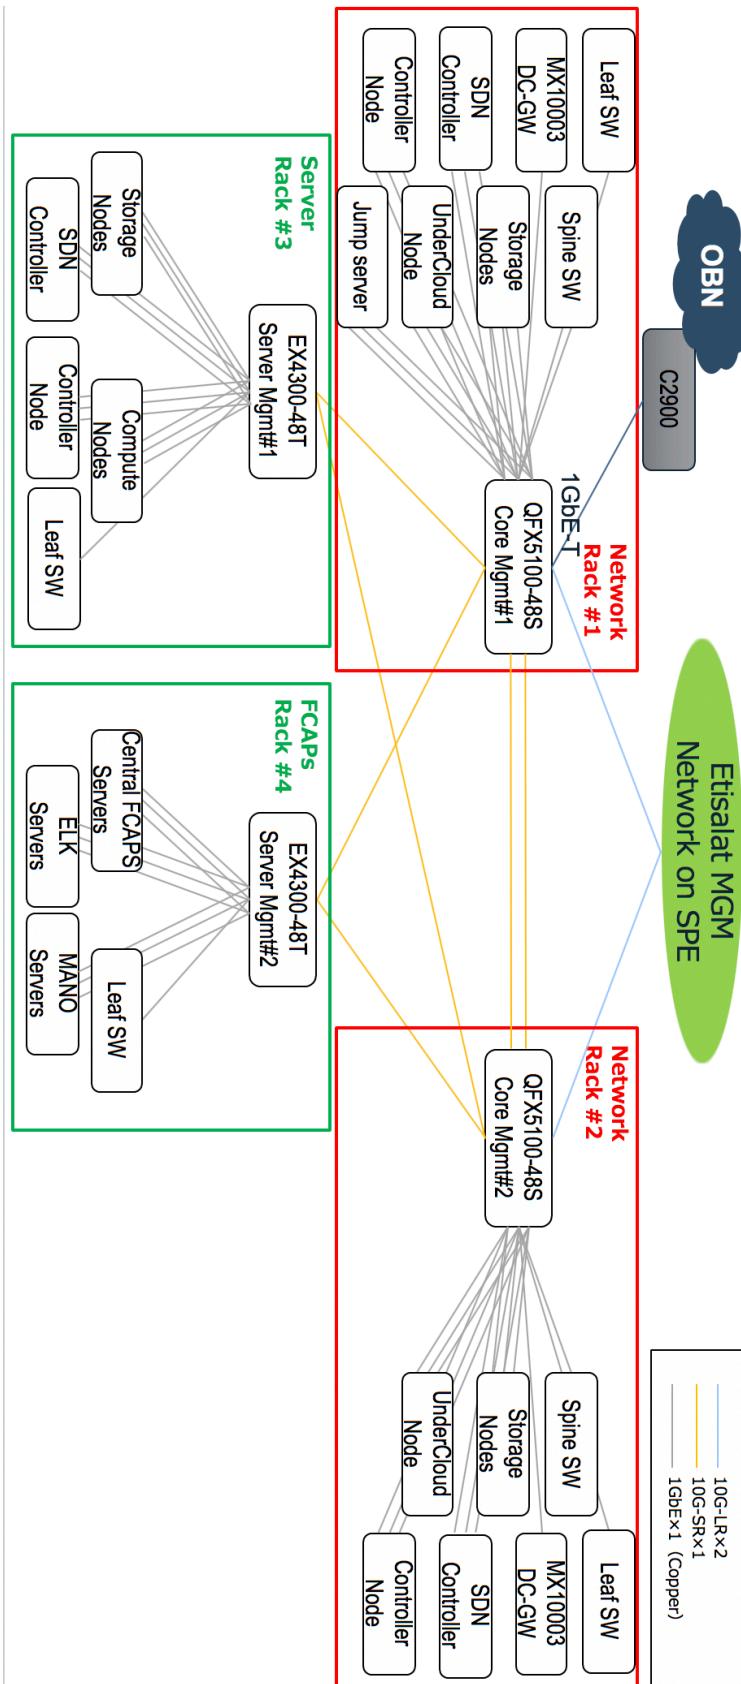


4.2.3 Core Racks to ODF

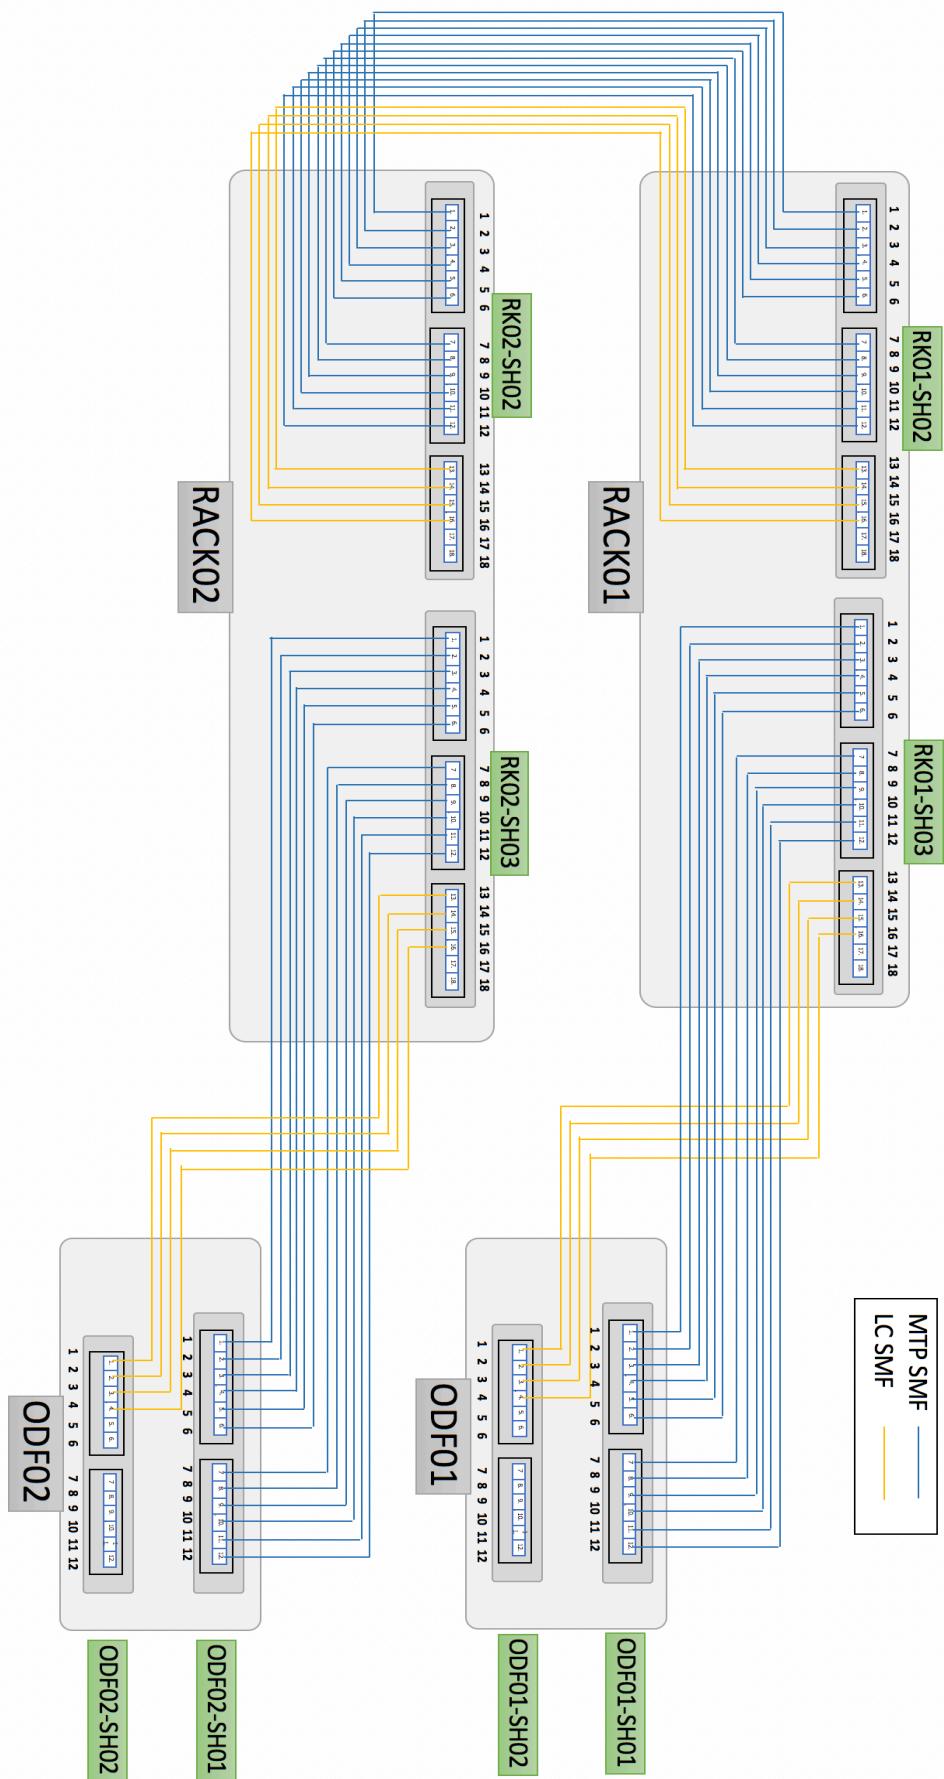


4.2.4 Server Racks to ODF

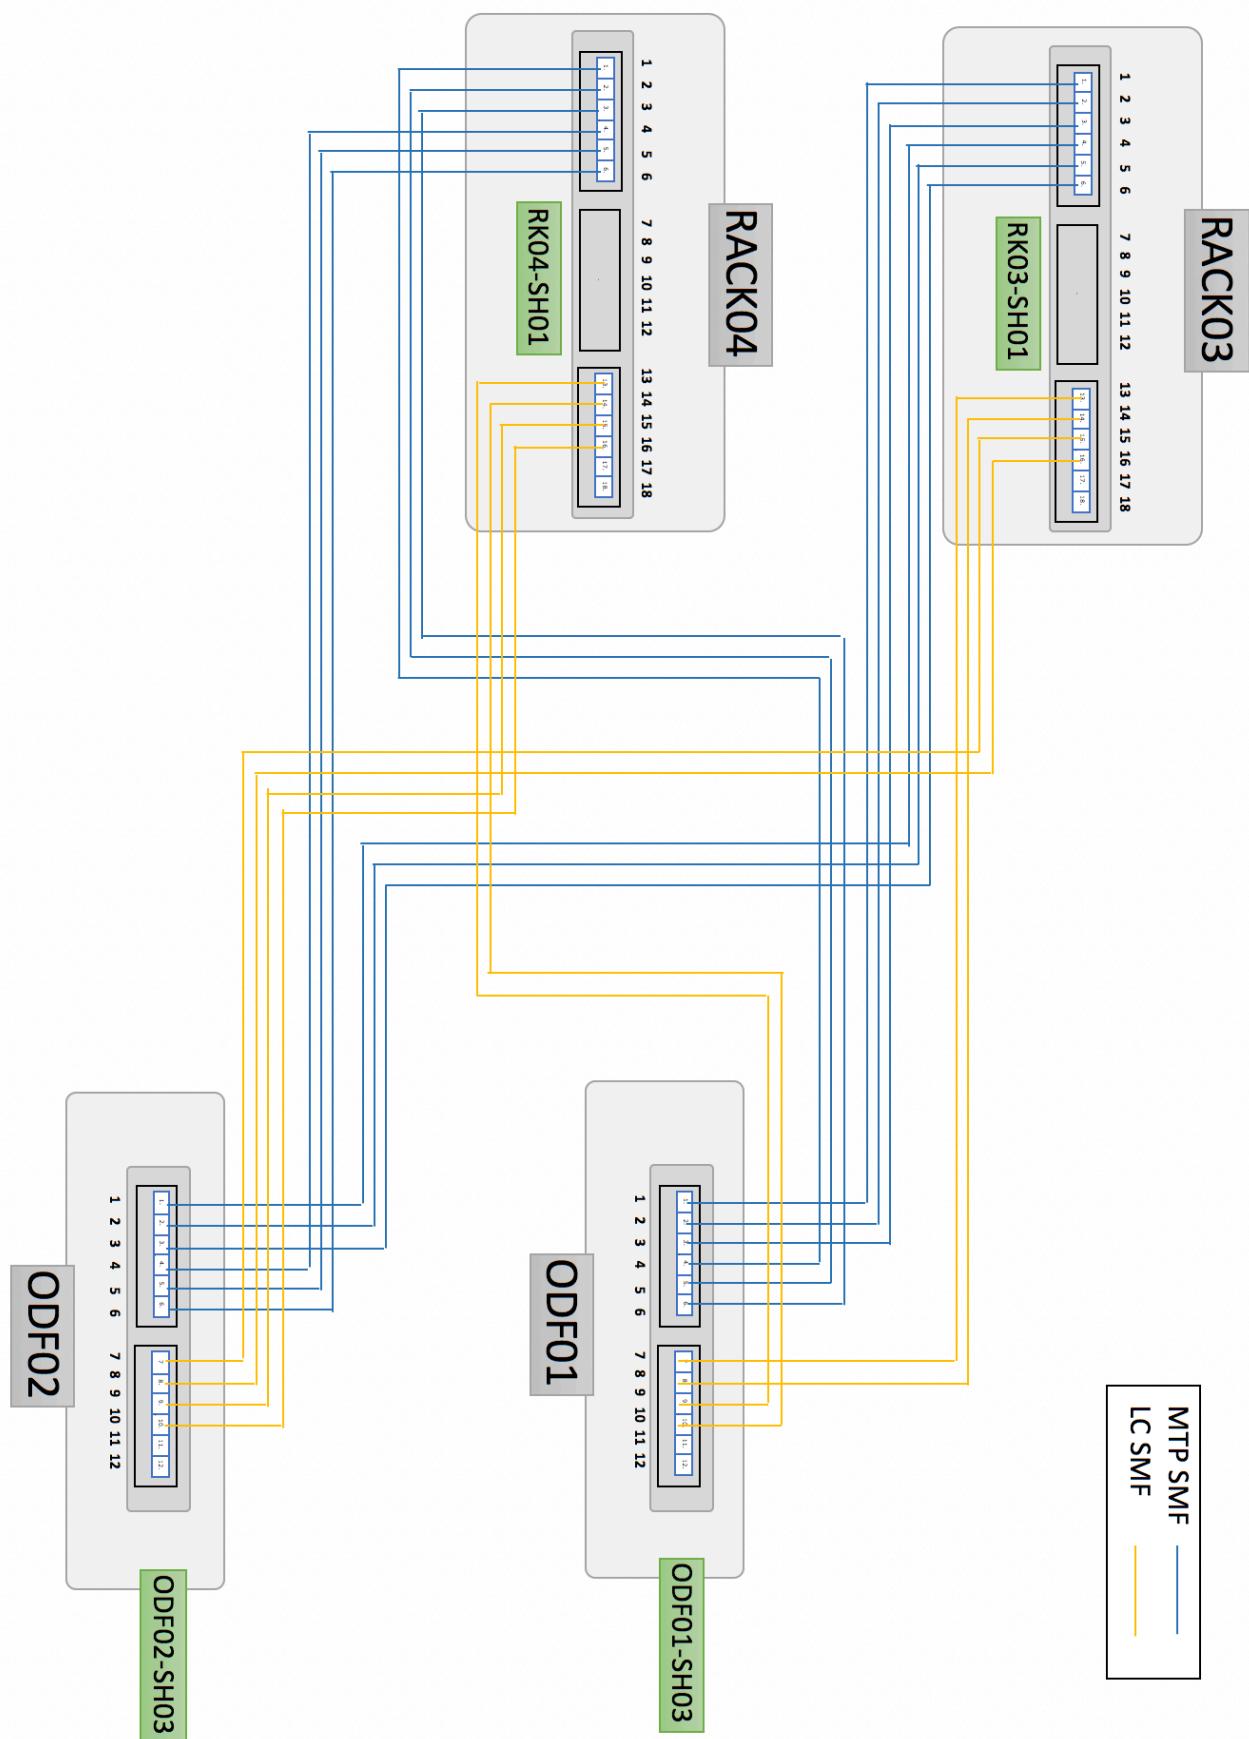


4.2.5 DC-Gateway to Spine Switch

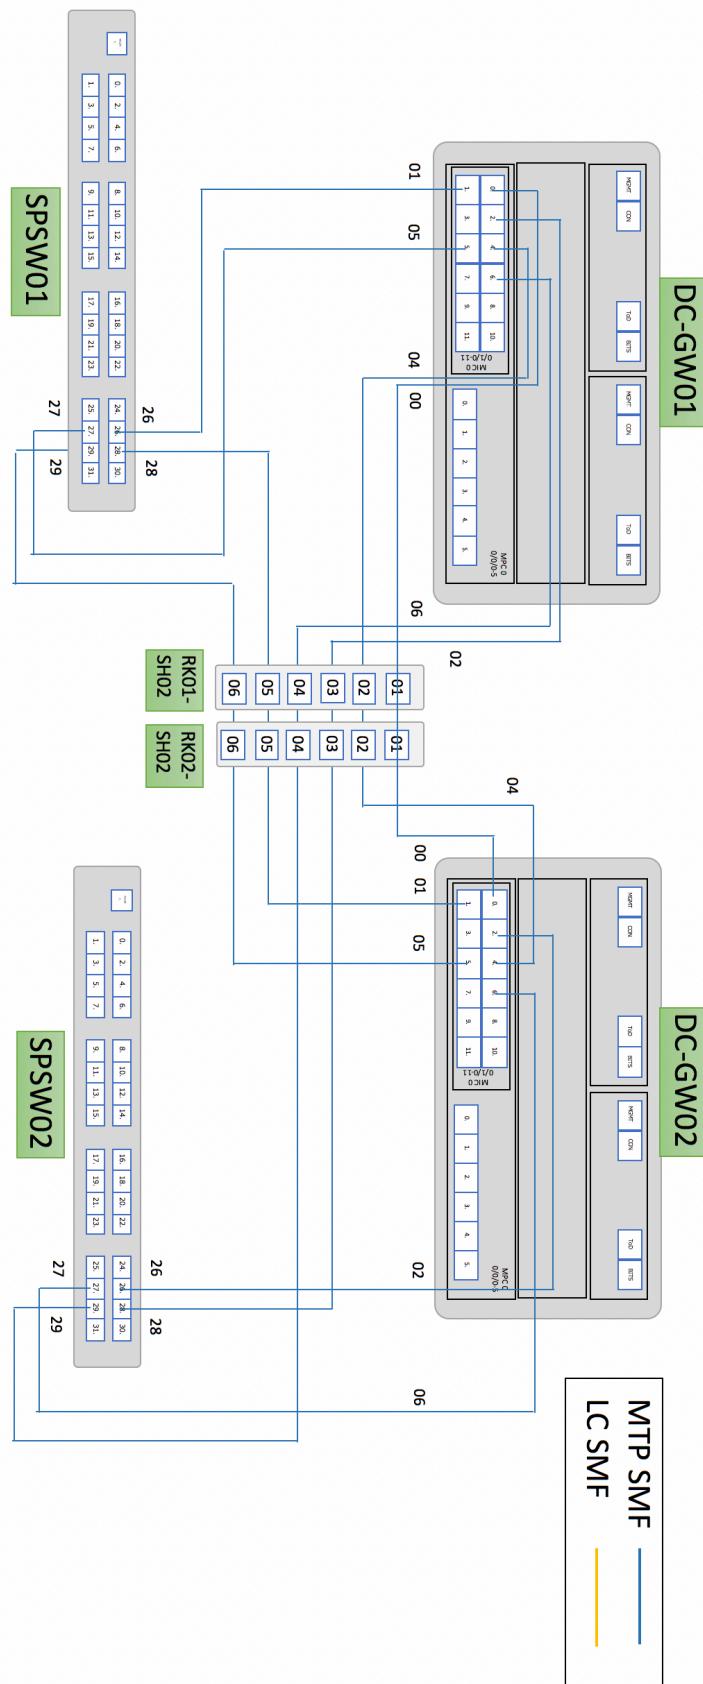


4.2.6 Spine Switch to Leaf Switch

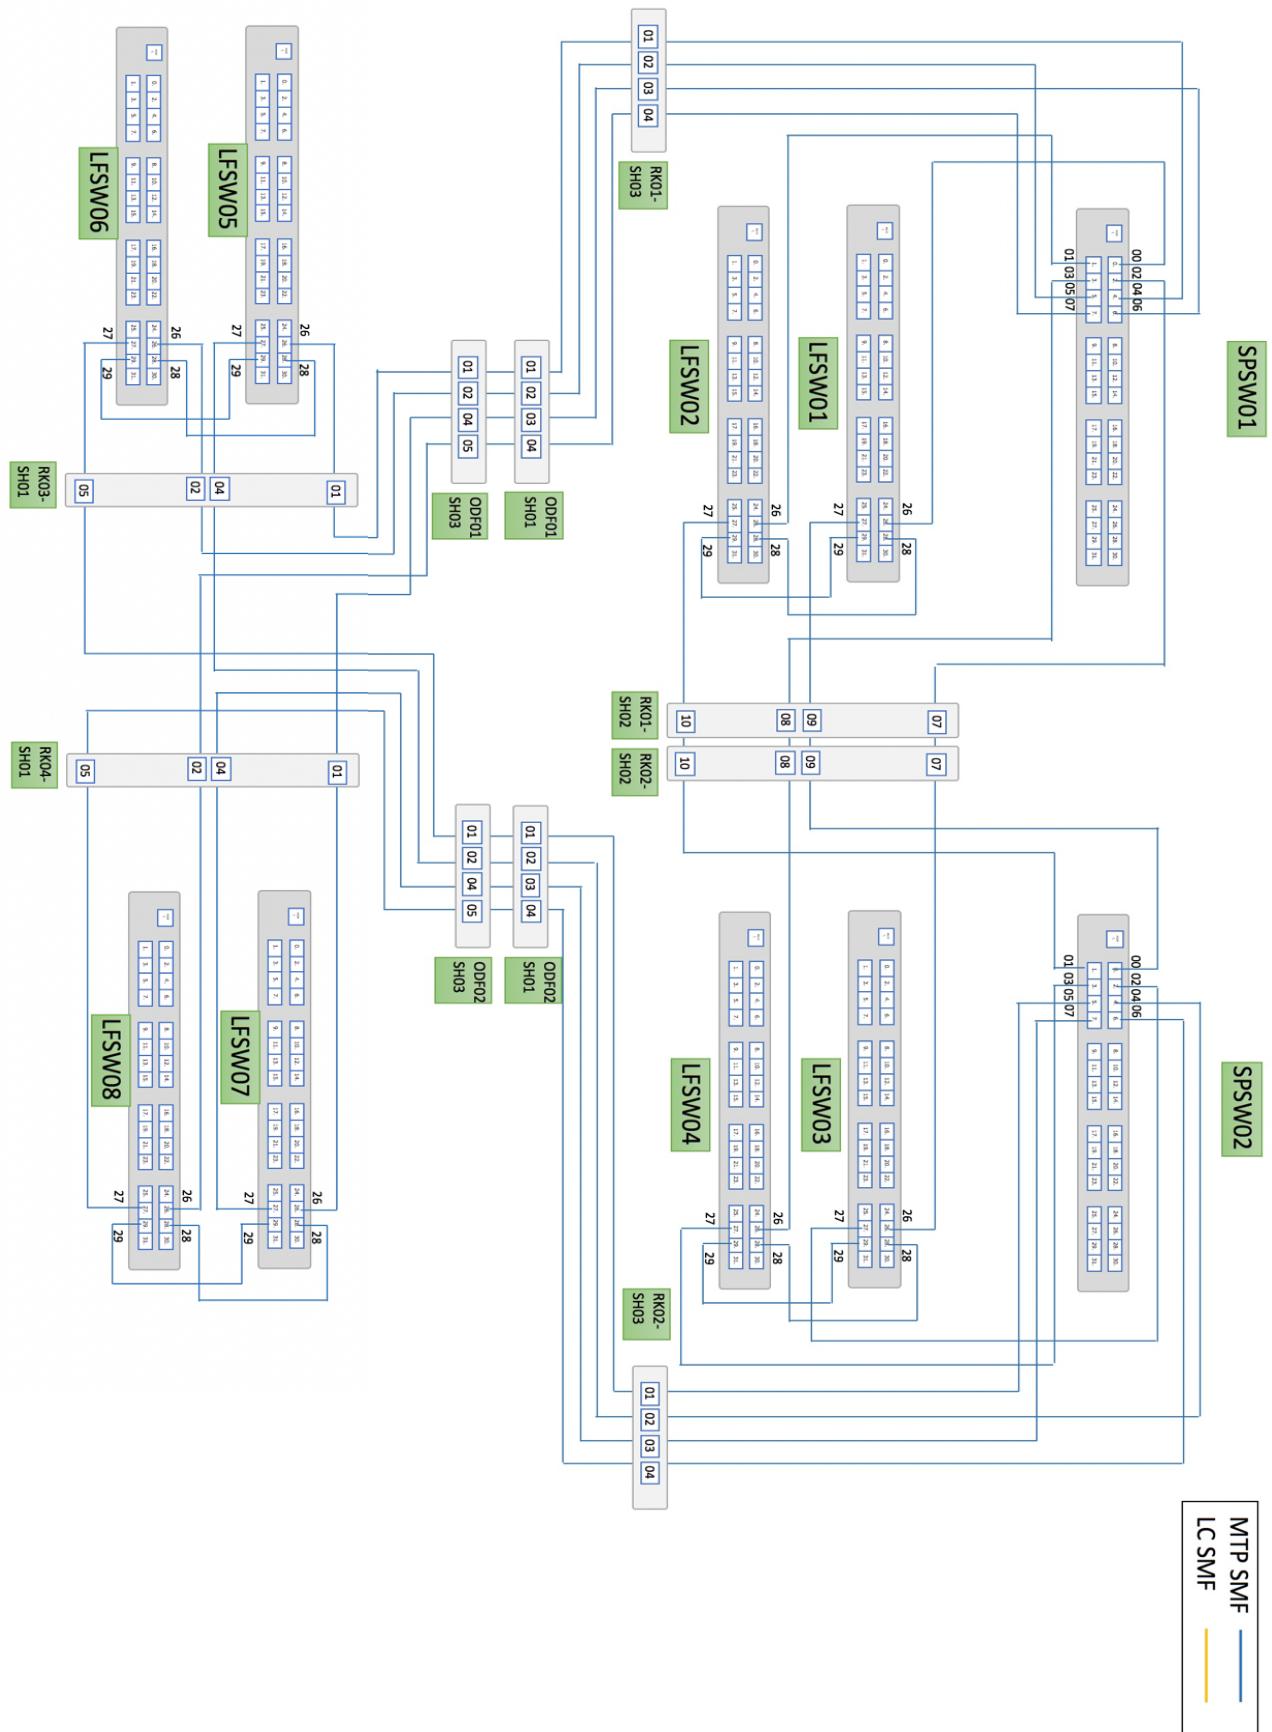

4.2.7 Management Switch Connectivity

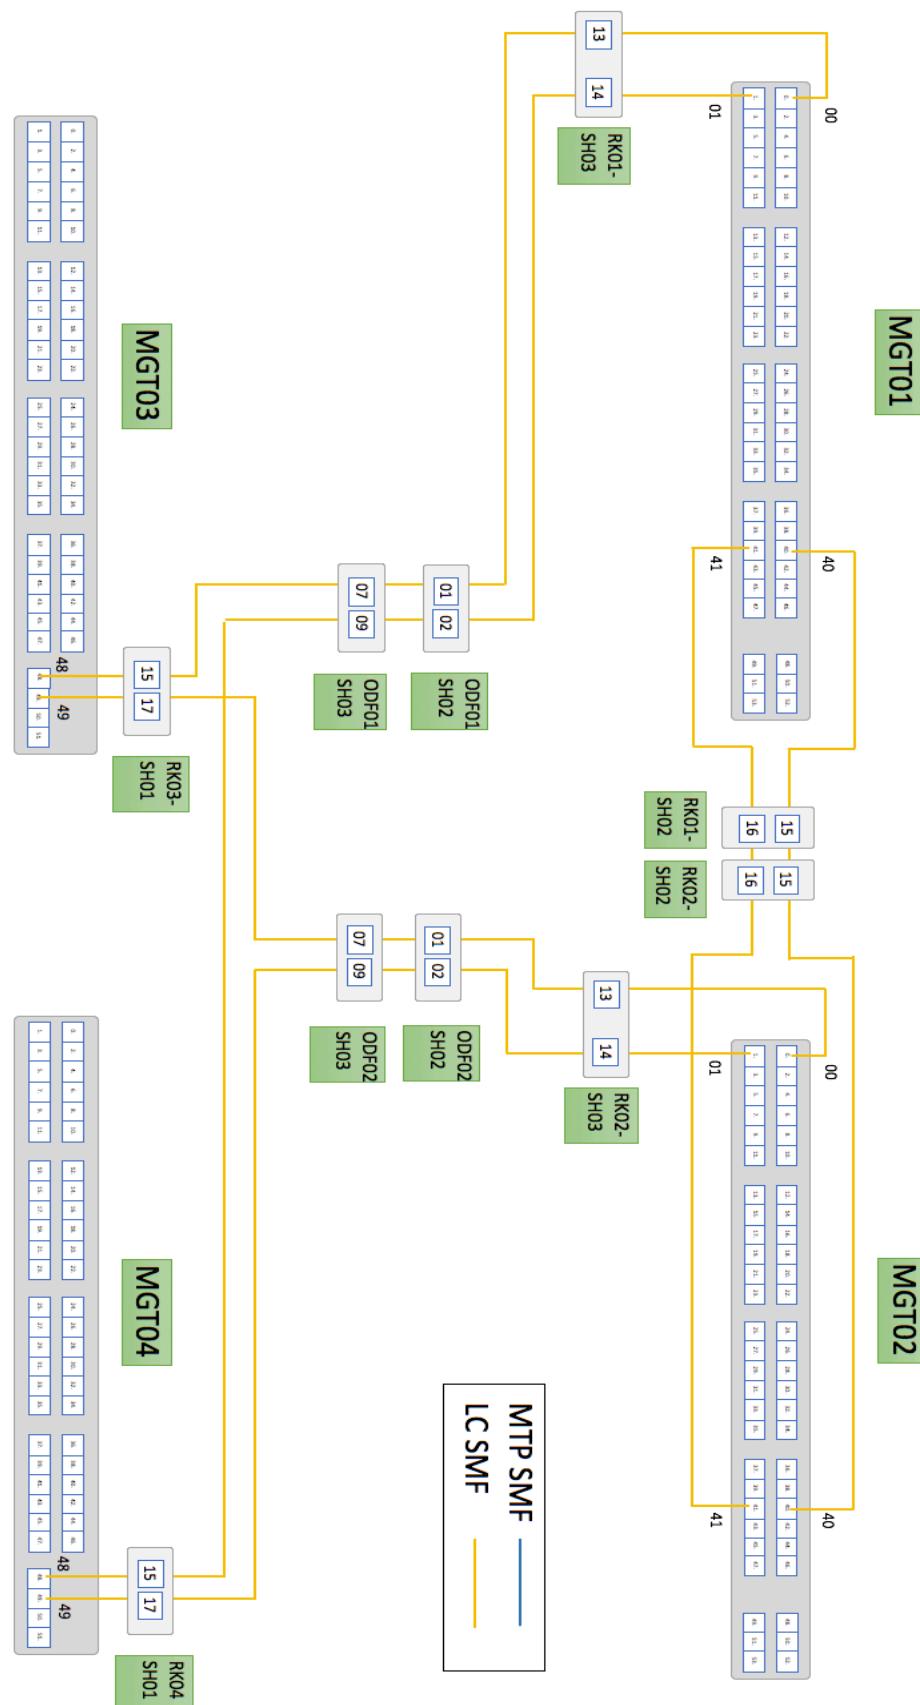

4.2.8 Uplinks

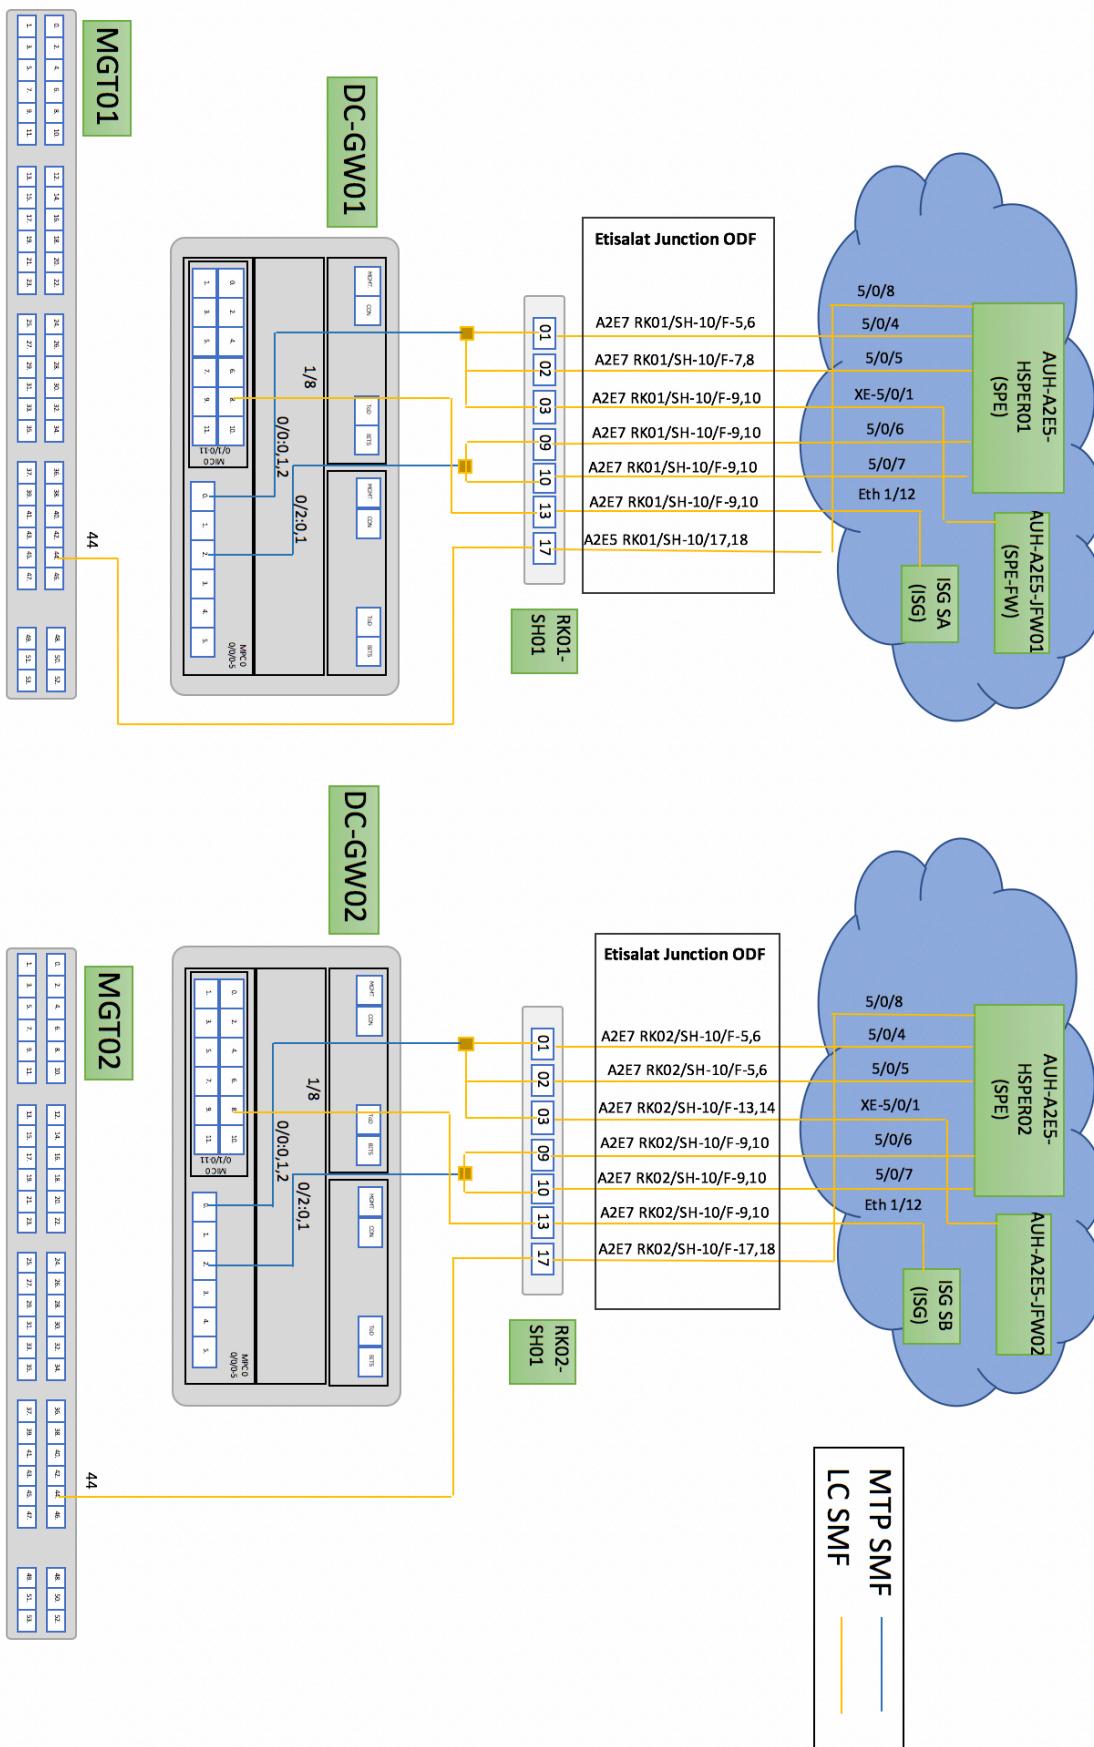



5. Connectivity Matrix

5.1 Rack01- AUH-A2E07-NEC-NFVI2-RK01

Interface Type	Cable Type	From	From Node	To	To Node
RK01					
RK01-SH01 <-> Devices					
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT01	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/0:0	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT02	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/0:1	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT03	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/0:2	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT04	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/0:3	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT05	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/1:0	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT06	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/1:1	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT07	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/1:2	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT08	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/1:3	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT09	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/2:0	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT10	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/2:1	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT11	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/2:2	DCGW01
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT12	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/2:3	DCGW01
100G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT13	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/8	DCGW01

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				 NEC Netcracker
---	---	--	--	--	---

100G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT14	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/9	DCGW01
100G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT15	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/10	DCGW01
100G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT16	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/11	DCGW01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT17	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-MGT01-0/0/44	MGT01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT18	RK01-SH01	AUH-A2E07-JUNIPER-NFVI2-RK01-MGT01-0/0/45	MGT01
RK01-SH02 <-> RK02-SH02					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT01	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT01	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT02	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT02	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT03	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT03	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT04	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT04	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT05	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT05	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT06	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT06	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT07	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT07	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT08	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT08	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT09	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT09	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT10	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT10	RK02-SH02

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT11	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT11	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT12	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT12	RK02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT13	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT13	RK02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT14	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT14	RK02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT15	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT15	RK02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT16	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT16	RK02-SH02

RK01-SH02 <-> Devices

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT01	RK01-SH02	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/0	DCGW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT02	RK01-SH02	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/4	DCGW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT03	RK01-SH02	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/2	DCGW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT04	RK01-SH02	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/6	DCGW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT05	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/28	SPSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT06	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/29	SPSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT07	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/2	SPSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT08	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/3	SPSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT09	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/27	LFSW01

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				
---	---	--	--	--	--

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT10	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/27	LFSW02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT15	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/40	MGT01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT16	RK01-SH02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/41	MGT01
RK01-SH03 <-> ODF01-SH01/SH02					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT01	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT01	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT02	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT02	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT03	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT03	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT04	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT04	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT05	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT05	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT06	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT06	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT07	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT07	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT08	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT08	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT09	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT09	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT10	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT10	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT11	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT11	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT12	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT12	ODF01-SH01

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				 NEC Netcracker
---	---	--	--	--	---

10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT13	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT01	ODF01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT14	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT02	ODF01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT15	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT03	ODF01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT16	RK01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT04	ODF01-SH02
RK01-SH03 <-> Devices					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT01	RK01-SH03	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/4	SPSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT02	RK01-SH03	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/5	SPSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT03	RK01-SH03	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/6	SPSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT04	RK01-SH03	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/7	SPSW01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT13	RK01-SH03	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/00	MGT01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT14	RK01-SH03	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/01	MGT01
DCGW01					
1G	UTP	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-MGMT1	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/16	MGT01
1G	UTP	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-MGMT2	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/17	MGT01
40G to 4x10G	SMF Breakout	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/0:1,2,3	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT01,PORT02,PORT03,P ORT04	RK01-SH01
40G to 4x10G	SMF Breakout	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/1:0,1,2,3	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT05,PORT06,PORT07,P ORT08	RK01-SH01

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)			 NEC Netcracker
---	---	--	--	---

40G to 4x10G	SMF Breakout	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-XE-0/0/2:0,1,2,3	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT09,PORT10,PORT11,PORT12	RK01-SH01
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/4	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT02	RK01-SH02
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/5	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/27	SPSW01
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/6	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT04	RK01-SH02
100G	SMF-LC	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/8	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT13	RK01-SH01
100G	SMF-LC	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/9	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT14	RK01-SH01
100G	SMF-LC	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/10	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT15	RK01-SH01
100G	SMF-LC	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/11	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT16	RK01-SH01
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/0	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT01	RK01-SH02
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/1	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/26	SPSW01
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/2	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT03	RK01-SH02
SPSW01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-MGMT	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/18	MGT01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/0	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/26	LFSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/1	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/26	LFSW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/2	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT07	RK01-SH02

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/3	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT08	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/4	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT01	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/5	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT02	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/6	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT03	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/7	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT04	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/26	SPSW01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/1	DCGW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/27	SPSW01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/5	DCGW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/28	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT05	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/29	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT06	RK01-SH02
LFSW01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-MGMT	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/19	MGT01
100G	AOC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0:0,1,2,3	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PCI-1-A, CNTRL01-PCI-1-B, UNDRCLD01-PCI-1-A, UNDRCLD01-PCI-1-B	CNTRL01, UNDRCLD 01
100G	AOC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0:1:0,1,2,3	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PCI-4-B, CEPH01-PCI-4-A SDN01-PCI-1-A, SDN01-PCI-1-B	CEPH01, SDN01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/26	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/0	SPSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/27	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT09	RK01-SH02

	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	
---	---	--

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/28	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/28	LFSW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/29	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/29	LFSW02
LFSW02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-MGMT	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/20	MGT01
100G	AOC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0:0,1,2,3	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PCI-2-B CNTRL01-PCI-2-A, UNDRCLD01-PCI-2-B, UNDRCLD01-PCI-2-A	CNTRL01, UNDRCLD 01
100G	AOC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/1:0,1,2,3	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PCI-8-A, CEPH01-PCI-8-B, SDN01-PCI-2-B, SDN01-PCI-2-A	CEPH01, SDN01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/26	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/1	SPSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/27	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT10	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/28	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/28	LFSW01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/29	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/29	LFSW01
MGT01					
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/00	MGT01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT13	RK01-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/01	MGT01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT14	RK01-SH03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/16	MGT01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-MGMT1	DCGW01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/17	MGT01	AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-MGMT2	DCGW01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/18	MGT01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-MGMT	SPSW01



1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/19	MGT01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-MGMT	LFSW01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/20	MGT01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-MGMT	LFSW02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/21	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-MGMT	JMP01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/22	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-LOM-A	JMP01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/23	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-MGMT	CNTRL01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/24	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-LOM-A	CNTRL01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/25	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-MGMT	UNDRCLD 01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/26	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-LOM-A	UNDRCLD 01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/27	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-MGMT	CEPH01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/28	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-LOM-A	CEPH01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/29	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-MGMT1	SDN01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/30	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-LOM-A	SDN01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/31	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-LOM-B	JMP01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/32	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-LOM-B	UNDRCLD 01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/33	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-LOM-B	CEPH01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/34	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-LOM-B	SDN01



10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/40	MGT01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT15	RK01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/41	MGT01	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT16	RK01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/44	MGT01	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT17	RK01-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/45	MGT01	AUH-A2E07-NEC-NFVI2-RK01-SH01-PORT18	RK01-SH01
AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-MGMT	JMP01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/21	MGT01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-LOM-A	JMP01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/22	MGT01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-LOM-B	JMP01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/31	MGT01
AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-MGMT	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/23	MGT01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-LOM-A	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/24	MGT01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PCI-1-A	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0:0	LFSW01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PCI-1-B	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0:1	LFSW01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PCI-2-A	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0:1	LFSW02
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PCI-2-B	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0:0	LFSW02
AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-MGMT	UNDRCLD01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/25	MGT01



1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-LOM-A	UNDRCL D01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/26	MGT01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-LOM-B	UNDRCL D01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/32	MGT01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-PCI-1-A	UNDRCL D01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/0:2	LFSW01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-PCI-1-B	UNDRCL D01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/0:3	LFSW01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-PCI-2-A	UNDRCL D01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/0:3	LFSW02
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-PCI-2-B	UNDRCL D01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/0:2	LFSW02
AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-MGMT	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/27	MGT01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-LOM-A	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/28	MGT01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-LOM-B	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/33	MGT01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PCI-4-A	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/1:1	LFSW01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PCI-4-B	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/1:0	LFSW01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PCI-8-A	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/1:0	LFSW02
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PCI-8-B	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/1:1	LFSW02
AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-MGMT1	SDN01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/29	MGT01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-LOM-A	SDN01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/30	MGT01

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

1G	UTP	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-LOM-B	SDN01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/34	MGT01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-PCI-1-A	SDN01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/1:2	LFSW01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-PCI-1-B	SDN01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/1:3	LFSW01
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-PCI-2-A	SDN01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/1:3	LFSW02
25G	AOC	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-PCI-2-B	SDN01	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/1:2	LFSW02

5.2 Rack02- AUH-A2E07-NEC-NFVI2-RK02

Interface Type	Cable Type	From	From Node	To	To Node
RK02					
RK02-SH01 <-> Devices					
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT01	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0:0	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT02	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0:1	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT03	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0:2	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT04	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0:3	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT05	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0:1:0	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT06	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0:1:1	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT07	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0:1:2	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT08	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0:1:3	DCGW02

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				 NEC Netcracker
---	---	--	--	--	---

40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT09	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0/2:0	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT10	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0/2:1	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT11	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0/2:2	DCGW02
40G to 4x10G	SMF Breakout	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT12	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0/2:3	DCGW02
100G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT13	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/8	DCGW02
100G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT14	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/9	DCGW02
100G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT15	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/10	DCGW02
100G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT16	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/11	DCGW02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT17	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-MGT02-0/0/44	MGT02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT18	RK02-SH01	AUH-A2E07-JUNIPER-NFVI2-RK02-MGT02-0/0/45	MGT02

RK02-SH02 <-> RK01-SH02

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT01	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT01	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT02	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT02	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT03	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT03	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT04	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT04	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT05	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT05	RK01-SH02

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT06	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT06	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT07	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT07	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT08	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT08	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT09	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT09	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT10	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT10	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT11	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT11	RK01-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT12	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT12	RK01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT13	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT13	RK01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT14	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT14	RK01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT15	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT15	RK01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT16	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT16	RK01-SH02
RK02-SH02 <-> Devices					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT01	RK02-SH02	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/0	DCGW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT02	RK02-SH02	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/4	DCGW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT03	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/28	SPSW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT04	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/29	SPSW02

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT05	RK02-SH02	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/1	DCGW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT06	RK02-SH02	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/5	DCGW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT07	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/26	LFSW03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT08	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/26	LFSW04
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT09	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/0	SPSW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT10	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/1	SPSW02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT15	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/40	MGT02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT16	RK02-SH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/41	MGT02

RK02-SH03 <-> ODF02-SH01/SH02

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT01	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT01	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT02	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT02	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT03	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT03	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT04	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT04	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT05	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT05	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT06	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT06	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT07	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT07	ODF02-SH01

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT08	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT08	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT09	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT09	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT10	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT10	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT11	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT11	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT12	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT12	ODF02-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT13	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT01	ODF02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT14	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT02	ODF02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT15	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT03	ODF02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT16	RK02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT04	ODF02-SH02
RK02-SH03 <-> Devices					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT01	RK02-SH03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/4	SPSW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT02	RK02-SH03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/5	SPSW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT03	RK02-SH03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/6	SPSW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT04	RK02-SH03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/7	SPSW02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT13	RK02-SH03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/00	MGT02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT14	RK02-SH03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/01	MGT02
DCGW02					

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)			 NEC Netcracker
---	---	--	--	---

1G	UTP	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-MGMT1	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/16	MGT02
1G	UTP	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-MGMT2	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/17	MGT02
40G to 4x10G	SMF Breakout	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0:0,1,2,3	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT01,PORT02,PORT03,PORT04	RK02-SH01
40G to 4x10G	SMF Breakout	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0/1:0,1,2,3	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT05,PORT06,PORT07,PORT08	RK02-SH01
40G to 4x10G	SMF Breakout	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-XE-0/0/2:0,1,2,3	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT09,PORT10,PORT11,PORT12	RK02-SH01
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/4	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT02	RK02-SH02
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/5	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT06	SPSW02
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/6	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/27	RK02-SH02
100G	SMF-LC	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/8	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT13	RK02-SH01
100G	SMF-LC	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/9	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT14	RK02-SH01
100G	SMF-LC	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/10	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT15	RK02-SH01
100G	SMF-LC	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/11	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT16	RK02-SH01
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/0	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT01	RK02-SH02
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/1	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT05	SPSW02
100G	SMF-MPO	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/2	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/26	RK02-SH02



SPSW02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW01-MGMT	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/18	MGT02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/0	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT09	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/1	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT10	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/2	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/27	LFSW03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/3	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/27	LFSW04
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/4	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT01	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/5	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT02	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/6	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT03	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/7	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT04	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/26	SPSW02	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/2	DCGW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/27	SPSW02	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/6	DCGW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/28	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT03	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/29	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT04	RK02-SH02
LFSW03					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-MGMT	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/19	MGT02
100G	AOC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0:0,1,2,3	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PCI-1-A, CNTRL02-PCI-1-B,	CNTRL02, UNDRCLD 02

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

				UNDRCLD02-PCI-1-A, UNDRCLD02-PCI-1-B	
100G	AOC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/1:0,1,2,3	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PCI-4-B, CEPH02-PCI-4-A, SDN02-PCI-1-A, SDN02-PCI-1-B	CEPH02, SDN02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/26	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT07	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/27	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/2	SPSW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/28	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/28	LFSW04
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/29	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/29	LFSW04
LFSW04					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-MGMT	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/20	MGT02
100G	AOC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/0:0,1,2,3	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PCI-2-B, CNTRL02-PCI-2-A, UNDRCLD02-PCI-2-B, UNDRCLD02-PCI-2-A	CNTRL02, UNDRCLD02
100G	AOC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/1:0,1,2,3	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PCI-8-A, DELL-CEPH02-PCI-8-B, SDN02-PCI-2-B, SDN02-PCI-2-A	CEPH02, SDN02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/26	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT08	RK02-SH02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/27	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/3	SPSW02
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/28	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/28	LFSW03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/29	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/29	LFSW03
MGT02					

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)			 NEC Netcracker
---	---	--	--	---

10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/00	MGT02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT13	RK02-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/01	MGT02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT14	RK02-SH03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/16	MGT02	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-MGMT1	DCGW02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/17	MGT02	AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-MGMT2	DCGW02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/18	MGT02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-MGMT	SPSW02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/19	MGT02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-MGMT	LFSW03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/20	MGT02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-MGMT	LFSW04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/21	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-LOM-MGMT	CNTRL02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/22	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-LOM-A	CNTRL02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/23	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-MGMT	UNDRCLD02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/24	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-LOM-A	UNDRCLD02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/25	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-MGMT	CEPH02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/26	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-LOM-A	CEPH02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/27	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-MGMT	SDN02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/28	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-LOM-A	SDN02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/29	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-LOM-B	UNDRCLD02

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)			 NEC Netcracker
---	---	--	--	---

1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/30	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-LOM-B	CEPH02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/31	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-LOM-B	SDN02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/40	MGT02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT15	RK02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/41	MGT02	AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT16	RK02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/44	MGT02	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT17	RK02-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/45	MGT02	AUH-A2E07-NEC-NFVI2-RK02-SH01-PORT18	RK02-SH01
AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-LOM-MGMT	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/21	MGT02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-LOM-A	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/22	MGT02
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PCI-1-A	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/0:0	LFSW03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PCI-1-B	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/0:1	LFSW03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PCI-2-A	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/0:1	LFSW04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PCI-2-B	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/0:0	LFSW04
AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-MGMT	UNDRCL D02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/23	MGT02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-LOM-A	UNDRCL D02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/24	MGT02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-LOM-B	UNDRCL D02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/29	MGT02

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)			 NEC Netcracker
---	---	--	--	---

25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-PCI-1-A	UNDRCL D02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0:0:2	LFSW03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-PCI-1-B	UNDRCL D02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0:0:3	LFSW03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-PCI-2-A	UNDRCL D02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0:0:3	LFSW04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-PCI-2-B	UNDRCL D02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0:0:2	LFSW04
AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-MGMT	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0:25	MGT02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-LOM-A	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0:26	MGT02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-LOM-B	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0:30	MGT02
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PCI-4-A	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0:1:1	LFSW03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PCI-4-B	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0:1:0	LFSW03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PCI-8-A	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0:1:0	LFSW04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PCI-8-B	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0:1:1	LFSW04
AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-MGMT	SDN02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0:27	MGT02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-LOM-A	SDN02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0:28	MGT02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-LOM-B	SDN02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0:31	MGT02
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-PCI-1-A	SDN02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0:1:2	LFSW03

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-PCI-1-B	SDN02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/1:3	LFSW03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-PCI-2-A	SDN02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/1:3	LFSW04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-PCI-2-B	SDN02	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/1:2	LFSW04

5.3 Rack03- AUH-A2E07-NEC-NFVI2-RK03

Interface Type	Cable Type	From	From Node	To	To Node
RK03					
RK03-SH01 <-> ODF01-SH03, ODF02-SH03					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT01	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT01	ODF01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT02	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT02	ODF01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT03	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT03	ODF01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT04	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT01	ODF02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT05	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT02	ODF02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT06	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT03	ODF02-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT15	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT07	ODF01-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT16	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT08	ODF01-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT17	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT07	ODF02-SH03

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT18	RK03-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT08	ODF02-SH03
RK03-SH01 <-> Devices					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT01	RK03-SH01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/26	LFSW05
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT02	RK03-SH01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/26	LFSW06
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT04	RK03-SH01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/27	LFSW05
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT05	RK03-SH01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/27	LFSW06
10G	MMF	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT15	RK03-SH01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/48	MGT03
10G	MMF	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT17	RK03-SH01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/49	MGT03
LFSW05					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-MGMT	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/0	MGT03
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0:0,1,2,3	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PCI-1-A, CNTRL03-PCI-1-B, CEPH03-PCI-4-B, CEPH03-PCI-4-A	CNTRL03, CEPH03
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/1:0,1	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PCI-1-A, SDN03-PCI-1-B	SDN03
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/2:0,1,2,3	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-1-A, COMP02-PCI-1-A, COMP03-PCI-1-A, COMP04-PCI-1-A	COMP01, COMP02, COMP03, COMP04
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/3:0,1,2,3	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-4-A, COMP02-PCI-4-A, COMP03-PCI-4-A, COMP04-PCI-4-A	COMP01, COMP02, COMP03, COMP04



100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/4:0,1,2,3	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-8-A, COMP02-PCI-8-A, COMP03-PCI-8-A, COMP04-PCI-8-A	COMP01, COMP02, COMP03, COMP04
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/5:0,1,2,3	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-1-A, COMP06-PCI-1-A, COMP07-PCI-1-A, COMP08-PCI-1-A	COMP05, COMP06, COMP07, COMP08
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/6:0,1,2,3	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-4-A, COMP06-PCI-4-A, COMP07-PCI-4-A, COMP08-PCI-4-A	COMP05, COMP06, COMP07, COMP08
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/7:0,1,2,3	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-8-A, COMP06-PCI-8-A, COMP07-PCI-8-A, COMP08-PCI-8-A	COMP05, COMP06, COMP07, COMP08
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/8:0	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-1-A	COMP09
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/9:0	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-4-A	COMP09
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/10:0	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-8-A	COMP09
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/26	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT01	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/27	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT04	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/28	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/28	LFSW06
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/29	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/29	LFSW06
LFSW06					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-MGMT	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/1	MGT03



100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:0:0,1,2,3	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PCI-2-B, CNTRL03-PCI-2-A, CEPH03-PCI-8-A, CEPH03-PCI-8-B	CNTRL03, CEPH03
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:1:0,1	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PCI-2-B, SDN03-PCI-2-A	SDN03
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:2:0,1,2,3	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-1-B, COMP02-PCI-1-B, COMP03-PCI-1-B, COMP04-PCI-1-B	COMP01, COMP02, COMP03, COMP04
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:3:0,1,2,3	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-4-B, COMP02-PCI-4-B, COMP03-PCI-4-B, COMP04-PCI-4-B	COMP01, COMP02, COMP03, COMP04
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:4:0,1,2,3	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-8-B, COMP02-PCI-8-B, COMP03-PCI-8-B, COMP04-PCI-8-B	COMP01, COMP02, COMP03, COMP04
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:5:0,1,2,3	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-1-B, COMP06-PCI-1-B, COMP07-PCI-1-B, COMP08-PCI-1-B	COMP05, COMP06, COMP07, COMP08
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:6:0,1,2,3	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-4-B, COMP06-PCI-4-B, COMP07-PCI-4-B, COMP08-PCI-4-B	COMP05, COMP06, COMP07, COMP08
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:7:0,1,2,3	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-8-B, COMP06-PCI-8-B, COMP07-PCI-8-B, COMP08-PCI-8-B	COMP05, COMP06, COMP07, COMP08
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:8:0	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-1-B	COMP09
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:9:0	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-4-B	COMP09
100G	AOC	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:10:0	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-8-B	COMP09

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/26	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT02	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/27	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT05	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/28	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/28	LFSW05
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/29	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/29	LFSW05
MGT03					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/0	MGT03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-MGMT	LFSW05
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/1	MGT03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-MGMT	LFSW06
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/2	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-MGMT	CNTRL03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/3	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-LOM-A	CNTRL03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/4	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-MGMT	CEPH03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/5	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-LOM-A	CEPH03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/6	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-MGMT	SDN03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/7	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-LOM-A	SDN03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/8	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-MGMT	COMP01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/9	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-LOM-A	COMP01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/10	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-MGMT	COMP02



1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/11	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-LOM-A	COMP02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/12	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-MGMT	COMP03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/13	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-LOM-A	COMP03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/14	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-MGMT	COMP04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/15	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-LOM-A	COMP04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/16	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-MGMT	COMP05
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/17	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-LOM-A	COMP05
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/18	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-MGMT	COMP06
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/19	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-LOM-A	COMP06
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/20	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-MGMT	COMP07
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/21	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-LOM-A	COMP07
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/22	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-MGMT	COMP08
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/23	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-LOM-A	COMP08
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/24	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-MGMT	COMP09
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/25	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-LOM-A	COMP09
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/26	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-LOM-B	CEPH03



1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/27	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-LOM-B	SDN03
10G	MMF	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/48	MGT03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT15	RK03-SH01
10G	MMF	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/49	MGT03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT17	RK03-SH01
AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-MGMT	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/2	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-LOM-A	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/3	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PCI-1-A	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/0:0	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PCI-1-B	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/0:1	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PCI-2-A	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/0:1	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PCI-2-B	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/0:0	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-MGMT	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/4	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-LOM-A	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/5	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-LOM-B	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/26	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-PCI-4-A	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/0:3	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-PCI-4-B	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/0:2	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-PCI-8-A	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/0:2	LFSW06

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				 NEC Netcracker
---	---	--	--	--	---

25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-PCI-8-B	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:0:3	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-MGMT	SDN03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/6	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-LOM-A	SDN03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/7	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-LOM-B	SDN03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/27	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PCI-1-A	SDN03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/1:0	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PCI-1-B	SDN03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/1:1	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PCI-2-A	SDN03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/1:1	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PCI-2-B	SDN03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/1:0	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-MGMT	COMP01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/8	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-LOM-A	COMP01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/9	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-1-A	COMP01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/2:0	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-1-B	COMP01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/2:0	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-4-A	COMP01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/3:0	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-4-B	COMP01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/3:0	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-8-A	COMP01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/4:0	LFSW05

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				
---	---	--	--	--	--

25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PCI-8-B	COMP01	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/4:0	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-MGMT	COMP02	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/10	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-LOM-A	COMP02	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/11	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PCI-1-A	COMP02	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/2:1	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PCI-1-B	COMP02	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/2:1	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PCI-4-A	COMP02	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/3:1	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PCI-4-B	COMP02	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/3:1	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PCI-8-A	COMP02	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/4:1	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PCI-8-B	COMP02	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/4:1	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-MGMT	COMP03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/12	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-LOM-A	COMP03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/13	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PCI-1-A	COMP03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/2:2	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PCI-1-B	COMP03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/2:2	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PCI-4-A	COMP03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/3:2	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PCI-4-B	COMP03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/3:2	LFSW06



25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PCI-8-A	COMP03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/4:2	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PCI-8-B	COMP03	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/4:2	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-MGMT	COMP04	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/14	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-LOM-A	COMP04	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/15	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PCI-1-A	COMP04	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/2:3	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PCI-1-B	COMP04	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/2:3	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PCI-4-A	COMP04	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/3:3	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PCI-4-B	COMP04	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/3:3	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PCI-8-A	COMP04	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/4:3	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PCI-8-B	COMP04	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/4:3	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-MGMT	COMP05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/16	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-LOM-A	COMP05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/17	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-1-A	COMP05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/5:0	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-1-B	COMP05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/5:0	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-4-A	COMP05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/6:0	LFSW05

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				 NEC Netcracker
---	---	--	--	--	---

25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-4-B	COMP05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/6:0	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-8-A	COMP05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/7:0	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PCI-8-B	COMP05	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/7:0	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-MGMT	COMP06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/18	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-LOM-A	COMP06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/19	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PCI-1-A	COMP06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/5:1	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PCI-1-B	COMP06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/5:1	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PCI-4-A	COMP06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/6:1	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PCI-4-B	COMP06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/6:1	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PCI-8-A	COMP06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/7:1	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PCI-8-B	COMP06	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/7:1	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-MGMT	COMP07	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/20	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-LOM-A	COMP07	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/21	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PCI-1-A	COMP07	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/5:2	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PCI-1-B	COMP07	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/5:2	LFSW06

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				 NEC Netcracker
---	---	--	--	--	---

25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PCI-4-A	COMP07	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/6:2	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PCI-4-B	COMP07	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/6:2	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PCI-8-A	COMP07	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/7:2	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PCI-8-B	COMP07	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/7:2	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-MGMT	COMP08	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/22	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-LOM-A	COMP08	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/23	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PCI-1-A	COMP08	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/5:3	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PCI-1-B	COMP08	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/5:3	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PCI-4-A	COMP08	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/6:3	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PCI-4-B	COMP08	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/6:3	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PCI-8-A	COMP08	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/7:3	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PCI-8-B	COMP08	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/7:3	LFSW06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-MGMT	COMP09	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/24	MGT03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-LOM-A	COMP09	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/25	MGT03
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-1-A	COMP09	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/8:0	LFSW05

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)			
---	---	--	--	--

25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-1-B	COMP09	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:8:0	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-4-A	COMP09	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0:9:0	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-4-B	COMP09	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:9:0	LFSW06
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-8-A	COMP09	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0:10:0	LFSW05
25G	AOC	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PCI-8-B	COMP09	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0:10:0	LFSW06

5.4 Rack04- AUH-A2E07-NEC-NFVI2-RK04

Interface Type	Cable Type	From	From Node	To	To Node
RK04					
RK04-SH01 <-> ODF01-SH03, ODF02-SH03					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT01	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT04	ODF01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT02	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT05	ODF01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT03	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT06	ODF01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT04	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT04	ODF02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT05	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT05	ODF02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT06	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT06	ODF02-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT15	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT09	ODF01-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT16	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT10	ODF01-SH03

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)			 NEC Netcracker
---	---	--	--	---

10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT17	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT09	ODF02-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT18	RK04-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT10	ODF02-SH03
RK04-SH01 <-> Devices					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT01	RK04-SH01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/26	LFSW07
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT04	RK04-SH01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/27	LFSW07
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT02	RK04-SH01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/26	LFSW08
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT05	RK04-SH01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/27	LFSW08
10G	MMF	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT15	RK04-SH01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/48	MGT04
10G	MMF	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT17	RK04-SH01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/49	MGT04
LFSW07					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-MGMT	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/0	MGT04
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0:0,1,2,3	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PCI-4-B, CEPH04-PCI-4-A, CEPH05-PCI-4-B, CEPH05-PCI-4-A	CEPH04, CEPH05
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/1:0,1,2,3	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PCI-4-B, CEPH06-PCI-4-A, ELK01-PCI-4-B, ELK01-PCI-4-A	CEPH06, ELK01
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/2:0,1,2,3	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PCI-4-B, ELK02-PCI-4-A, ELK03-PCI-4-B, ELK03-PCI-4-A	ELK02, ELK03
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/3:0,1,2,3	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PCI-4-B, ELK04-PCI-4-A, FCAP01-PCI-1-A, FCAP01-PCI-1-B	ELK04, FCAP01

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/4:0,1,2,3	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PCI-1-A, FCAP02-PCI-1-B, FCAP03-PCI-1-A, FCAP03-PCI-1-B	FCAP02, FCAP03
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/5:0,1,2,3	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PCI-1-A, FCAP04-PCI-1-B, MANO01-PCI-4-B, MANO01-PCI-4-A	FCAP04, MANO01
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/6:0,1,2,3	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PCI-4-B, MANO02-PCI-4-A, MANO03-PCI-4-B, MANO03-PCI-4-A	MANO02, MANO03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/26	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT01	RK04-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/27	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT04	RK04-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/28	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/28	LFSW08
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/29	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/29	LFSW08
LFSW08					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-MGMT	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/1	MGT04
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/0:0,1,2,3	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PCI-8-A, CEPH04-PCI-8-B, CEPH05-PCI-8-A, CEPH05-PCI-8-B	CEPH04, CEPH05
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/1:0,1,2,3	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PCI-8-A, CEPH06-PCI-8-B, ELK01-PCI-8-A, ELK01-PCI-8-B	CEPH06, ELK01
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/2:0,1,2,3	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PCI-8-A, ELK02-PCI-8-B, ELK03-PCI-8-A, ELK03-PCI-8-B	ELK02, ELK03
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/3:0,1,2,3	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PCI-8-A, ELK04-PCI-8-B, FCAP01-PCI-2-B, FCAP01-PCI-2-A	ELK04, FCAP01



100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/4:0,1,2,3	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PCI-2-B, FCAP02-PCI-2-A, FCAP03-PCI-2-B, FCAP03-PCI-2-A	FCAP02, FCAP03
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/5:0,1,2,3	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PCI-2-B, FCAP04-PCI-2-A, MANO01-PCI-8-A, MANO01-PCI-8-B	FCAP04, MANO01
100G	AOC	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/6:0,1,2,3	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PCI-8-A, MANO02-PCI-8-B, MANO03-PCI-8-A, MANO03-PCI-8-B	MANO02, MANO03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/26	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT02	RK04-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/27	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT05	RK04-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/28	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/28	LFSW07
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/29	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/29	LFSW07
MGT04					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/0	MGT04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-MGMT	LFSW07
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/1	MGT04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-MGMT	LFSW08
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/2	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-MGMT	CEPH04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/3	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-LOM-A	CEPH04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/4	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-MGMT	CEPH05
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/5	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-LOM-A	CEPH05
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/6	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-MGMT	CEPH06



1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/7	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-LOM-A	CEPH06
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/8	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-MGMT	ELK01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/9	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-LOM-A	ELK01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/10	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-MGMT	ELK02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/11	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-LOM-A	ELK02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/12	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-MGMT	ELK03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/13	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-LOM-A	ELK03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/14	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-MGMT	ELK04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/15	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-LOM-A	ELK04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/16	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-MGMT	FCAP01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/17	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-LOM-A	FCAP01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/18	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-MGMT	FCAP02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/19	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-LOM-A	FCAP02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/20	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-MGMT	FCAP03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/21	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-LOM-A	FCAP03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/22	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-MGMT	FCAP04



1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/23	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-LOM-A	FCAP04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/24	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-MGMT	MANO01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/25	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-LOM-A	MANO01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/26	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-MGMT	MANO02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/27	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-LOM-A	MANO02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/28	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-MGMT	MANO03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/29	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-LOM-A	MANO03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/30	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-LOM-B	CEPH04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/31	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-LOM-B	CEPH05
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/32	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-LOM-B	CEPH06
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/33	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-LOM-B	ELK01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/34	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-LOM-B	ELK02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/35	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-LOM-B	ELK03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/36	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-LOM-B	ELK04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/37	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-LOM-B	FCAP01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/38	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-LOM-B	FCAP02

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)			
---	---	--	--	--

1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/39	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-LOM-B	FCAP03
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/40	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-LOM-B	FCAP04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/41	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-LOM-B	MANO01
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/42	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-LOM-B	MANO02
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/43	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-LOM-B	MANO03
1G	MMF	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/48	MGT04	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT15	RK04-SH01
1G	MMF	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/49	MGT04	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT17	RK04-SH01
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-MGMT	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/2	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-LOM-A	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/3	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-LOM-B	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/30	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PCI-4-A	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/0:1	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PCI-4-B	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/0:0	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PCI-8-A	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/0:0	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PCI-8-B	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/0:1	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-MGMT	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/4	MGT04



1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-LOM-A	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/5	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-LOM-B	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/31	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-PCI-4-A	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/0:3	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-PCI-4-B	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/0:2	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-PCI-8-A	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/0:2	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-PCI-8-B	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/0:3	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-MGMT	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/6	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-LOM-A	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/7	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-LOM-B	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/32	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PCI-4-A	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/1:1	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PCI-4-B	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/1:0	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PCI-8-A	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/1:0	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PCI-8-B	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/1:1	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-MGMT	ELK01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/8	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-LOM-A	ELK01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/9	MGT04



1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-LOM-B	ELK01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/33	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-PCI-4-A	ELK01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/1:3	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-PCI-4-B	ELK01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/1:2	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-PCI-8-A	ELK01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/1:2	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-PCI-8-B	ELK01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/1:3	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-MGMT	ELK02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/10	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-LOM-A	ELK02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/11	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-LOM-B	ELK02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/34	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PCI-4-A	ELK02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/2:1	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PCI-4-B	ELK02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/2:0	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PCI-8-A	ELK02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/2:0	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PCI-8-B	ELK02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/2:1	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-MGMT	ELK03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/12	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-LOM-A	ELK03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/13	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-LOM-B	ELK03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/35	MGT04



25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-PCI-4-A	ELK03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/2:3	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-PCI-4-B	ELK03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/2:2	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-PCI-8-A	ELK03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/2:2	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-PCI-8-B	ELK03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/2:3	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-MGMT	ELK04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/14	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-LOM-A	ELK04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/15	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-LOM-B	ELK04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/36	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PCI-4-A	ELK04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/3:1	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PCI-4-B	ELK04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/3:0	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PCI-8-A	ELK04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/3:0	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PCI-8-B	ELK04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/3:1	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-MGMT	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/16	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-LOM-A	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/17	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-LOM-B	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/37	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-PCI-1-A	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/3:2	LFSW07



25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-PCI-1-B	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/3:3	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-PCI-2-A	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/3:3	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-PCI-2-B	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/3:2	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-MGMT	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/18	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-LOM-A	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/19	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-LOM-B	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/38	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PCI-1-A	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/4:0	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PCI-1-B	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/4:1	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PCI-2-A	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/4:1	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PCI-2-B	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/4:0	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-MGMT	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/20	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-LOM-A	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/21	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-LOM-B	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/39	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-PCI-1-A	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/4:2	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-PCI-1-B	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/4:3	LFSW07

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				
---	---	--	--	--	--

25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-PCI-2-A	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/4:3	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-PCI-2-B	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/4:2	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-MGMT	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/22	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-LOM-A	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/23	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-LOM-B	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/40	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PCI-1-A	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/5:0	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PCI-1-B	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/5:1	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PCI-2-A	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/5:1	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PCI-2-B	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/5:0	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-MGMT	MANO01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/24	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-LOM-A	MANO01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/25	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-LOM-B	MANO01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/41	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-PCI-4-A	MANO01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/5:3	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-PCI-4-B	MANO01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/5:2	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-PCI-8-A	MANO01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/5:2	LFSW08

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)				
---	---	--	--	--	--

25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-PCI-8-B	MANO01	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/5:3	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-MGMT	MANO02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/26	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-LOM-A	MANO02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/27	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-LOM-B	MANO02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/42	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PCI-4-A	MANO02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/6:1	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PCI-4-B	MANO02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/6:0	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PCI-8-A	MANO02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/6:0	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PCI-8-B	MANO02	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/6:1	LFSW08
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03					
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-MGMT	MANO03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/28	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-LOM-A	MANO03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/29	MGT04
1G	UTP	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-LOM-B	MANO03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/43	MGT04
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-PCI-4-A	MANO03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/6:3	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-PCI-4-B	MANO03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/6:2	LFSW07
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-PCI-8-A	MANO03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/6:2	LFSW08
25G	AOC	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-PCI-8-B	MANO03	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/6:3	LFSW08

**5.5 ODF01- AUH-A2E07-NEC-NFVI2-ODF01**

Interface Type	Cable Type	From	From Node	To	To Node
ODF01					
ODF01-SH01 <-> RK01-SH03 (Central ODF 01 <-> Rack 01)					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT01	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT01	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT02	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT02	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT03	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT03	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT04	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT04	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT05	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT05	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT06	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT06	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT07	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT07	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT08	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT08	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT09	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT09	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT10	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT10	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT11	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT11	RK01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT12	ODF01-SH01	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT12	RK01-SH03
ODF01-SH02 <-> RK01-SH03 (Central ODF 01 <-> Rack 01)					

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)			
---	---	--	--	--

10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT01	ODF01-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT13	RK01-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT02	ODF01-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT14	RK01-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT03	ODF01-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT15	RK01-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT04	ODF01-SH02	AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT16	RK01-SH03
ODF01-SH03 <-> RK03-SH01 and RK04-SH01 (Central ODF 01 <-> Rack 03 and 04)					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT01	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT01	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT02	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT02	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT03	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT03	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT04	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT01	RK04-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT05	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT02	RK04-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT06	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT03	RK04-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT07	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT15	RK03-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT08	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT16	RK03-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT09	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT15	RK04-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT10	ODF01-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT16	RK04-SH01
Patching ODF01-SH01 <-> ODF01-SH03					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT01	ODF01-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT01	ODF01-SH03

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	
---	---	--

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT02	ODF01-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT02	ODF01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT03	ODF01-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT04	ODF01-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT04	ODF01-SH01	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT05	ODF01-SH03
Patching ODF01-SH02 <-> ODF01-SH03					
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT01	ODF01-SH02	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT07	ODF01-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT02	ODF01-SH02	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT09	ODF01-SH03
Patching ODF01-SH03 <-> ODF01-SH01 and ODF01-SH02					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT01	ODF01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT01	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT02	ODF01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT02	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT04	ODF01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT03	ODF01-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT05	ODF01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT04	ODF01-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT07	ODF01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT01	ODF01-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT09	ODF01-SH03	AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT02	ODF01-SH02

5.6 ODF02 - AUH-A2E07-NEC-NFVI2-ODF02

Interface Type	Cable Type	From	From Node	To	To Node
ODF01					
ODF02-SH01 <-> RK02-SH03 (Central ODF 02 <-> Rack 02)					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT01	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT01	RK02-SH03

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT02	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT02	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT03	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT03	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT04	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT04	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT05	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT05	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT06	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT06	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT07	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT07	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT08	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT08	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT09	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT09	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT10	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT10	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT11	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT11	RK02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT12	ODF02-SH01	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT12	RK02-SH03

ODF02-SH02 <-> RK02-SH03 (Central ODF 02 <-> Rack 02)

10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT01	ODF02-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT13	RK02-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT02	ODF02-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT14	RK02-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT03	ODF02-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT15	RK02-SH03
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT04	ODF02-SH02	AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT16	RK02-SH03

ODF02-SH03 <-> RK03-SH01 and RK04-SH01 (Central ODF 02 <-> Rack 03 and 04)

	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	
---	---	--

100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT01	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT04	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT02	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT05	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT03	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT06	RK03-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT04	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT04	RK04-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT05	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT05	RK04-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT06	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT06	RK04-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT07	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT17	RK03-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT08	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT18	RK03-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT09	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT17	RK04-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT10	ODF02-SH03	AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT18	RK04-SH01
Patching ODF02-SH01 <-> ODF02-SH03					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT01	ODF02-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT01	ODF02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT02	ODF02-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT02	ODF02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT03	ODF02-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT04	ODF02-SH03
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT04	ODF02-SH01	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT05	ODF02-SH03
Patching ODF02-SH02 <-> ODF02-SH03					
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT01	ODF02-SH02	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT07	ODF02-SH03



10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT02	ODF02-SH02	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT09	ODF02-SH03
Patching ODF02-SH03 <-> ODF02-SH01 and ODF02-SH02					
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT01	ODF02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT01	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT02	ODF02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT02	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT04	ODF02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT03	ODF02-SH01
100G	SMF-MPO	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT05	ODF02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT04	ODF02-SH01
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT07	ODF02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT01	ODF02-SH02
10G	SMF-LC	AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT09	ODF02-SH03	AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT02	ODF02-SH02



5.7 End to End Connectivity (DCGW, SPINE, LEAF, MGMT)

DCGW01

- AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/0 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT01 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT01 -> AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/0
- AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/1 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/26
- AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/2 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT03 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT03 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/28
- AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/4 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT02 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT02 -> AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/4
- AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/5 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/27
- AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/6 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT04 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT04 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/29

DCGW02

- AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/0 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT01 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT01 -> AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/0
- AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/1 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT05 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT05 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/28
- AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/2 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/26
- AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/4 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT02 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT02 -> AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/4
- AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/5 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT06 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT06 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/29
- AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/6 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/27



SPSW01

- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/0 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/26
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/1 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/26
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/2 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT07 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT07 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/26
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/3 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT08 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT08 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/26
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/4 -> AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT01 -> AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT01 -> AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT01 -> AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT01 -> AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-0/0/26
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/5 -> AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT02 -> AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT02 -> AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT02 -> AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT02 -> AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/26
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/6 -> AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT03 -> AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT03 -> AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT04 -> AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT01 -> AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/26
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/7 -> AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT04 -> AUH-A2E07-NEC-NFVI2-ODF01-SH01-PORT04 -> AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT05 -> AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT02 -> AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/26
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/26 -> AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/1
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/27 -> AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/5
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/28 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT05 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT05 -> AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/1
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-0/0/29 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT06 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT06 -> AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/5



SPSW02

- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/0 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT09 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT09 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-0/0/27
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/1 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT10 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT10 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-0/0/27
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/2 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-0/0/27
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/3 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-0/0/27
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/4 -> AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT01 -> AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT01 -> AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT01 -> AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT04 -> AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW05-0/0/27
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/5 -> AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT02 -> AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT02 -> AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT02 -> AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT05 -> AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-0/0/27
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/6 -> AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT03 -> AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT03 -> AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT04 -> AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT04 -> AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-0/0/27
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/7 -> AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT04 -> AUH-A2E07-NEC-NFVI2-ODF02-SH01-PORT04 -> AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT05 -> AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT05 -> AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-0/0/27
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/26 -> AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/2
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/27 -> AUH-A2E07-JUNIPER-NFVI2-RK02-DCGW02-ET-0/1/6
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/28 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT03 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT03 -> AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/2
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-0/0/29 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT04 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT04 -> AUH-A2E07-JUNIPER-NFVI2-RK01-DCGW01-ET-0/1/6

**MGT01**

- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/00 -> AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT13 -> AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT01 -> AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT07 -> AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT15 -> AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/48
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/01 -> AUH-A2E07-NEC-NFVI2-RK01-SH03-PORT14 -> AUH-A2E07-NEC-NFVI2-ODF01-SH02-PORT02 -> AUH-A2E07-NEC-NFVI2-ODF01-SH03-PORT09 -> AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT15 -> AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/48
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/40 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT15 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT15 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/40
- AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/41 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT16 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT16 -> AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/41

MGT02

- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/00 -> AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT13 -> AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT01 -> AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT07 -> AUH-A2E07-NEC-NFVI2-RK03-SH01-PORT17 -> AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-0/0/49
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/01 -> AUH-A2E07-NEC-NFVI2-RK02-SH03-PORT14 -> AUH-A2E07-NEC-NFVI2-ODF02-SH02-PORT02 -> AUH-A2E07-NEC-NFVI2-ODF02-SH03-PORT09 -> AUH-A2E07-NEC-NFVI2-RK04-SH01-PORT17 -> AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-0/0/49
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/40 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT15 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT15 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/40
- AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-0/0/41 -> AUH-A2E07-NEC-NFVI2-RK02-SH02-PORT16 -> AUH-A2E07-NEC-NFVI2-RK01-SH02-PORT16 -> AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-0/0/41

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

5.8 Uplinks

End User Short Node	End User Port No-A	End User New Local ODF details-A	End User Fiber/Port-A	Servi ce-B	End User Node Name-B	End User Port No-B	End User Local ODF details-B	End User Junction Fiber/Port-B
JUNIPER-NFVI2-DCGW01	XE-0/0/0:0	T-1109/5,6 A2E7 RK01/SH-10/F-5,6	5/0/4	SPE	AUH-A2E5-HSPERO1	1/0/5	A2E ODF RK 3/SH7/F-9,10	T1109/5,6 A2E5 RK15/SH-01/F-5,6
JUNIPER-NFVI2-DCGW02	XE-0/0/0:0	T-1110/5,6 A2E7 RK02/SH-10/F-5,6	5/0/4	SPE	AUH-A2E5-HSPERO2	1/0/5	A2E05 ODF4/SH7/F-9,10	T-1110/5,6 Rk16/SH 1/F-5,6
JUNIPER-NFVI2-DCGW01	XE-0/0/0:1	T-1109/7,8 A2E7 RK01/SH-10/F-7,8	5/0/5	SPE	AUH-A2E5-HSPERO1	1/0/9	A2E ODF RK 3/SH7/F-11,12	T1109/7,8 A2E5 RK15/SH-01/F-7,8
JUNIPER-NFVI2-DCGW02	XE-0/0/0:1	T-1110/7,8 A2E7 RK02/SH-10/F-7,8	5/0/5	SPE	AUH-A2E5-HSPERO2	1/0/9	A2E05 ODF4/SH7/F-11,12	T-1110/7,8 A2E5 RK16/SH-01/F-7,8
JUNIPER-NFVI2-DCGW01	XE-0/0/2:0	T-1109/9,10 A2E7 RK01/SH-10/F-9,10	5/0/6	SPE	AUH-A2E5-HSPERO1	1/0/10	A2E ODF RK 3/SH7/F-13,14	T1109/9,10 A2E5 RK15/SH-01/F-9,10
JUNIPER-NFVI2-DCGW02	XE-0/0/2:0	T-1110/9,10 A2E7 RK02/SH-10/F-9,10	5/0/6	SPE	AUH-A2E5-HSPERO2	1/0/10	A2E05 ODF4/SH7/F-13,14	T-1110/9,10 A2E5 RK16/SH-01/F-9,10
JUNIPER-NFVI2-DCGW01	XE-0/0/2:1	T-1109/11,12 A2E7 RK01/SH-10/F-11,12	5/0/7	SPE	AUH-A2E5-HSPERO1	1/0/11	A2E ODF RK 3/SH7/F-15,16	T1109/11,12 A2E5 RK15/SH-01/11,12
JUNIPER-NFVI2-DCGW02	XE-0/0/2:1	T-1110/11,12 A2E7 RK02/SH-10/F-11,12	5/0/7	SPE	AUH-A2E5-HSPERO2	1/0/11	A2E05 ODF4/SH7/F-15,16	T-1110/11,12 A2E5 RK16/SH-01/F-11,12
JUNIPER-NFVI2-DCGW01	XE-0/0/0:2	T-1109/13,14 A2E7	XE-5/0/1	SPE	AUH-A2E5-JFW01	XE-5/0/1		T1109/13,14 A2E5



		RK01/SH-10/F-13,14						RK15/SH-01/13,14
JUNIPER-NFVI2-DCGW02	XE-0/0/0:2	T-1110/13,14 A2E7 RK02/SH-10/F-13,14	XE-5/0/1	SPE	AUH-A2E5-JFW02	XE-5/0/1		T-1110/13, 14 A2E5 RK16/SH-01/F-13,14
JUNIPER-NFVI2-DCGW01	ET-0/1/8	T1109/15,16 A2E7 RK01/SH-10/15,16	Eth 1/12	ISG	ISG SA	Eth 1/12		T1109/15, 16 A2E5 RK15/SH-01/15,16
JUNIPER-NFVI2-DCGW02	ET-0/1/8	T-1110/15,16 A2E7 RK02/SH-10/F-15,16	Eth 1/12	ISG	ISG SB	Eth 1/12		T-1110/15, 16 A2E5 RK16/SH-01/F-15,16
JUNIPER-NFVI2-MGT01	XE-0/0/44	T1109/17,18 A2E5 RK01/SH-10/17,18	5/0/8	SPE	AUH-A2E5-HSPERO1	2/0/1	A2E ODF RK 3/SH7/F-17,18	T1109/17, 18 A2E5 RK15/SH-01/17,18
JUNIPER-NFVI2-MGT02	XE-0/0/44	T-1110/17,18 A2E7 RK02/SH-10/F-17,18	5/0/8	SPE	AUH-A2E5-HSPERO2	2/0/1	A2E05 ODF4/SH7/F-17,18	T-1110/17, 18 A2E5 RK16/SH-01/F17,18



6. Power Connectivity

6.1 Power Cables

From	FROM Node	To	TO Node
RK01			
AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-(-48)	DCPDU-MAIN	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-(+RTN)	DCPDU-MAIN	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-(-48V)	DCPDU-STDBY	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-(+RTN)	DCPDU-STDBY	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU1-(-48V)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE01	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU1-(+RTN)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN01	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU2-(-48V)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE02	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU2-(+RTN)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN02	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU3-(-48V)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE03	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU3-(+RTN)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN03	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU4-(-48V)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE01	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU4-(+RTN)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN01	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU5-(-48V)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE02	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU5-(+RTN)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN02	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU6-(-48V)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE03	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-PSU6-(+RTN)	DCGW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN03	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-KVM01-PSU1-(-48V)	KVM	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE04	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-KVM01-PSU1-(+RTN)	KVM	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN04	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-PSU1-(-48V)	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE05	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-PSU1-(+RTN)	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN05	DCPDU-MAIN

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-PSU2-(-48V)	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE05	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-PSU2-(+RTN)	SPSW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN05	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-PSU1-(-48V)	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE06	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-PSU1-(+RTN)	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN06	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-PSU2-(-48V)	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE06	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-PSU2-(+RTN)	LFSW01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN06	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-PSU1-(-48V)	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE07	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-PSU1-(+RTN)	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN07	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-PSU2-(-48V)	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE07	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-PSU2-(+RTN)	LFSW02	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN07	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-PSU1-(-48V)	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE08	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-PSU1-(+RTN)	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN08	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-PSU2-(-48V)	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE08	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-PSU2-(+RTN)	MGT01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN08	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-PSU1-(-48V)	JMP01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE09	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-PSU1-(+RTN)	JMP01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN09	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-PSU2-(-48V)	JMP01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE09	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-PSU2-(+RTN)	JMP01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN09	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PSU1-(-48V)	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE10	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PSU1-(+RTN)	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN10	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PSU2-(-48V)	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE10	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-PSU2-(+RTN)	CNTRL01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN10	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-PSU1-(-48V)	UNDRCLD01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE11	DCPDU-MAIN

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-PSU1-(+RTN)	UNDRCLD01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN11	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-PSU2-(-48V)	UNDRCLD01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE11	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-PSU2-(+RTN)	UNDRCLD01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN11	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PSU1-(-48V)	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE12	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PSU1-(+RTN)	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN12	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PSU2-(-48V)	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE12	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-PSU2-(+RTN)	CEPH01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN12	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-PSU1-(-48V)	SDN01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-FUSE13	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN02-PSU1-(+RTN)	SDN01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-MAIN-RTN13	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN03-PSU2-(-48V)	SDN01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-FUSE13	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN04-PSU2-(+RTN)	SDN01	AUH-A2E07-NEC-NFVI2-RK01-DCPDU-STDBY-RTN13	DCPDU-STDBY

RK02

AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-(-48)	DCPDU-MAIN	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-(+RTN)	DCPDU-MAIN	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-(-48V)	DCPDU-STDBY	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-(+RTN)	DCPDU-STDBY	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU1-(-48V)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE01	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU1-(+RTN)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN01	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU2-(-48V)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE02	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU2-(+RTN)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN02	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU3-(-48V)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE03	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU3-(+RTN)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN03	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU4-(-48V)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE01	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU4-(+RTN)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN01	DCPDU-STDBY

 etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU5-(-48V)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE02	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU5-(+RTN)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN02	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU6-(-48V)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE03	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-PSU6-(+RTN)	DCGW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN03	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-PSU1-(-48V)	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE04	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-PSU1-(+RTN)	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN04	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-PSU2-(-48V)	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE04	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-PSU2-(+RTN)	SPSW02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN04	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-PSU1-(-48V)	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE05	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-PSU1-(+RTN)	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN05	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-PSU2-(-48V)	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE05	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-PSU2-(+RTN)	LFSW03	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN05	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-PSU1-(-48V)	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE06	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-PSU1-(+RTN)	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN06	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-PSU2-(-48V)	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE06	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-PSU2-(+RTN)	LFSW04	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN06	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-PSU1-(-48V)	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE07	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-PSU1-(+RTN)	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN07	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-PSU2-(-48V)	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE07	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-PSU2-(+RTN)	MGT02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN07	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PSU1-(-48V)	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE08	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PSU1-(+RTN)	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN08	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PSU2-(-48V)	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE08	DCPDU-STDBY



AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-PSU2-(+RTN)	CNTRL02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN08	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-PSU1-(-48V)	UNDRCLD02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE09	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-PSU1-(+RTN)	UNDRCLD02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN09	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-PSU2-(-48V)	UNDRCLD02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE09	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-PSU2-(+RTN)	UNDRCLD02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN09	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PSU1-(-48V)	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE10	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PSU1-(+RTN)	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN10	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PSU2-(-48V)	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE10	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-PSU2-(+RTN)	CEPH02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN10	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-PSU1-(-48V)	SDN02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-FUSE11	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-PSU1-(+RTN)	SDN02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-MAIN-RTN11	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-PSU2-(-48V)	SDN02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-FUSE11	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-PSU2-(+RTN)	SDN02	AUH-A2E07-NEC-NFVI2-RK02-DCPDU-STDBY-RTN11	DCPDU-STDBY

RK03

AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-(-48)	DCPDU-MAIN	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-(+RTN)	DCPDU-MAIN	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-(-48V)	DCPDU-STDBY	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-(+RTN)	DCPDU-STDBY	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-PSU1-(-48V)	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE01	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-PSU1-(+RTN)	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN01	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-PSU2-(-48V)	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE01	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-PSU2-(+RTN)	LFSW05	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN01	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-PSU1-(-48V)	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE02	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-PSU1-(+RTN)	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN02	DCPDU-MAIN

 Etisalat	Etisalat NFVI2 – Site Installation Document (AUH-A2E07-NEC-NFVI2)	 NEC Netcracker
---	---	---

AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-PSU2-(-48V)	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE02	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-PSU2-(+RTN)	LFSW06	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN02	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-PSU1-(-48V)	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE03	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-PSU1-(+RTN)	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN03	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-PSU2-(-48V)	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE03	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-PSU2-(+RTN)	MGT03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN03	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PSU1-(-48V)	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE04	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PSU1-(+RTN)	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN04	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PSU2-(-48V)	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE04	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-PSU2-(+RTN)	CNTRL03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN04	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-PSU1-(-48V)	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE05	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-PSU1-(+RTN)	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN05	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-PSU2-(-48V)	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE05	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-PSU2-(+RTN)	CEPH03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN05	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PSU1-(-48V)	SDN03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE06	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PSU1-(+RTN)	SDN03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN06	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PSU2-(-48V)	SDN03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE06	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-PSU2-(+RTN)	SDN03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN06	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PSU1-(-48V)	COMP09	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE07	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PSU1-(+RTN)	COMP09	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN07	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PSU2-(-48V)	COMP09	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE07	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-PSU2-(+RTN)	COMP09	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN07	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PSU1-(-48V)	COMP08	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE08	DCPDU-MAIN



AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PSU1-(+RTN)	COMP08	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN08	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PSU2(-48V)	COMP08	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE08	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-PSU2-(+RTN)	COMP08	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN08	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PSU1(-48V)	COMP07	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE09	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PSU1-(+RTN)	COMP07	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN09	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PSU2(-48V)	COMP07	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE09	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-PSU2-(+RTN)	COMP07	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN09	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PSU1(-48V)	COMP06	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE10	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PSU1-(+RTN)	COMP06	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN10	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PSU2(-48V)	COMP06	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE10	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-PSU2-(+RTN)	COMP06	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN10	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PSU1(-48V)	COMP05	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE11	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PSU1-(+RTN)	COMP05	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN11	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PSU2(-48V)	COMP05	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE11	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-PSU2-(+RTN)	COMP05	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN11	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PSU1(-48V)	COMP04	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE12	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PSU1-(+RTN)	COMP04	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN12	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PSU2(-48V)	COMP04	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE12	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-PSU2-(+RTN)	COMP04	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN12	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PSU1(-48V)	COMP03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE13	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PSU1-(+RTN)	COMP03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN13	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PSU2(-48V)	COMP03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE13	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-PSU2-(+RTN)	COMP03	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN13	DCPDU-STDBY



AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PSU1-(-48V)	COMP02	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE14	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PSU1-(+RTN)	COMP02	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN14	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PSU2-(-48V)	COMP02	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE14	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-PSU2-(+RTN)	COMP02	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN14	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PSU1-(-48V)	COMP01	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-FUSE15	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PSU1-(+RTN)	COMP01	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-MAIN-RTN15	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PSU2-(-48V)	COMP01	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-FUSE15	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-PSU2-(+RTN)	COMP01	AUH-A2E07-NEC-NFVI2-RK03-DCPDU-STDBY-RTN15	DCPDU-STDBY

RK04

AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-(-48)	DCPDU-MAIN	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-(+RTN)	DCPDU-MAIN	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-(-48V)	DCPDU-STDBY	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-(+RTN)	DCPDU-STDBY	AUH-A2E07-	Etisalat PDB
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-PSU1-(-48V)	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE01	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-PSU1-(+RTN)	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN01	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-PSU2-(-48V)	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE01	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-PSU2-(+RTN)	LFSW07	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN01	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-PSU1-(-48V)	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE02	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-PSU1-(+RTN)	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN02	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-PSU2-(-48V)	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE02	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-PSU2-(+RTN)	LFSW08	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN02	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-PSU1-(-48V)	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE03	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-PSU1-(+RTN)	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN03	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-PSU2-(-48V)	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE03	DCPDU-STDBY



AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-PSU2-(+RTN)	MGT04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN03	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PSU1-(-48V)	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE04	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PSU1-(+RTN)	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN04	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PSU2-(-48V)	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE04	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-PSU2-(+RTN)	CEPH04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN04	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-PSU1-(-48V)	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE05	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-PSU1-(+RTN)	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN05	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-PSU2-(-48V)	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE05	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-PSU2-(+RTN)	CEPH05	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN05	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PSU1-(-48V)	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE06	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PSU1-(+RTN)	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN06	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PSU2-(-48V)	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE06	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-PSU2-(+RTN)	CEPH06	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN06	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PSU1-(-48V)	ELK04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE07	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PSU1-(+RTN)	ELK04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN07	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PSU2-(-48V)	ELK04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE07	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-PSU2-(+RTN)	ELK04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN07	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-PSU1-(-48V)	ELK03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE08	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-PSU1-(+RTN)	ELK03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN08	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-PSU2-(-48V)	ELK03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE08	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-PSU2-(+RTN)	ELK03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN08	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PSU1-(-48V)	ELK02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE09	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PSU1-(+RTN)	ELK02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN09	DCPDU-MAIN



AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PSU2-(-48V)	ELK02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE09	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-PSU2-(+RTN)	ELK02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN09	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-PSU1-(-48V)	ELK01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE10	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-PSU1-(+RTN)	ELK01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN10	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-PSU2-(-48V)	ELK01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE10	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-PSU2-(+RTN)	ELK01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN10	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PSU1-(-48V)	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE11	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PSU1-(+RTN)	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN11	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PSU2-(-48V)	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE11	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-PSU2-(+RTN)	FCAP04	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN11	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-PSU1-(-48V)	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE12	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-PSU1-(+RTN)	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN12	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-PSU2-(-48V)	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE12	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-PSU2-(+RTN)	FCAP03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN12	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PSU1-(-48V)	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE13	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PSU1-(+RTN)	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN13	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PSU2-(-48V)	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE13	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-PSU2-(+RTN)	FCAP02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN13	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-PSU1-(-48V)	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE14	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-PSU1-(+RTN)	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN14	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-PSU2-(-48V)	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE14	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-PSU2-(+RTN)	FCAP01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN14	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-PSU1-(-48V)	MANO03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE15	DCPDU-MAIN



AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-PSU1-(+RTN)	MANO03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN15	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-PSU2(-48V)	MANO03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE15	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-PSU2-(+RTN)	MANO03	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN15	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PSU1(-48V)	MANO02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE16	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PSU1-(+RTN)	MANO02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN16	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PSU2(-48V)	MANO02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE16	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-PSU2-(+RTN)	MANO02	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN16	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-PSU1(-48V)	MANO01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-FUSE17	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-PSU1-(+RTN)	MANO01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-MAIN-RTN17	DCPDU-MAIN
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-PSU2(-48V)	MANO01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-FUSE17	DCPDU-STDBY
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-PSU2-(+RTN)	MANO01	AUH-A2E07-NEC-NFVI2-RK04-DCPDU-STDBY-RTN17	DCPDU-STDBY



6.2 Grounding Cables

From	To
Rack01 From Devices to GND Bar	
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND11
AUH-A2E07-NEC-NFVI2-RK01-KVM01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND10
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND09
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND08
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND07
AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND06
AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND05
AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND04
AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND03
AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND02
AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND01
AUH-A2E07-NEC-NFVI2-RK01-PDU MAIN-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND00R
AUH-A2E07-NEC-NFVI2-RK01-PDU STANDBY-GND	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND00R
AUH-A2E07-MAIN GNDBAR-GND01	AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND00L
Rack02 From Devices to GND Bar	
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND09
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND08
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND07
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND06
AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND05
AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND04
AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND03
AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND02
AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND01
AUH-A2E07-NEC-NFVI2-RK02-PDU MAIN-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND00R
AUH-A2E07-NEC-NFVI2-RK02-PDU STANDBY-GND	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND00R
AUH-A2E07-MAIN GNDBAR-GND02	AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND00L
Rack03 From Devices to GND Bar	
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND15
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND14
AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND13
AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND12
AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND11
AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND10
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND09
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND08
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND07
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND06
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND05
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND04
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND03
AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND02



AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND01
AUH-A2E07-NEC-NFVI2-RK03-PDU MAIN-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND00R
AUH-A2E07-NEC-NFVI2-RK03-PDU STANDBY-GND	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND00R
AUH-A2E07-MAIN GNDBAR-GND03	AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND00L

Rack04 From Devices to GND Bar

AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND17
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND16
AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND15
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND14
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND13
AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND12
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND11
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND10
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND09
AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND08
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND07
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND06
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND05
AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND04
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND03
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND02
AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND01
AUH-A2E07-NEC-NFVI2-RK04-PDU MAIN-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND00R
AUH-A2E07-NEC-NFVI2-RK04-PDU STANDBY-GND	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND00R
AUH-A2E07-MAIN GNDBAR-GND04	AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND00L

From	To
Rack01 From GND Bar to Devices	
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND11	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-DCGW01-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND10	AUH-A2E07-NEC-NFVI2-RK01-KVM01-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND09	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-SPSW01-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND08	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW01-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND07	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-LFSW02-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND06	AUH-A2E07-NEC-NFVI2-RK01-JUNIPER-MGT01-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND05	AUH-A2E07-NEC-NFVI2-RK01-DELL-JMP01-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND04	AUH-A2E07-NEC-NFVI2-RK01-DELL-CNTRL01-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND03	AUH-A2E07-NEC-NFVI2-RK01-DELL-UNDRCLD01-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND02	AUH-A2E07-NEC-NFVI2-RK01-DELL-CEPH01-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND01	AUH-A2E07-NEC-NFVI2-RK01-DELL-SDN01-GND
	AUH-A2E07-NEC-NFVI2-RK01-PDU MAIN/STANDBY-GND
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND00R	
AUH-A2E07-NEC-NFVI2-RK01-GNDBAR-GND00L	AUH-A2E07-MAIN GNDBAR-GND01
Rack02 From GND Bar to Devices	
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND09	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-DCGW02-GND
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND08	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-SPSW02-GND
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND07	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW03-GND



AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND06	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-LFSW04-GND
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND05	AUH-A2E07-NEC-NFVI2-RK02-JUNIPER-MGT02-GND
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND04	AUH-A2E07-NEC-NFVI2-RK02-DELL-CNTRL02-GND
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND03	AUH-A2E07-NEC-NFVI2-RK02-DELL-UNDRCLD02-GND
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND02	AUH-A2E07-NEC-NFVI2-RK02-DELL-CEPH02-GND
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND01	AUH-A2E07-NEC-NFVI2-RK02-DELL-SDN02-GND
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND00R	AUH-A2E07-NEC-NFVI2-RK02-PDU MAIN/STANDBY-GND
AUH-A2E07-NEC-NFVI2-RK02-GNDBAR-GND00L	AUH-A2E07-MAIN GNDBAR-GND02
Rack03 From GND Bar to Devices	
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND15	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW05-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND14	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-LFSW06-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND13	AUH-A2E07-NEC-NFVI2-RK03-JUNIPER-MGT03-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND12	AUH-A2E07-NEC-NFVI2-RK03-DELL-CNTRL03-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND11	AUH-A2E07-NEC-NFVI2-RK03-DELL-CEPH03-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND10	AUH-A2E07-NEC-NFVI2-RK03-DELL-SDN03-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND09	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP09-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND08	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP08-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND07	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP07-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND06	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP06-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND05	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP05-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND04	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP04-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND03	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP03-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND02	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP02-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND01	AUH-A2E07-NEC-NFVI2-RK03-DELL-COMP01-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND00R	AUH-A2E07-NEC-NFVI2-RK03-PDU MAIN/STANDBY-GND
AUH-A2E07-NEC-NFVI2-RK03-GNDBAR-GND00L	AUH-A2E07-MAIN GNDBAR-GND03
Rack04 From GND Bar to Devices	
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND17	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW07-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND16	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-LFSW08-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND15	AUH-A2E07-NEC-NFVI2-RK04-JUNIPER-MGT04-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND14	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH04-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND13	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH05-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND12	AUH-A2E07-NEC-NFVI2-RK04-DELL-CEPH06-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND11	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK01-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND10	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK02-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND09	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK03-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND08	AUH-A2E07-NEC-NFVI2-RK04-DELL-ELK04-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND07	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP01-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND06	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP02-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND05	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP03-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND04	AUH-A2E07-NEC-NFVI2-RK04-DELL-FCAP04-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND03	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO01-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND02	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO02-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND01	AUH-A2E07-NEC-NFVI2-RK04-DELL-MANO03-GND



AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND00R	AUH-A2E07-NEC-NFVI2-RK04PDU MAIN/STANDBY-GND
AUH-A2E07-NEC-NFVI2-RK04-GNDBAR-GND00L	AUH-A2E07-MAIN GNDBAR-GND04