

Where does TR2's rooftop PV go?

Prosumers, pure customers, and export — energy accounting of one representative day

Feeder TR2 · rolling-horizon exact-QCP OPF · 48 half-hours · 2026-07-23

Context

Transformer TR2 serves 177 connections: 95 prosumers (rooftop PV and a battery, operated for self-consumption) and 82 pure customers (load only, no PV or battery). The prosumers generate 2,370 kWh of PV over the day — about 3.6× their own demand (666 kWh). This note tracks every kWh of that PV to its destination.

Key finding. The rooftop PV does not serve only its owners. 303.8 kWh/day — 12.8 % of all PV — flows to the 82 pure customers, covering 53 % of their demand. The remaining 47 % of the customers' demand is imported from the grid at night, when there is no PV. Over half of the customers' electricity therefore comes from their neighbours' rooftops.

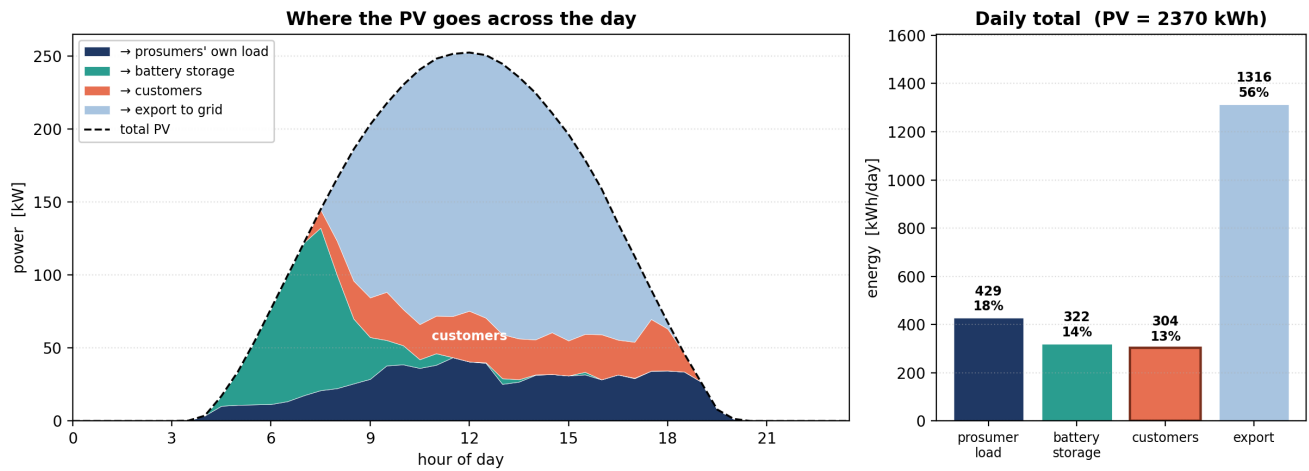


Figure 1: Left: the PV split half-hour by half-hour. In the early morning the batteries absorb the surplus; once they fill up (late morning) the surplus goes to customers and export. Right: daily totals.

Where the day's PV goes

Destination	kWh/day	% of PV
Prosumers' own load (direct)	429.1	18.1 %
Battery storage	321.9	13.6 %
Customers	303.8	12.8 %
Export to grid	1,315.6	55.5 %
Total (= PV)	2,370.4	100 %

Table 1: PV disposition (priority allocation).

Customer supply	kWh/day	%
From prosumer PV (day)	303.8	53.0 %
From grid import (night)	269.1	47.0 %
Total customer load	572.8	100 %

Table 2: How the 82 customers are supplied.

Reading the day

At the noon peak the PV reaches 253 kW. Only 16 % serves prosumer load; the batteries are full and absorb nothing; 14 % serves the customers; the remaining 70 % is exported. Early in the morning the batteries take the surplus first — up to 78 kW charging around 08:00. Once they saturate in late morning, the surplus has two outlets left: the customers and the grid. The battery is the only controllable lever, and it stops helping once full.

Method and sources

Priority energy allocation, applied every half-hour: PV serves the prosumer's own load first, then charges the battery, then serves customer load, and exports the rest. Grid import covers any load the PV cannot. Downstream network and battery round-trip losses (about 3–4 % of PV) are not separated out here. Inputs: per-connection load and PV profiles (`TR2_load_PV_48periods.xlsx`, from OpData); battery dispatch (exact-QCP rolling OPF, `RunFOR_Rolling`, CPLEX); classification by PV size (`LoadsAndPV.csv`). Every figure in this note is reproduced by live formulas in the companion workbook `TR2_PV_allocation_prosumers_vs_customers.xlsx`.