

Where does TR8's rooftop PV go?

Prosumers, pure customers, and export — energy accounting of one representative day

Feeder TR8 · rolling-horizon exact-QCP OPF · 48 half-hours · 2026-07-24

Context

Transformer TR8 serves 300 connections: 124 prosumers (rooftop PV and a battery, operated for self-consumption) and 176 pure customers (load only, no PV or battery) — the most customer-heavy feeder in the set. The prosumers generate 3,081 kWh of PV over the day — about 3.6× their own demand (851 kWh). This note tracks every kWh of that PV to its destination.

Key finding. The rooftop PV does not serve only its owners. 642.0 kWh/day — 20.8 % of all PV — flows to the 176 pure customers, covering 51.4 % of their demand. The remaining 48.6 % is imported from the grid at night, when there is no PV. Over half of the customers' electricity therefore comes from their neighbours' rooftops. With so many customers to absorb it, TR8 exports the smallest share of any feeder — just 49 %.

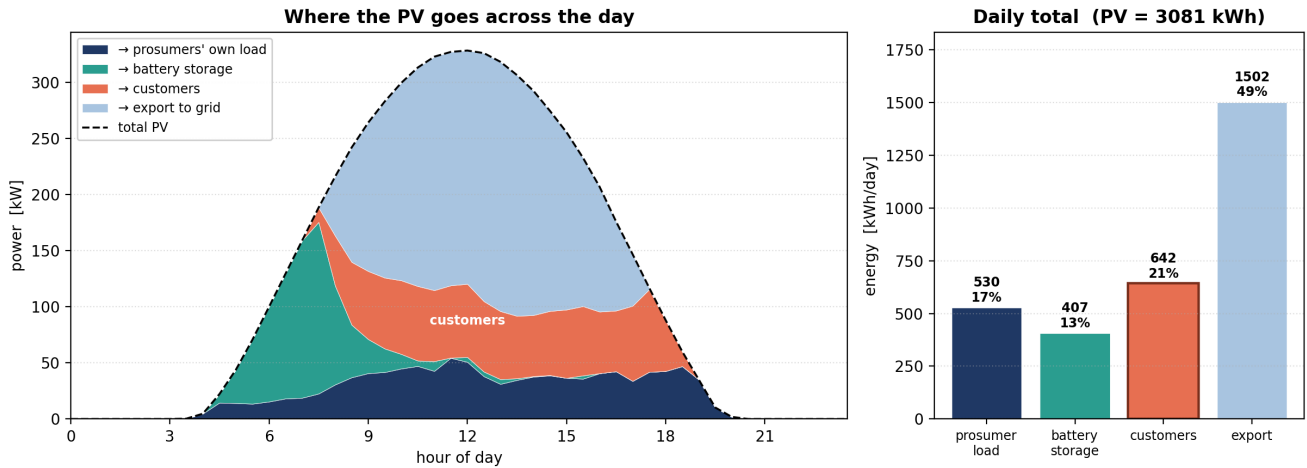


Figure 1: Left: the PV split half-hour by half-hour. In the early morning the batteries absorb the surplus; once they fill up (mid-morning) the surplus goes to customers and export. Right: daily totals.

Where the day's PV goes

Destination	kWh/day	% of PV
Prosumers' own load (direct)	529.6	17.2 %
Battery storage	407.3	13.2 %
Customers	642.0	20.8 %
Export to grid	1,502.3	48.8 %
Total (= PV)	3,081.1	100 %

Table 1: PV disposition (priority allocation).

Customer supply	kWh/day	%
From prosumer PV (day)	642.0	51.4 %
From grid import (night)	606.0	48.6 %
Total customer load	1,247.9	100 %

Table 2: How the 176 customers are supplied.

Reading the day

At the noon peak the PV reaches 328 kW. Only 15 % serves prosumer load; the batteries are nearly full and absorb almost nothing (1 %); 20 % serves the customers — who here clearly outnumber the prosumers; the remaining 63 % is exported. Early in the morning the batteries take the surplus first — up to 153 kW charging around 07:30. Once they saturate in mid-morning, the surplus has two outlets left: the customers and the grid. The battery is the only controllable lever, and it stops helping once full.

Method and sources

Priority energy allocation, applied every half-hour: PV serves the prosumer's own load first, then charges the battery, then serves customer load, and exports the rest. Grid import covers any load the PV cannot. Downstream network and battery round-trip losses (about 3–4 % of PV) are not separated out here. Inputs: per-connection load and PV profiles (`TR8_load_PV_48periods.xlsx`, from OpData); battery dispatch (exact-QCP rolling OPF, `RunFOR_Rolling`, CPLEX); classification by PV size (sheet `Customers`). Every figure in this note is reproduced by live formulas in the companion workbook `TR8_PV_allocation_prosumers_vs_customers.xlsx`.