PROTODUINO · DESIGN DOCUMENT

A streaming ELF loader for AVR

Functional and technical design of a compile-time configurable ELF32 loader: a bootloader that is one protothread, lent to the running system to load modules that are process types. With measurements and fixes for protoduino caveats.

Draft 0.2 · 12 November 2026

jklarenbeek/protoduino · branch ccr-8617b1c3-gjnqlx

1 thread

the bootloader is a Protothreads v2 thread, and the kernel schedules the same one

2,042 B

fills the 2 KB boot section of an ATmega328P, with the thread offered to the kernel

18,053

turns a heartbeat process took while a module was loaded beside it

22 of 22

simulated scenarios behaved as designed, also on Optiboot

What is real in this document

- The loader was written and run for this document. Every figure marked MEASURED comes from it: avr-gcc 7.3.0, and simavr at the commit that protosim pins.
- Module loading runs on protoduino's unmodified scheduler, serial device process and pipes, in a sketch built without the Arduino core, on the ATmega328P.
- Nothing has run on hardware. Power loss was not simulated. simavr programs a page in no time, so timings leave out the 7 to 9 ms a real page costs (8.1). Relocation (4.8) is a design; the ATtiny build compiles and has not executed.
- No protoduino, protosim or simavr source file was changed; the fixes in sections 7 and 8 are proposals. The code is in `docs/elfloader/overlay/`, laid out as it would land in the library; the test bench is in `docs/elfloader/prototype/`.

MEASURED built and run for this document READ established by reading source or tool output PROPOSED designed, not built BUILT compiles, not executed

Contents

1 Summary
2 Goals, non-goals and target parts
3 What earlier loaders got wrong
4 The ideas the design rests on
5 Functional specification
6 Technical design
7 Fixes for current protoduino caveats
8 Simulator findings: simavr and protosim
9 Verification
10 Roadmap, risks and open questions
A ELF fields the loader reads
B Reproducing the measurements · Sources

1 Summary

The loader takes the file the linker writes, the `.elf`, and treats it as a stream. The first 52 bytes say what the file is. The next 32 bytes per program header say which bytes belong where. Everything after that is delivered to flash in the order it arrives. The stream never seeks backwards and never allocates, and all of its state fits in one 84-byte structure. When the last loadable byte has been delivered it is done; the symbol tables and debug information that make up most of the file never have to be sent.

Around the stream sits one Protothreads v2 thread, `elf_load_thread()`. It receives the file with XMODEM-CRC, feeds the stream and programs the pages. It does no input or output of its own and reads no clock: bytes pass through a small mailbox in its workspace, and it returns to its caller between any two of them. That one thread is used in three places, chosen at compile time:

- **As the bootloader.** At reset nothing else exists, so a loop of a dozen lines schedules the thread from a polled `uart0`. Any terminal program can send the unmodified `.elf`. An image record written last decides whether the application may start.
- **As a boot ROM for the running system.** The boot section exports the address of the thread. A protoduino process schedules it with the bytes its pipe delivers, and every other process keeps its turn while a module arrives. The kernel pays for a process, not for a loader.
- **Inside the kernel.** Where the bootloader is Optiboot, or a protoduino bootloader built without the export, the kernel links its own copy of the thread and has pages programmed through whatever the bootloader offers.

Loading is therefore cooperative everywhere, and it is not a feature that a larger boot section switches on. The fuses decide only where the thread lives: in the boot section when it fits, in the kernel when it does not (4.6). The build fills the section that the fuses reserve with as many options as fit, in a set order of priority (6.9).

Modules fit protoduino in particular. A module is a process type: the same record `PROCESS_DEFINE` emits for a built-in process, linked into a flash slot and started with `process_new()`. Protothread processes keep their state in a struct the kernel hands them, so a module needs no static RAM, and the hardest part of dynamic loading on an AVR, relocating data addresses, does not arise.

Result	Value	Status
Stream state, ATmega328P build	84 bytes, of which 52 are header scratch	MEASURED
Bootloader, ATmega328P	2,014 B flash, 371 B RAM. With the thread offered to the kernel 2,042 B in the 2 KB boot section, 6 bytes spare. With every option 2,358 B, which needs the 4 KB section.	MEASURED
Bootloader, ATmega2560	2,514 B; 2,972 B with every option. It needs the 4 KB section; the 2 KB section is too small for it.	MEASURED
ATtiny85 build with serial on two pins	2,046 B flash, 307 B RAM	BUILT
Flash written by the bootloader against simavr's own ELF reader	Identical on both parts, including a 106 KB image that reaches far flash	MEASURED
A file for the wrong core family, offered to a device with a working application	Refused with a reason code; nothing erased; the application starts again	MEASURED
A module sent to a running protoduino kernel, loaded by the thread in the 2 KB boot section	Programmed into its slot, started with `process_new()`, entered into the module table, and started again after a reset. A heartbeat process took 18,053 turns during the 350 ms transfer.	MEASURED
The same with a stock Optiboot 8.3 as the bootloader	Works: the kernel links the thread and programs pages through Optiboot's `do_spm`	MEASURED

Result	Value	Status
A module linked against another kernel build	Refused before a single page is programmed	MEASURED
A second module loaded beside a running one	Both run, and both start after a reset	MEASURED
A module that declares static RAM	Fails at link time with a clear message	MEASURED

The size is the weak point, and it should be stated plainly. Optiboot fits in under 512 bytes; this bootloader is 2,014 bytes, in plain C with an old compiler. Writing it as a protothread cost 374 bytes against the blocking version of the previous draft (1,640 bytes), and on parts with more than 64 KB of flash that pushed it out of the 2 KB boot section into the 4 KB one. What the bytes buy is in 4.6; where they go is in 6.10.

Building on the library also turned up eleven more findings in protoduino itself, among them that `process_run()` lets polls starve events and that a process which ends is never cleaned up unless another event happens to reach it. Section 7 lists them with measurements and patches.

2 Goals, non-goals and target parts

Goals

- **Accept the linker's own output.** No hex file, no binary image and no packaging step for firmware.
- **One core, used in parts.** From a bootloader to a loader inside the kernel, with features that cost nothing when switched off.
- **Fill the boot section.** Whatever block the fuses reserve is used for as many features as fit.
- **Refuse before erasing.** The wrong file must be rejected while the installed image is still intact.
- **Always recoverable.** On parts with a hardware boot section, no failed update may leave a device that cannot be reached over the same serial line.
- **Modules are processes, loadable at run time.** Wherever the part can carry it and unless it is configured out. Three levels: none, modules already in flash, run-time loading.
- **Loading never stops the system.** The loader is a protothread among protothreads, and it reads like the rest of protoduino.
- **Not tied to our bootloader.** A protoduino kernel can load modules on top of Optiboot as well.

Non-goals

- **Linking on the device.** Relocatable `.o` files, symbol tables and name lookups stay on the host.
- **Authenticated updates in the first version.** Integrity is checked; origin is not. The reserved byte of the module descriptor is where a signature would be announced (6.8).
- **C++ runtime features in modules.** No exceptions, RTTI or static constructors.
- **Parts without room for a page buffer.** The ATtiny4/5/9/10 have 32 bytes of RAM.
- **UPDI-era parts in this document.** tinyAVR 0/1/2 and AVR Dx program flash through NVMCTRL. They need another flash back-end, which the layering allows but which is not designed here.

Part	Flash	RAM	Page	Boot section	Bootloader	Run-time modules
ATmega328P	32 KB	2 KB	128 B	0.5 to 4 KB	2 KB section MEASURED	Yes. The load thread fits the 2 KB section and the kernel schedules it there. MEASURED

Part	Flash	RAM	Page	Boot section	Bootloader	Run-time modules
ATmega2560	256 KB	8 KB	256 B	1 to 8 KB	4 KB section MEASURED	Bootloader with every option fits the 4 KB section. The kernel side was not built: `sys/clock.h` rejects the part (7, finding 17). PROPOSED
ATmega1284P	128 KB	16 KB	256 B	1 to 8 KB	4 KB section BUILT	As the ATmega2560.
ATtiny85	8 KB	512 B	64 B	none	BUILT	Off by default: the workspace of the thread alone is 307 of its 512 bytes of RAM.
ATtiny25 / 45	2 / 4 KB	128 / 256 B	32 / 64 B	none	Needs a small-frame transport PROPOSED	No. Excluded at compile time.
ATtiny4/5/9/10	≤ 1 KB	32 B	–	none	Out of scope	–

Flash end, RAM range, page size and core family were read from the avr-libc device headers. Boot-section sizes are from the datasheets and were not re-checked here. The request named an “ATtiny8”; no such part exists, so this document takes the ATtiny25/45/85 family as the small target, with the ATtiny85 as reference.

3 What earlier loaders got wrong

Five existing designs were examined, four of them in source. Each got something right that this design keeps, and each left something that it changes.

Loader	What it does, and where it falls short	What this design does instead
Contiki ELF loader 2005 to 2017 READ	Loads relocatable `.o` files and links them on the device. It makes 14 seek-and-read calls, recognises ten sections by comparing name strings, and resolves every import with `strcmp` against a table of names compiled into the kernel. So the whole file must already sit in a seekable store, and the kernel carries its symbol names in flash. It checks the first seven identification bytes and never the machine type. Contiki later added a pre-linked format (CLE), and Contiki-NG deleted the loader in 2017, 4,203 lines in one commit.	No linking on the device. The file is consumed as it arrives. Machine and core family are checked from the header. What Contiki got right is kept: a module is a set of processes, and architecture code is separate from the core.
Optiboot with avrdude	Under 512 bytes, which is the bar for size. But the device receives anonymous pages: it has no idea what the image is, keeps no record of whether it is complete, and starts whatever is there after a timeout. The host has to turn the ELF into a hex file and speak a programmer protocol. Version 8 added `do_spm()` so an application can write flash.	The device reads the ELF header itself and keeps an image record. The `do_spm()` idea is kept and widened: the boot section lends out its whole load thread (6.7). Optiboot also stays a supported choice: a protoduino kernel loads modules on top of it (6.8).
urboot, micronucleus parts without a boot section	They patch the application's reset vector so that reset reaches the loader, and rely on erased flash running through to it. The known hazard, in urboot's own words: if the first page is erased but not rewritten, the part is bricked until it meets an ISP programmer.	Erase from the top down with page 0 last, and give the loader a landing pad. There is then no instant at which a reset fails to reach the loader (6.6). PROPOSED The run-through and the landing pad were checked in simulation (T13).

Loader	What it does, and where it falls short	What this design does instead
simple-avr-bootloader m3y54m; a tutorial by its own description READ	Sends a raw binary with a 16-bit length. Frames carry an 8-bit additive checksum and no sequence number, and the uploader retries on timeout, so a lost acknowledgement makes the same chunk land twice. The update flag sits 8 bytes below the top of RAM, where the stack starts. The loader runs its serial port from interrupts and has no check that the application is whole.	XMODEM-CRC: 16-bit CRC and block numbers, so a repeat is acknowledged and dropped. A polled serial port with no vectors. An image record. Its good idea is kept: the application asks for an update, then resets.
Host ELF libraries libelf, ELFIO and others	They assume random access or the whole file in memory, and they allocate. None is built to be fed.	Used only as oracles in tests.
Zephyr LLEXT a current reference	Still links on the device, but can replace symbol-name strings with hashes to save space. That is the right direction, and still far too much code for an 8-bit part.	One step further: no symbol table on the device at all. A module is linked on the host against one firmware build and carries that build's identity (6.8).
protoduino `docs/loader.md` READ	Describes modules that are stored in RAM and run from there, which an AVR cannot do: code executes only from flash. It compiles with `-fpic`, which avr-gcc reports as unsupported. It refers to functions that are not in `src/`. Its file header has no magic number, version or checksum.	Superseded by this document.

An earlier note of mine questioned the order in which simple-avr-bootloader fills, erases and writes a page. That was wrong: the datasheet allows the page buffer to be filled either before or after the erase.

4 The ideas the design rests on

4.1 The ELF file is the wire format

An executable from avr-gcc is laid out in the order a loader needs it. The ELF header comes first, the program headers follow at offset 52, the loadable bytes come next, and everything a loader has no use for comes last. A reader that only moves forward can therefore do the whole job, and can stop early.



After avr-strip the same file is 2,048 bytes and loads to the same image.

Figure 1. Everything the loader needs is at the front of the file. MEASURED

File	File size	Loader finished within	Result against `avr-objcopy`
Test program, ATmega328P, with EEPROM data, fuses and signature	12,868 B	660 B	Flash and EEPROM identical
protoduino example 12 (UART echo), ATmega328P	29,624 B	1,637 B	Identical, also when fed one byte at a time
106 KB test image, ATmega2560	117,616 B	106,986 B	Identical

The consequence for the user is that no tool has to be installed to flash a board. With XMODEM as the transport (6.4), a terminal program that every platform already has can send the file the build produced.

4.2 One core, used in parts

The stream is a state machine with no input or output of its own. Bytes are pushed in from whatever carries them; bytes that belong in a memory are handed to a sink. Around it sits one protothread, the code that receives a file and feeds the stream, written so that all of its state is in a workspace the caller owns. That makes the thread usable from three places: the bootloader at reset, the boot section scheduled by the running kernel, and a kernel that links it in.

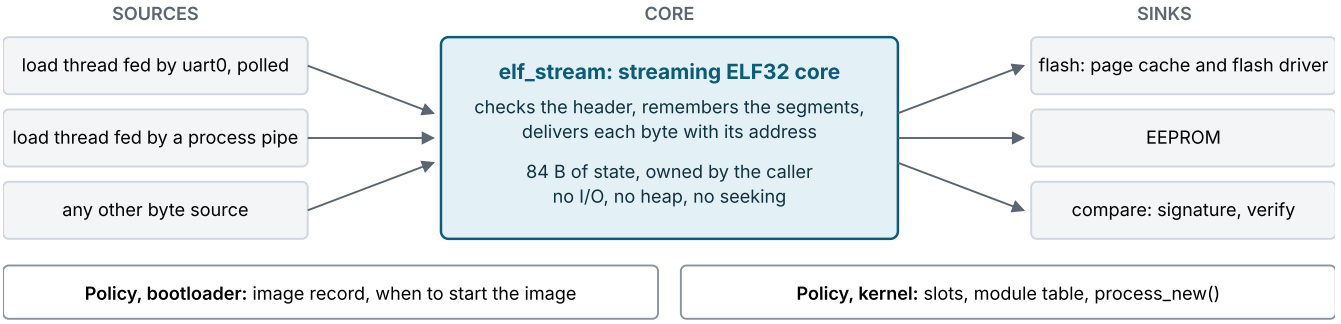


Figure 2. The pieces. All of them are built except the third source; the compare sink covers the signature, not yet a verify mode.

Which parts end up where depends on two choices: what sits in the boot section, and how much module support the kernel is built with.

In the boot section	Kernel built for	Who runs the load thread	Tested
protoduino bootloader that offers its load thread	run-time loading, thread of the bootloader	The loader process schedules the thread inside the boot section	M1, M9
protoduino bootloader with only the page service	run-time loading, own thread	The loader process schedules the kernel's copy; pages go through the page service	M3
Optiboot 8 or later	run-time loading, own thread	The same; pages go through `do_spm`	M2
anything	modules already in flash	Nobody. Modules are programmed with the firmware and only started.	M4
anything	no modules	–	M8

4.3 Address spaces select the sink


avr-gcc gives every memory of the chip its own range in the ELF address space, so the top byte of a segment's load address says where its bytes belong. The loader routes on that byte. It uses the load address (`p_paddr`), not the run address: the initial values of `.data` are stored in flash right after the code, and the program's own start-up copies them to RAM.

Load address	Memory	What the loader does	Option
`0x00....` upward	Flash	Writes, inside the permitted window only	always
`0x80....`	RAM	Nothing to write. `.bss` has no file bytes.	–
`0x81....`	EEPROM	Writes the EEPROM image	`ELF_CONF_EEPROM`
`0x82....`, `0x83....`	Fuses, lock bits	Ignores; software cannot write them	–
`0x84....`	Signature	Compares with the chip's own signature bytes	`ELF_CONF_SIGNATURE`

Two checks come free with the format. The header's flags name the core family the file was built for (`avr:5` for an ATmega328P, `avr:6` for an ATmega2560, `avr:25` for an ATtiny85), and avr-gcc defines the same number as `__AVR_ARCH__` when the loader is compiled. One comparison rejects a file for the wrong family from its first 52 bytes. The signature check is finer, down to the exact device, but it comes late, because avr-gcc places the signature after the flash data (see FR-9).

4.4 Refuse before erasing, commit last

An update is a transaction with one commit point. Nothing in flash changes until every program header has been accepted. The installed image is declared invalid before its first byte changes, and becomes valid again only when a small record is written after the last byte. A reset at any moment therefore finds either the old image, or no valid image and a waiting loader, or the new image.

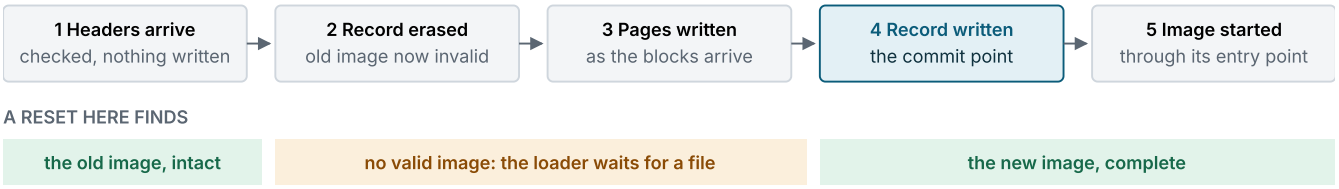

A refusal in step 1 leaves the device exactly as it was. The first prototype got this wrong; test T7 found it.

Figure 3. The update as a transaction. Steps and refusals were exercised in simulation; a power cut was not. MEASURED

4.5 The boot section as a small ROM

On a megaAVR the SPM instruction works only from the boot section, so an application cannot program flash by itself, and a run-time loader in the application cannot exist without help. The boot section therefore exports a table at a fixed place at the very end of flash. Its first entry programs one page from the caller's buffer, as Optiboot's `do_spm()` does. Its second is the address of the load thread itself: the same code that loaded the firmware at reset, to be scheduled by the running system on a workspace the system owns. The boot section is paid for anyway; this makes it do the kernel's loading too (6.7). MEASURED

4.6 One thread, two schedulers

The previous draft exported a blocking session: the kernel called into the boot section and got control back seconds later, when the module was in flash. This draft exports a protothread, and that changes what the kernel can do while a module arrives.

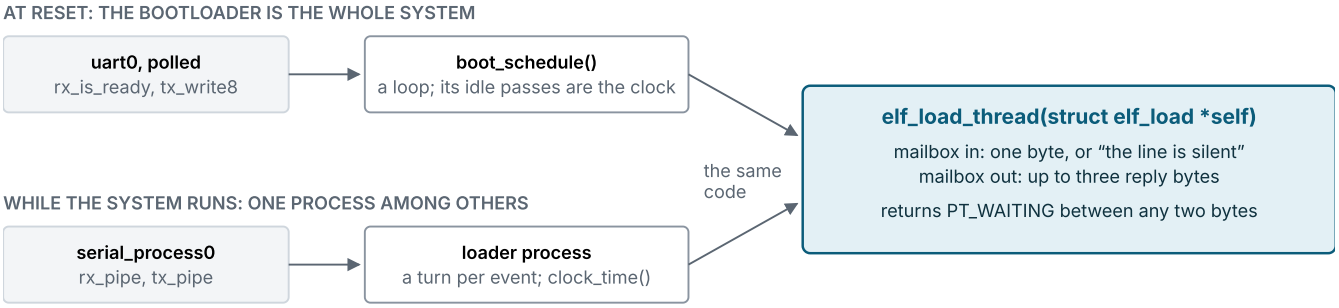


Figure 4. The load thread does no I/O and reads no clock, so the bootloader and a process can both drive it. In the first test (M1) the lower path ran the thread where it sits in the 2 KB boot section.

What was measured. A sketch on protoduino's scheduler ran the serial device process, a kernel process, the loader process and a heartbeat process that takes a turn as often as it can. While a 3,184-byte module file arrived in 350 ms, the heartbeat took 18,053 turns. With the blocking session of the previous draft it would have taken none. MEASURED

How long the others wait. The longest wait of the heartbeat was 15.1 ms, the time one XMODEM block spends on the wire. That is not the loader: `process_run()` serves polls before events, and the serial device polls on every received byte, so an event-driven process waits out the block (7, finding 14). Built against a copy of `process.c` with that one function changed, the longest wait fell to 2.0 ms, which is the time the thread needs to check a block and push it through the stream. MEASURED On a chip, each page adds 7.4 to 9.0 ms: an AVR cannot execute application code while it erases and programs application flash, and interrupts stay off for that time. No design removes that; XMODEM's stop-and-wait keeps the sender quiet meanwhile.

Is cooperative loading tied to a fuse setting?

No. There is one implementation of the load, the thread, so every build that can load at all loads cooperatively. The size of the boot section decides only where the thread lives:

- **ATmega328P, 2 KB section.** The bootloader with the thread exported is 2,042 bytes. The kernel schedules the thread in the boot section and links 1.7 KB for the loader process and module table.
- **ATmega328P, 4 KB section.** The same, plus every other option, in 2,358 bytes.
- **ATmega1284P and ATmega2560.** The bootloader needs the 4 KB section and then exports the thread too (2,970 and 2,972 bytes with everything).
- **Optiboot, or a section that is too small for the export.** The kernel links its own copy of the thread, 3.1 KB in all, and loads just as cooperatively.

The build step of 6.9 makes the choice from the block size. `BOOT_CONF_LOAD_SERVICE` forces it either way, and `LOADER_CONF_THREAD` tells the kernel which thread to schedule.

4.7 A module is a process type

protoduino already has the right descriptor. `process_type_t` is a small record in flash holding a name, a thread function, an instance size and a priority, and `process_new(type, storage)` turns it into a running process in memory the caller supplies. A loadable module is exactly that record plus its code, linked into a flash slot. Its source is an ordinary process, written with `PROCESS_DEFINE` and `PROCESS_THREAD`, with one more line: `MODULE(name)`. Loading a module means programming its bytes and calling the function every built-in process type is started with. MEASURED

Protothreads are stackless, and a protoduino process keeps its variables in its instance struct. A module written that way has no `.data` and no `.bss`, so there is nothing in RAM to place or relocate: the kernel hands the thread a pointer, and the module works wherever that points. The rule is enforced at link time rather than left to discipline (6.8).

4.8 Relocation without a relocator

A module is linked for one slot, which needs no code on the device. To let one file load into any slot, addresses inside the module must be adjusted, and the usual way needs a relocation engine. There is a cheaper way. If slots are aligned to 512 bytes, moving a module changes only the high byte of every byte address and of every word address; low bytes never change and no carry crosses between them. A fix-up then is one position in the stream whose high byte gets a constant added. The host sorts those positions by offset and puts the list ahead of the code, and the loader applies them as the bytes go by, still in one pass. On parts with absolute call instructions, calls from the module into the kernel need no fix-up at all. PROPOSED

4.9 The same core on the host, and the simulator as oracle

The stream is plain C with no AVR dependency, so it compiles unchanged for the host. That gives three things: unit tests and fuzzing at desktop speed; a host tool that can say exactly what a device will accept, because it runs the device's code; and, compiled to WebAssembly, the same check inside a Node command-line tool or

protosim's web front end. For end-to-end tests, the simulator already contains a trusted ELF reader. Flashing a file through the loader inside simavr and comparing the result with what simavr's own reader produces for the same file tests the loader against an independent implementation. Section 9 reports that comparison.

5 Functional specification

5.1 Use cases

ID	Use case	How it goes	Status
UC1	Flash firmware over a serial line	Reset the board. The bootloader asks for a file by sending `C`. Send the `.elf` with XMODEM from any terminal program. The bootloader programs it, stores the record and starts it.	MEASURED
UC2	Recover a board whose application is broken or half-written	The record is missing or damaged, so after reset the bootloader keeps asking for a file. No programmer is needed on parts with a boot section.	MEASURED
UC3	The application asks for an update	It sets a flag that survives reset and resets through the watchdog. The bootloader sees the flag and waits for a file.	PROPOSED
UC4	Check what is installed	Send the same file in verify mode. Bytes are compared with flash instead of programmed.	PROPOSED
UC5	Ask the device what it is	Send `?` before a transfer. The bootloader answers with a line that names it.	BUILT
UC6	Load a module while the system runs	A process starts the loader process for a free slot. The loader schedules the load thread with the bytes from the serial device process, while every other process keeps running. It then checks the module, enters it into the module table, starts it with `process_new()` and tells whoever asked.	MEASURED
UC6b	Run with modules that are already in flash	A kernel built without the loader starts the modules its module table lists. They were programmed with the firmware or loaded earlier.	MEASURED
UC7	List, stop and remove modules	Shell commands in the kernel. Removal is `process_destroy()` and `module_table_write(slot, false, ...)`.	PROPOSED

5.2 Requirements

ID	The loader ...	Evidence
FR-1	accepts ELF32, little-endian, executable files for the AVR machine type whose program headers start at offset 52, fed in file order. This is what avr-gcc emits.	MEASURED T1, T3, T11, host
FR-2	needs nothing after the last loadable byte. Whatever follows, including XMODEM padding, is ignored.	MEASURED T3, T4
FR-3	refuses a file built for another core family from the ELF header alone.	MEASURED T5, T7
FR-4	refuses any flash segment outside the permitted window. The bootloader's own pages and the image record lie outside the window.	MEASURED M6, host
FR-5	changes nothing in flash until every program header has been accepted.	MEASURED T7
FR-6	invalidates the installed image before changing its first byte, and makes an image valid only after its last byte is programmed.	MEASURED T1; power cut not simulated
FR-7	has a damaged block sent again, and acknowledges a repeated block without applying it twice.	MEASURED T2

ID	The loader ...	Evidence
FR-8	optionally writes the EEPROM image contained in the file.	MEASURED T8
FR-9	optionally compares the file's device signature with the chip's. A mismatch prevents the commit. The signature follows the flash data in the file, so by then flash and EEPROM have changed and the device stays in the bootloader. The host tool makes the same check before sending.	MEASURED T9
FR-10	after a refusal sends a one-byte reason from protoduino's error codes and is ready for a new transfer. If nothing was programmed, the old image still starts.	MEASURED T5, T6, T7
FR-11	starts an image only if its record is intact, and optionally only if the image's CRC still matches.	record MEASURED; CRC at start BUILT
FR-12	exports a service table to the running system: programming a page, and the load thread itself. Both use the caller's memory only.	MEASURED T10, M1, M3
FR-13	loads a module while the kernel runs, into the slot the kernel names and nowhere else; the kernel image is left untouched.	MEASURED M1 to M3, M6, M9
FR-14	lets the kernel start the modules of its module table again after a reset, without a loader.	MEASURED M1 to M4, M9
FR-15	refuses a module built against another kernel build before any page of it is programmed.	MEASURED M5: 0 bytes programmed
FR-16	works at three levels of module support chosen at compile time, and is off by default where the part is too small.	levels MEASURED M4, M8; defaults PROPOSED
FR-17	does not depend on the protoduino bootloader: on Optiboot 8 or later the kernel loads modules through `do_spm`.	MEASURED M2
FR-18	fills the boot section the fuses reserve with as many options as fit, in a set order.	MEASURED 6.9
FR-19	never has to accept a module with static RAM: the module linker script rejects it.	MEASURED
FR-20	never stops the system while a module arrives: the load is a protothread that returns between any two bytes, and the loader is a process like any other.	MEASURED M1 to M3, M9: heartbeat turns
FR-21	holds several modules, each in its own slot, and loads one beside others that run.	MEASURED M9
FR-22	uses the framework it lives in: Protothreads v2 for control flow, `ptstate_t` for results, `errors.h` for reasons, processes, pipes and events for the kernel side, and the `*.conf.h` pattern for settings.	READ 6.1 to 6.9

5.3 Start-up behaviour

After reset the bootloader probes for a sender: it waits for about a second of silence, transmits `C`, and repeats. A transfer may begin at any probe. If none begins within the configured number of probes and the image record is intact, the image is started. If the record is not intact, the bootloader probes for ever. After a refusal the window opens again. In simulation the probes came 0.954 s apart, and with three probes the image started 3.8 s after reset MEASURED. That is too long for a product, so the entry condition is a configuration choice: always wait; wait only after an external reset; or wait only when the application asked or no valid image exists. PROPOSED

5.4 Reasons for refusal

When the load thread refuses a file it cancels the transfer and sends one more byte with the reason. The reason is the error the thread ends with, and it is a code from protoduino's `sys/errors.h`, so the error logger prints it by name.

Code	Name	Meaning	Flash changed?
`0x51`	`ERR_BIN_MAGIC`	Not a little-endian ELF32 executable for AVR with program headers at offset 52	no
`0xD0`	`ERR_BIN_VERSION`	Built for another AVR core family	no
`0x50`	`ERR_BIN_HEADER`	No program headers, or an entry address that does not fit	no
`0xA2`	`ERR_BOUNDS_LOWER`	A segment starts below the window: firmware offered to a module slot	no
`0xA3`	`ERR_BOUNDS_UPPER`	A segment ends above the window, or an offset or size does not fit the build's address width	no
`0x70`	`ERR_ORDER_SEQUENCE`	Segment data is not in ascending file order	no
`0xE0`	`ERR_BUF_FULL`	More separate segments than the build remembers	no
`0xD3`	`ERR_VALID_REQUIRED`	Nothing to load	no
`0xA4`	`ERR_INIT_DEPENDENCY`	A module linked against another kernel build	no
`0xCA`	`ERR_PROTO_SEQUENCE`	A block was skipped BUILT	possibly; not committed
`0x53`	`ERR_VALID_CONSTRAINT`	The device signature in the file is not this chip's	yes; not committed
`0x61`	`ERR_BUF_UNDERFLOW`	The sender finished before the file was complete BUILT	possibly; not committed

The loader process adds three of its own, which reach the error logger and not the sender: `ERR_INIT_NOSUP` when the bootloader can neither program a page for the kernel nor offer a thread that fits, `ERR_STATE_LOCKED` when the slot holds a module, and `ERR_CONN_TIMEOUT` when nobody sent a file. After a load, `module_check()` can still say `ERR_BIN_MAGIC`, `ERR_BIN_VERSION` or `ERR_HEAP_OOM` (the process struct of the module does not fit the RAM a slot gets).

5.5 Limits

- At most 255 program headers; at most `ELF_CONF_MAX_SEGMENTS` separate loadable segments after adjacent ones are merged. Plain firmware needs one.
- File offsets and sizes must fit the build's address width: 64 KB on small parts, 16 MB on large ones.
- Flash segments must arrive in ascending address order, because the page cache only moves forward. avr-gcc output does. A read-modify-write option would lift this. PROPOSED
- The workspace of the load thread is 371 bytes on parts with 128-byte pages and 516 on parts with 256-byte pages: an XMODEM block, one flash page, the stream and 26 bytes of bookkeeping.
- A module is linked for one slot, and modules, their process types and their strings must lie in the first 64 KB of flash: `process_new()` reads a process type through a near pointer.

6 Technical design

6.1 Where the pieces live

The code is in `docs/elfloader/overlay/`, at the paths it would have in the library, and it is compiled against the unchanged `src/`. It follows the conventions of the files around it: a `// file:` line on top, a block comment that states what the unit is independent of, settings in a `*.conf.h` with `#ifndef` defaults, `CC_*` macros, a selector header in `sys/` for platform code in `cpu/avr/`, `ptstate_t` results and `ERR_*` codes.

```
src/sys/elf.h  elf.c  elf.conf.h        the stream; also builds on the host                257 lines
src/sys/elf/load.h  load.c              the load thread: XMODEM-CRC, stream, page cache     258
src/sys/bootrom.h                       what a running system can ask of the bootloader    header
src/sys/flash.h   src/cpu/avr/flash.*   program a page: SPM, bootloader table, do_spm      109
src/sys/module.h  module.c  module.conf.hmodule descriptor, MODULE(), slots, module table  112
src/sys/process/loader.h  loader.c      the loader process                                 183
boot/boot.c  boot.conf.h  softuart.h    the bootloader                                     396
ld/module.ld                            linker script for modules
tools/pd/                               Node 22 ESM tool: send, verify, info, abi          proposed
```

The Arduino build compiles every source file under `src/`. The bootloader has its own entry code and no C runtime, so it stays outside that tree. It is one translation unit: `boot.c` includes `sys/elf.c`, `sys/elf/load.c`, `cpu/avr/flash.c` and the library's own `cpu/avr/uart0.c`, so that the compiler sees the stream, its sink and the drivers together.

6.2 The stream

```
/* Start a stream. Flash bytes outside [lo, hi) are refused before anything reaches the sink. */
void      elf_stream_init(elf_stream_t *s, elf_addr_t lo, elf_addr_t hi);

/* Push the next len bytes of the file. Returns PT_WAITING to be fed more, PT_ENDED when every
   loadable byte has been delivered, or an error code. */
ptstate_t elf_stream_write(elf_stream_t *s, const uint8_t *src, uint8_t len);

/* The sink: store one byte. Returns ERR_SUCCESS to continue, or the error the stream ends with. */
uint8_t   elf_stream_sink(elf_stream_t *s, uint8_t space, elf_addr_t addr, uint8_t byte);
```

The stream answers in the vocabulary of the framework: `PT_WAITING` while it wants more, `PT_ENDED` when it is done, and above that an error from `errors.h`. A protothread can pass its result straight on.

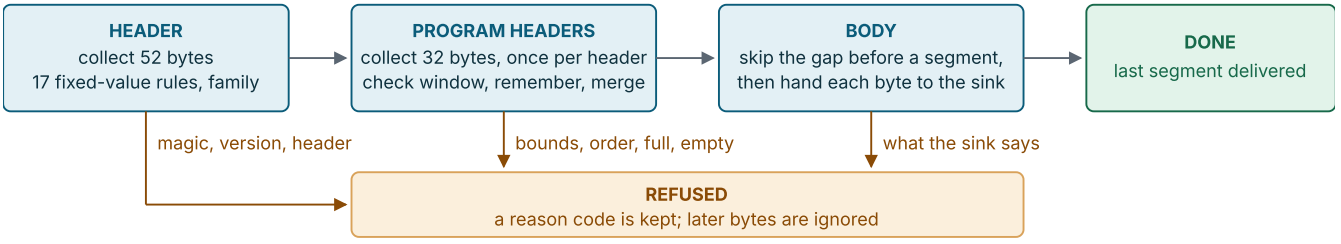


Figure 5. The states of the stream. Nothing reaches a sink before BODY, which is why a refusal in the first two states changes nothing.

Header rules. Seventeen bytes of the ELF header must each have one exact value: the magic, the class, the byte order, the file type, the machine, the position and size of the program headers. They are checked by a loop over a 34-byte table of offset and value pairs, which is smaller than seventeen comparisons and easy to extend.

What is remembered. The data of a segment arrives after all the headers, so each loadable segment is remembered as three numbers: the count of file bytes to skip before it, the address of its next byte, and the bytes still to deliver. Storing the gap and not the absolute offset removes the need to count file position at all. A segment that continues the previous one, both in the file and in memory, is merged into it. `.text` and `.data` always do, so plain firmware is one remembered segment.

Layout. The scratch area for header bytes is the first member of `elf_stream_t`, so that header bytes and the hot control fields are all within the 63-byte reach of one pointer. On AVR that matters more than it looks: see 6.10.

What building it taught

- **A refused file must not cost the installed image.** The first version erased the record when the first block arrived. A wrong file then left a working board without a valid image. Invalidation now happens with the first page write, after the headers are accepted. Test T7 guards it.
- **Above 64 KB, tables in flash need the far read.** In the ATmega2560's boot section the rule table sits beyond the reach of `LPM`. The loader refused every file until the table was read through `ELPM`.
- **Code in the boot section owns no RAM once the system runs.** The thread and the page service work on the caller's workspace and buffer alone.
- **A table of relative jumps does not span an 8 KB boot section.** The service table holds addresses. Without an explicit keep, the linker's garbage collection also dropped the table and its services without a word.
- **The event queue belongs to everybody.** The first loader process posted itself an event on every turn. Under load the queue of the scheduler filled, and the event that should have told the kernel “the module runs” was dropped without a trace. The loader now keeps at most one event of its own in the queue.
- **`PT_RAISE()` takes effect on the next schedule.** A thread that is only scheduled when there is news for it would send its refusal a second late, and a process that raises waits for an event that may never come. The load thread raises and runs its handler within one call; the loader process asks for a turn before it raises (7, finding 21).
- **Byte counts move in both directions.** A check that looked cheaper where a page is committed came out 16 bytes larger than the same check per byte. Every change was measured, and three were taken back.

6.3 Flash driver

The sink for flash is a cache of one page. A byte for a different page first commits the cached one. The cache starts as all `0xFF`, so a partly covered page is padded. Committing a page is one call, and who carries it out is a setting:

```
bool flash_is_writable(void);                                  /* is the selected driver present? */
void flash_page_write(flash_addr_t base, const uint8_t *data);   /* erase one page and program it */
```

`FLASH_CONF_DRIVER`	Who executes SPM	Used by	Status
`FLASH_DRIVER_SPM`	This code: erase, fill the page buffer, write, re-enable the read-while-write section, inside `CC_ATOMIC_RESTORE()`	the bootloader	MEASURED
`FLASH_DRIVER_BOOTROM`	The protoduino bootloader, through its service table (6.7)	a kernel	MEASURED
`FLASH_DRIVER_OPTIBOOT`	Optiboot 8 or later, through `do_spm`: erase, fill word by word, write	a kernel	MEASURED
`FLASH_DRIVER_NONE`	Nobody: the build cannot change its flash	–	–
NVMCTRL	tinyAVR 0/1/2, AVR Dx: another mechanism, not designed here	–	–

The lock bits must leave SPM writes to the application section enabled, or no bootloader of any kind can work.

6.4 The load thread

The thread speaks XMODEM with 16-bit CRC. It is decades old and exactly right for this job.

Property	Why it matters here
Built into terminal programs on every platform	The unmodified `.elf` can be sent with no tool of ours installed.
The receiver sets the pace: one block, one acknowledgement	The thread programs pages while it handles a block and acknowledges afterwards. No flow-control lines are needed, and the sender is silent while a page is programmed with interrupts off.
Blocks are numbered	A block repeated after a lost acknowledgement is recognised and not applied twice.
CRC-16 per block	The same CRC routine also protects the image record and the image, so there is one checksum routine in the loader.

A block is `SOH`, the block number, its complement, 128 data bytes and two CRC bytes. The thread holds a block in its workspace until the CRC has passed, and only then pushes it into the stream, so damaged bytes never reach flash. One extension is used: after cancelling with two `CAN` bytes the thread sends the reason code. Terminal programs ignore it; the `pd` tool prints it.

The mailbox. The thread touches no hardware. Whoever schedules it puts each received byte into a one-byte mailbox, tells it when the line has been silent for about a second, and takes up to three reply bytes out. The four calls are named after the serial layer they stand in for:

```
elf_load_init(&load, lo, hi, ELF_LOAD_MODULE, tries);   /* window, kind of file, probes to send */

if (elf_load_write_available(&load))
  elf_load_write8(&load, byte);                         /* a byte from the sender               */
elf_load_timeout(&load);                                /* or: the line is silent               */

state = elf_load_thread(&load);

while (elf_load_read_available(&load))
  send(elf_load_read8(&load));                          /* its answer, if it has one            */
```

The thread, as it stands in `src/sys/elf/load.c`. Judging a frame is a plain function, `elf_load_frame()`, which answers like the stream does: `PT_WAITING` to go on, `PT_ENDED` for a complete file, `PT_EXITED` when nobody started to send, or an error.

```
PT_THREAD(elf_load_thread(struct elf_load *self))
{
  struct pt *pt = &self->pt;

  PT_BEGIN(pt);

  self->seq = 1;
  self->end = 0;
  elf_stream_init(&self->stream, self->lo, self->hi);

  do
  {
    // Collect one frame: a block that starts with SOH, or the single byte
    // that is not the start of one, or nothing when the line stays silent.
    for (self->fill = 0; self->fill != ELF_LOAD_BLOCK_SIZE; )
    {
      uint8_t event;

      ELF_LOAD_WAIT_RX(pt, self);     // PT_WAIT_UNTIL(pt, flags & (ELF_LOAD_RX | ELF_LOAD_SILENT))
      // take what the mailbox holds: a byte, or the news that there is none
      event = self->flags & (ELF_LOAD_RX | ELF_LOAD_SILENT);
      self->flags ^= event;
      if (!(event & ELF_LOAD_RX))
        break;
      self->block[self->fill++] = self->rx;
      if (self->block[0] != ELF_LOAD_SOH)
        break;
    }

    // Judge it. The answer for the sender is in the mailbox afterwards.
    self->result = elf_load_frame(self);
    if (self->result >= PT_ERROR)
      ELF_LOAD_RAISE(pt, self, self->result);
    if (self->result == PT_EXITED)
      PT_EXIT(pt); // nobody is sending
  }
  while (self->result != PT_ENDED);

  PT_CATCHANY(pt)
  {
    // Refused: cancel the transfer, tell the sender why, and end with the
    // error that was raised.
    self->tx[2] = ELF_LOAD_CAN;
    self->tx[1] = ELF_LOAD_CAN;
    self->tx[0] = self->result;
    self->txn = 3;
    PT_THROW(pt, self->result);
  }

  PT_END(pt);
}
```

The thread returns	Meaning	Protothreads v2 construct
`PT_WAITING`	Between two bytes: schedule it again when the mailbox has news, or simply on every pass	`PT_WAIT_UNTIL`, one wait point in the whole thread
`PT_ENDED`	The file is in flash; `self->entry` is its entry point	flow reaches `PT_CATCHANY`
`PT_EXITED`	Nobody started to send within `tries` probes	`PT_EXIT`
an error	The file was refused; the sender was told why	raise, `PT_CATCHANY`, `PT_THROW`

Two details. All state is in `struct elf_load`, whose first member is `struct pt`, as the layout rule of `process.h` asks; the only local variable, `event`, does not live across the wait. And `ELF_LOAD_RAISE()` is `PT_RAISE()` with one difference: it sets the error with `LC_RAISE()` and then calls the thread again at once, so the handler runs within the same call. `PT_RAISE()` itself returns `PT_WAITING` and lets the handler run on the next schedule, which for this thread would be the next byte or a second of silence.

The scheduler of a system with one thread is the loop in `boot/boot.c`. It uses the polled calls of the library's own `cpu/avr/uart.h`:

```
static CC_NO_INLINE ptstate_t boot_schedule(struct elf_load *self)
{
  uint16_t idle = 0;
  ptstate_t state = PT_WAITING;

  do
  {
    if (uart0_rx_is_ready())
    {
      elf_load_write8(self, uart0_rx_read8());
      idle = 0;
    }
    else
    {
      _delay_loop_1(BOOT_CONF_IDLE_DELAY);
      // 65,536 idle passes in a row: nobody is sending
      if (++idle != 0)
        continue;
      elf_load_timeout(self);
    }

    state = elf_load_thread(self);

    while (elf_load_read_available(self))
      boot_tx_write8(elf_load_read8(self));
  }
  while (PT_ISRUNNING(state));

  return state;
}
```

The listing leaves out the `?` option. One thing in the bootloader does not go through the library: opening the port. `uart0_open()` works out its divisor at run time with 32-bit divisions, which cost 292 bytes, and enables the receive interrupt; `uart0_close()` ends with `sei()`. A bootloader knows its baud rate when it is built, polls, and must not enable interrupts, so it sets the four registers itself and clears `UCSR0B` before it starts the image. Both are in section 7 (findings 2, 7 and 20).

Limits. XMODEM cannot tell the sender to stop early. Sending a stripped file, or using the `pd` tool, which stops after the last loadable byte, removes the wasted time. In simulation at 115200 baud a block took 13.6 ms: 0.23 s for example 12 stripped, 3.17 s with its debug information. MEASURED

6.5 Image record and memory map



ATmega328P with the 2 KB boot section, not to scale. Window 30,592 bytes; bootloader 2,014 to 2,042 bytes used; service table in the last twelve bytes. The tests put two 2 KB module slots at 0x6000 and the module table at 0x7000.

Figure 6. Flash layout. The record page sits directly below the loader and outside the window.

Bytes	Field	Content
0 – 1	Magic	`'p' 'D'`
2 – 3	Entry	Word address at which the image is started
4 – 6	Image end	End of the written image, rounded up to a page
7 – 8	Image CRC	CRC-16 (XMODEM polynomial) of flash from 0 to the image end
9 – 10	Record CRC	Stored so that the CRC over all eleven bytes is zero

An erased page fails both the magic and the CRC, so “no record” needs no flag. The record after test T1 read `70 44 00 00 80 01 00 13 80 c1 aa`: entry 0, image end `0x000180`, image CRC `0x8013`. The record belongs to the bootloader. A kernel's identity for modules is computed by the kernel itself (6.8), so that it also exists under Optiboot, which keeps no record.

6.6 Parts without a boot section PROPOSED

On a classic ATtiny, reset always goes to address 0, and nothing protects the loader's pages. The loader sits at the top of flash and makes four provisions.

1. **The reset vector is redirected.** When page 0 of an image passes through the page cache, the loader keeps the image's own start address for the record and replaces the first instruction with a jump to itself. The other vectors stay the image's; the loader uses no interrupts.
2. **Erase runs from the top down, page 0 last.** Before the first page is written, all application pages are erased starting just below the loader. While page 0 still holds the old redirected vector, a reset reaches the loader through it. Once page 0 is erased, everything below the loader is erased, and erased flash executes as a harmless skip instruction until the program counter runs into the loader. This closes the window urboot's documentation warns about.
3. **A landing pad.** Because that skip instruction may skip one word, the loader starts with a one-word no-op.
4. **Its own serial port.** The ATtiny85 has no USART. `boot/softuart.h` provides the polled part of `uart0` on two pins, under the same names, so the bootloader source is the same on every part.

The loader's own pages remain unprotected against a runaway application. On these parts the design is an updater, not a guaranteed recovery path, and an ISP programmer remains the last resort.

The ATtiny85 build (2,046 bytes, 307 bytes of RAM, with `BOOT_CONF_VIRTUAL_RESET` and `BOOT_CONF_SOFT_UART`) compiles and has not executed. Points 2 and 3 were checked on the ATmega328P in simavr, which executes an erased word as the same skip instruction a real AVR does. Started in erased flash below the loader, at either word alignment and with the skip taken or not, execution arrived in the loader all four times. In a control build without the landing pad, one of the four cases skipped the loader's first instruction and ran its rule table as code. MEASURED

6.7 The service table

The last twelve bytes of flash describe what the boot section offers to the running system. `src/sys/bootrom.h` is the whole contract.

Offset	Bytes	Content
+0	4	Address of `elf_load_thread()`; 0 when the bootloader was built without `BOOT_CONF_LOAD_SERVICE`
+4	4	Address of `flash_page_write()`
+8	1	Version of the table: 2
+9	1	`sizeof(struct elf_load)` as the bootloader was built, in units of 4 bytes: 94 on the ATmega328P, which is 376 bytes
+10	2	`'p' 'D'`

```
bool                  bootrom_is_present(void);    /* a protoduino bootloader with a table?      */
uint8_t               bootrom_version(void);
uint16_t              bootrom_load_size(void);     /* bytes of workspace its thread works on     */
bootrom_load_thread_fn bootrom_load_thread(void);  /* ptstate_t (*)(struct elf_load *), or 0     */
bootrom_page_write_fn  bootrom_page_write(void);   /* void (*)(addr, const uint8_t *page)        */

/* in the loader process: which thread to schedule */
if (bootrom_is_present()
    && bootrom_version() == BOOTROM_VERSION
    && bootrom_load_size() <= sizeof(loader_workspace))
  return bootrom_load_thread();
```

What is shared. The system and the bootloader are built separately, so they agree on the head of `struct elf_load` only: the protothread state, the mailbox, the window, the result, the entry point and the key of 6.8. Those fields have the same layout in every build for one part. Everything behind them is private to whoever runs the thread, and the table says how much room that takes. The system brings a workspace at least that large; the loader process adds a margin of 16 bytes to its own `sizeof` for a bootloader that was built with more options.

Rules. Code reached through the table uses the caller's memory and stack only. `flash_page_write()` switches interrupts off while it works, because the caller's interrupt handlers live in the section being programmed, and restores the caller's interrupt state on return. The thread itself runs with the caller's interrupts enabled and calls nothing outside the boot section.

Why addresses and not jumps. The first version of the table held relative jumps. In an 8 KB boot section a relative jump at the end of flash cannot reach a function near the start of the section, and the link failed; and link-time relaxation is free to shorten a long jump and shift whatever follows it. Plain addresses have neither problem.

Cost and evidence. On the ATmega328P the page service adds 12 bytes to the bootloader and the thread another 76: the table, the lower bound of the window and the check of the key. In the previous draft the blocking session cost 396 bytes to export, because it had to exist twice. An application installed through the bootloader programmed a page through the table and read it back (T10), and a kernel had modules loaded through both entries (M1, M3, M9). MEASURED Two limits apply: simavr does not enforce the rule that SPM must run from the boot section (S2 in 8.1), so these runs show the calling convention and not the hardware permission; and on parts above 128 KB the entries lie beyond a 16-bit function pointer, so the call needs the extended indirect register set. That build links and has not run.

6.8 Modules

A module is an executable linked into a flash slot. Its first bytes are a descriptor, and the ELF entry point is the descriptor's address.

```
typedef struct module {
  uint16_t              magic;      /* MODULE_MAGIC, 'p' 'M'                                  */
  uint8_t               abi;        /* MODULE_ABI                                             */
  uint8_t               flags;      /* reserved, 0                                            */
  uint16_t              kernel_id;  /* kernel build the module is linked for: the key         */
  const process_type_t *type;       /* the process type the module adds                       */
} module_t;
```

Anatomy of a module

This is the module of the tests, complete (`prototype/kernel/count_module.c`). It keeps a counter in its process struct, writes to the serial device process of the kernel through a pipe, and takes turns through the scheduler of the kernel. Nothing in it says that it is loaded later, except the last line.

```
#include <protoduino.h>
#include <sys/process.h>
#include <sys/process/serial.h>
#include <sys/module.h>

PROCESS_DEFINE(count, "count", 3,
  uint8_t n;                        /* all state lives in the process struct */
  char    text[4];
);

PROCESS_THREAD(count, ev, data)
{
  process_count_t *self = PROCESS_SELF(count);

  PROCESS_BEGIN();

  PROCESS_SET_PIPEOUT(&serial_process0_proc.tx_pipe);

  for (self->n = 0; self->n < 3; self->n++) {
    self->text[0] = ' ';
    self->text[1] = 'm';
    self->text[2] = (char)('0' + self->n);
    PROCESS_PIPE_WRITE(self->text, 3);
    process_poll(&serial_process0_proc.base);

    /* take the next turn after everybody else */
    process_post(pt_process, EVENT_INTERVAL, NULL);
    PROCESS_WAIT_EVENT();
  }

  PROCESS_END();
}

MODULE(count);                      /* descriptor: magic, ABI, kernel identity, &process_type_count */
```

```
# what the kernel offers: every global function and variable of this build, as addresses
avr-nm kernel.elf | awk '$2 ~ /^[TDBRW]$/ {printf "%s = 0x%s;\n", $3, $1}' > kernel-abi.ld

avr-gcc -Os -mmcu=atmega328p -nostartfiles -nostdlib \
        -Wl,-T,ld/module.ld -Wl,-T,kernel-abi.ld -Wl,-e,module_descriptor \
        -Wl,--defsym=__module_base=0x6000 -Wl,--defsym=__module_kernel_id=0x1c8f \
        -o count.elf count_module.c -lgcc
```

The result is a file with one flash segment of 237 bytes at the slot address, its entry point on the descriptor, and calls into the kernel as plain absolute `call` instructions. **MEASURED** `ld/module.ld` turns static variables into a link error: *module has static variables: keep state in the process struct*. The first module build hit exactly that: `process.h` declares `process_current` with `CC_EXTERN`, which is empty in C, so every C file that includes it defines the variable (7, finding 10). Giving the kernel's symbols to the linker as definitions resolves it to the kernel's own.

Three levels of module support

The kernel is built for one of three levels with `MODULE_CONF_SUPPORT`. The figures are the flash of the library objects a kernel links at that level, on an ATmega328P.

Level	The kernel can	It links	Flash
0. None	Nothing with modules	–	0 B

Level	The kernel can	It links	Flash
1. Modules in flash	Start the modules its module table lists, programmed with the firmware or loaded earlier. It cannot load.	`module.c` : identity, table, check, start	378 B
2. Run time, thread of the bootloader	Also load while running, on a protoduino bootloader that offers its thread	`module.c` , `loader.c` , the table driver of `flash.c`	1,656 B
2. Run time, own thread	Also load while running, on any bootloader that can program a page for it	The same, with `elf.c` and `load.c`	3,146 B 3,246 B on Optiboot

At level 2 the kernel also holds 389 bytes of RAM for the workspace of the thread, 48 per slot for module state, and the loader process. MEASURED

Where it makes no sense. The level defaults to none, and should stay there on parts with less than 16 KB of flash or 1 KB of RAM, which covers the ATtiny25, 45 and 85; asking for run-time loading where the workspace cannot fit should be a build error. PROPOSED The levels themselves were all run (M1 to M4, M8). MEASURED

The loader process

`src/sys/process/loader.c` is written after `sys/process/serial_private.h` : a name string in flash, a singleton instance, a thread function, a type descriptor. A process starts it with `loader_start(slot, pt_process)` . Its thread, shortened by the comments:

```
  PROCESS_BEGIN();

  self->thread = loader_thread();                /* the bootloader's, or the kernel's own copy */
  if (self->thread == NULL || !flash_is_writable())
    LOADER_RAISE(ERR_INIT_NOSUP);
  if (self->slot >= MODULE_CONF_SLOTS || module_is_installed(self->slot))
    LOADER_RAISE(ERR_STATE_LOCKED);

  self->wake_cb  = serial_process0_proc.rx_pipe.wake_cb;    /* remember who listened */
  self->wake_ctx = serial_process0_proc.rx_pipe.wake_ctx;
  SERIAL_PROCESS0_CONNECT(pt_process);

  elf_load_init(load,
                MODULE_SLOT_ADDR(self->slot),
                MODULE_SLOT_ADDR(self->slot) + MODULE_CONF_SLOT_SIZE,
                ELF_LOAD_MODULE,
                LOADER_CONF_PATIENCE);
  load->key = module_kernel_id();
  timer_set(&self->silence, clock_from_seconds(1));

  do {
    if (!elf_load_write_available(load)) {
    } else if (ipc_pipe_available(PROCESS_PIPEIN()) > 0) {
      ipc_pipe_read(PROCESS_PIPEIN(), &self->byte, 1);          /* the next byte from the sender */
      elf_load_write8(load, self->byte);
      timer_restart(&self->silence);
    } else if (timer_expired(&self->silence)) {
      elf_load_timeout(load);                                   /* or the news that there is none */
      timer_restart(&self->silence);
    }

    self->state = (uint8_t)self->thread(load);

    while (elf_load_read_available(load) > 0) {                 /* its replies go out */
      self->byte = elf_load_read8(load);
      PROCESS_PIPE_WRITE(&self->byte, 1);
      process_poll(&serial_process0_proc.base);
    }

    if (PT_ISRUNNING(self->state) && ipc_pipe_available(PROCESS_PIPEIN()) == 0) {
      if (!self->ticking)                                       /* everybody else runs */
        self->ticking = process_post(pt_process, EVENT_INTERVAL, NULL);
      PROCESS_WAIT_EVENT();
    }
  } while (PT_ISRUNNING(self->state));
```

When the thread has stopped, the loader looks at how it ended, turns the file in the slot into a running process, and cleans up after itself:

```
  if (self->state == PT_EXITED)
    LOADER_RAISE(ERR_CONN_TIMEOUT);
  if (self->state != PT_ENDED)
    LOADER_RAISE(self->state);

  self->state = module_check(self->slot);         /* the file is in the slot: is it a module for us? */
  if (self->state != ERR_SUCCESS)
    LOADER_RAISE(self->state);

  module_table_write(self->slot, true, loader_workspace.bytes);
  if (self->notify != NULL)
    process_post(self->notify, EVENT_MODULE_INIT, module_start(self->slot));
  else
    module_start(self->slot);
  process_post(pt_process, PROCESS_EVENT_EXIT, NULL);   /* brings us back for PT_FINALLY */

  PT_CATCHANY(&pt_process->pt)
  {
    self->state = (uint8_t)PT_ERROR_STATE;          /* the scheduler passes it to the error logger */
    process_post(pt_process, PROCESS_EVENT_EXIT, NULL);
    PT_THROW(&pt_process->pt, self->state);
  }

  PT_FINALLY(&pt_process->pt)
  {
    /* give the serial device back to whoever listened before */
  }

  PROCESS_END();
```

The loader is an ordinary citizen. It reads `PROCESS_PIPEIN()`, writes with `PROCESS_PIPE_WRITE()`, keeps time with `sys/timer.h`, reports success with `EVENT_MODULE_INIT` and failure by ending with an error, which `process.c` hands to the error logger like the error of any process. Three lines in it work around the scheduler as it is today: the event it posts to itself before it ends, the single `ticking` event, and the poll inside `LOADER_RAISE()` (7, findings 14, 15 and 21).

Binding to the kernel

Scheme	How a module finds kernel functions	Cost on the device	Trade-off
Exact built	Linked against the addresses of one kernel build. The descriptor carries that build's identity, and the load thread refuses a module that names another.	None. No symbol table, no names, no table of entries.	Modules must be re-linked after any kernel change. A stale module is refused, not a crash.
Table option	The kernel exposes an append-only table of jumps at a fixed address; modules link against the table slots.	Four bytes per exported function, and one extra jump per call.	Modules survive kernel updates while the table only grows.

The identity is a CRC-16 that `module_init()` computes over the kernel's own flash image; the host computes the same value from the kernel's ELF file and passes it to the module's link. It does not come from the bootloader's image record, because Optiboot keeps none.

Checked before the first write. The kernel hands its identity to the load thread as `self->key`. In `ELF_LOAD_MODULE` mode the sink compares the two bytes that arrive for offset 4 of the window, where a descriptor carries `kernel_id`, and refuses the file with `ERR_INIT_DEPENDENCY`. Those bytes are in the first page, which is still in the cache at that moment, so a module for another kernel build changes nothing (M5: 0 bytes programmed). The previous draft could only refuse such a module after it had overwritten the slot. MEASURED

Slots, the module table and the life cycle

- **Slots.** `MODULE_CONF_SLOTS` ranges of `MODULE_CONF_SLOT_SIZE` bytes from `MODULE_CONF_BASE`, above the kernel image and below the image record. The tests use two slots of 2 KB at `0x6000`. A module is linked for one slot; with 4.8, any.
- **The module table.** One page behind the last slot: a magic and, per slot, the identity of the kernel its module belongs to. It is written after the module has been loaded and checked, so a load that was cut short leaves nothing that could be started.
- **Load.** The thread programs the module's pages into the slot. The loader process then calls `module_check()`, `module_table_write()` and `module_start()`, which is `process_new()` with the type from the descriptor and RAM from the slot's block.
- **Start-up.** `module_autostart()` starts every slot whose table entry names this kernel. No loader is involved, which is all that level 1 needs.
- **Remove.** `process_destroy()`, then `module_table_write(slot, false, ...)`. The second half is built; the pair as a command is not.

Who programs the pages

Bootloader	How the kernel gets a page programmed	Status
protoduino bootloader	Its thread does, or its page service does for the kernel's thread	MEASURED
Optiboot 8 or later	`do_spm`: erase, fill word by word, write	MEASURED
None; part without a boot section	The kernel executes SPM itself: `FLASH_DRIVER_SPM`	PROPOSED
Any other on a megaAVR	Not possible. `loader_is_available()` says so; level 1 still works.	MEASURED M7

On Optiboot

A developer who prefers Optiboot keeps it. The firmware is uploaded the usual way, and the protoduino kernel loads modules itself, with `LOADER_CONF_THREAD` set to `LOADER_THREAD_OWN` and `FLASH_CONF_DRIVER` to `FLASH_DRIVER_OPTIBOOT`. What Optiboot offers was read from its source (version 8.3): the second word of the bootloader is a jump to `do_spm(address, command, data)`, which performs one SPM step and re-enables the read-while-write section after an erase or a write; a build without the feature has a `ret` there instead. `flash_is_writable()` recognises a usable Optiboot by a major version of 8 or more in the last byte of flash and a jump in that second word. It takes Optiboot's start as 512 bytes below the end of flash, as Optiboot's own helper header does. Run against the prebuilt 8.3 image from the Optiboot repository, a module was loaded cooperatively, started, entered into the table and started again after a reset (M2). MEASURED

What the tests are and are not

The kernel in M1 to M9 is `prototype/kernel/kernel.c`: a sketch with `setup()` and `loop()` on the unmodified `process.c`, `ipc.c`, serial device process, serial layer and UART driver, built without the Arduino core. A stand-in of 40 lines supplies `main()`, timer 0 and `micros()`. Its kernel process doubles as the error logger of the scheduler, which is how it learns that a load failed. Still open:

- Hardware, and parts above 64 KB: `sys/clock.h` refuses to compile for them (7, finding 17).
- Removal as a command, and reloading a slot whose module is running.
- A loader for another serial device than `serial_process0`.

Rules and hazards

- No static variables. No interrupt handlers: the vector table belongs to the kernel.
- A process struct is at most 255 bytes, because `process_type_t.size` is one byte, and at most `MODULE_CONF_RAM_SIZE`.
- A callback a module registers with the kernel, such as a UART receive handler, points into the module. It must be removed in the module's `PT_FINALLY` block. The kernel cannot check this.

- On a chip, programming a page stops everything for 7.4 to 9.0 ms with interrupts off: the datasheet gives 3.7 to 4.5 ms each for the erase and the write. One timer 0 overflow per millisecond is lost in that time, so `micros()` falls behind by that much per page.
- While a block is on the wire, events wait behind the polls of the serial device (7, finding 14).
- The reserved byte of the descriptor is where a signature over the module would be announced. It is reserved, not designed.

6.9 Compile-time configuration

Configuration follows the pattern protoduino already uses in its `*.conf.h` files: every setting has a default and can be overridden. Three rules apply. Derive from the part wherever possible: address width from `FLASHEND`, expected core family from `__AVR_ARCH__`, page size from `SPM_PAGESIZE`. An option that is off costs nothing. And fail the build, not the device: a missing setting is an `#error`, and a bootloader that outgrows its boot section fails at link time.

Setting	Default	Effect	Flash, 328P
`ELF_CONF_ADDR_BITS`	from the part	16 or 24 bits for offsets and addresses	see 6.10
`ELF_CONF_MAX_SEGMENTS`	3	Separate segments remembered; 6 or 9 bytes of RAM each	–
`ELF_CONF_ARCH_CHECK`	on	Refuse files for another core family	12 B
`ELF_CONF_COALESCE`	on	Merge adjacent segments	62 B
`BOOT_CONF_IMAGE_CRC`	on	Store the image CRC in the record	14 B
`BOOT_CONF_PAGE_SERVICE`	off	Offer `flash_page_write()` to the running system	+12 B
`BOOT_CONF_LOAD_SERVICE`	off	Offer the load thread too; implies the page service, `ELF_CONF_WINDOW_LO` and `ELF_LOAD_CONF_KEY`	+88 B
`ELF_CONF_SIGNATURE`	off	Compare the device signature	+60 B
`ELF_CONF_EEPROM`	off	Write the EEPROM image	+78 B
`BOOT_CONF_INFO`	off	Answer `?` with a line that names the bootloader	+96 B
`BOOT_CONF_VERIFY`	off	Re-check the image CRC at every start	+48 B
`BOOT_CONF_VIRTUAL_RESET`, `BOOT_CONF_SOFT_UART`	off	Part without a boot section (6.6); serial on two pins	tiny only
`BOOT_CONF_START`, `BOOT_CONF_WINDOW`, `BOOT_CONF_BAUD`	–, 3, 115200	Where the bootloader is linked; probes before the image starts; line speed	–
`FLASH_CONF_DRIVER`	bootloader table	Who programs a page: 6.3	60 to 160 B
`MODULE_CONF_SUPPORT`	0	Kernel: 0 none, 1 modules in flash, 2 run-time loading	see 6.8
`MODULE_CONF_SLOTS`, `_SLOT_SIZE`, `_BASE`, `_RAM_SIZE`	2, 2048, 0x6000, 48	Kernel: where modules go and how much RAM each gets	–
`LOADER_CONF_THREAD`	bootloader's	Kernel: `LOADER_THREAD_ROM` or `LOADER_THREAD_OWN`	see 6.8
`LOADER_CONF_PATIENCE`	30	Kernel: seconds to wait for a sender	–

Each figure is the difference from the default bootloader of 2,014 bytes when that one setting is flipped.
MEASURED

Filling the boot section

The fuses reserve a boot section of one of four sizes, and whatever is not used is wasted. A build step therefore starts from the smallest bootloader and adds options in order of priority for as long as the result still fits the chosen block. The order is itself a setting. The default puts the checks that prevent damage first and the services for the kernel next: family check, page service, load thread, image CRC, segment merging, signature, EEPROM, description line, CRC check at start.

Part	Block	Used	Spare	What the block then holds
ATmega328P	0.5, 1 KB	–	–	Nothing: the smallest bootloader is 1,926 bytes
	2 KB	2,042 B	6 B	Family check, page service, **load thread**, image CRC
	4 KB	2,358 B	1,738 B	All nine options
ATmega1284P	1, 2 KB	–	–	Nothing: the smallest bootloader is 2,330 bytes
	4, 8 KB	2,970 B	1,126 B, 5,222 B	All nine options
ATmega2560	1, 2 KB	–	–	Nothing: the smallest bootloader is 2,332 bytes
	4, 8 KB	2,972 B	1,124 B, 5,220 B	All nine options

These are the results of the step as built (`fit.sh`). MEASURED Three things follow. On the ATmega328P the 2 KB block holds a bootloader that lends its load thread to the kernel; what does not fit there is the merging of segments, which plain firmware does not need. On the large parts the bootloader no longer fits the 2 KB block, where the blocking version of the previous draft did with 24 bytes to spare; it takes the 4 KB block and then holds everything. And the space left in the larger blocks is where the next features belong: a verify mode, signed images, and the fix-up stream of 4.8. On parts without a boot section the bootloader simply ends on a page boundary, so there is no block to fill.

6.10 Measured budgets

Build	Flash	RAM
ATmega328P, smallest	1,926 B	365 B
ATmega328P, default	2,014 B	371 B
ATmega328P, with the load thread offered	2,102 B	373 B
ATmega328P, everything on	2,358 B	376 B
ATmega1284P, default	2,512 B	516 B
ATmega2560, smallest	2,332 B	507 B
ATmega2560, default	2,514 B	516 B
ATmega2560, everything on	2,972 B	522 B
ATtiny85, serial on two pins BUILT	2,046 B	307 B

Where the 2,014 bytes go	Flash
Load thread: frames, XMODEM, replies	452 B
Stream: delivery loop and flash sink	358 B
Bootloader: record, start decision, image start	338 B
Stream: program headers	242 B
Page cache and page programming	214 B
Stream: header check, rule table, init	198 B
Scheduling loop and `uart0` calls	144 B
CRC-16; entry code	68 B

RAM. The bootloader's RAM is the workspace of the thread, and nothing else: on the ATmega328P the XMODEM block (133), the page buffer (128), the stream (84) and 26 bytes of mailbox, window and bookkeeping. It is not cleared at reset; every field is set before it is read, so the bootloader has no `.bss` and no code to clear one.

What the protothread costs. The blocking bootloader of the previous draft was 1,640 bytes; this one is 2,014. The 374 bytes are the price of a thread whose state lives in memory and not in registers: every wait stores a continuation and returns, every resume goes through a `switch` , and every variable is a load and a store. Offering the load to the kernel, on the other hand, became cheaper: 2,102 bytes against 2,036, although the new one also checks the kernel identity, because the thread is compiled once and not twice. The comparison at the level that matters:

ATmega328P, 2 KB boot section	Previous draft, blocking	This draft, protothread
Bootloader that also loads modules for the kernel	2,036 B with merging; 12 B spare	2,042 B without merging; 6 B spare
The system during a load	stands still for the whole transfer	runs: 18,053 heartbeat turns in 350 ms
A module for another kernel build	overwrites the slot, then is refused	refused before the first page
Kernel code for run-time loading	a call, in a stand-in kernel	1,656 B on the real scheduler

What would shrink it. Nothing has been tried from this list, in order of expected yield:

1. Write the per-byte path and the SPM sequences in assembly, as Optiboot and urboot do.
2. A local-continuation header for the bootloader build that numbers the wait points from 1 instead of using `__LINE__`. `lc.h` already lets a build choose one with `LC_INCLUDE`; small numbers make every store and every compare one instruction shorter. `lc-addrlabels.h`, the other candidate, is an `#error` today.
3. Replace the 128-byte block with a smaller frame, which also suits the small ATtinys.
4. Build with a newer avr-gcc. The repository's `platformio.ini` already points at one; only 7.3.0 was available here.

What already mattered, in the order it was found. The first version of the protothread bootloader was 2,520 bytes. One wait point in the thread with a plain function that judges a frame, a mailbox the thread never has to wait on, and setting the UART registers directly (286 of the bytes) brought it to 2,094. `-fno-move-loop-invariants -fno-ivopts -fno-tree-scev-cprop` saved 26. A workspace that needs no clearing, and with it no `.bss` code, saved 48. Counting idle passes in 16 bits saved the last 6. `-mstrict-X`, from the previous draft, keeps the workspace pointer out of the X register, which has no displacement addressing. MEASURED

Time. Line time dominates: 13.6 ms per block at 115200 baud in simulation on the ATmega328P and 15.1 ms on the ATmega2560, about 9 KB per second. Through the loader process a block took 14.0 ms. Real hardware adds the time to erase and program each page, which simavr does not model (S5 in 8.1).

7 Fixes for current protoduino caveats

Findings 1 to 9 came out of reviewing the UART and serial layers as a base for the loader. Findings 10 to 21 came out of building the loader process and a module on the scheduler, the pipes and the serial device process. Each was checked by running protoduino's real sources in simulation, except where marked as read. None has been applied. The ones a user is most likely to meet are 14 and 15 in the scheduler, 11 to 13 in the serial path, and 10 with a newer compiler.

#	Where	What happens	Evidence
1	`src/cpu/avr/uart_private_impl.h:69`	`uartN_baudrate()` reports twice the real rate whenever the double-speed bit is off. The line rate itself is correct.	**MEASURED** request 57600: registers give 58,823, function returns 117,647. Request 300: real 300, reported 600.
2	`uart_private_impl.h:81–87`	`uartN_close()` ends with an unconditional `sei()`. Called with interrupts disabled, it switches them on under the caller.	**MEASURED** interrupt flag 0 before the call, 1 after.
3	`src/sys/serial/serial_private_impl.h:293`	`serialN_flush()` tests the interrupt flag the wrong way round compared with its own documentation. With interrupts off it enables the transmit interrupt, which cannot fire, and sends nothing.	**MEASURED** ten bytes queued with interrupts off: after 60,000 calls nine are still unsent. With interrupts on all ten go out.
4	`docs/loader.md`	Describes a loader that cannot work on AVR (module code in RAM, `-fpic`) and an API that is not in `src/`. The README links to it as experimental.	**READ** avr-gcc prints "-fpic is not supported". No loader source exists in the tree.
5	`uart_private_impl.h:105–109`	The frame-error branch in `uartN_rx_error()` can never run: the flag is masked out three lines earlier. Skipping frame errors is a documented choice; the dead branch is the only defect.	**READ**
6	UART header documentation	Nothing says that the polled receive calls and the receive interrupt must not be used together. With both active the stream splits between them.	**MEASURED** input `hello`: the callback received `hlo`, the poller `el`.
7	`uart_private_impl.h`	The interrupt handlers and callback pointers are always compiled in. A bootloader that wants the same register mapping without vectors cannot have it.	**READ** The polled calls themselves work with interrupts off **MEASURED**: input `hello` echoed in full.
8	`platformio.ini`	`lib_deps` is an absolute path on one Windows machine, so the project builds nowhere else as checked in.	**READ**
9	`uart_private_impl.h:44, :162`	A baud rate of 0 divides by zero in `openex()`. A `#pragma message` prints on every build of every UART instance.	**READ**
10	`src/cc.h`, `CC_EXTERN`; `sys/process.h`	`CC_EXTERN` is `extern "C"` in C++ and nothing in C. `CC_EXTERN struct process *process_current;` and `PROCESS_EXTERN()` therefore define the variable in every C file that includes the header. avr-gcc 7 merges the copies silently; from GCC 10 on, the link fails. A module got its own `process_current` this way, in RAM it is not allowed to have.	**MEASURED** `nm` shows a common symbol; with `-fno-common`: "multiple definition of `process_current'"

#	Where	What happens	Evidence
11	`src/sys/serial.h:6–7`, `serial.conf.h`	`serial.h` includes `protoduino-config.h` before `cc.h`, so `serial.conf.h` chooses the buffer sizes before `RAMEND` is defined. Undefined, it counts as 0, and every part gets the 16-byte buffers meant for parts with less than 1 KB of RAM.	**MEASURED** ATmega328P: both rings 16 bytes; 64 when `avr/io.h` is included first
12	`src/sys/process/serial_private.h`, service loop	On a poll the serial device moves as many bytes from `tx_pipe` as the UART ring has room for, then waits for the next event. Nothing polls it for the rest, so they stay in the pipe until somebody happens to write or receive again.	**MEASURED** 80 bytes written at once: 15 left the UART
13	`src/sys/process/serial.h`, usage text	The documented way to choose a baud rate, setting `baud` and then calling `process_new()`, has no effect: `process_new()` clears the struct. The device opens at the default 9600.	**MEASURED** 115200 requested: `UBRR0L` = 207, which is 9600
14	`src/sys/process.c`, `process_run()`	`if (do_poll()) return; do_event();` dispatches an event only when no poll was pending. A process that polls itself on every turn stops all events for good. And because the serial device polls on every received byte, events also stop while bytes arrive back to back.	**MEASURED** a self-polling process ran; a second process never got its INIT event. During a transfer a heartbeat waited 15.1 ms, the length of a block; 2.0 ms with the change below.
15	`process.c`, `call_process()`	When a process ends, the scheduler arms `PT_FINAL` and waits for the next invocation to run the `PT_FINALLY` block and unlink it. Nothing causes that invocation: `process_poll()` ignores a process in that state. The process stays linked, its cleanup never runs and its pool slot is never free, unless an event happens to be addressed to it.	**MEASURED** a process that ended: after 2.5 s its cleanup had not run and its state was still EXITING
16	`process.c`, `process_start()`	The return value of the `process_post()` that delivers the INIT event is ignored. With the default queue of three usable entries, a fourth process started in a row is linked into the list and never runs.	**READ**
17	`src/sys/clock.h`	Accepts only the ATmega328, 168 and 88 families and stops with `#error` on every other part, although `cpu/avr/clock.h` has nothing in it that depends on the part. Timers, and everything that uses them, do not build for the ATmega2560 that example 22 targets.	**MEASURED** “clock: Unsupported Platform!” for `-mmcu=atmega2560`
18	`src/sys/pt/pipe.h:11–17`	`PT_STDIN()` and `PT_STDOUT()` yield the pipe struct, not its address, so `PT_PIPE_AVAILABLE()`, `PT_PIPE_READ()` and the others do not compile with the `struct ipc_pt` they are written for. The `_EX` forms, which processes use, are fine.	**MEASURED** “incompatible type for argument 1 of 'ipc_pipe_available'”
19	`serial_private.h`, `_on_rx`	The receive callback of the serial process returns nothing, but is installed where the serial layer expects a function that returns whether it has consumed the byte. The layer acts on whatever is left in the result register: sometimes it stores the byte in its own ring as well, which nobody reads, and counts overflows there.	**MEASURED** compiler: “incompatible pointer type”; effect **READ**

#	Where	What happens	Evidence
20	`uart_private_impl.h`, `openex()`	The divisor and the reported baud rate are computed at run time with 32-bit divisions, also when the rate is a constant. A program whose only UART call is `uart0_open(115200)` pays 292 bytes for it.	**MEASURED** `uart0_openex` 224 B, `__udivmodsi4` 68 B
21	`sys/pt.h` `PT_RAISE()` with `sys/process.h`	`PT_RAISE()` returns `PT_WAITING` and lets the handler run the next time the thread is scheduled. A process is only scheduled when an event or a poll arrives, so a process that raises may never reach its `PT_CATCHANY` block, and its error is never reported. There is no `PROCESS_RAISE()`.	**MEASURED** the first loader process: a refused module produced no report until its raise was preceded by a poll

Proposed changes

```
/* 1. uart_private_impl.h, openex(): remember which divisor is in force */
  uint8_t  samples = 8;                                  /* double speed: clock / 8 */
  uint16_t baud_setting = (F_CPU / 4 / baud - 1) / 2;
  __UCSRA__ = 1 << __U2X__;
  if (((F_CPU == 16000000UL) && (baud == 57600)) || (baud_setting > 4095)) {
    baud_setting = (F_CPU / 8 / baud - 1) / 2;
    __UCSRA__ = 0;
    samples = 16;                                        /* normal speed: clock / 16 */
  }
  ...
  CC_TMPL_VAR(baudrate) = F_CPU / ((uint32_t)samples * (baud_setting + 1));

/* 2. uart_private_impl.h, close(): leave the caller's interrupt state alone */
void CC_TMPL_FN(close)(void)
{
  CC_ATOMIC_RESTORE()
  {
    CC_TMPL_VAR(baudrate) = 0;
    __UCSRB__ &= ~(_BV(__RXEN__) | _BV(__TXEN__) | _BV(__RXCIE__) | _BV(__UDRIE__));
  }
}

/* 3. serial_private_impl.h, flush(): poll the port when interrupts are OFF */
  if (bit_is_clear(SREG, SREG_I))
  {
    if (!CC_TMPL2_FN(tx_is_ready)())
      return cnt;
    CC_TMPL2_FN(tx_write8)(ringb8_get(&VAR_TX));
    return cnt - 1;
  }
  CC_TMPL2_FN(tx_enable_int)();
  return cnt;
```

```
/* 10. cc.h: a declaration must be a declaration in C as well */
#ifdef __cplusplus
#define CC_EXTERN extern "C"
#else
#define CC_EXTERN extern
#endif
/*     and process.c then needs the one definition:  struct process *process_current; */

/* 11. sys/serial.h: the configuration needs the device header first */
#include <cc.h>                     /* brings in avr/io.h: RAMEND, RAMSTART */
#include <protoduino-config.h>

/* 12. sys/process/serial_private.h: keep going while tx_pipe holds bytes */
      CC_TMPL2_FN(flush)();
      if (ipc_pipe_available(&self->tx_pipe) > 0)
        process_poll(pt_process);

/* 14. sys/process.c: polls first, then one event in the same call */
void process_run(void)
{
  do_poll();
  do_event();
}

/* 15. sys/process.c, call_process(): a process that ended gets the turn its cleanup needs */
    PT_FINAL(&p->pt);
    process_post(p, PROCESS_EVENT_EXIT, NULL);

/* 19. sys/process/serial_private.h: say that the byte has been taken */
static bool CC_CONCAT2(CC_TMPL_PREFIX, _on_rx)(uint_fast8_t ch)
{
  uint8_t b = (uint8_t)ch;
  ipc_pipe_write(&CC_CONCAT2(CC_TMPL_PREFIX, _proc).rx_pipe, &b, 1);
  process_poll(&CC_CONCAT2(CC_TMPL_PREFIX, _proc).base);
  return true;
}

/* 21. sys/process.h: raise in a process, and get the turn in which the handler runs */
#define PROCESS_RAISE(err)                \
  do {                                    \
    process_poll(pt_process);             \
    PT_RAISE(&pt_process->pt, (err));  \
  } while (0)
```

- **4.** Replace `docs/loader.md` with a short page that points here, and mark the README entry as a design, not a feature.
- **5.** Delete the dead branch. If frame errors are wanted later, report them from the receive interrupt, where the flags are read before the data register and are valid; put it behind `UART_CONF_REPORT_FRAME_ERRORS`, default off, so behaviour stays as it is.
- **6.** One paragraph in `uart_private_header.h`: use the callbacks with interrupts on, or the polled calls with interrupts off, never both.
- **7.** Add `UART_CONF_ISR`, default 1. With 0, the handlers, the callback setters and the receive-interrupt enable in `openex()` are left out, and the bootloader can use the same template.
- **8.** A relative library reference in `platformio.ini`.
- **9.** Return `ERR_SERIAL_BAUD` for a zero rate; put the message behind a verbose-build switch.
- **13.** Correct the usage text: set `baud` after `process_new()`, before the scheduler runs; or let `process_new()` leave the bytes behind `struct process` alone when the type asks for it.
- **14, with 12.** With polls no longer ahead of events, a device may poll itself until its work is done without stopping anybody. The measurement of 4.6 is this change and nothing else:

`prototype/kernel/build_kernel.sh` with `FAIR=1` builds against a copy of `process.c` in which only `process_run()` differs.

- **16.** Let `process_start()` return whether the INIT event was queued, and `process_new()` return NULL when it was not.
- **17.** Select `cpu/avr/clock.h` on `__AVR__`, as `sys/uart.h` does for its driver.
- **18.** `#define PT_STDIN(pt) (&(pt)->pipein)` and the same for `PT_STDOUT`.
- **20, with 7.** A compile-time form: `#define UART_UBRR(baud) ((F_CPU / 4 / (baud) - 1) / 2)` and `uartN_open_ubrr(ubrr, flags)` that only writes registers. With the polled calls as `static inline` in the header, a bootloader could then open, poll and close the port through the library and pay nothing for it. The bootloader of this document would lose its one direct register access.

The loader works on the library as it is. It carries a workaround for 14, 15 and 21, marked in `src/sys/process/loader.c`; the test sketch carries one for 12 and 13; the module link carries one for 10.

Findings from my first review that testing withdrew

They are listed so the record is straight. The polled receive calls do work after `open()` when interrupts are off. `rx_clear_errors()` does clear an overrun under simavr (S7 in 8.1); on a real chip those flags are read-only and clear when the data register is read, so the call is harmless there. The transmit path through the data-register-empty interrupt is sound: 18 bytes went out in 19 handler calls. The 57600 special case is the deliberate Arduino-compatible behaviour. The read-modify-write on the control register can at worst cause one extra interrupt that switches itself off.

8 Simulator findings: simavr and protosim

Running the prototype and the probes turned up behaviour in both simulators that matters to anyone testing firmware with them. This section lists all of it: where simavr differs from a real chip, defects in protosim, and what protosim would need to test this loader without a separate harness. The versions are protosim `6fadc6f` and simavr `a6fc4cc`, the commit protosim pins. Nothing was changed in either project. Recorded probe output is in `prototype/results-simulators.txt`.

8.1 simavr: where the simulation differs from the hardware

#	Where	What simavr does	A real AVR	Evidence
S1	`sim_elf.c:103, :255`	The firmware loader is given the last valid flash address as its limit and rejects any chunk that ends on the last byte of flash. The bytes are dropped with only a log line. This is an off-by-one.	The chunk fits.	`MEASURED` "Loading 4 bytes of Flash data at 7ffc would overflow buffer (32767 bytes)"
S2	`avr_flash.c`, SPM handling	SPM is carried out wherever the program counter is.	On parts with a boot section, SPM outside it does nothing.	`MEASURED` a program at address 0 erased and wrote a page
S3	`avr_flash.c`	A page write replaces the page with the buffer contents.	Programming only clears bits; without an erase the result is old AND new.	`MEASURED` `F0` then `3C` with no erase read back `3C`, not `30`
S4	`avr_flash.c`	There is no read-while-write state. The application section reads back correctly straight after a page write, and the busy bit is never set.	The section cannot be read until it is re-enabled.	`MEASURED` data read back at once; `SPMCSR` = `04`

#	Where	What simavr does	A real AVR	Evidence
S5	`avr_flash.c`	Erase and write finish within the instruction. The page-write bit stays set in `SPMCSR` afterwards.	Each takes milliseconds; the control bits clear on completion.	**MEASURED** zero busy polls
S6	`sim_core.c:777`	When the program counter reaches the end of flash, the CPU is marked as crashed. Erased words themselves are executed correctly, as the skip instruction.	The program counter wraps to address 0.	**MEASURED** “CPU CRASHED” after running through erased flash with nothing above it
S7	`avr_uart.c:334–336`	Any write to the UART status register clears the overrun flag; the line that would preserve it is commented out.	The flag is read-only and clears when the data register is read.	**MEASURED** status `AA` before `rx_clear_errors()`, `A2` after
S8	`avr_uart.c`, status read	The frame-error flag is recomputed only while a received byte is waiting, and writes cannot clear it, so it stays set after the last byte has been read.	The flag belongs to the byte that is next to be read.	**READ** It matches the note in protoduino's driver that the flag cannot be cleared.
S9	`avr_uart.c`, input queue	The receiver queues 63 bytes before it reports an overrun.	Two bytes and the shift register.	**MEASURED** 63 bytes drained after 100 were sent with nobody reading
S10	`avr_uart.c`, receive timer	With more than one byte queued, the receive flag stays set while the interrupt is raised again only one byte time later. Code that polls with interrupts on sees the flag and can take the byte ahead of the handler.	The interrupt is taken as soon as the flag is set.	**MEASURED** 568 consecutive polls saw the flag at 9600 baud; none at 19200
S11	`sim_avr.c`, `avr_reset()`	A reset discards every pending cycle timer and restarts the cycle counter at zero. An external reset is not recorded in `MCUSR`.	Reset causes are all recorded.	**MEASURED** `MCUSR = 01` at power-on and `08` after a watchdog reset, both correct. Timers and external reset **READ**; effects in B6 and B7.

What this means for a bootloader tested in simulation

S2 to S5 are the ones that matter here. A loader that forgets to erase before writing, forgets to re-enable the read-while-write section, does not wait for an operation to finish, or runs outside the boot section passes every test in simavr and fails on a chip. The prototype does all four correctly, but the simulated results in section 9 are not what shows that. They establish parsing, protocol and addressing. Flash discipline, timing and power loss need hardware.

8.2 protosim: defects

#	Where	What happens	Evidence	Suggested fix
B1	`src/protosim.c:470`	The exit status is always 0: the last line is `return force_exit_success ? 0 : 0;`. A CPU crash before `--exit-on-uart` matches is reported as success. Only running out of `--max-steps` fails.	**MEASURED** “CPU CRASHED”, exit status 0	Non-zero on a crash, and whenever an expected string was not seen.

#	Where	What happens	Evidence	Suggested fix
B2	`src/protosim.c:304`	For a bootloader given as ELF, the entry point is read from the temporary instance's program counter, which simavr never sets when it loads a file. The loader is “started” at address 0.	**MEASURED** `entry=0x0000` for the ELF, `0x7800` for the same loader as HEX	Use the firmware's base address or the ELF entry point.
B3	`src/protosim.c:305`	The ELF path copies the temporary instance's whole flash over the simulated flash, which wipes the application loaded just before. The HEX path overlays only the bootloader. With B2 the result looks right by accident: address 0 is now erased, and erased flash runs through to the loader.	**MEASURED** only the loader's banner appears; the application's never does	Copy only the bootloader's own range.
B4	`src/protosim.c:195`	A main firmware given as Intel HEX is read with simavr's single-chunk reader. Of a file with two regions, only the first is loaded.	**MEASURED** application and loader in one file: “Loaded HEX: 180 bytes”, the loader absent	Use simavr's multi-chunk reader, or protosim's own.
B5	`src/protosim.c:84, :349`	`--uart0-in` injects one byte per millisecond, starting 1 ms after start, whatever the baud rate and whether or not the receiver is on. Bytes sent before the receiver is enabled are lost. At 9600 baud bytes arrive faster than a byte time and queue (S10).	**MEASURED** receiver enabled at 5 ms: the first 5 of 16 bytes were lost	Start when the receiver is enabled, as the TCP path does, and pace from the configured rate.
B6	`src/protosim.c:349`	Injection stops for good after any reset, because simavr's reset discards the timer that drives it (S11).	**MEASURED** after a watchdog reset none of the remaining bytes arrived	Register the timer again after a reset.
B7	Profiling reports	After a reset the cycle counter restarts at zero, so the report's totals no longer match the per-function sums.	**MEASURED** “hottest single edge: 200.0% of total runtime”; 99.4% without a reset	Keep a running total of its own.
B8	`src/protosim.c:384`	`--bootloader` always starts the STK500 uploader thread. No switch turns it off or selects another protocol. In headless mode, where no terminal device exists, the thread printed nothing after its start message.	**MEASURED** and **READ**	A switch; see 8.3.
B9	No assignment anywhere	simavr's `reset_pc` is never set, so a reset during a `--bootloader` run restarts at address 0 and not in the loader.	**READ** The harness set it and reset correctly.	Set it when a bootloader is given.
B10	`include/stk500_uploader.h:36`	The uploader's page size is fixed at 128 bytes, so the automatic upload suits ATmega328P-class parts only.	**READ**	Take it from the part.
B11	`src/ihex_loader.c:65`	The bootloader HEX reader fills gaps between regions with `00`, where erased flash is `FF`.	**READ**	Fill with `FF`.

#	Where	What happens	Evidence	Suggested fix
B12	`--uart0-in`	The input is a C string. A file that contains zero bytes, such as an ELF, cannot be passed.	READ	See 8.3.

8.3 protosim: additions for testing this loader PROPOSED

- **Binary input.** `--uart0-in-file`, or better an XMODEM sender beside the STK500 one, with a switch for which of the two runs with `--bootloader`, and one for neither.
- **Flash comparison.** `--expect-flash <file.elf>`: at exit, compare flash with simavr's own load of that file. This is the oracle test of section 9 as a one-line check for CI, and it needs B1 fixed to be of use.
- **Reset into the loader.** B9, so that an application's request for an update can be tested.
- **A strict flash mode.** An option that reports SPM outside the boot section, a page write with no erase before it, and reads of the application section while it is busy. That would turn S2 to S4 from blind spots into test failures. It could live in simavr or as a check in protosim.

9 Verification

9.1 End to end in simulation

The bootloader ran inside simavr. A harness sent each file with XMODEM as a terminal program would, at 115200 baud, and afterwards compared the simulated flash below the record page with what simavr's own ELF reader produces for the same file.

Test	Scenario	Outcome
T1	328P: unmodified avr-gcc ELF, 12,868 bytes, clean line	Flash identical to the reference; record written; application reached
T2	328P: block 3 damaged in transit, acknowledgement of block 5 lost	One block sent again after a negative acknowledgement, one duplicate dropped; flash identical
T3	328P: protoduino example 12, 29,624 bytes with debug information	Flash identical; 3.17 s of line time
T4	328P: the same example stripped, 2,048 bytes	Flash identical; 0.23 s
T5	328P, empty chip: an ATmega2560 file	Refused `0xD0`; flash untouched
T6	328P, empty chip: random bytes	Refused `0x51`; flash untouched
T7	328P: install, reset, then offer an ATmega2560 file	Refused `0xD0`; the installed application intact and started again 4.8 s after the reset
T8	328P, all options: file with EEPROM data and a matching signature	Flash identical; EEPROM holds `01 02 03 04 05`
T9	328P, all options: an ATmega168P file, same core family, other device	Refused `0x53` at the signature; no record written; the bootloader keeps control
T10	328P: an installed application programs a page with `flash_page_write()` through the service table	Page reads back as written; the caller's interrupt state restored
T11	2560: small image	Flash identical; record written; application reached
T12	2560: 106,830-byte image reaching far flash, 839 blocks	Flash identical; 12.7 s of line time
T13	328P: execution started in erased flash below the bootloader, at both word alignments, with the skip taken and not taken	The bootloader was reached in all four cases. In a control build without the landing pad, one case skipped its first instruction and ran the rule table as code

9.2 Run-time module loading in simulation

Here the bootloader only sits in flash. The test kernel of 6.8 runs on the ATmega328P: protoduino's scheduler with the serial device process, a kernel process, a heartbeat process and the loader process. The harness sends it a module with XMODEM while it runs. Afterwards the slots are compared with simavr's own load of the module file, the kernel image is checked for changes, and the part is reset to see what starts from flash. The kernel prints how many turns the heartbeat took during the load and the longest time it waited for one.

Test	Scenario	Outcome
M1	protoduino bootloader in the 2 KB section that offers its load thread; the loader process schedules it there	Slot identical to the reference; module started and ran as a process; entered into the module table; started from flash after a reset. 350.0 ms; heartbeat 18,053 turns, longest wait 15.1 ms
M2	Stock Optiboot 8.3 as the bootloader; the kernel links its own load thread and programs through `do_spm`	The same. 361.5 ms; 16,859 turns, 15.1 ms
M3	protoduino bootloader with only the page service; the kernel links its own load thread	The same. 361.4 ms; 16,858 turns, 15.1 ms
M4	Kernel built for modules in flash only; module programmed together with the firmware	Module started from the module table; the kernel has no loader
M5	A module linked against another kernel build	Refused `0xA4` with **0 bytes programmed**; the kernel process got the error from the scheduler and reported it
M6	A firmware image offered to the loader process	Refused `0xA2` before any write: it lies below the slot
M7	Kernel built to load, on a bootloader that offers no service	The kernel reports that it cannot load and carries on
M8	Kernel built without module support, module present in flash	Module ignored
M9	A module runs from slot 0; a second one, linked for slot 1, is loaded beside it	Both slots identical to their files; after a reset both start and take turns
M1'	M1 against a copy of `process.c` in which `process_run()` dispatches an event after the polls	The same load: 18,686 turns, longest wait 2.0 ms

In every load the kernel image was unchanged afterwards. The heartbeat figures are from simavr, which programs a page in no time; on a chip each page adds 7.4 to 9.0 ms to the longest wait.

9.3 On the host

The same stream, compiled natively, was fed real files in chunks of random size and its output compared with `avr-objcopy`.

- Flash images identical for the test program, for example 12, for its stripped form, for one-byte-at-a-time feeding, and for the 106 KB image. The signature bytes extracted from the test program were those of the ATmega328P.
- Refused as designed: a file for another family (`0xD0`) and a non-ELF file (`0x51`), both within the first 127 bytes.
- The step that fills the boot section was run for every block size of three parts (6.9).

9.4 The library findings

`prototype/probes/run_probes.sh` reproduces findings 10 to 15 and 17 to 20 of section 7 with small sketches on the unmodified library; its output is in `results-library.txt`.

9.5 Not verified

- Anything on hardware, including fuse and lock-bit settings and real programming times.
- Loss of power during an update. The transaction argument in 4.4 is by construction.
- The ATtiny path: it has never executed. Only its run-through mechanism was checked, on the ATmega328P (T13).
- Flash discipline. simavr accepts a missing erase, a missing read-while-write re-enable and SPM from the application section (8.1), so the simulated results cannot show that the loader gets these right.
- The image CRC check at start-up, the information reply, and the service table on parts above 128 KB.
- How long a real page write holds the system up during a load, and what that does to `micros()`.
- Module loading on any part but the ATmega328P, and with the Arduino core in place of the stand-in for it.
- Optiboot on a real board, and Optiboot versions other than the 8.3 image that was used.

9.6 Test plan from here

- **Host unit tests in CI** for the core, with the files above as fixtures, and a fuzzer on `elf_stream_write()`. The stream is small, pure C and takes untrusted input, which is the ideal fuzzing target.
- **protosim end to end** per supported part, once the additions of 8.3 exist and B1 is fixed, with the oracle comparison as the pass criterion. The module scenarios M1 to M9 belong in the same suite.
- **Hardware**: an Uno and a Mega 2560, with an ISP programmer at hand for fuses. A relay on the supply to cut power at random points of an update, hundreds of times, checking that the board always answers afterwards.

10 Roadmap, risks and open questions

Step	Deliverable	Done when
R0	The fixes of section 7, the scheduler ones (14, 15, 16, 21) first	The probes in `prototype/probes` give the corrected results, and the workarounds in `loader.c` can go
R1	Move `overlay/src` into `src/`: stream, load thread, flash driver, module support, loader process; host tests and fuzzing for the stream	Fixtures pass in CI on the host and for two AVR parts; an example sketch loads a module
R2	The bootloader for ATmega328P and ATmega2560 with the fill step; protosim fixes B1 to B9 and the additions of 8.3	T1 to T13 and M1 to M9 run in protosim; first boards flashed with a terminal program
R3	Hardware: an Uno with this bootloader and with Optiboot, a Mega 2560; the power-cut rig	M1 to M3 pass on the boards; real page times and their effect on the scheduler are measured
R4	The `pd` tool; PlatformIO upload through it; an update request from the application; removal and reloading of modules; a shell command for the loader	`pio run -t upload` sends the `.elf`; a module is replaced while the system runs
R5	ATtiny path on hardware; relocation by fix-up stream; signed modules; a size pass (6.10)	Each on its own evidence

Risks

- **Size.** The protothread form costs 374 bytes. On parts above 64 KB the bootloader needs the 4 KB section; on the ATmega328P the 2 KB section is full to within 6 bytes.

Open questions

- Which small part is meant by “ATtiny8”? The answer decides whether the small-frame transport is needed early.
- Should updates be authenticated, and if so with what? A keyed hash costs several hundred bytes.

- **Page writes still stop the system.** Cooperative means between pages. Each page holds everything for 7 to 9 ms on a chip, and no AVR design can avoid that.
- **The scheduler under load.** Until finding 14 is fixed, a process that waits for an event waits out every block of a transfer.
- **ATtiny recovery.** Without hardware protection for the bootloader's pages, a faulty application can destroy it. The claim for these parts is deliberately weaker.
- **Exact binding.** Convenient while developing, awkward for distributing modules. The table scheme is the answer and costs flash.
- **Optiboot is a moving target.** The flash driver relies on where Optiboot puts `do_spm` and on its size. Both are checked at run time, but only version 8.3 was tried.
- **Old compiler.** All sizes are from avr-gcc 7.3.0. A newer one may be better or worse, and it turns finding 10 into a link error.
- Which binding scheme is the default for modules: exact or table?
- Is the default order for filling the boot section the right one? On the ATmega328P it trades the merging of segments for the load thread.
- Is a 4 KB boot section acceptable on the ATmega2560 and ATmega1284P, or should a blocking build be kept for the 2 KB section there?
- Should the bootloader wait after every reset, or only on request? It changes start-up time by seconds.
- Where should the bootloader's build live, given that it cannot be under `src/`?

A ELF fields the loader reads

Where	Offset	Field	Use
ELF header	0 – 3	magic	Must be `7F 45 4C 46`
	4, 5	class, data	Must be 1 and 1: 32-bit, little-endian
	16	`e_type`	Must be 2, an executable. A relocatable `.o` is refused here.
	18	`e_machine`	Must be 83, AVR
	24	`e_entry`	Start address; for a module, the address of its descriptor
	28	`e_phoff`	Must be 52: program headers directly after the ELF header
	36	`e_flags`	Low 7 bits name the core family; compared with `__AVR_ARCH__`
	42, 44	`e_phentsize`, `e_phnum`	Must be 32; count of program headers, below 256
Program header	0	`p_type`	Only 1, a loadable segment, is considered
	4	`p_offset`	Where the segment's bytes are in the file; must not go backwards
	8, 20	`p_vaddr`, `p_memsz`	Run address and size in memory; not used
	12	`p_paddr`	Load address. Its top byte selects the memory; the rest is the address there.
	16	`p_filesz`	Bytes to deliver; a segment with none is skipped

For the ATmega328P test program avr-gcc wrote six loadable segments: code at load address 0; initial `.data` at run address `0x800100` but load address `0x136`, directly after the code; `.bss` with no file bytes; EEPROM at `0x810000`; fuses at `0x820000`; signature at `0x840000`. MEASURED

B Reproducing the measurements

The code is in `docs/elfloader/overlay/`, the test bench in `docs/elfloader/prototype/`. It needs `gcc-avr`, `avr-libc`, `libelf-dev` and protosim built with its simavr submodule. The Optiboot image is not included: copy `optiboot_atmega328.hex` from the Optiboot repository into `fixtures/` for M2, M4 and M8.

```
./make_fixtures.sh                      # test files, and the test kernels with their modules

# the stream on the host, against a file built with avr-gcc
gcc -std=gnu11 -O2 -DELF_CONF_EEPROM=1 -DELF_CONF_SIGNATURE=1 -DELF_CONF_MAX_SEGMENTS=6 \
    -I../overlay/src -I../../../src -o host_test host_test.c ../overlay/src/sys/elf.c
./host_test fixtures/app-atmega328p.elf 5 out.bin

# the harness that runs the bootloader inside simavr
S=../../../../protosim/libraries/simavr/simavr
gcc -O2 -o sim_harness sim_harness.c -I$S/sim -I$S/sim/avr \
    $S/obj-x86_64-linux-gnu/libsimavr.a -lelf -lm -lpthread

./run_tests.sh                          # T1 to T13
./run_modules.sh                        # M1 to M9
./fit.sh atmega328p 2048                # fill one boot section
./sizes.sh                              # the tables of 6.8 to 6.10
probes/run_probes.sh                    # findings 10 to 20 of section 7
./build.sh m2560 atmega2560 0x3F000 -DBOOT_CONF_LOAD_SERVICE=1
```

Recorded outputs are in `results-sizes.txt`, `results-fit.txt`, `results-tests.txt`, `results-modules.txt`, `results-library.txt` and `results-simulators.txt`. Findings 1 to 9 of section 7 come from the other programs in `probes/`, built against protoduino's own sources and run with `protosim --uart0-in … --uart0-out …`; the simulator findings of section 8 from `simprobes/` and `sim_harness --fallthrough`.

Sources

- Contiki, `core/loader/elfloader.c`, `symtab.c`, `cle.c`: github.com/contiki-os/contiki. Removal: github.com/contiki-ng/contiki-ng, commit 6220aea14.
- simple-avr-bootloader: github.com/m3y54m/simple-avr-bootloader
- Optiboot: github.com/Optiboot/optiboot, read at commit e363ecb: `optiboot.c` (version 8.3, `do_spm`, `pre_main`) and `examples/demo_dospm/optiboot.h`. Version 8 notes: forum.arduino.cc/t/optiboot-now-at-version-8-0/547763
- urboot, on erased flash and the first-page hazard: github.com/stefanrueger/urboot. Optiboot on ATtiny: github.com/SpenceKonde/ATTinyCore, `avr/extras/Ref_Optiboot.md`
- micronucleus and its reset-vector patch: github.com/micronucleus/micronucleus
- Zephyr LLEXT and symbol link identifiers: docs.zephyrproject.org/3.7.0/services/llext/api.html
- Microchip, ATmega48A/88A/168A/328P family, “Self-Programming the Flash” and “USART Control and Status Register 0 A”: onlinedocs.microchip.com
- avr-libc memory sections: the avr-libc user manual, “Memory Sections”
- protoduino and protosim sources at the branch named on the cover; simavr at commit a6fc4cc.