Doorway | Runtime and planning restrictions

10 cm cells. Both panels show the same revised probe lines and intended stops. Diamonds are the existing macro launch points.

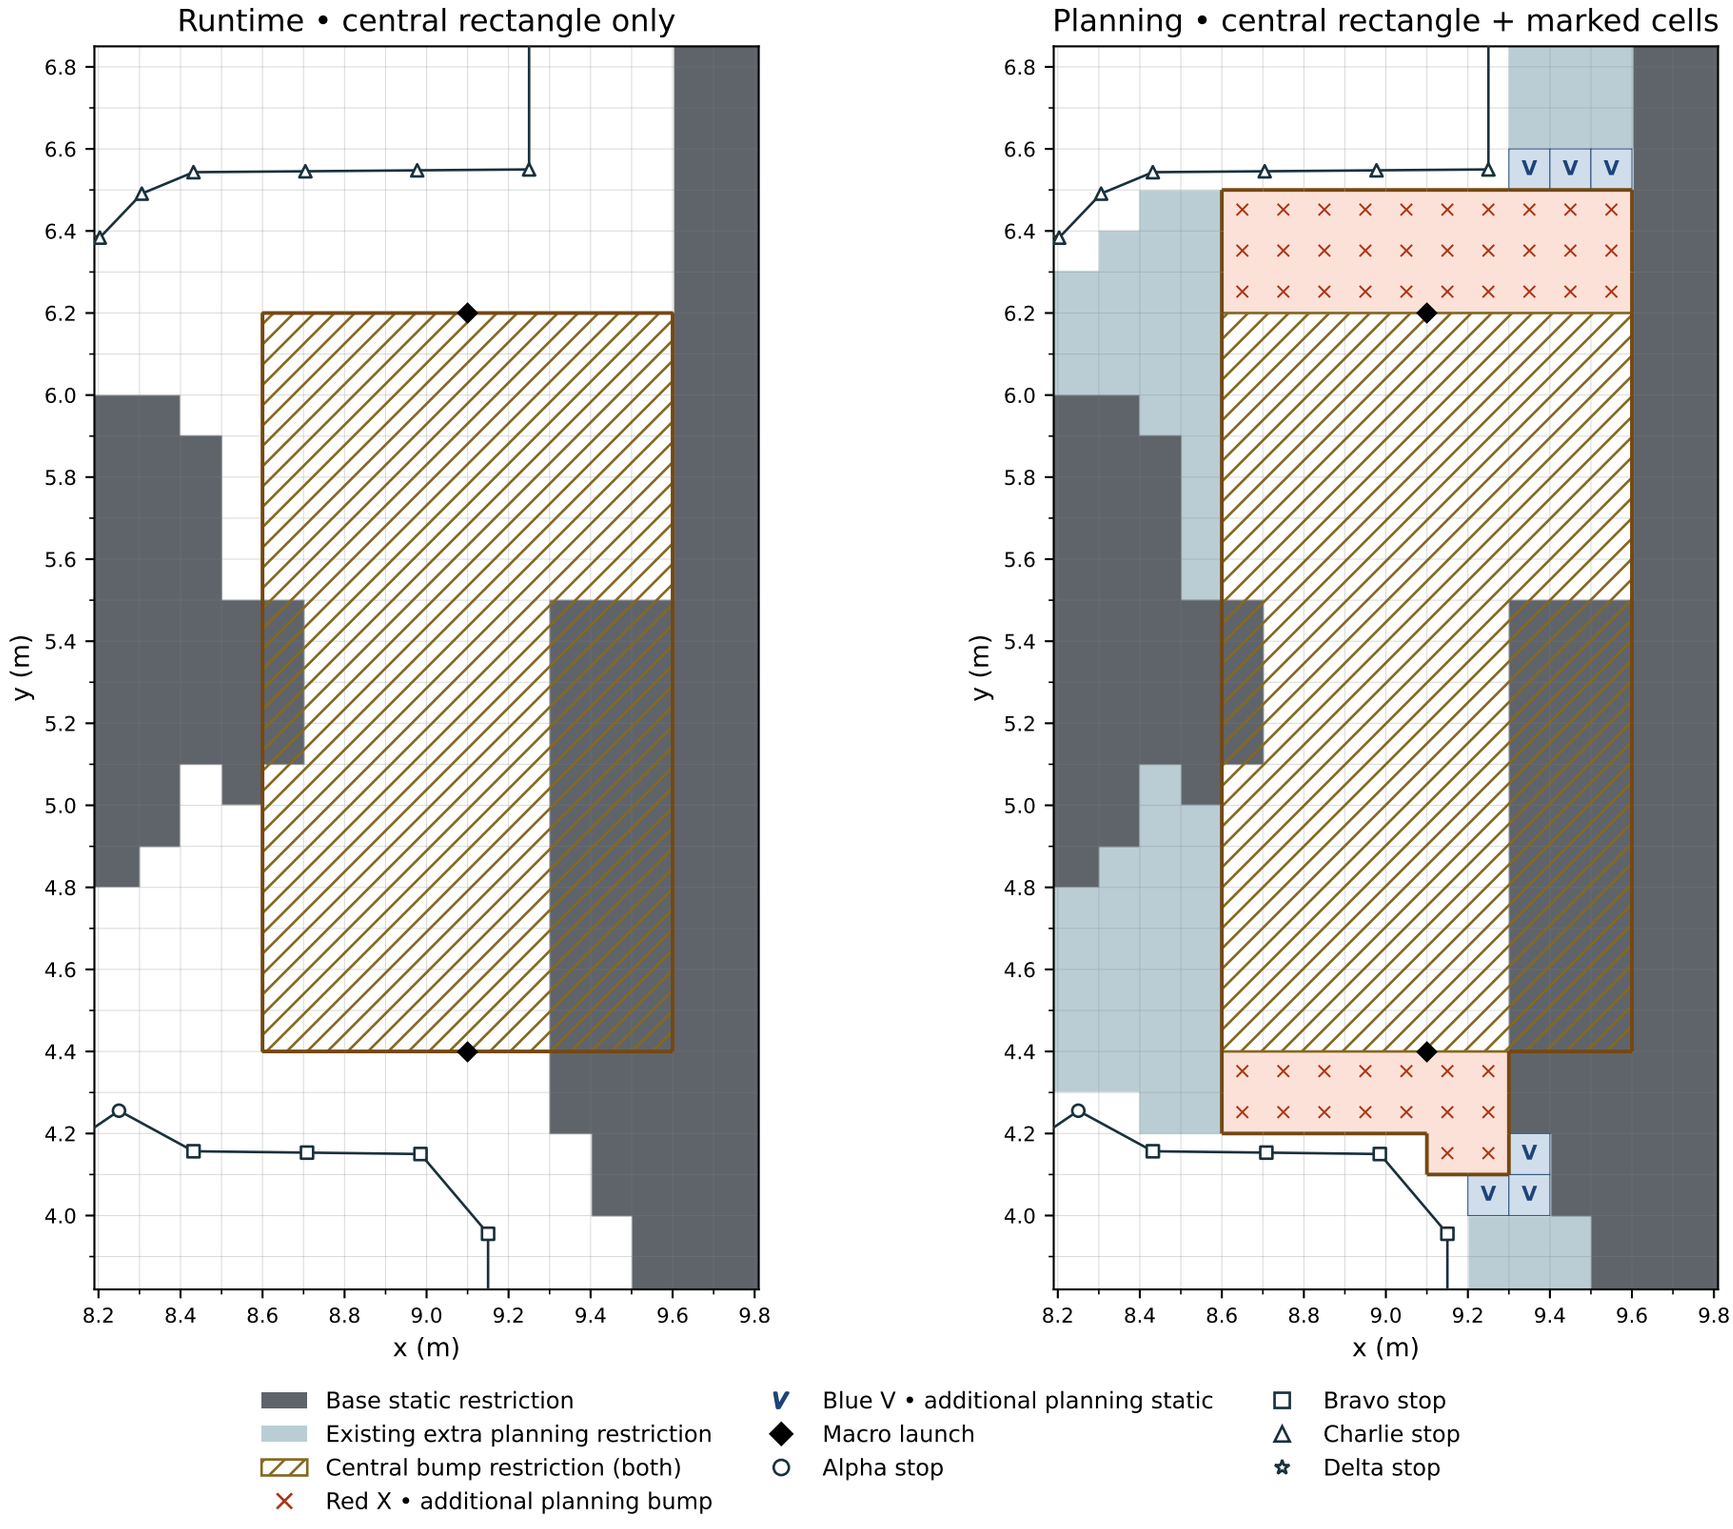

Static blocks remain blocked where layers overlap. Hatched and X cells denote bump rules, not a general ban on authorized crossing macros.

Marked-cell readback

Coordinates are metres, given as lower-inclusive, upper-exclusive cell extents.
The central rectangle is the large striped area in the screenshot, not the smaller bump core.

Applies to	Class	x range	y range	Cells
Both	Bump • central rectangle	8.6–9.6	4.4–6.2	180
Planning	Bump • upper X	8.6–9.6	6.2–6.5	30
Planning	Bump • lower X	8.6–9.3	4.2–4.4	14
Planning	Bump • lower tip X	9.1–9.3	4.1–4.2	2
Planning	Normal • upper V	9.3–9.6	6.5–6.6	3
Planning	Normal • lower V	9.3–9.4	4.1–4.2	1
Planning	Normal • lower V	9.2–9.4	4.0–4.1	2

Geometry check

236 of 236 revised probe targets and 236 of 236 connecting segments stay outside the proposed exclusions.
Runtime bump overlay: 180 cells. Planning bump overlay: 226 cells. Normal planning additions: 6 cells.

Command-sequence check

Both launch positions, (9.1, 4.399) and (9.1, 6.2), lie in the red planning extension. An ordinary staging move from outside would enter the planning bump zone. The staging rule must be resolved before registration uses this layout. This is a review drawing; no operating maps, macro positions or checker rules were changed.