
Measurement sheet - lower bulkhead v2 - page 1: top and bottom view


Top view: part standing on its bottom face, looking at the parting face. Bottom view: part upside down, looking at the face that sits on the chassis plate.

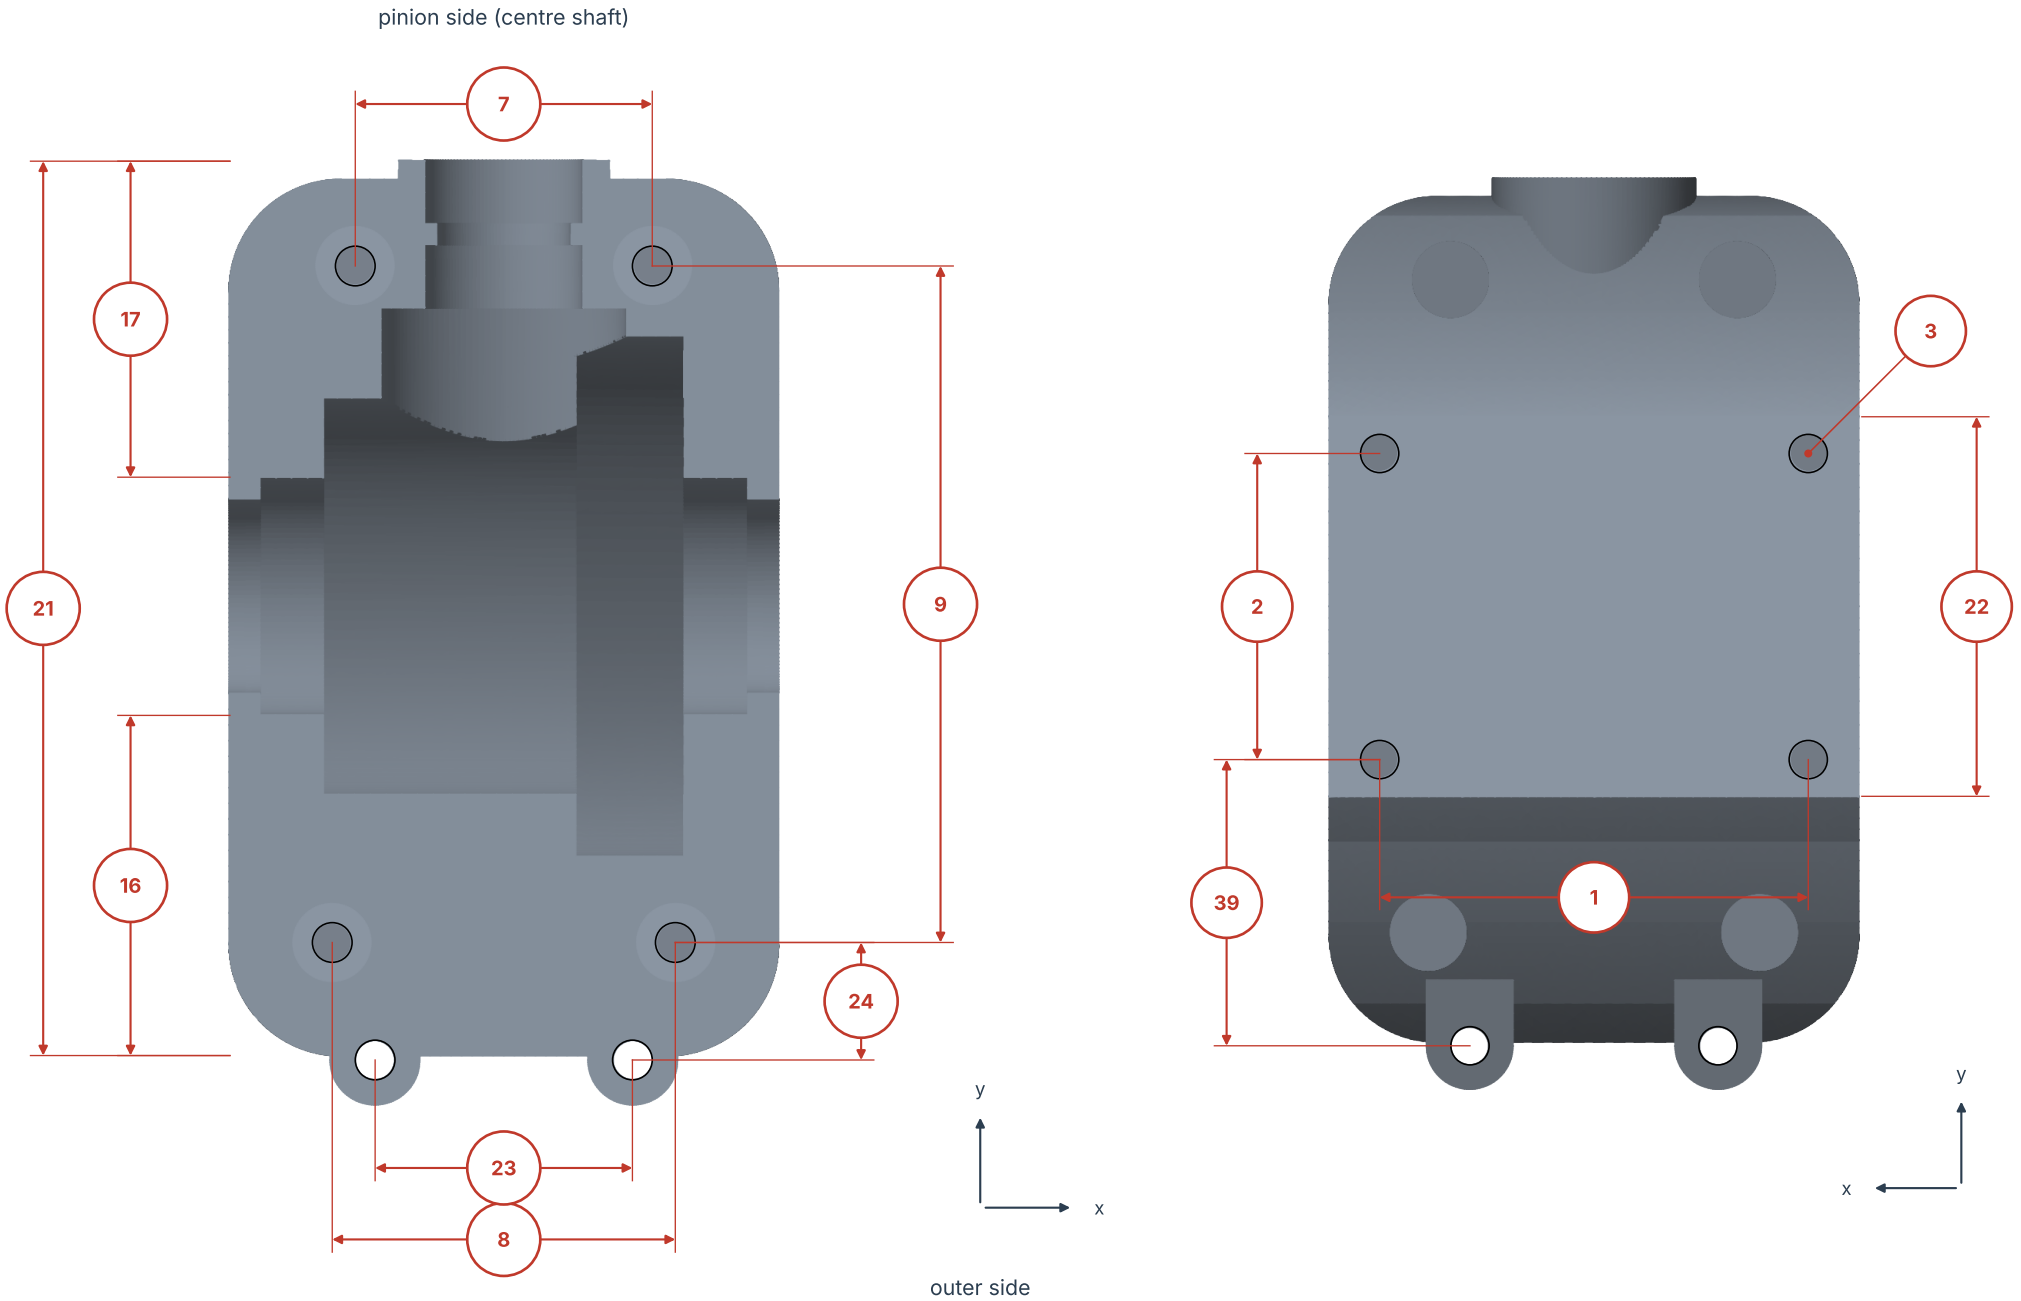


Measurement sheet - lower bulkhead v2 - page 2: sections

Section A-A along the pinion axis (x = 0), seen from the side. Section B-B through the diff axis, seen from the pinion side.

Section A-A (x = 0)

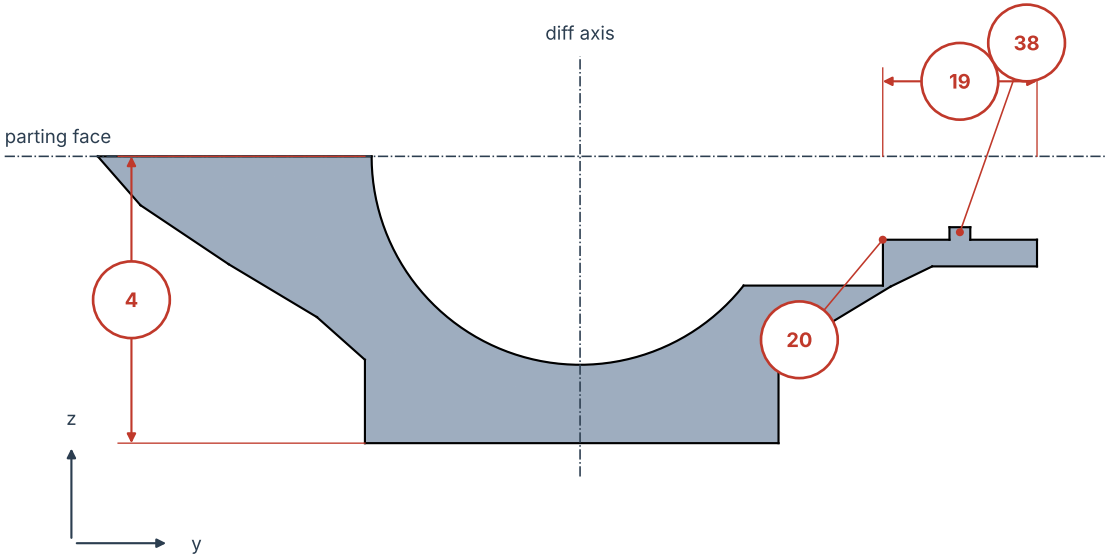

Section B-B (diff axis, seen from the pinion side)

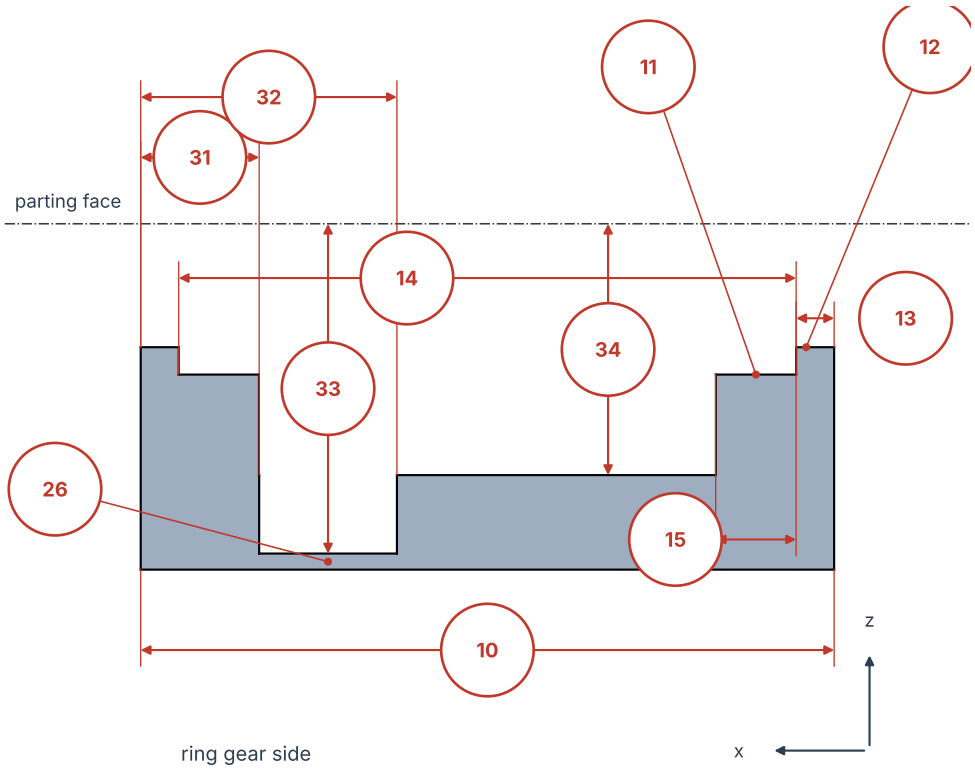


Measurement sheet - lower bulkhead v2 - page 3: side and end view

Side view: looking at a diff bearing wall. End view: looking at the pinion housing.

Side view



End view (pinion side)

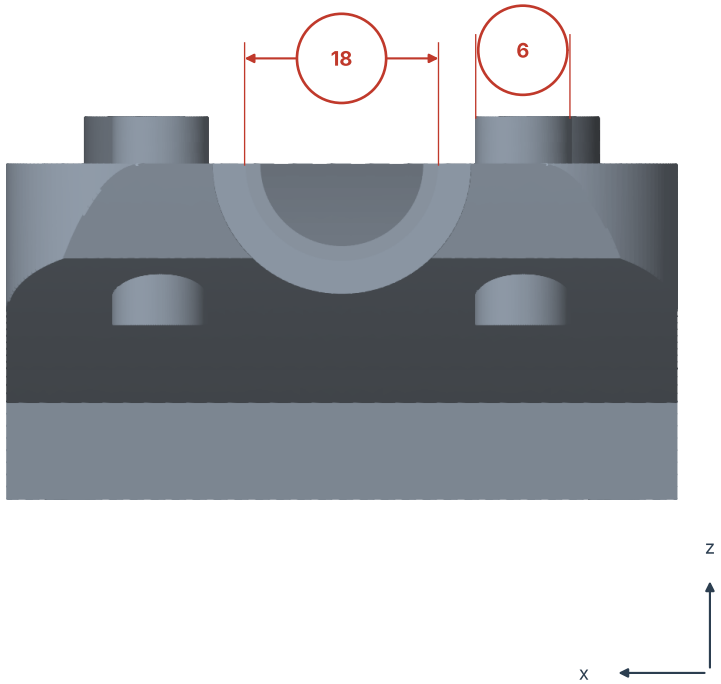

Measurement sheet - lower bulkhead v2 - page 4: values

Priority A: interfaces. Priority B: shape. Rows without a caliper value are open. Nos. 16 and 17 refer to the edge of the seat (15.6 at the parting face). Values in mm.

No.	Prio	Feature	How to measure	Model v2	Caliper value
1	A	Bottom holes: spacing across (x)	inside jaws, far edge to far edge, minus hole diameter	28.0	28.0
2	A	Bottom holes: spacing along (y)	as no. 1	20.0	20.0
3	B	Bottom holes: diameter / depth	inside jaws / depth rod	M3: 2.5 / 8.0	3.2 / 6.25
4	A	Height: bottom face to parting face	part on a flat surface, depth rod	17.2	17.2
5	A	Height: bottom face to top of the bosses	as no. 4	19.62	19.62
6	B	Top bosses: outer diameter	outside jaws	4.86	4.86
7	A	Top boss holes: spacing across, pinion side (M3×10)	as no. 1	18.7	18.7
8	A	Top boss holes: spacing across, outer side (M3×8)	as no. 1	21.6	21.6
9	A	Top boss holes: spacing along (y)	as no. 1	42.6	42.6
10	B	Width over the outer faces of the diff bearing walls	outside jaws	34.48	34.2
11	A	Diff bearing seat: width of the half bore at the parting face	inside jaws	15.0 (fit)	15.6
12	A	Diff bearing lip: opening diameter	inside jaws at the outer face	12.28	12.28
13	A	Diff bearing lip: thickness	outside jaws or depth rod	1.89	1.89
14	A	Spacing of the inner faces of the two lips	inside jaws across the cavity	30.7	30.7
15	A	Diff bearing seat: length from the lip inward / inner shoulder	depth rod	4.0 / none	4.0 / none
16	A	Outer end face to the near edge of the diff half bore at the parting face	depth rod	21.42	21.12
17	A	Pinion housing end face to the near edge of the diff half bore	as no. 16	19.9	19.6
18	A	Pinion bearing seat: width of the half bore at the parting face	inside jaws	10.0 (fit)	10.5
19	A	Pinion bearing seat: length (inner end of the seat to housing end face)	depth rod	9.25	9.25
20	A	Pinion bearing seat: shoulder at the inner end	look	none	none
21	B	Overall length at the parting face (outer end to pinion housing end)	outside jaws	56.3	
22	B	Narrow lower section: length (y) / height	outside jaws	24.8 / 5.0	- / 5.0
23	A	Sway bar holes: spacing	as no. 1	16.2	16.2
24	A	Sway bar hole to the outer top boss hole, along (y)	inside jaws, far edges, minus diameters	7.4	7.4
25	B	Sway bar tabs: thickness	outside jaws	4.35	4.35
26	B	Floor thickness below the ring gear deepening (no. 4 minus no. 33)	calculated	0.8	
27	A	Diff: outer diameter of the ring gear	outside jaws on the diff	max. 31.9	31.93
28	A	Diff with both bearings: distance over the outer faces of the bearings	outside jaws on the diff	30.0	30.0
29	A	Pinion gear (17T): outer diameter	outside jaws	max. 14.1	14.1
30	B	4 small holes on the outer end face: function, diameter, positions	photo with ruler	not modelled	
31	A	Ring gear deepening: outer face of the diff wall (ring gear side) to the outer end	depth rod	5.89	
32	A	Ring gear deepening: outer face of the diff wall (ring gear side) to the inner end	depth rod	12.74	
33	A	Ring gear deepening: depth below the parting face	depth rod	16.4	
34	B	Floor below the diff case: depth below the parting face	depth rod	12.5	
35	A	Diff: largest outer diameter of the diff case (without the ring gear)	outside jaws on the diff	max. 24.0	
36	A	Diff: back face of the ring gear to the outer face of the bearing on that side	depth rod	min. 4.0	
37	A	Ring gear side: seen from the pinion housing, is the deepening on the left?	look	left	left (photo)
38	A	Pinion seat: rib between the two bearings: width / opening diameter	depth rod / inside jaws	1.25 / 8.5	
39	A	Bottom side: sway bar hole to the nearest bottom hole, along (y)	as no. 24	18.7	
40	A	Parting face: outer top boss hole to the near edge of the diff half bore, along (y)	depth rod or inside jaws	14.3	
41	B	Sway bar tabs: top face below the parting face	depth rod	0	