Solar ESS Co. Ltd.
53 Moo 2, Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829 · LINE: solaress1
www.solaress.org · www.โซลาร์เอสส์.com

Monthly Report: an AC-Coupled Inverter That Stopped and How the Hybrid's Data Showed It

Rev01 · 10 November 2026 · Monthly Report · 14.19 kWp solar with battery, zero export · a shop in Surat Thani province · Data: SolisCloud, April – 10 November 2026

The main inverter, its solar panels and the battery are **working well**. The **second (AC-coupled) solar inverter stopped at midday on 4 October** and has produced nothing since. The shop was losing about **12 kWh of free solar a day** (≈ 370 kWh a month), and nobody was told, because the second inverter has no app of its own.

Main inverter solar
Healthy
1,005 kWh in October, its best month this year

Second solar inverter
Stopped
since 4 Oct, 12:20–12:30

Lost solar
≈ 370 kWh
per month, about a quarter of all solar

i What is an AC-coupled inverter?

Hybrid inverter
Its own panels (DC) + battery; runs the shop and talks to the cloud

+


Second, AC-coupled inverter
An ordinary grid inverter with its own panels, wired into the AC side

→

Meter / CT
The hybrid measures the second inverter's output and shows it as "AC Coupled"

AC coupling adds solar to a hybrid system without changing the hybrid itself. The catch: the second inverter often has no app of its own, so if it stops, nobody is told. The hybrid's "AC Coupled" reading is the only way to see it.


1 Monthly solar production

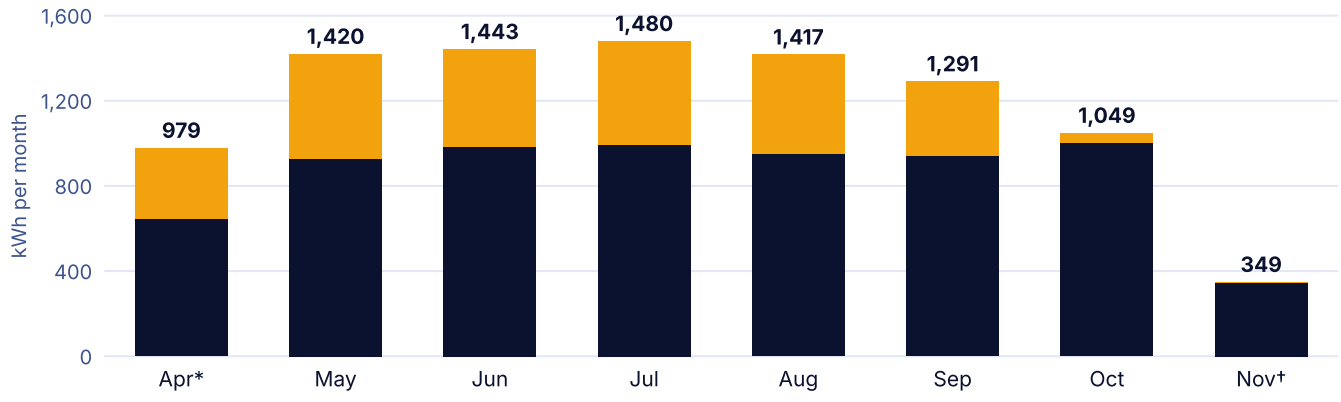

* April from 8 April (start of monitoring). † November 1–10 only. The orange part disappears in October.


Solar ESS Co. Ltd.
53 Moo 2, Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829 · LINE: solaress1
www.solaress.org · www.โซลาร์เอสส์.com

2 The second inverter, day by day

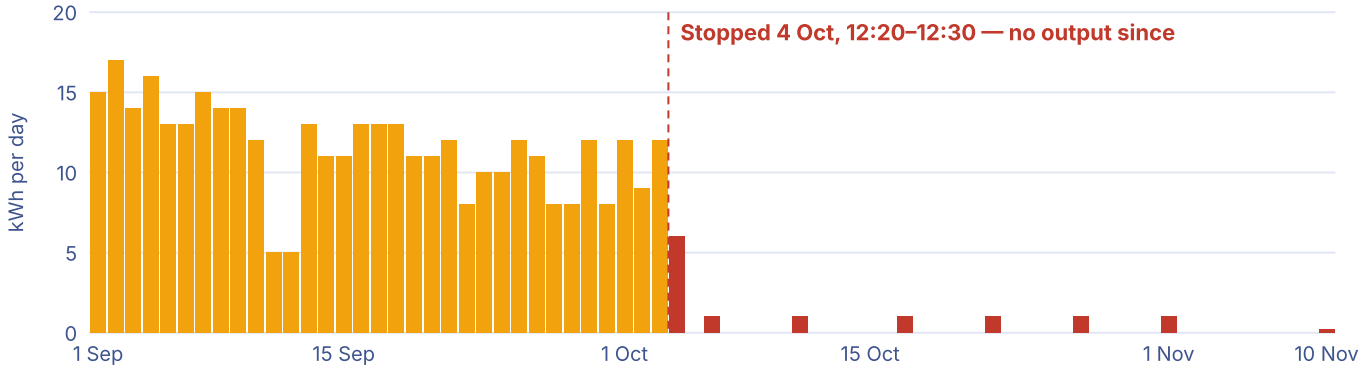

Daily output of the second (AC-coupled) inverter, 1 Sep – 10 Nov 2026. It gave 8–17 kWh on normal days, and nothing after 4 October.

3 The moment it stopped

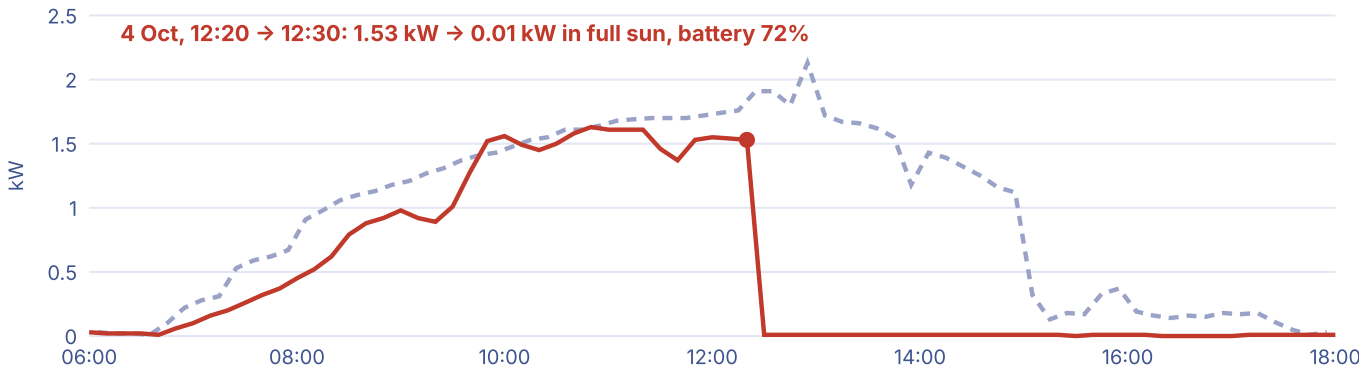

3 Oct, normal day (dashed) 4 Oct, the day it stopped

5-minute power of the second inverter. The drop was sudden, in full sun, while the battery still had room. The Solis hybrid did not cause it, and the meter still reports (a steady ≈ 10 W). So the second inverter itself switched off: a tripped breaker or isolator, a latched fault, or a failure.

Solar ESS Co. Ltd.
53 Moo 2, Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829 · LINE: solaress1
www.solaress.org · www.โซลาร์เอสส์.com

4 Month by month

Month 2026	Main PV	Second PV	Total PV	Shop use	Bought from grid	From battery
Apr*	647	332	979	1,298	325	298
May	927	493	1,420	1,931	529	398
Jun	984	459	1,443	1,889	480	383
Jul	992	488	1,480	1,819	429	401
Aug	947	470	1,417	1,901	508	407
Sep	943	348	1,291	1,763	491	369
Oct	1,005	**44**	**1,049**	1,348	327	349
Nov†	348	**1**	350	469	125	111

All figures in kWh. * from 8 April. † 1–10 November.

5 Findings

#	Finding	What it means
1	Second inverter stopped on 4 Oct	About 12 kWh of solar lost every day (≈ 370 kWh a month). Total solar fell by about a quarter in October.
2	Main inverter and panels healthy	30–43 kWh on clear days; low days such as 25 Oct and 8 Nov match rain.
3	Battery works well	Charges ≈ 14 kWh and returns ≈ 13 kWh almost every day; full cycles on sunny days.
4	Shop use is lower since October	≈ 45 kWh a day, down from ≈ 60. Likely the rainy-season low; please confirm opening hours or equipment changes.
5	Spare solar on sunny afternoons	Once the battery is full (≈ 14:00–14:30), the Solis limits its solar from ≈ 4.7 to ≈ 2.5 kW because export is blocked. Loads run after 14:00 use this for free.

Solar ESS Co. Ltd.
53 Moo 2, Tambon Nanglae, Amphoe Muang, Chiang Rai 57100
Tel 063 151 6694 · 089 632 5829 · LINE: solaress1
www.solaress.org · www.โซลาร์เอสส์.com

6 What to check on site (about 5 minutes) — works for any AC-coupled system

1. **Find the second inverter.** It is a separate box from the Solis, usually near the main board or under the roof.
2. **Take photos** of its screen or lights, and of its label (brand, model, serial number).
3. **Check its AC breaker** in the board and its **DC isolator**. Photograph any switch that is off.
4. **If it shows a fault, restart it:** AC breaker off, then DC isolator off. Wait 5 minutes. DC on, then AC on.
5. **Send the photos to Solar ESS** by LINE (solaress1). We confirm on the monitoring platform the next sunny day that the "AC Coupled" reading is back.

If it trips again or shows no lights at all, Solar ESS will arrange a site visit. With the label photo we can also find its monitoring app, or plan a repair or replacement.

Safety: switch off only the breaker and isolator named above. Do not open the inverter or touch cables. If anything looks burnt or smells hot, leave it off and call us.

Solar ESS Working Group