04820KA001 Mono Canada Slitter 903_V12_1103_2

Author: Michou
Created: 11/3/2026 8:31:26 PM
Last Modified: 11/3/2026 8:31:26 PM
Comment: Modified to Connect 2nd Diameter Sens

Sysmac Studio Module Version: 1.60.0.64010

1.PLC

1-8.POUs

1-8-1.Programs

1-8-1-1.TaglMonoTRM

1-8-1-1-6.Alarms

0 Check Present alarms.

```
// Alarm / warning handling + panel buzzer (BuzzerOn).
// Alarms: buzzer pulses (Clock1s). ALARM RESET (panel or HMI) silences it 1 min;
//         a NEW alarm during the silence sounds again at once.
// Warnings: ONE 1 s beep each time a new warning appears.
// PrimaryTask 4 ms: 250 scans = 1 s, 15000 scans = 60 s.

AlarmOn := FALSE;
WarningOn := FALSE;
AlarmCnt := 0;
WarnCnt := 0;

FOR Index_A := 0 TO 32 DO

   IF Alarm_Array[Index_A] THEN
      CASE Index_A OF
         5, 13, 14, 15, 16:              // warnings
            WarningOn := TRUE;
            WarnCnt := WarnCnt + 1;
      ELSE                               // alarms
         AlarmOn := TRUE;
         AlarmCnt := AlarmCnt + 1;
      END_CASE;
   END_IF;
END_FOR;

// ALARM RESET button (panel I_RsetAlarm or HMI Alarm_Reset): silence 1 min

RstEdge := (I_RsetAlarm OR Alarm_Reset) AND NOT RstMem;
RstMem := I_RsetAlarm OR Alarm_Reset;

IF RstEdge AND AlarmOn THEN
   SilenceTicks := 15000;
END_IF;

IF (AlarmCnt > AlarmCntMem) OR NOT AlarmOn THEN
   SilenceTicks := 0;                    // new alarm / no alarm: not silenced
END_IF;

IF SilenceTicks > 0 THEN
   SilenceTicks := SilenceTicks - 1;
END_IF;


// New warning: one 1 s beep

IF WarnCnt > WarnCntMem THEN
   WarnBeepTicks := 250;
END_IF;

IF WarnBeepTicks > 0 THEN
   WarnBeepTicks := WarnBeepTicks - 1;
```

```
51  END_IF;
52
53  AlarmCntMem := AlarmCnt;
54  WarnCntMem := WarnCnt;
55
56  AlarmSilenced := AlarmOn AND (SilenceTicks > 0);
57
58  BuzzerOn := ControlVoltage
59          AND ((AlarmOn AND NOT AlarmSilenced AND Clock1s) OR (WarnBeepTicks
    > 0));
```

1 Motor cooling Fan Alarm.

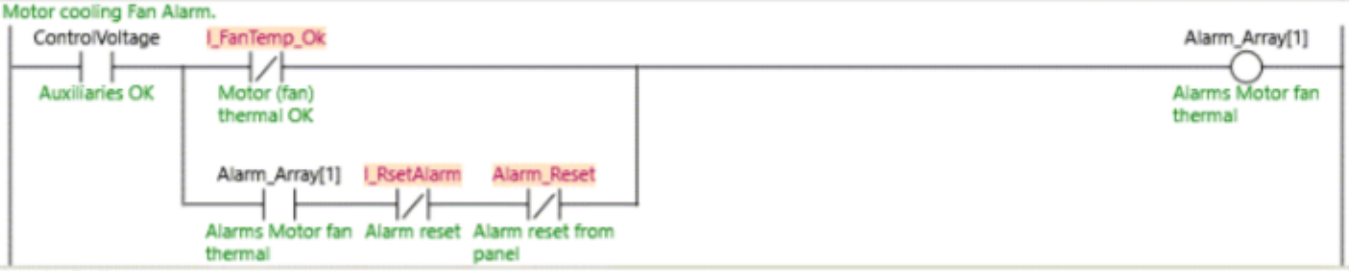

2 Inverter fault.



3 Machine in emergency mode.




4 Main Motor thermal cutout.



5 Front Guard Warning




6 Web Brake.

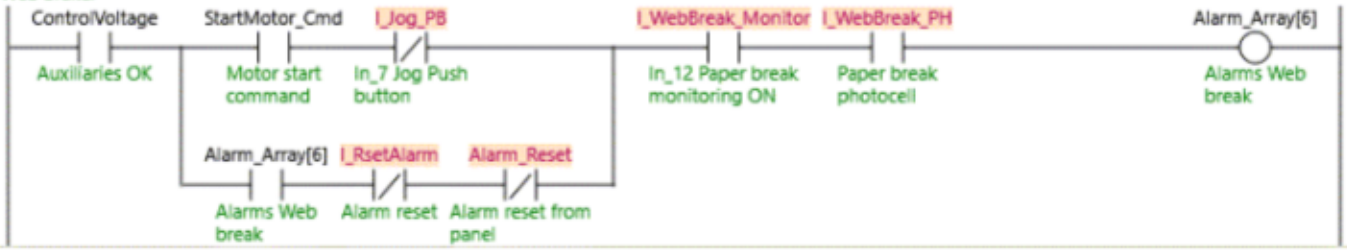

7 Vacuum Cooling fan.




8 Encoder Stopped !

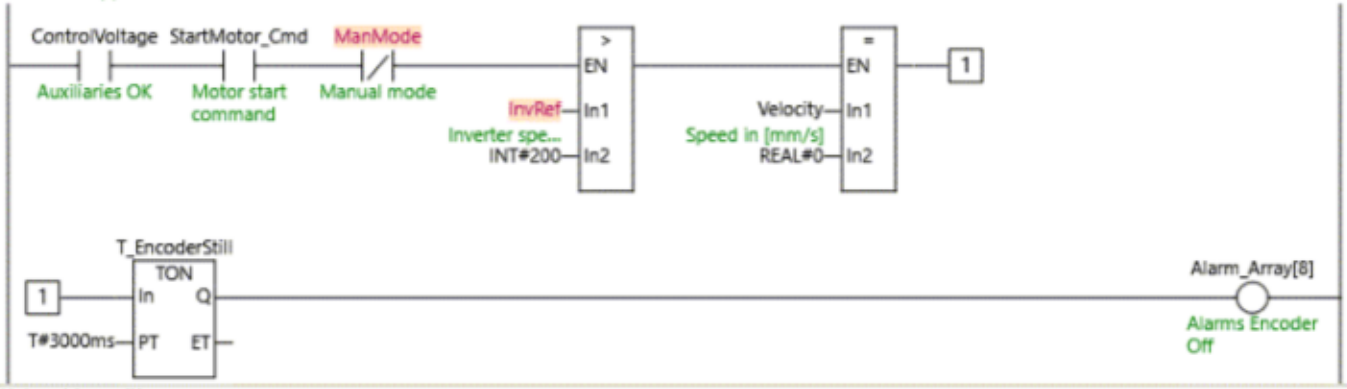

9 Hub not in position.



10 Rewinder Diameter Sensor Fault.

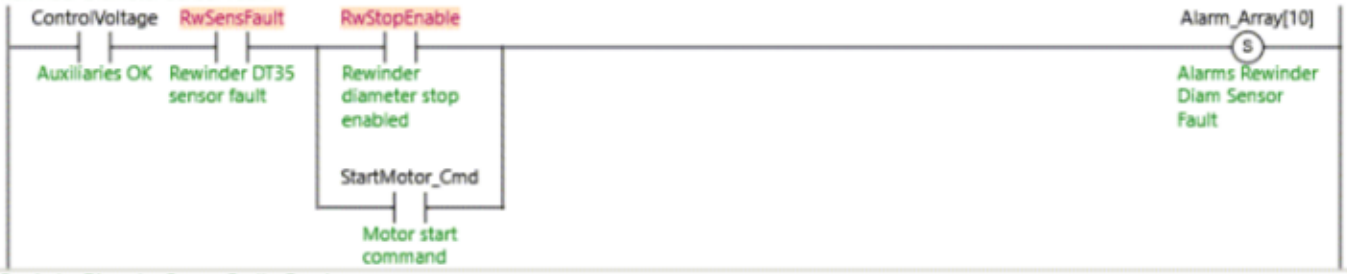

11 Rewinder Diameter Sensor Fault - Reset



12 Rewinder max diameter Machine protection.



13 Rewinder max diameter Machine protection - Reset



14 Emergency Stop by Holding Stop PB 2s



15 Web Tension Monitor Warning




16 End-of-roll Alarm. NOT USED !



17 Unwinder Roll is Empty Warning



18 Unwinder Roll is Empty - Reset

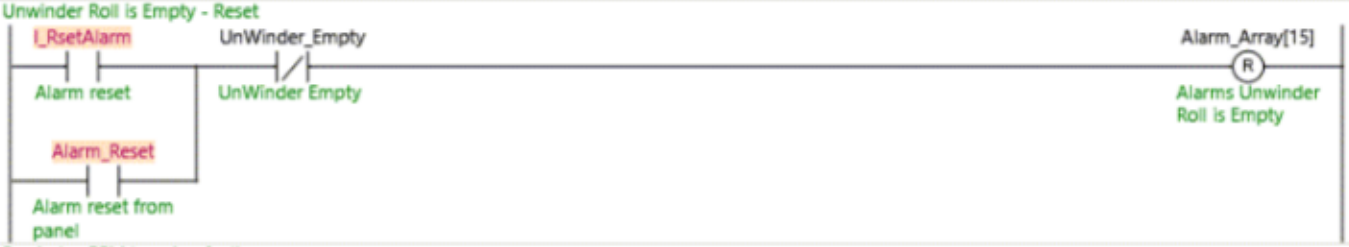

19 Rewinder GSM learning fault




20 Rewinder learning fault - Reset



21 Open-ended roll holder joint.



22 ???

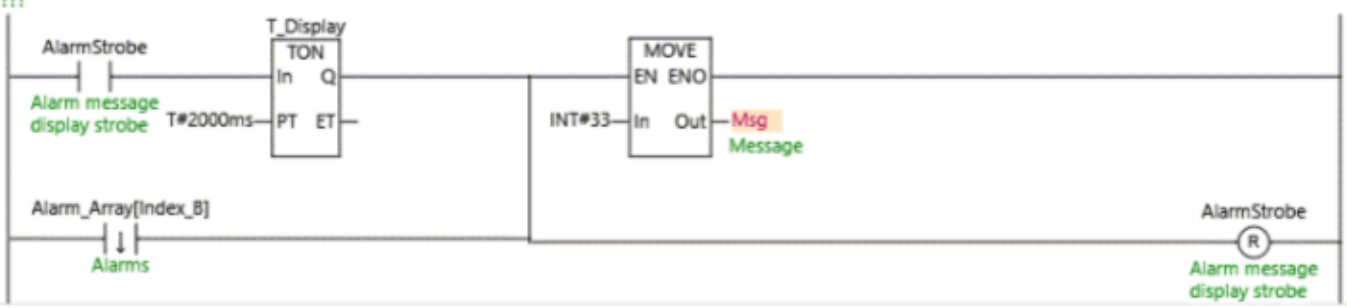

23 Strobe displays alarm message.



24 Alarm presence check cycle.



25 Initializing alarm message.

