04820KA001 Mono Canada Slitter 903 1028_2

Author: Michou
Created: 10/28/2026 8:47:26 PM
Last Modified: 10/28/2026 8:47:26 PM
Comment: Modified to Connect 2nd Diameter Sens

Sysmac Studio Module Version: 1.60.0.64010

1.PLC

1-8.POUs

1-8-1.Programs

1-8-1-1.TaglMonoTRM

1-8-1-1-1.Variables

Name	Data Type	Initial Value	AT	Retain	Constant	Comment
VAR						
SpdDelta	REAL			False	False	Minimum or maximum speed SpdDeltaerence
SpdDeltaMin	REAL			False	False	Minimum speed difference
SpdDeltaMax	REAL			False	False	Maximum speed SpdDeltaerence
SoftStopMem	BOOL			False	False	v6r: soft stop edge memory
SoftStopRatio	REAL			False	False	v6r: InvRef counts per m/min, frozen at the soft stop start
Clock100ms	BOOL			False	False	100 ms clock
MemPos	DINT			False	False	Previous encoder count
MatChangeCnt	INT			False	False	v6s: consecutive learning windows far from RwMat_K
DeltaPulse	DINT			False	False	Encoder count difference
SlowMem	BOOL			False	False	SlowDown edge memory
DecelDiam	REAL			False	False	Rewinder diameter used by the decel model (mm, min 100)
TeachSwap	REAL			False	False	Temporary for UNDO swap
SlowStartDiam	REAL			False	False	Diameter at slow-down start (mm)
SoftStartTicks	INT			False	False	S-curve start: 4 ms ticks since start
SoftStartK	REAL			False	False	S-curve start: accel factor 0.05..1
BrakeHold	BOOL			False	False	Keep T-one in auto during a normal stop (O_Brake)
StopNow	BOOL			False	False	Immediate stop request (replaces I_Stop_PB in General rung 9)
StopPB_Mem	BOOL			False	False	STOP button edge memory
T_StopLong	TON			False	False	STOP held 1 s = immediate stop
T_SoftStop	TON			False	False	Soft stop timeout (120 s)
BrakeHoldTicks	INT			False	False	BrakeHold duration after stop (100 ms ticks, max 150)
StopStartDiam	REAL			False	False	Diameter at stop command (mm)
DecelK_Meas	REAL			False	False	Measured decel per mm of diameter
SlowMeasActive	BOOL			False	False	Slow-down measurement running
TeachTicks	INT			False	False	TEACH CORE stable time (100 ms ticks)
SlowStartPos	DINT			False	False	Encoder at slow-down start
SlowStartSpd_Pps	REAL			False	False	Speed at slow-down start (pulses/s)
SlowMeas_Pls	REAL			False	False	Measured slow-down length (pulses)
SlowDecelMeas_mm	REAL			False	False	Measured slow-down decel (mm/s2)
SlowOneRamp	BOOL			False	False	Slow-down uses one ramp (manual or learned)
Velocity	REAL			False	False	Speed in [mm/s]
Alarm_Array	ARRAY[0..32] OF BOOL			False	False	Alarm
T_PlcOn	TON			False	False	PLC active timeout

ControlVoltage	BOOL			False	False	Auxiliaries OK
StartMotor_Cmd	BOOL			False	False	Motor start command
HubExtractEnable	BOOL			False	False	Hub extraction enable command
Brake_Cmd	BOOL			False	False	Brake command
T_StopVent	TOF			False	False	Fans stop timer
TimStopVen	TIME			False	False	Fans stop timeout
MotorCooling	BOOL			False	False	Fans command
OverRider_Auto	BOOL			False	False	OverRider in automatic
OverRider_Cont	BOOL			False	False	OverRider in continuous
OverRider_Lock	BOOL			False	False	OverRider lock command
GSM_LearnFault	BOOL			False	False	Paper [Grams / Square Meter] LearnFailCnt ≥ RwLearnFailMax
TickCnt	INT			False	False	100 ms tick scan counter (25 x 4 ms)
RunWasJog	BOOL			False	False	Run used jog / manual / slow button (2nd ramp)
StopLearnValid	BOOL			False	False	This stop may be learned
SpdBand_Pps	REAL			False	False	Speed band of the trim ramp (pulses/s)
TrimDecel_Pps2	REAL			False	False	Trim ramp decel (pulses/s2)
SpdKnee_Pps	REAL			False	False	Speed where coarse ramp hands over to trim ramp (pulses/s)
OverRider_RaiseUp	BOOL			False	False	OverRider raise command
Pot1_Mem	INT			False	False	Work potentiometer value
Clock10ms	BOOL			False	False	10 ms clock
VelSet_mms	REAL			False	False	Set speed in mm/s
Vfd_SP_Modif	REAL			False	False	Inverter speed modifier
UwTeachTicks	INT			False	False	Unwinder TEACH CORE samples (100 ms)
T_PosPresOff	TON			False	False	OverRider photocell OFF timer
T_PosPresOn	TON			False	False	OverRider photocell ON timer
TimPosPresOff	TIME			False	False	OverRider photocell OFF timeout
TimPosPresOn	TIME			False	False	OverRider photocell ON timeout
RollEnd_Active	BOOL			False	False	Roll diameter photocell intercepted
Output_Ratio	REAL			False	False	Analog output ratio
Input_Ratio	REAL			False	False	Analog input ratio
T_StartLow	TON			False	False	Slow start timer
T_UwDiamDebounce	TON			False	False	Roll diameter photocell Debounce timer 500mS
UwDiamReached	BOOL			False	False	Roll diameter reached
Index_A	INT			False	False	
AlarmStrobe	BOOL			False	False	Alarm message display strobe
T_Display	TON			False	False	Alarm display timer
RangeOK	BOOL			False	False	Range reached
Vel_Max_mms	REAL			False	False	Maximum speed in mm/s
Slow_Inhibit	BOOL			False	False	Inhibit slow button
Decel_Ramp	REAL			False	False	Deceleration ramp
Accel_Ramp	REAL			False	False	Acceleration ramp
Pot2_Mem	INT			False	False	Final potentiometer value
Current_mm	REAL			False	False	Current millimetres
EncoderPulse_to_mm	REAL			False	False	mm per encoder pulse
SlowDown	BOOL			False	False	Slow down
Stop	BOOL			False	False	Stop
T_EncoderStill	TON			False	False	(?) Encoder stopped timer

Analog_Res	UINT			True	False	Analog board resolution
Mt_To_mm	REAL			False	False	m/min to mm/s factor
Sec_to_Min	REAL			False	False	mm/s to m/min factor
Pot1_Word	WORD			False	False	(?) Pot 1 raw word
Pot1_WordSW	WORD			False	False	(?) Pot 1 raw word, byte-swapped
Pot2_Word	WORD			False	False	(?) Pot 2 raw word
Pot2_WordSW	WORD			False	False	(?) Pot 2 raw word, byte-swapped
InvRef2	UINT			False	False	(?) Inverter reference 2
InvRefSW	WORD			False	False	(?) Inverter reference, byte-swapped
InvRefWW	WORD			False	False	(?) Inverter reference, word
Init_Ramp	BOOL			True	False	(?) Ramp initialisation
SlowByDiam	BOOL			False	False	(?) Slow down by diameter
UwStopByDiam	BOOL			False	False	Stop by diameter
T_Screen_Delay	TON			False	False	(?) Start page timer
T_PulStop	TON			False	False	(?) Stop button timer
Reading_Max	REAL	2000		True	False	Maximum sensor reading (full scale)
DeadZone	REAL	60		True	False	Sensor dead zone
In_UwDiameter	REAL			True	False	UnWinder Diameter Analog input voltage
T_Sample	TON			False	False	100 ms tick timer
Tick	BOOL			False	False	100 ms tick
MmPerPulse	REAL			False	False	mm per encoder pulse
RwDistRaw_mm	REAL			False	False	Rewinder Unfiltered distance (mm)
RwFiltInit	BOOL			False	False	Rewinder Filter initialised
SpdInit	BOOL			False	False	Speed init
EncPrev	DINT			False	False	Encoder at previous tick
SpdAct_Pps	REAL			False	False	Actual Speed (pulses/s)
LearnInit	BOOL			False	False	Learn initialised
LearnWinRunning	BOOL			False	False	Motor ran whole window
LearnWinTicks	INT			False	False	Learn window counter
Encoder_Last	DINT			False	False	Encoder at window start
Diameter_Last	REAL			False	False	Diameter at window start
LearnWin_Pls	DINT			False	False	Pulses in window
LearnWinDiamDelta	REAL			False	False	Diameter change in window
MatK_Window	REAL			False	False	Material factor this window
MotorRunMem	BOOL			False	False	Motor start edge memory
StopMeasActive	BOOL			False	False	Stop measurement running
StopStartPos	DINT			False	False	Encoder at stop command
StopStartSpd_Pps	REAL			False	False	Speed at stop command (pulses/s)
StandstillTicks	INT			False	False	Standstill tick counter
LearnWinOk	BOOL			False	False	Learning window gave a valid result
ThickWin_mm	REAL			False	False	Paper thickness this window (mm)
LearnFailCnt	INT			False	False	Consecutive failed learning windows
StopLearnOk	BOOL			False	False	Stop measurement gave a valid result
StopDecelMeas_mm	REAL			False	False	Measured stop decel (mm/s2)
StopMeas_Pls	REAL			False	False	Measured stop length (pulses)
StopDecelMeas	REAL			False	False	Measured stop decel (pulses/s2)

	StopLen_Pls	REAL			False	False	Stop length (pulses)
	StopLenFinal_Pls	REAL			False	False	Stop length from slow speed (pulses)
	RwSlowLen_Pls	REAL			False	False	Rewinder Slow-down length (pulses)
	SlowDecel_Pps2	REAL			False	False	Slow-down decel (pulses/s2)
	SpdFinal_Pps	REAL			False	False	Final speed (pulses/s)
	RwRemain_Pls	REAL			False	False	Rewinder Remaining length to target (pulses)
	LearnWinStartPos	DINT			False	False	Rewinder Position Window 0
	LearnWinStartDiam	REAL			False	False	Rewinder Diameter Window 0
	T_ByPassProtOff	TOF			False	False	Delay Off Timer
	UwEnMem	BOOL			False	False	Edge memory UwStopEnable
	RwEnMem	BOOL			False	False	Edge memory RwEnable
	SpdRef_Pps	REAL			False	False	Reference speed MAX (actual,setpoint) (pulses/s)
	SpdWork_Pps	REAL			False	False	Work speed setpoint (pulses/s)
	SlowLenBase_Pls	REAL			False	False	Slow-down length without margin (pulses)
	UwSlowLen_Pls	REAL			False	False	Unwinder slow-down length (pulses)
	UwMarginUsed_m	REAL			False	False	Unwinder margin at slow speed (m)
	SqrtArg	REAL			False	False	Square root argument
	AutoSlowCmd	BOOL			False	False	Automatic Slow Command
	AutoStopCmd	BOOL			False	False	Automatic Stop Command
	RwLastValidDiam	REAL			False	False	Rewinder Last valid diameter (mm)
	RwRemainMax_Pls	REAL			False	False	Rewinder Remaining length to max diameter (pulses)
	UnWinder_Empty	BOOL			False	False	UnWinder Empty
	StopFailCnt	INT			False	False	Consecutive failed stop measurements
	UwTeachSum	REAL			False	False	Unwinder TEACH CORE sonar sum (mm)
	T_MatReset	TON			False	False	v6s: RwMatReset stays ON 3 s
	LearnWinLen_Pls	REAL			False	False	v6w: learning window length in encoder pulses
	UwEmptyMem	BOOL			False	False	v6x: UnWinder_Empty edge memory
VAR_EXTERNAL							
	VelSet	REAL				False	Set speed
	OverSpeed	BOOL				False	Speed too high
	RwWinGrow_mm	REAL				False	
	RwWinLen_m	REAL				False	
	GsmAsk	BOOL				False	
	GsmAskYes	BOOL				False	
	SpdDelta_Percent	REAL				False	Speed difference percentage
	Encoder_Pos	DINT				False	Encoder counter
	Velocity_M_min	REAL				False	Speed in m/min
	Current_Metre	REAL				False	Current metres
	I_RsetCnt	BOOL				False	Metre counter reset button
	WorkSpd_Max_Set	REAL				False	HMI request: work pot full scale (m/min), applied only with motor

						stopped
FinalSpd_Max_Set	REAL				False	HMI request: final pot full scale (m/min), applied only with motor stopped
SpdMax_Pending	BOOL				False	New pot range waiting for the motor to stop
RwAxisDist_Prev	REAL				False	Rewinder: RwAxisDist before the last TEACH (for UNDO)
UwCoreDist_Prev	REAL				False	Unwinder: UwCoreDistance before the last TEACH (for UNDO)
RwTeachUndo	BOOL				False	HMI: UNDO rewinder TEACH (PLC resets it)
UwTeachUndo	BOOL				False	HMI: UNDO unwinder TEACH (PLC resets it)
RwLearnReset	BOOL				False	HMI / Watch: clear learned decels RwStopDecelK, RwStopDecel, RwSlowDecelK (PLC resets it)
UnderSpeed	BOOL				False	Speed too low
I_ControlVoltage	BOOL				False	Auxiliaries ON
I_OverRider_PH	BOOL				False	Roll diameter photocell
RwCoreDiameter	REAL				False	Rewinder core outside diameter for TEACH CORE (mm)
UwTeachState	INT				False	Unwinder TEACH CORE: 0 idle 1 teaching 2 done 3 refused
SoftStop	BOOL				False	Soft stop in progress (HMI)
SoftStopEnable	BOOL				False	STOP button = soft stop (False = immediate as before)
SoftStopEndSpd	REAL				False	Soft stop: run command drops below this speed (m/min)
SoftStopDecel	REAL				False	Soft stop decel (mm/s2), 0 = DecelCoarse
RwTeachCore	BOOL				False	HMI: TEACH CORE request (PLC resets it)
RwTeachState	INT				False	TEACH CORE: 0 idle 1 teaching 2 done 3 refused
O_MotorStart	BOOL				False	Motor start
RwSlowDecelK	REAL				False	Learned slow-down decel per mm of rewinder diameter (mm/s2 per mm)
RwStopDecelK	REAL				False	Learned stop decel per mm of rewinder diameter (mm/s2 per mm)
I_OR_Position_Sens	BOOL				False	Rider roll position sensor
WorkSpd_Max	REAL				False	Work speed pot full scale (m/min), 50..VelMax
FinalSpd_Max	REAL				False	Final speed pot full scale (m/min), 5..WorkSpd_Max
I_OR_Pressure_Sens	BOOL				False	Rider roll pressure switch
I_OR_Auto_OS	BOOL				False	Rider roll in automatic
I_OR_Cont_OS	BOOL				False	Rider roll in continuous
I_Start_PB	BOOL				False	Start button
I_SafeGuard_Closed	BOOL				False	Side doors closed
I_Motor_Thermal	BOOL				False	Motor thermal switch
I_FanTemp_Ok	BOOL				False	Motor (fan) thermal OK
I_Stop_PB	BOOL				False	Stop button

I_Hub_Position	BOOL				False	Hub/chuck in extraction position
I_FrontGuard_Closed	BOOL				False	Front guard closed
RwMaxSlowFallback	REAL				False	Rewinder max: slow-down diameter while K not learned (mm)
RwMaxSlowAtDiam	REAL				False	Rewinder max: slow-down starts at diameter (mm)
O_Alarm_Array	BOOL				False	Alarm lamp
O_RwUnload	BOOL				False	Unloaders enable - opening
I_Prot_ByPass	BOOL				False	Guards-bypassed selector switch
O_Prot_ByPass_Lamp	BOOL				False	Guards bypassed lamp
O_Brake	BOOL				False	Brake command
Fan_Timeout	REAL				False	Fans stop timeout (from panel)
O_CoolingFan	BOOL				False	Brake and motor fans
O_OR_Auto_Lamp	BOOL				False	Rider roll auto/continuous lamp
O_OverRider_Up	BOOL				False	Raise rider roll
O_OverRider_Hold	BOOL				False	Lock rider roll
Fix10Vdc	INT				False	Fixed 10 Vdc generator
InvRef	INT				False	Inverter speed reference
Encoder_On	BOOL				False	Encoder enable
Encoder_Reset	BOOL				False	Encoder reset
OverRider_TimeOFF	REAL				False	Rider roll photocell OFF timeout (panel)
OverRider_TimeON	REAL				False	Rider roll photocell ON timeout (panel)
VelMax	REAL				False	Maximum speed
I_LowSpd_OS	BOOL				False	Slow speed button
O_Motor_Lamp	BOOL				False	Motor ON lamp
AlarmOn	BOOL				False	Alarm active
BuzzerOn	BOOL				False	Panel buzzer command
I_VFD_Alarm	BOOL				False	Inverter in alarm
Msg	INT				False	Message
Index_B	INT				False	Active alarm index
MotStop	BOOL				False	Motor stopped
Clock1s	BOOL				False	1 s clock
ManMode	BOOL				False	Manual mode
Speed_Man_SP	INT				False	% speed in manual
Counter_Reset	BOOL				False	Panel counter reset button
I_FrontGuard_Open	BOOL				False	Front guard open
RwUnload_Enable	BOOL				False	Unloaders enable - closing
JogSpd_SP	REAL				False	Speed in manual
O_AccDec2	BOOL				False	Second acc/dec ramp
AccelTrim	REAL				False	Acceleration coefficient in run
DecelTrim	REAL				False	Deceleration coefficient in run
DecelCoarse	REAL				False	Acceleration coefficient at start (orig. comment; name suggests decel)
AccelCoarse	REAL				False	Deceleration coefficient at start (orig. comment; name suggests accel)
Speed_Display	REAL				False	Set speed (displayed)
O_AcousticSignal	BOOL				False	Horn / acoustic signal

Pot1_Work_Velocity	INT				False	Potentiometer 1 value - Work speed -
O_FrontGuard_ByPass	BOOL				False	Front guard bypass
Pot2_Slow_Velocity	INT				False	Potentiometer 2 value - Final speed -
LowSpd_Display	REAL				False	Slow-down speed (displayed)
Encoder_Pulse	INT				False	Encoder pulses
LowSpd_Man_SP	INT				False	% slow-down speed in manual
RwSlowDecelLrn	REAL				False	Learned real slow-down decel (mm/s2) - 0 = not learned
UwSlowMargin_m	REAL				False	Slow-down metres
UwStop_At_Meter	REAL				False	Total metres
I_AutoStop_OS	BOOL				False	Stop on metre counter
I_RollEnd_SlowDown	BOOL				False	Slow down at end of roll
I_SlowSens_PH	BOOL				False	Slow-down photocell
I_WebBreak_Monitor	BOOL				False	Paper break monitoring ON
I_WebBreak_PH	BOOL				False	Paper break photocell
I_Vacuum_OK	BOOL				False	Extractor fan thermal OK
CountReset_Req	BOOL				False	Metre counter reset request
Psw	INT				False	Password
I_RsetAlarm	BOOL				False	Alarm reset
Fix10Vdc_1	UINT				False	Fixed 10 Vdc generator
EncoderWheel_Diam	REAL				False	Encoder wheel diameter
AlarmCodeSV	ARRAY[0..32] OF BOOL				False	Panel alarms
SafeGuard_ByPass	BOOL				False	Guards bypassed
FrontGuard_Closed	BOOL				False	Front guard closed
Core_Measure	BOOL				False	(?) Stored core value
UwDiam_Measure	REAL				False	Measured distance
UwCoreDistance	REAL				False	(?) Core measurement
RwSlowFallbackMm	REAL				False	
AI_Diam_Unwinder	INT				False	Analog value - parent roll measurement
RwMatChangePct	REAL				False	
UwCoreDiameter	REAL				False	(?) Shaft diameter
Measure_ON	BOOL				False	(?) Measurement enabled
UwDiam_Act	REAL				False	(?) Measured roll diameter
UwDiamStop	REAL				False	(?) Stop diameter
UwSlowDown_Diam	REAL				False	(?) Slow-down diameter
Alarm_Reset	BOOL				False	(?) Alarm reset from panel
HMI_Screen	ARRAY[0..1] OF DINT				False	HMI panel page
Psw22	BOOL				False	(?) Password 22
RwMatReset	BOOL				False	
Psw44	BOOL				False	(?) Password 44
I_Roll_OK	BOOL				False	(?) Roll OK

I_RollEnd_PH	BOOL				False	(?) End-of-roll photocell
AI_Diam_Rewinder	INT				False	Rewinder DT35 raw - I/O Map Unit2 Ch2
RwStopEnable	BOOL				False	Rewinder diameter stop enabled
RwTargetDiam	REAL				False	Rewinder final diameter (mm)
RwUseSlow	BOOL				False	Slow down before target
RwSlowMargin_m	REAL				False	Metres at slow speed before stop
RwSlowDecel	REAL				False	Slow-down decel mm/s2 - 0 = auto from DecStart
RwResetHyst	REAL				False	Reset requests below target - this (mm)
RwDist0V	REAL				False	DT35 distance at 0 V (mm)
RwDist10V	REAL				False	DT35 distance at 10 V (mm)
RwRawMin	INT				False	Raw below = sensor fault
RwRawMax	INT				False	Raw above = sensor fault
RwStopOnFault	BOOL				False	Stop on sensor fault
RwAxisDist	REAL				False	Sensor to shaft centre (mm) - teach
RwFilter_K	REAL				False	Distance filter per 100 ms (0..1)
RwWinTicks	INT				False	Material learn window (100 = 10 s)
RwMinPulses	DINT				False	Min pulses in window to learn
RwLearn_K	REAL				False	Material factor filter weight
RwMat_K	REAL				False	Learned material factor
RwLearnStop	BOOL				False	Learn stop decel on every stop
RwMinLearnSpd	REAL				False	Min speed to learn a stop (m/min)
RwStopDecel	REAL				False	Learned stop decel (pulses/s2)
RwTreact	REAL				False	Stop reaction time (s)
RwTstopDef	REAL				False	Stop time until decel learned (s)
RwTrim	REAL				False	Stop length trim (>1 = earlier)
RwDist	REAL				False	Filtered distance (mm)
RwDiam	REAL				False	Rewinder diameter (mm)
RwSpeed	REAL				False	Line speed from encoder (m/min)
RwRemain_m	REAL				False	Metres to target diameter
RwStopLen_m	REAL				False	Stopping length now (m)
RwSlowLen_m	REAL				False	Slow-down length now (m)
RwStopReq	BOOL				False	Rewinder diameter STOP request
RwSlowReq	BOOL				False	Rewinder diameter SLOW request
RwSensFault	BOOL				False	Rewinder DT35 sensor fault
UwStopEnable	BOOL				False	Unwinder metre-counter stop ON (HMI)
SlowAtDisp	REAL				False	HMI: slow-down starts at (m or mm, see SlowAtMode)
SlowAtMode	INT				False	HMI: 0=none 1=unwinder [m] 2=rewinder [mm]
SlowAtShow	BOOL				False	HMI: show slow-down display
UwSlow_at_Metre	REAL				False	Unwinder: slow-down starts at (m)
UwSlowReq	BOOL				False	Unwinder metre slow-down request (latched)
RwSlowAtDiam	REAL				False	Rewinder: slow-down starts at diameter (mm)
RwStopAtDiam	REAL				False	Rewinder: stop command at diameter (mm)
RwMaxDiam	REAL				False	Rewinder max diameter protection (mm)
RwMaxStop	BOOL				False	Rewinder max diameter STOP (l

						atched)
RwMaxSlow	BOOL				False	Rewinder max diameter SLOW (latched)
UwEmptyHyst	REAL				False	
RwThickMin_mm	REAL				False	Learning: min plausible paper thickness (mm)
RwThickMax_mm	REAL				False	Learning: max plausible paper thickness (mm)
RwDecelMin_mm	REAL				False	Learning: min plausible stop decel (mm/s2)
RwDecelMax_mm	REAL				False	Learning: max plausible stop decel (mm/s2)
RwLearnFailMax	INT				False	Learning: failed windows before alarm (12 = 2 min)
RwStopFailMax	INT				False	Learning: failed stops before alarm
GSM_Learned_OK	BOOL				False	Rewinder learning fault (alarm 16)
RwThick_mm	REAL				False	Learned paper thickness (mm)
Psw33	BOOL				False	

1-8-1-1-2.General

0 Remote 10.146.233.11 ... 1s clock.




1 100ms clock.




2 10ms clock.



3 Initializing ramp values.

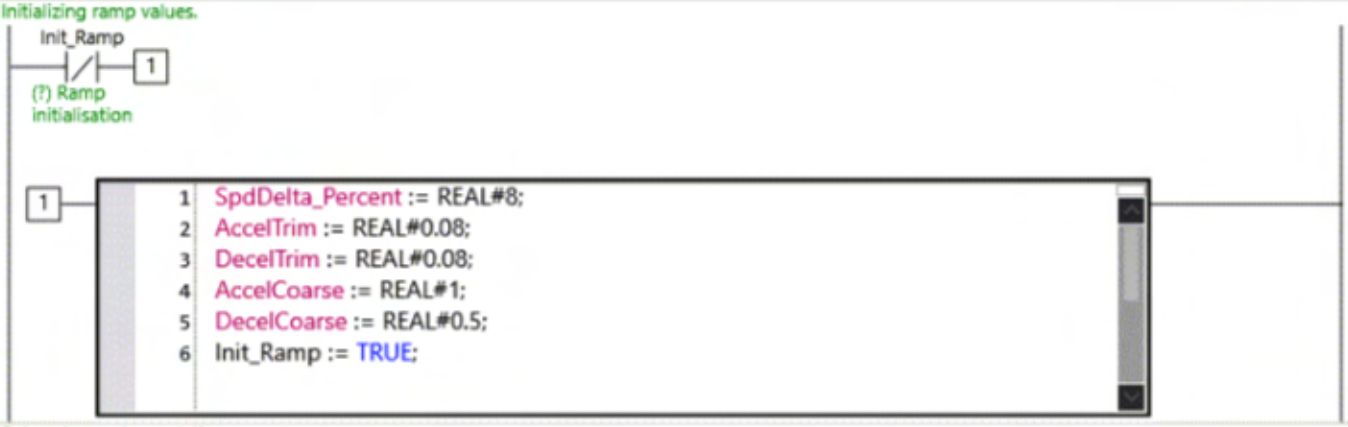


4 Set analog scale resolution.

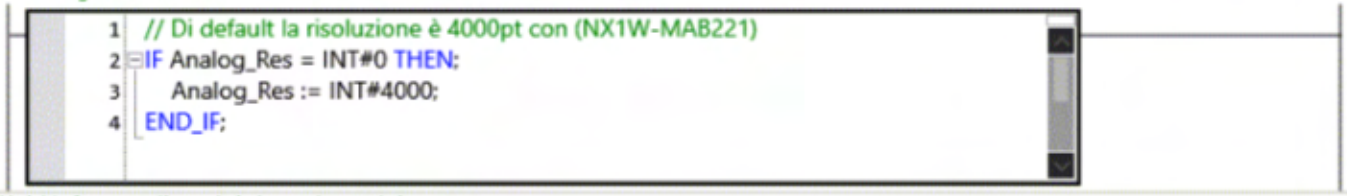

5 Variable for converting m/min to mm/sec and vice versa.

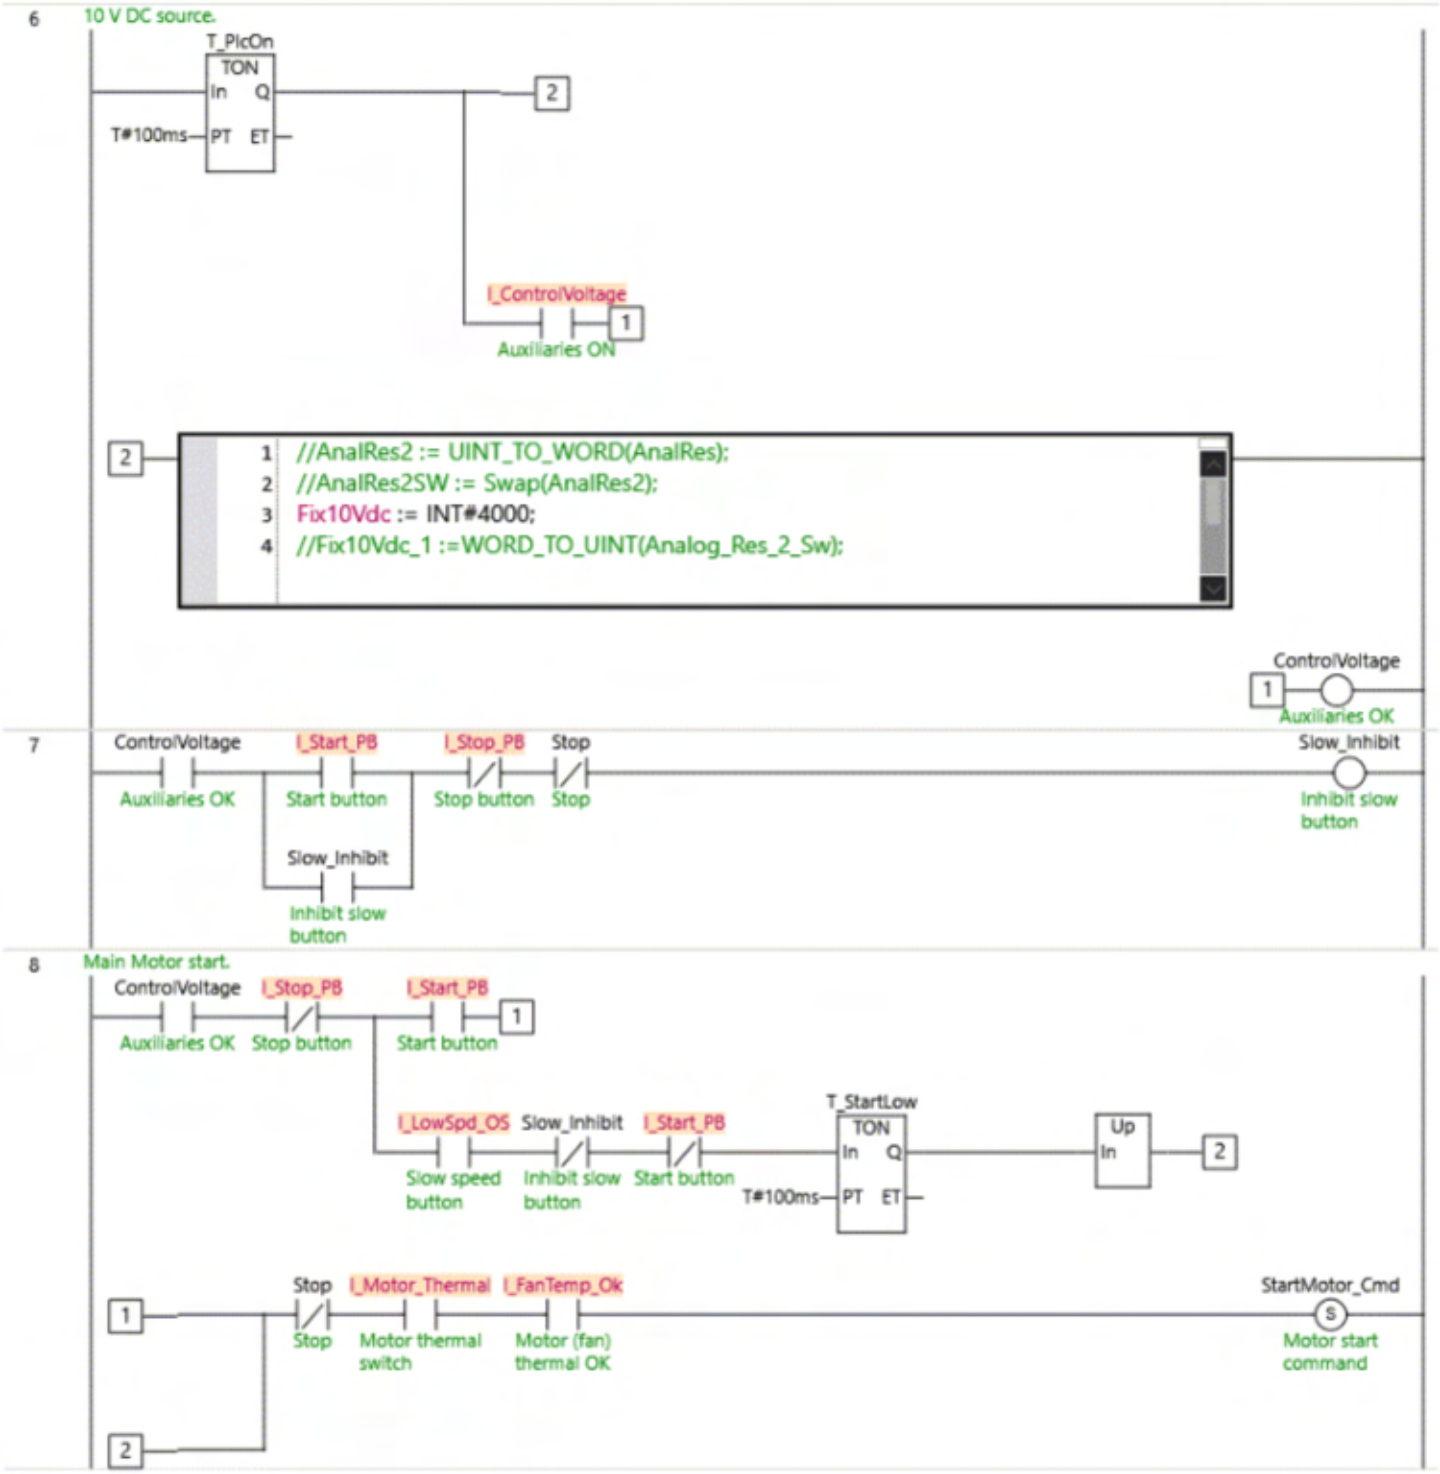


6
10 V DC source.
T_PlcOn
TON
In Q
T#100ms PT ET
2
I_ControlVoltage
1
Auxiliaries ON
2
1 //AnalRes2 := UINT_TO_WORD(AnalRes);
2 //AnalRes2SW := Swap(AnalRes2);
3 Fix10Vdc := INT#4000;
4 //Fix10Vdc_1 :=WORD_TO_UINT(Analog_Res_2_Sw);
ControlVoltage
1
Auxiliaries OK
7
ControlVoltage
Auxiliaries OK
I_Start_PB
Start button
I_Stop_PB
Stop button
Stop
Stop
Slow_Inhibit
Inhibit slow button
Slow_Inhibit
Inhibit slow button
8
Main Motor start.
ControlVoltage
Auxiliaries OK
I_Stop_PB
Stop button
I_Start_PB
Start button
1
I_LowSpd_OS
Slow speed button
Slow_Inhibit
Inhibit slow button
I_Start_PB
Start button
T_StartLow
TON
In Q
T#100ms PT ET
Up
In
2
1
Stop
Stop
I_Motor_Thermal
Motor thermal switch
I_FanTemp_Ok
Motor (fan) thermal OK
StartMotor_Cmd
S
Motor start command
2

9

```
// v6m: STOP button = soft stop. StopNow replaces I_Stop_PB in rung 9.
StopNow := FALSE;
T_StopLong(In := I_Stop_PB, PT := T#1s);

IF NOT StartMotor_Cmd THEN
    SoftStop := FALSE;
ELSIF I_Stop_PB AND NOT StopPB_Mem THEN          // STOP pressed (edge)
    IF SoftStop OR NOT SoftStopEnable OR I_LowSpd_OS
      OR (Velocity_M_min <= SoftStopEndSpd) THEN
        StopNow := TRUE;                         // 2nd press / jog / slow / disabled
    ELSE
        SoftStop := TRUE;                        // start soft stop
    END_IF;
END_IF;
StopPB_Mem := I_Stop_PB;

IF T_StopLong.Q THEN
    StopNow := TRUE;                             // held 1 s = immediate
END_IF;
IF SoftStop AND I_Start_PB THEN
    SoftStop := FALSE;                           // START cancels the soft stop
END_IF;

T_SoftStop(In := SoftStop, PT := T#120s);
IF SoftStop AND ((Velocity_M_min <= SoftStopEndSpd) OR T_SoftStop.Q) THEN
    StopNow := TRUE;                             // almost stopped (or timeout)
END_IF;
```

10 Main Motor stop.



11 Hub extraction clearance.



12 Brake control.




13 Cooling Fan control.



14

```
1  In_UwDiameter := INT_TO_REAL(AI_Diam_Unwinder)/REAL#1;
```

15

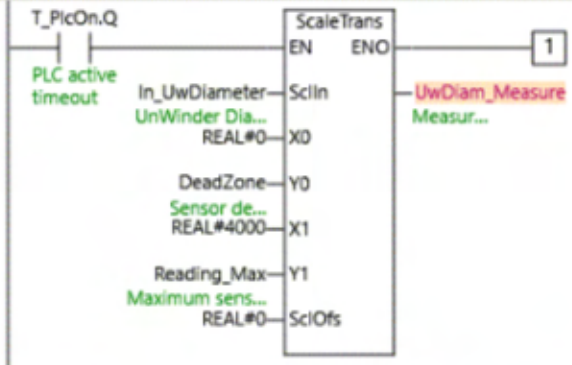


```
1  UwDiam_Act := ((UwCoreDistance - UwDiam_Measure) * REAL#2) +
   UwCoreDiameter;
2  // Con Pepperl-Fuchs UC2000-L2-U-V15:
3  // DeadZone = 60mm
4  // Reading_Max = 2000mm
5  // Con Pepperl-Fuchs OMD10M-R200-2EP-IO-V1-L:
6  // DeadZone = 200mm
7  // Reading_Max = 5000mm
```

16



17



1-8-1-1-3.Motor_Manager

0 Enable encoder reading.



1 Calculation of mm per encoder pulse.


```
IF Encoder_Pulse = INT#0 THEN;
    Encoder_Pulse :=INT#1;
END_IF;
// Encoder Standard 400mm
IF  EncoderWheel_Diam = REAL#0 THEN;
    EncoderWheel_Diam := REAL#400;
END_IF;

EncoderPulse_to_mm := EncoderWheel_Diam / (INT_TO_REAL(Encoder_Pulse) *
REAL#4);
```


2 Reset encoder counter.



3 Checking the slowdown point.

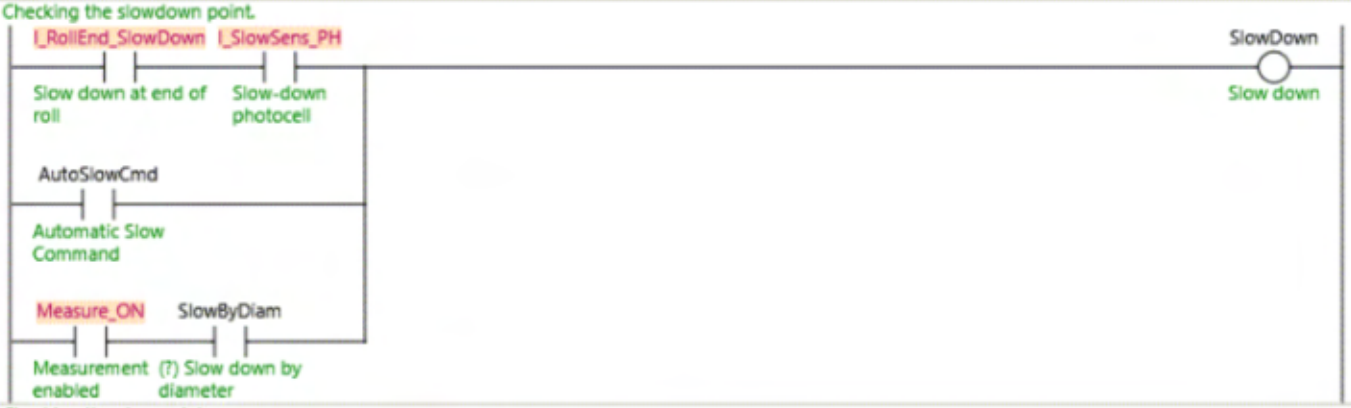

4 Checking the stop point.

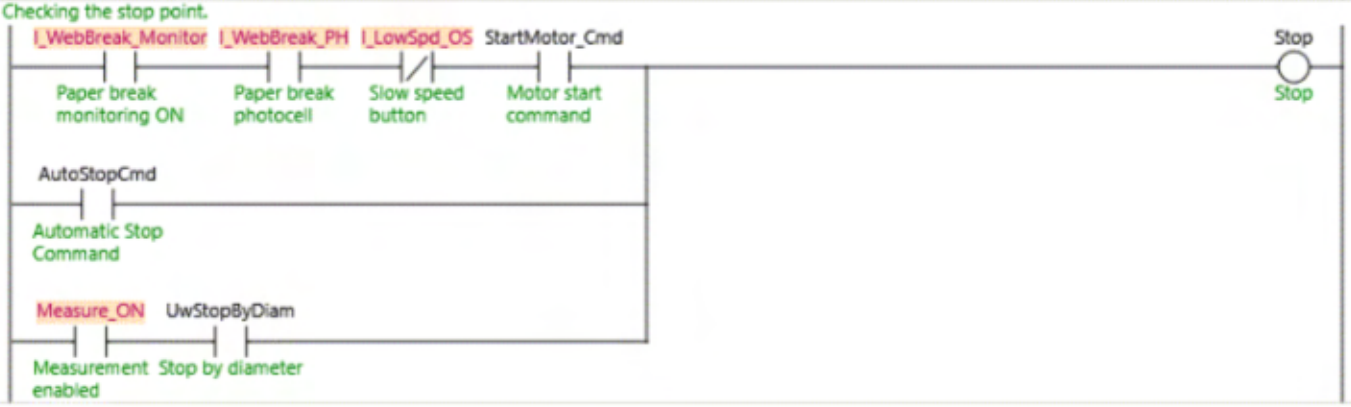

5 Check the maximum and minimum values for working speed and slow speed.

```
IF VelMax < REAL#600 THEN;
      VelMax := REAL#600;
   ELSIF VelMax > REAL#1000 THEN;
      VelMax := REAL#1000;
END_IF;
Vel_Max_mms := VelMax * REAL#1000 / REAL#60;

IF JogSpd_SP < REAL#10 THEN;
      JogSpd_SP := REAL#10;
ELSIF JogSpd_SP > REAL#70 THEN;
   JogSpd_SP := REAL#70;
END_IF;

Output_Ratio := (VelMax * Mt_To_mm) / UINT_TO_REAL(Analog_Res): //REAL#4000;
Input_Ratio := UINT_TO_REAL(Analog_Res) / VelMax ;
```

6 Reading the current value of the potentiometers. v6n: requested pot ranges, limited, applied only with the motor stopped !

```
IF WorkSpd_Max_Set < 50.0 THEN
   WorkSpd_Max_Set := 50.0;
ELSIF WorkSpd_Max_Set > VelMax THEN
   WorkSpd_Max_Set := VelMax;
END_IF;

IF FinalSpd_Max_Set < 5.0 THEN
   FinalSpd_Max_Set := 5.0;
ELSIF FinalSpd_Max_Set > WorkSpd_Max_Set THEN
   FinalSpd_Max_Set := WorkSpd_Max_Set;
END_IF;

IF NOT StartMotor_Cmd THEN
   WorkSpd_Max := WorkSpd_Max_Set;          // motor stopped: apply
   FinalSpd_Max := FinalSpd_Max_Set;
END_IF;

SpdMax_Pending := (WorkSpd_Max <> WorkSpd_Max_Set)
            OR (FinalSpd_Max <> FinalSpd_Max_Set);

// v6i: pots scaled to their own full scale (m/min)

IF Pot1_Work_Velocity > INT#5 THEN
   Pot1_Mem := REAL_TO_INT(INT_TO_REAL(Pot1_Work_Velocity) * WorkSpd_Max /
VelMax);
ELSE
   Pot1_Mem := INT#0;
END_IF;

IF Pot2_Slow_Velocity > INT#5 THEN
   Pot2_Mem := REAL_TO_INT(INT_TO_REAL(Pot2_Slow_Velocity) * FinalSpd_Max /
VelMax);
ELSE
   Pot2_Mem := INT#0;
END_IF;
```


7 Updating the set speed.

```
IF ManMode = FALSE THEN;

    Speed_Display := UINT_TO_REAL(Pot1_Mem) / Input_Ratio;
    LowSpd_Display := UINT_TO_REAL(Pot2_Mem) / Input_Ratio;
ELSE;
   Speed_Display := Pot1_Work_Velocity / (Analog_Res / UINT#40); // v6i: raw pot, %
   LowSpd_Display := Pot2_Slow_Velocity / (Analog_Res / UINT#40);

END_IF;
```


8 Updating potentiometer value.

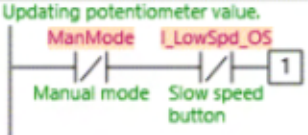

1

```
IF SoftStop THEN
    VelSet := 0.0;                    // v6m: soft stop
ELSIF SlowDown = FALSE THEN
    VelSet := UINT_TO_REAL(Pot1_Mem) / Input_Ratio;
ELSE
    VelSet := UINT_TO_REAL(Pot2_Mem) / Input_Ratio;
END_IF;
VelSet_mms := VelSet * Mt_To_mm;
```

9 Slow speed.

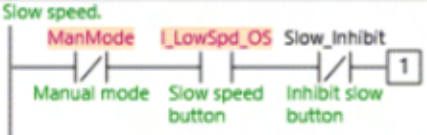

1

```
VelSet := JogSpd_SP;
VelSet_mms := VelSet * Mt_To_mm;
```


10 Check the difference between the set speed and the detected speed.

```
//SpdDelta := VelSet_mms * SpdDelta_Percent / REAL#100;
SpdDelta := SpdDelta_Percent;
SpdDeltaMax := VelSet + SpdDelta;
SpdDeltaMin := VelSet - SpdDelta;
// Too fast
IF Velocity_M_min > SpdDeltaMax THEN;
    OverSpeed := TRUE;
ELSE
    OverSpeed := FALSE;
END_IF;
// Too slow
IF Velocity_M_min < SpdDeltaMin THEN;
    UnderSpeed := TRUE;
ELSE
    UnderSpeed := FALSE;
END_IF;
```


11 Read the current value of the encoder.




12 Speed calculation.

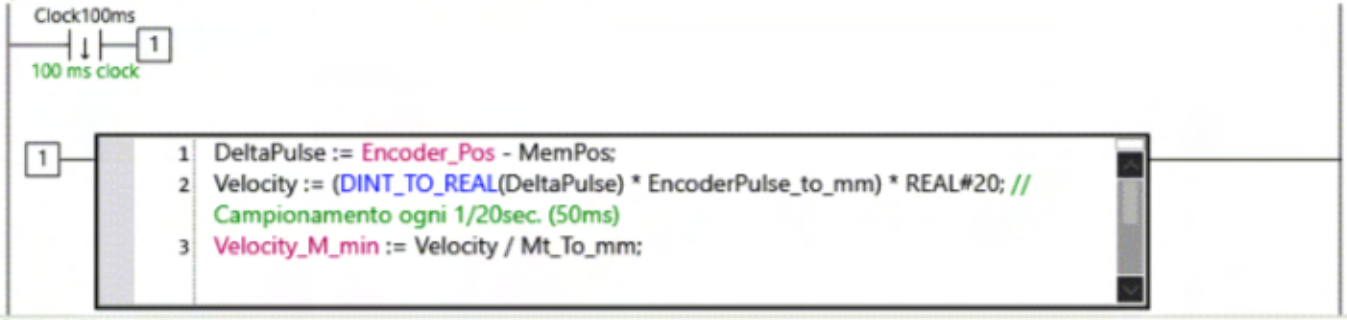

13 Set the initial speed.

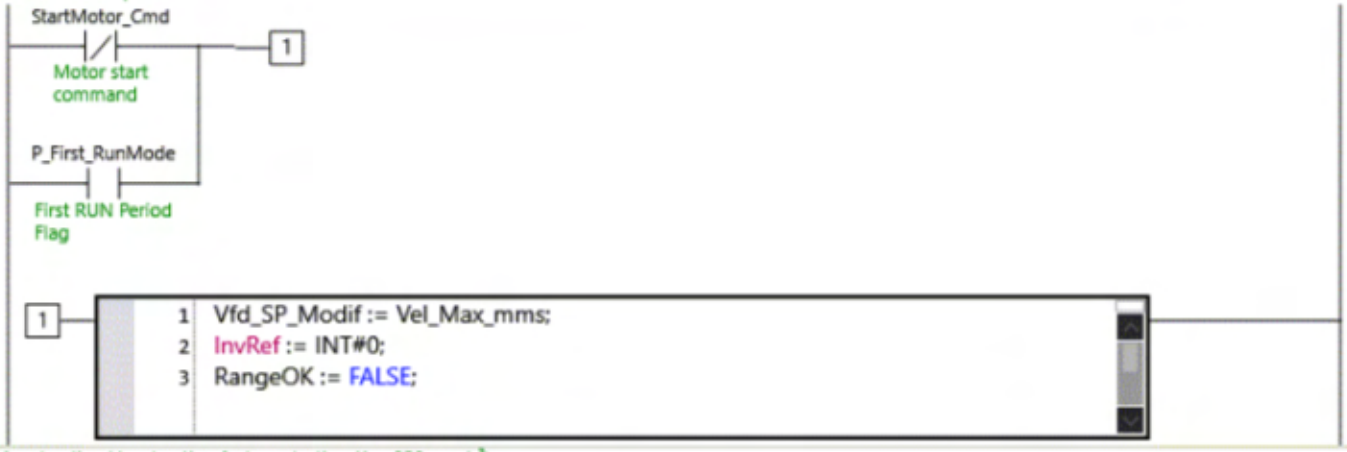

14 Acceleration/deceleration factor selection (1 = 250 mm/s²).

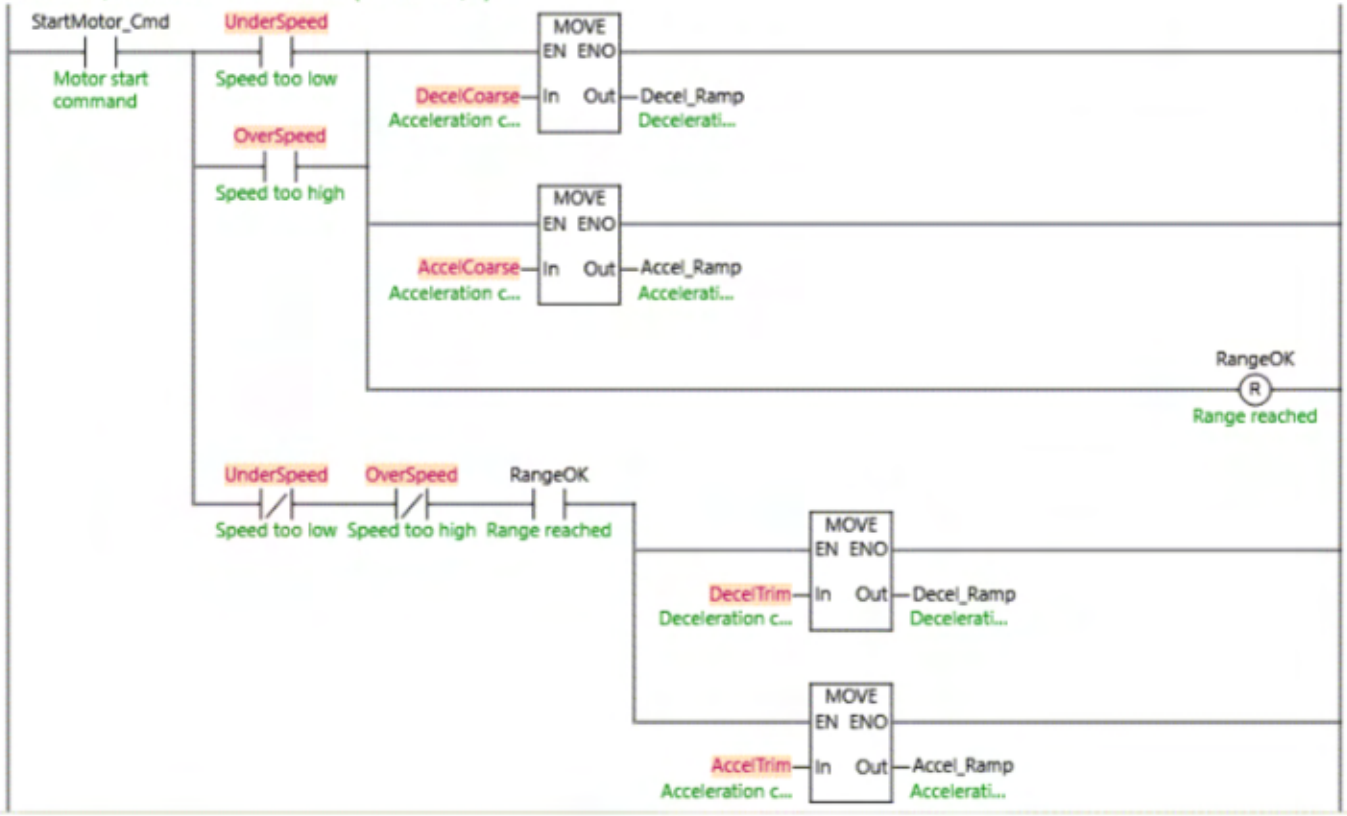

15 Soft Stop - SoftStopDecel (mm/s2), same for every roll.

```
// v6r: soft stop at a REAL web decel SoftStopDecel (mm/s2), same for every roll.
// Ratio drive counts / web m/min frozen at the soft stop start (encoder = exact).


IF SoftStop AND NOT SoftStopMem THEN
    IF Velocity_M_min > 1.0 THEN
        SoftStopRatio := INT_TO_REAL(InvRef) / Velocity_M_min;
    ELSE
        SoftStopRatio := 0.0;
    END_IF;
END_IF;

SoftStopMem := SoftStop;


IF SoftStop AND (SoftStopDecel > 0.0) THEN
    IF SoftStopRatio > 0.0 THEN
        Decel_Ramp := SoftStopDecel * 0.06 * SoftStopRatio * Vel_Max_mms /
1000000.0;
    ELSE
        Decel_Ramp := SoftStopDecel / 250.0;          // fallback (old v6m behaviour)
    END_IF;

    IF Decel_Ramp > 8.0 THEN
        Decel_Ramp := 8.0;                    // max 9 Hz/s asked from the PLC
    END_IF;
END_IF;
```

16 Speed correction factor calculation.

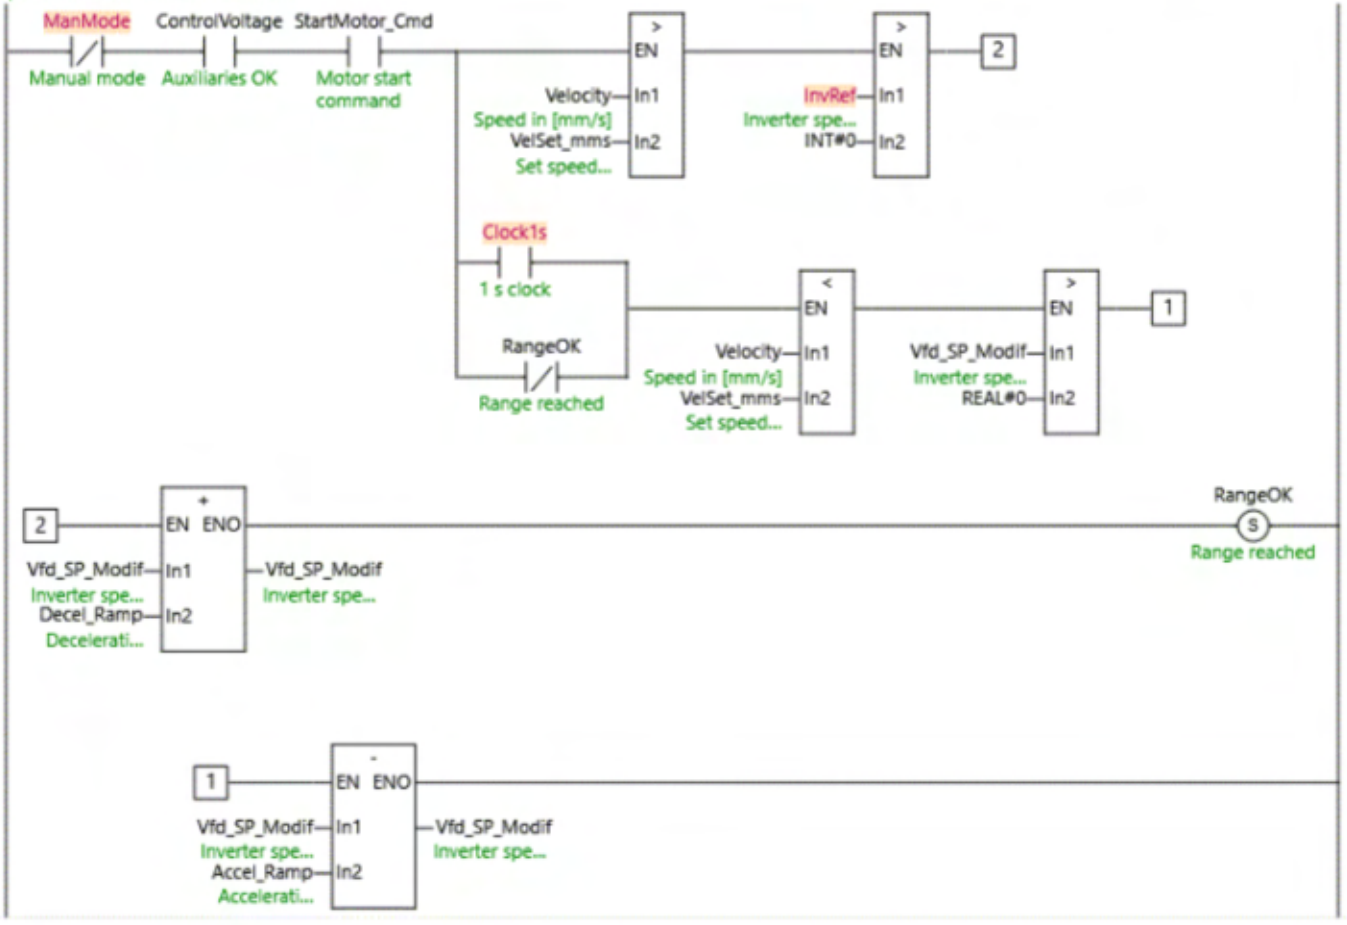


17 Management of the inverter speed reference in mm/s and conversion to analog points (0–4000 points = 0–10 VDC = 0–10,000 mm/s).

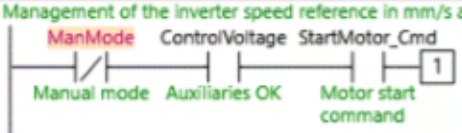


```
1  //InvRef2 := REAL_TO_UINT((Vel_Max_mms - Vfd_SP_Modif ) / Output_Ratio);
2  //InvRefWW := UINT_TO_WORD(InvRef2);
3  //InvRefSW :=Swap(UINT_TO_WORD(InvRef2));
4  //InvRef := WORD_TO_UINT(InvRefSW);
5  InvRef := REAL_TO_INT((Vel_Max_mms - Vfd_SP_Modif ) / Output_Ratio);
```

18 Updating potentiometer value.

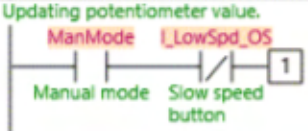



```
1  IF SoftStop THEN
2      InvRef := INT#0;                    // v6m: drive ramps down on its own
3  ELSIF SlowDown = FALSE THEN
4      InvRef := Pot1_Work_Velocity;
5  ELSE
6      InvRef := Pot2_Slow_Velocity;
7  END_IF;
```


19 Slow speed.




```
1  VelSet := JogSpd_SP;
2  VelSet_mms := VelSet * Mt_To_mm;
3  //InvRef2 := REAL_TO_UINT((VelSet_mms) / Output_Ratio);
4  //InvRefWW := UINT_TO_WORD(InvRef2);
5  //InvRefSW :=Swap(UINT_TO_WORD(InvRef2));
6  //InvRef := WORD_TO_UINT(InvRefSW);
7
8  InvRef := REAL_TO_INT(VelSet_mms / Output_Ratio);
```


1-8-1-1-4.OverRider_Manager

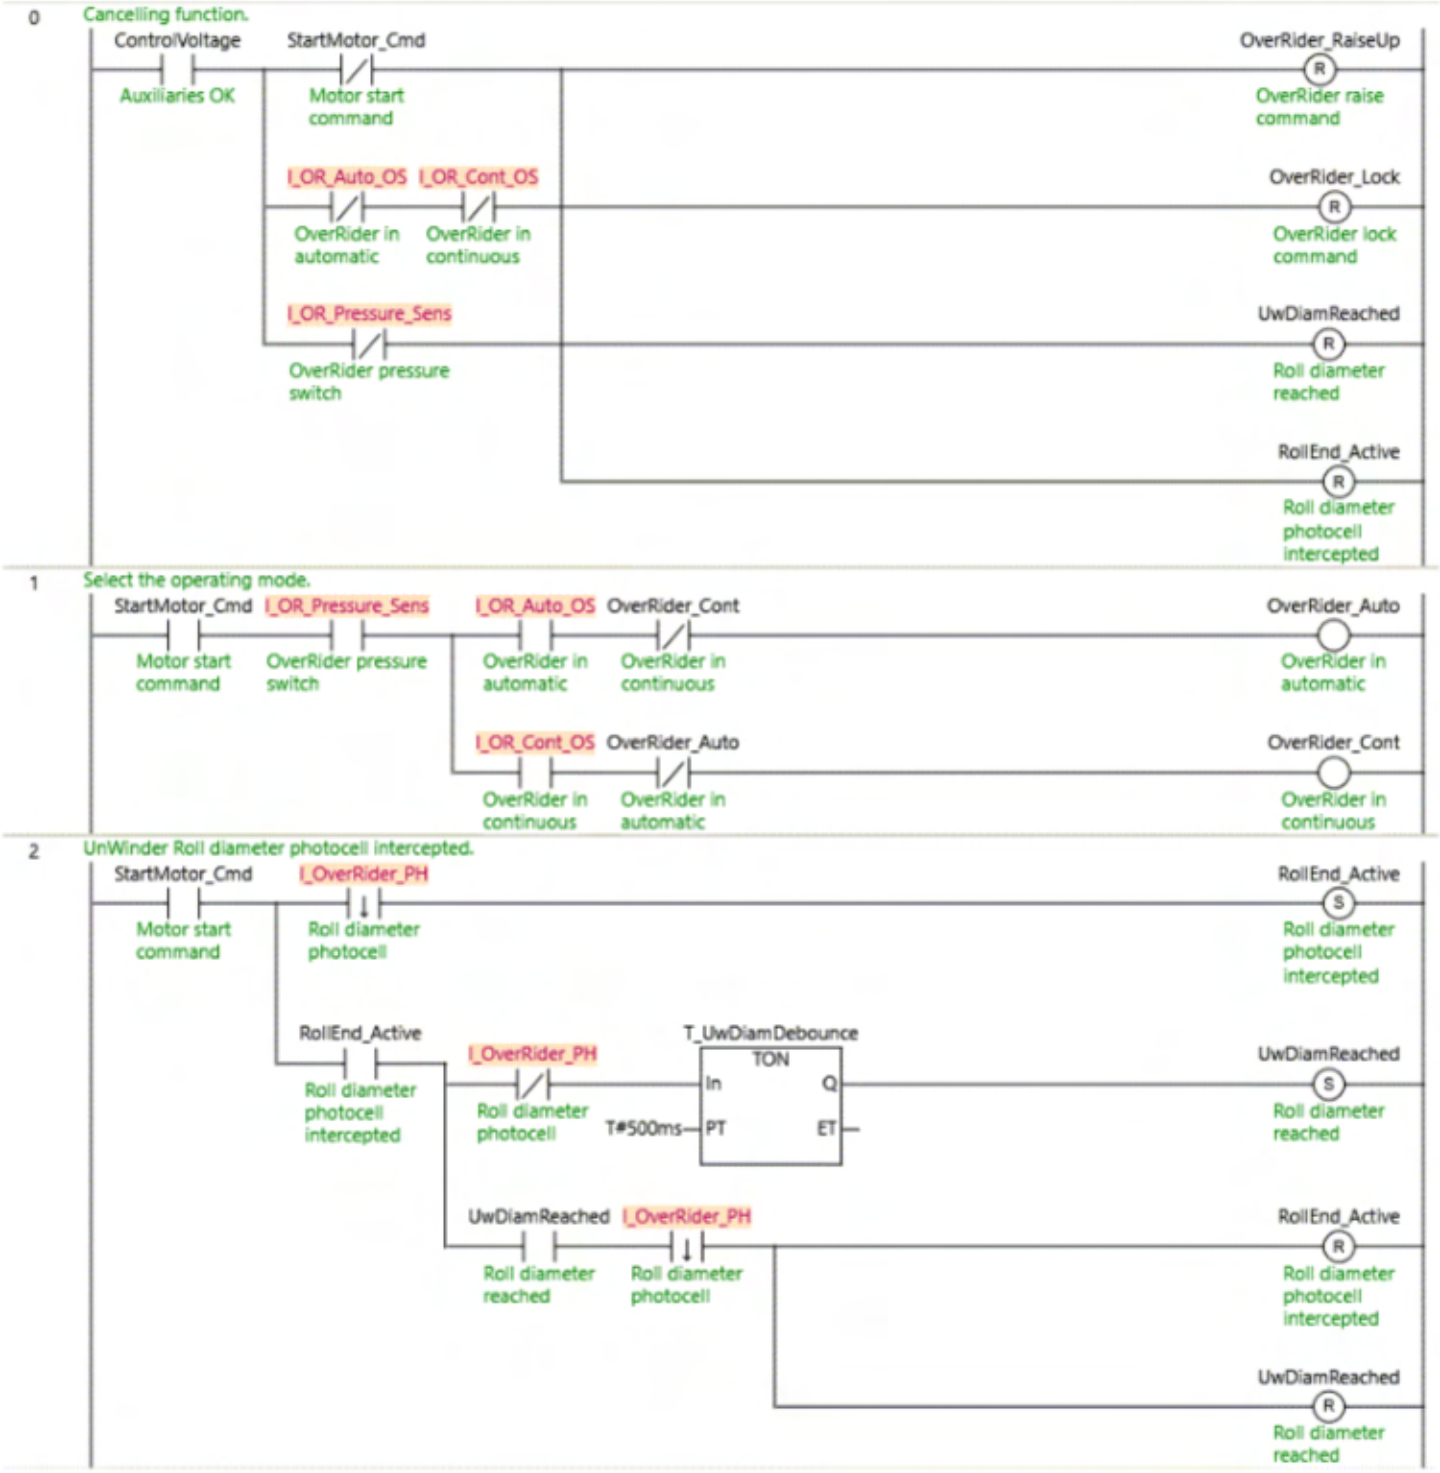


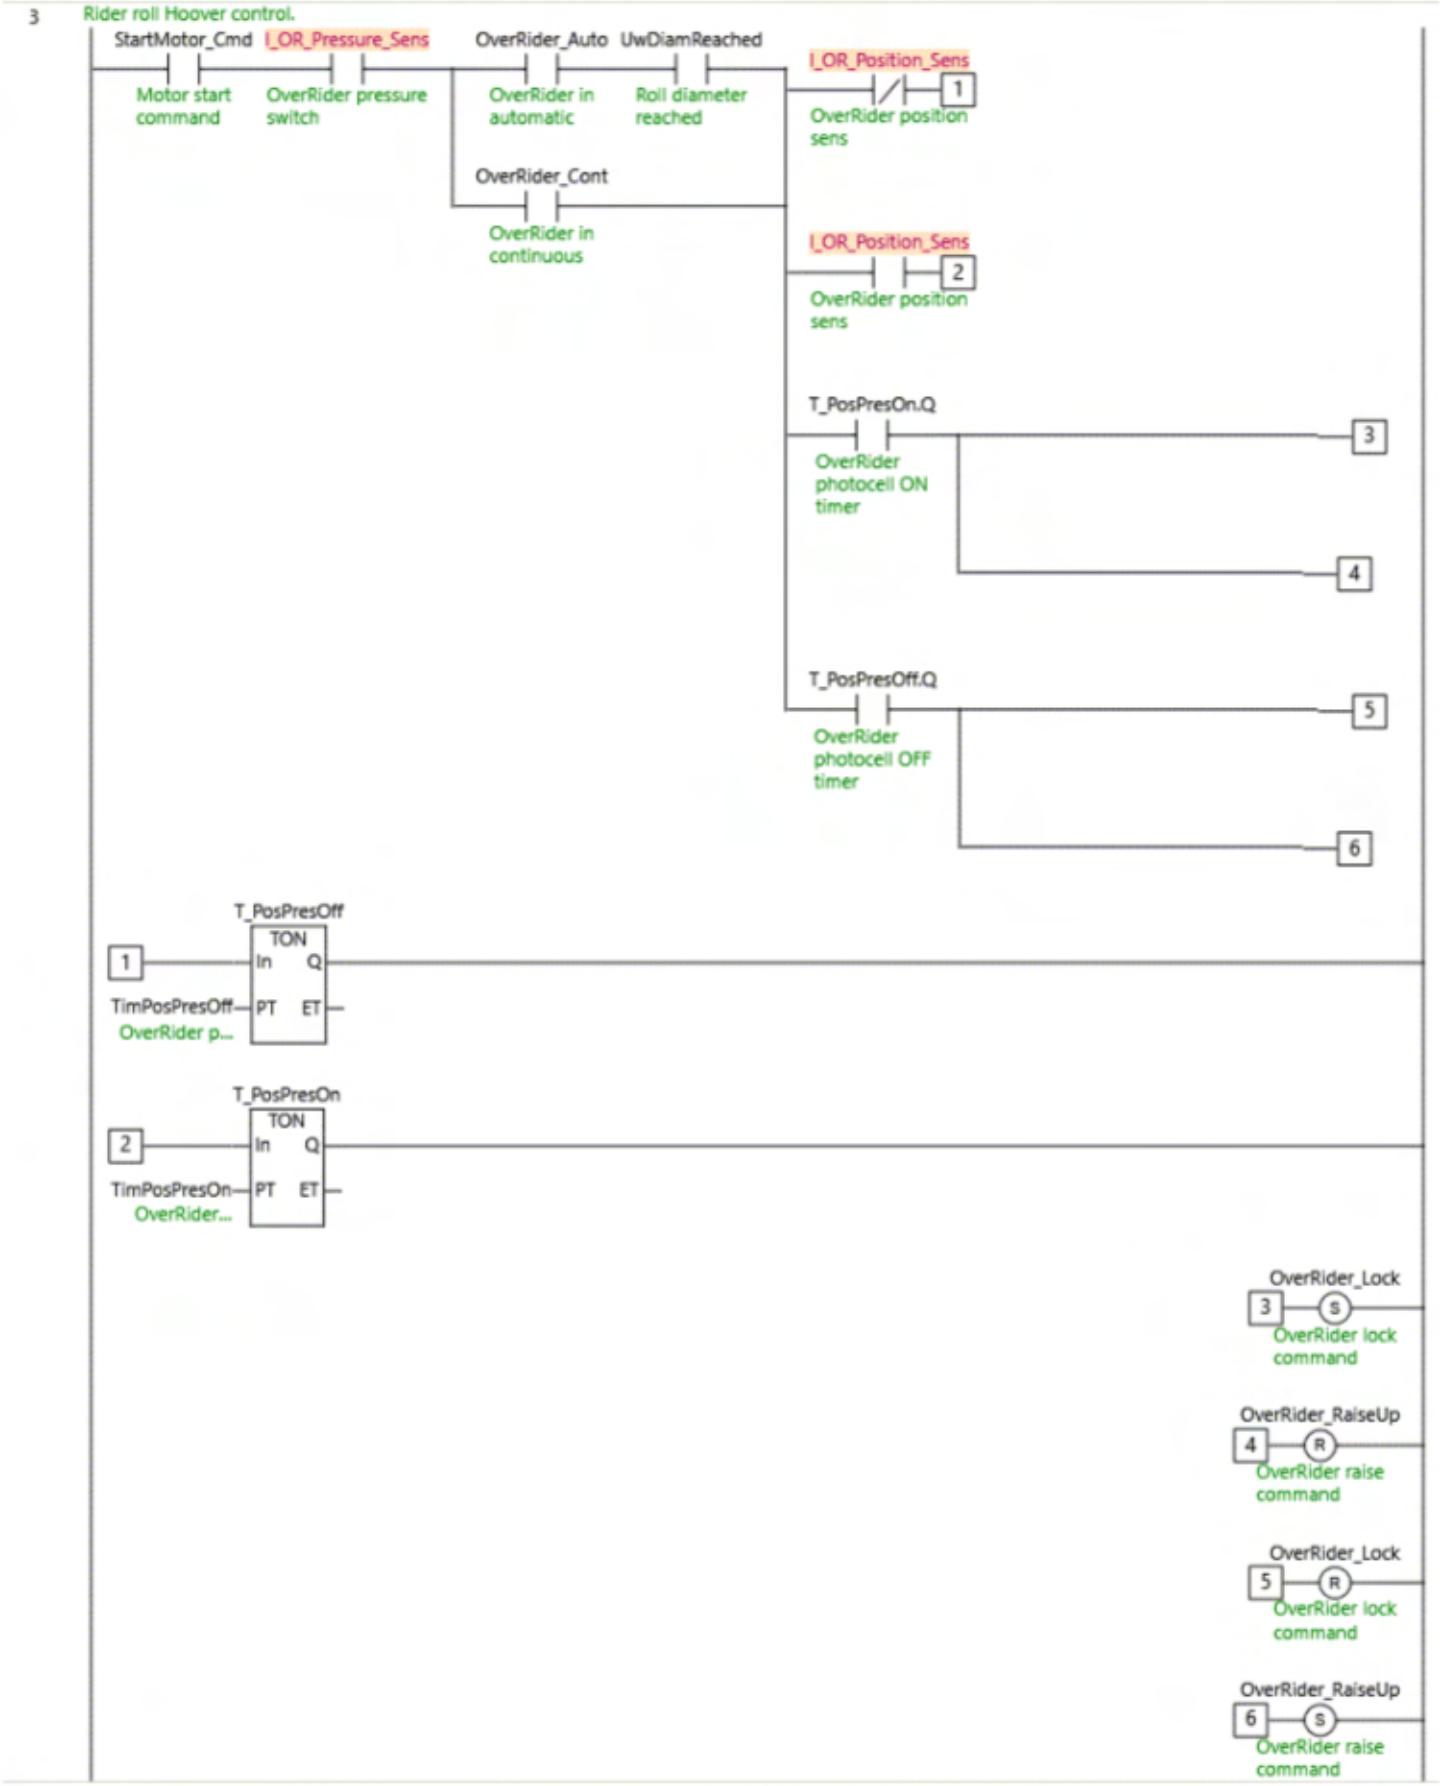

3
Rider roll Hoover control.
StartMotor_Cmd
Motor start command
I_OR_Pressure_Sens
OverRider pressure switch
OverRider_Auto
OverRider in automatic
UwDiamReached
Roll diameter reached
I_OR_Position_Sens
1
OverRider position sens
OverRider_Cont
OverRider in continuous
I_OR_Position_Sens
2
OverRider position sens
T_PosPresOn.Q
OverRider photocell ON timer
3
4
T_PosPresOff.Q
OverRider photocell OFF timer
5
6
T_PosPresOff
TON
In
Q
PT
ET
1
TimPosPresOff
OverRider p...
T_PosPresOn
TON
In
Q
PT
ET
2
TimPosPresOn
OverRider...
OverRider_Lock
3
S
OverRider lock command
OverRider_RaiseUp
4
R
OverRider raise command
OverRider_Lock
5
R
OverRider lock command
OverRider_RaiseUp
6
S
OverRider raise command


4
Rider roll raise command.
ControlVoltage
Auxiliaries OK
OverRider_RaiseUp
S
OverRider raise command
5
I_ControlVoltage
Auxiliaries ON
OverRider_RaiseUp
R
OverRider raise command


1-8-1-1-5.Console

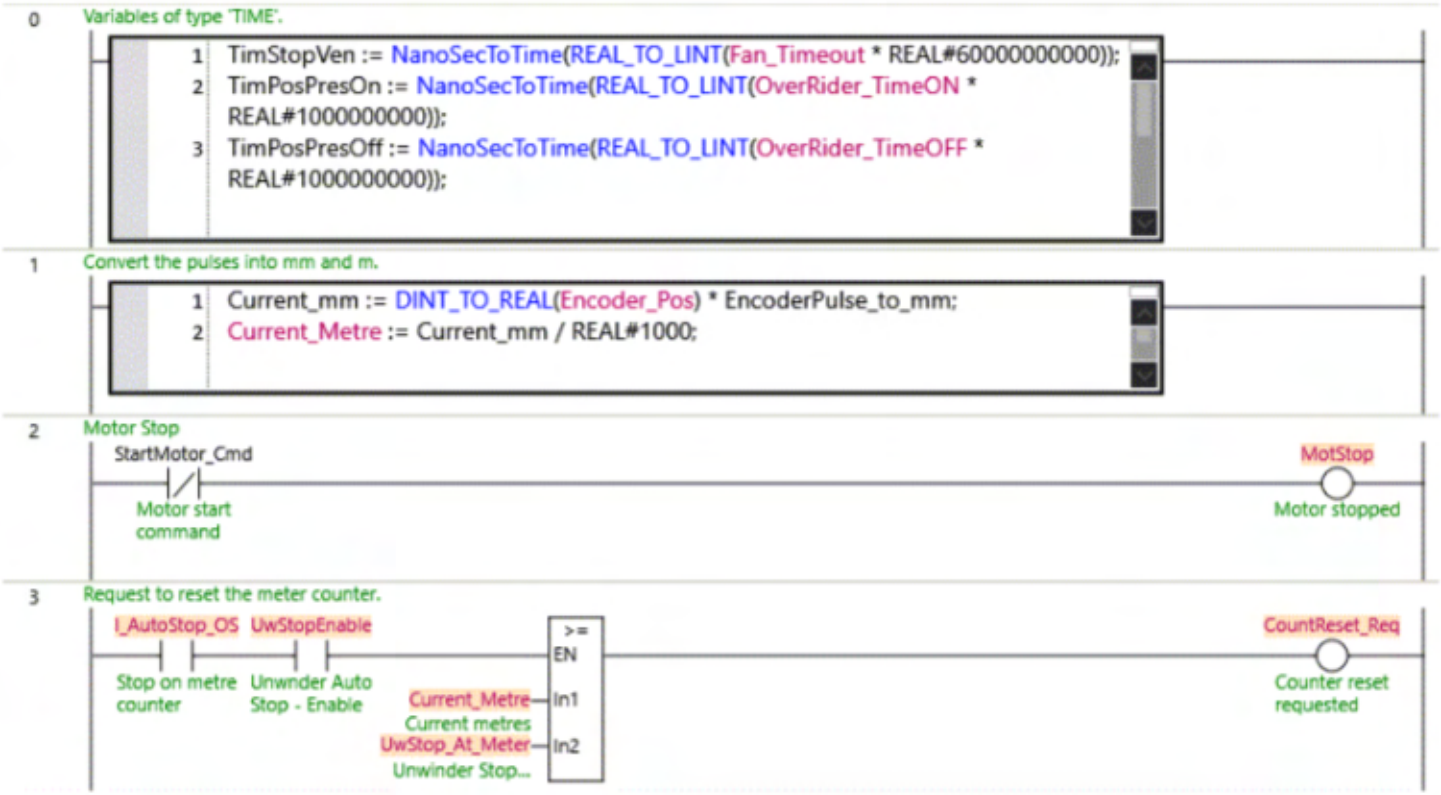

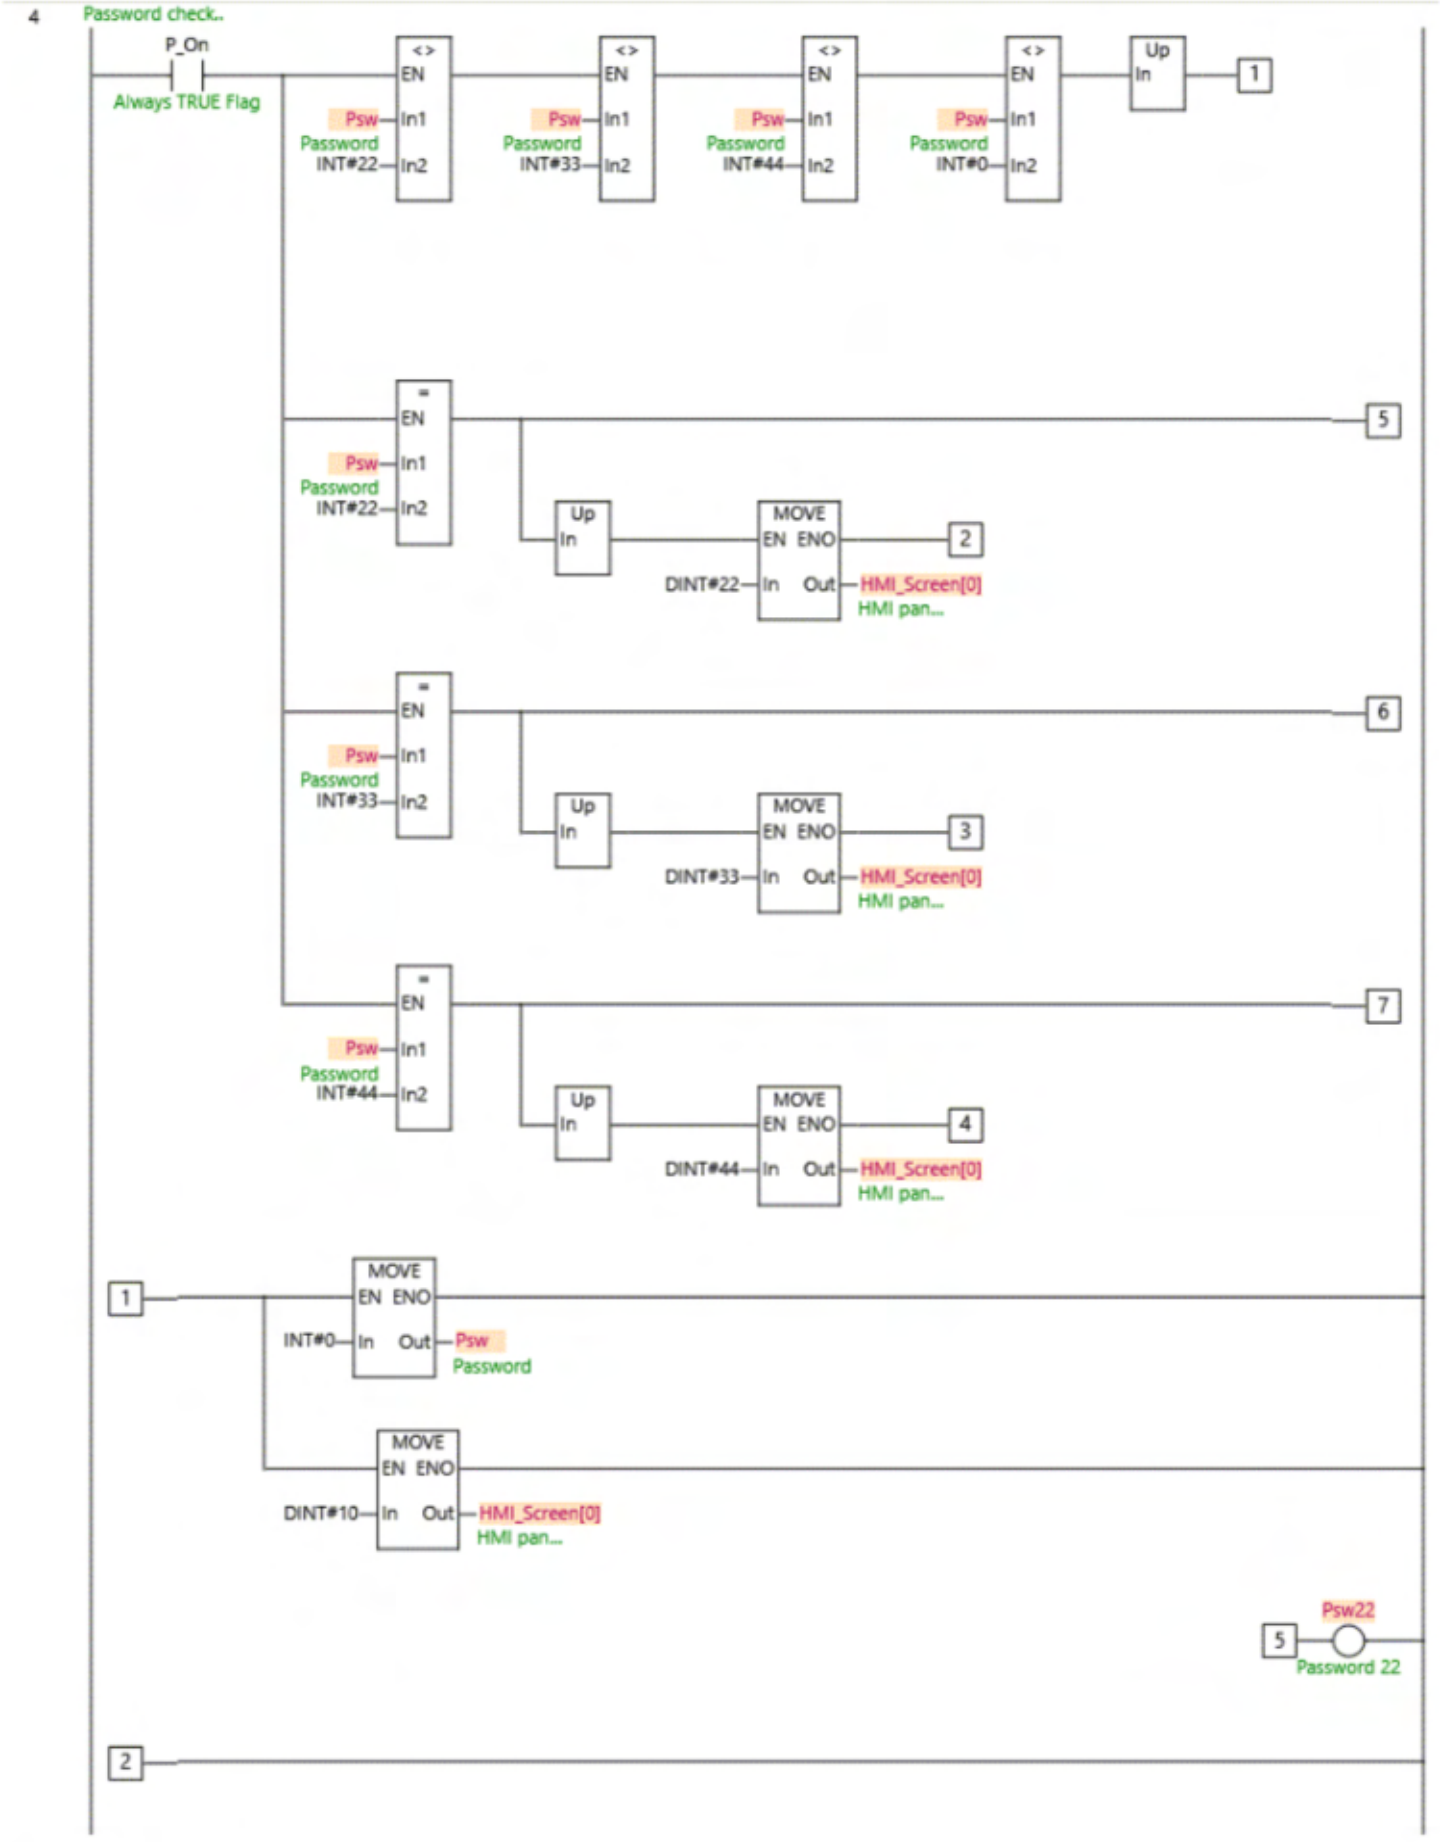

4
Password check..
P_On
Always TRUE Flag
<>
EN
In1
In2
Psw
Password
INT#22
INT#33
INT#44
INT#0
Up
In
1
=
5
6
7
2
3
4
MOVE
EN ENO
DINT#22
DINT#33
DINT#44
Out
HMI_Screen[0]
HMI pan...
INT#0
DINT#10
Psw22
Password 22

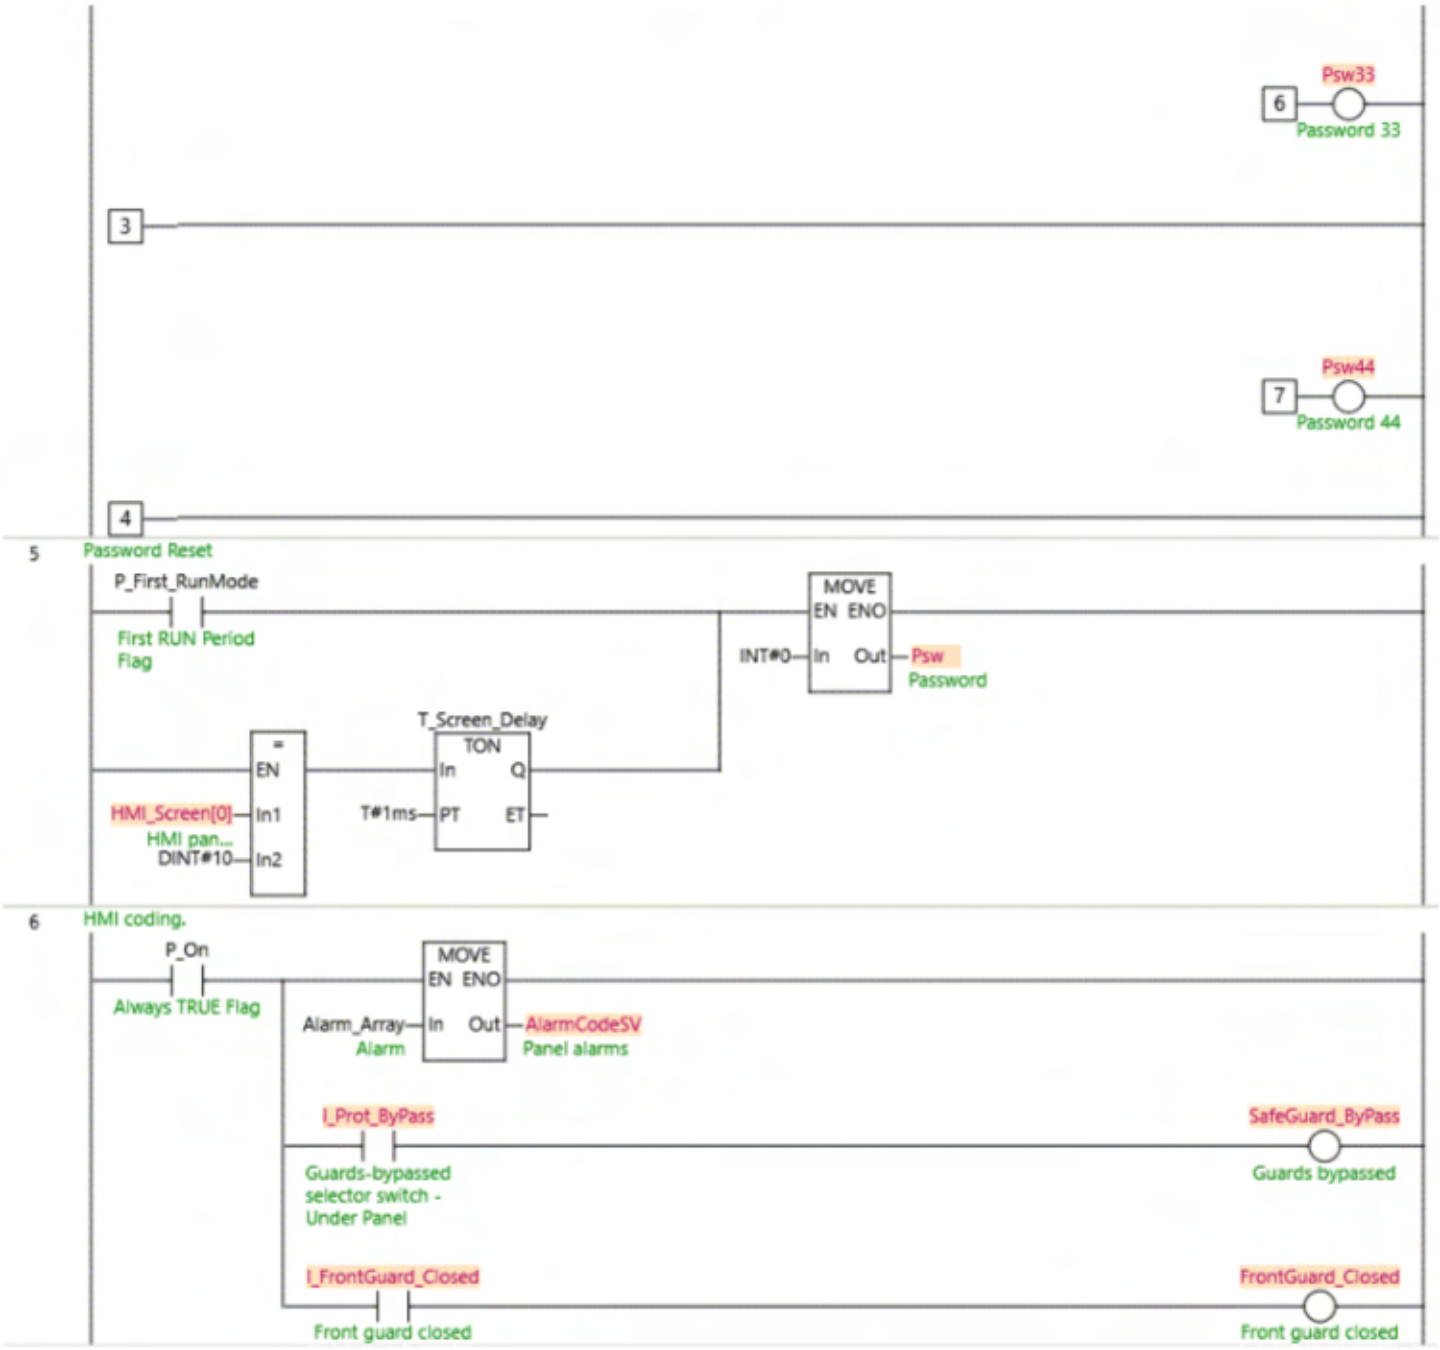
6
Psw33
Password 33
3
7
Psw44
Password 44
4
5
Password Reset
P_First_RunMode
First RUN Period Flag
MOVE
EN ENO
INT#0
In
Out
Psw
Password
T_Screen_Delay
TON
In
Q
T#1ms
PT
ET
=
EN
HMI_Screen[0]
In1
HMI pan...
DINT#10
In2
6
HMI coding.
P_On
Always TRUE Flag
MOVE
EN ENO
Alarm_Array
Alarm
In
Out
AlarmCodeSV
Panel alarms
I_Prot_ByPass
Guards-bypassed selector switch - Under Panel
SafeGuard_ByPass
Guards bypassed
I_FrontGuard_Closed
Front guard closed
FrontGuard_Closed
Front guard closed

1-8-1-1-6.Alarms

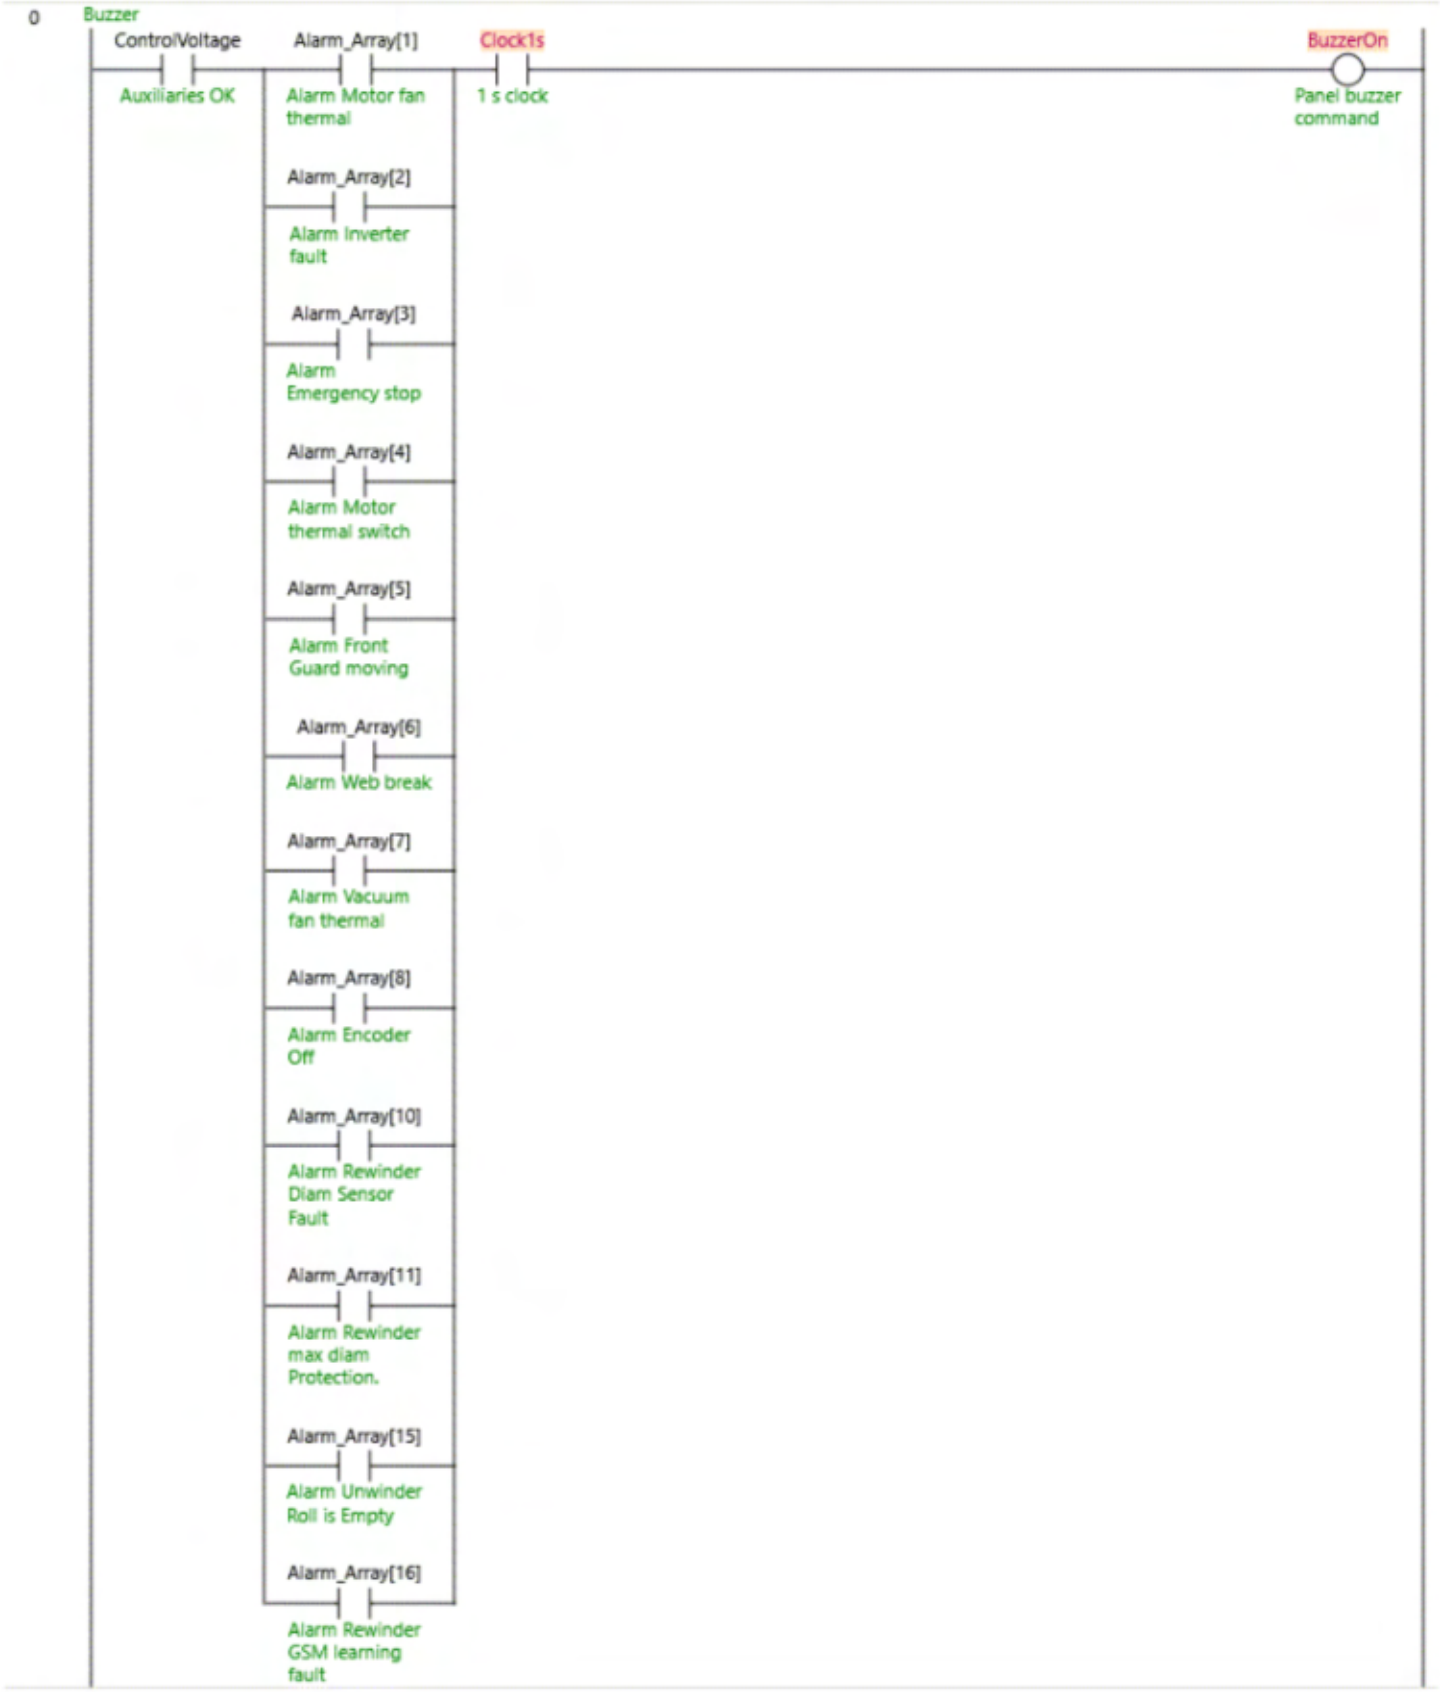

1 Check Present alarms.

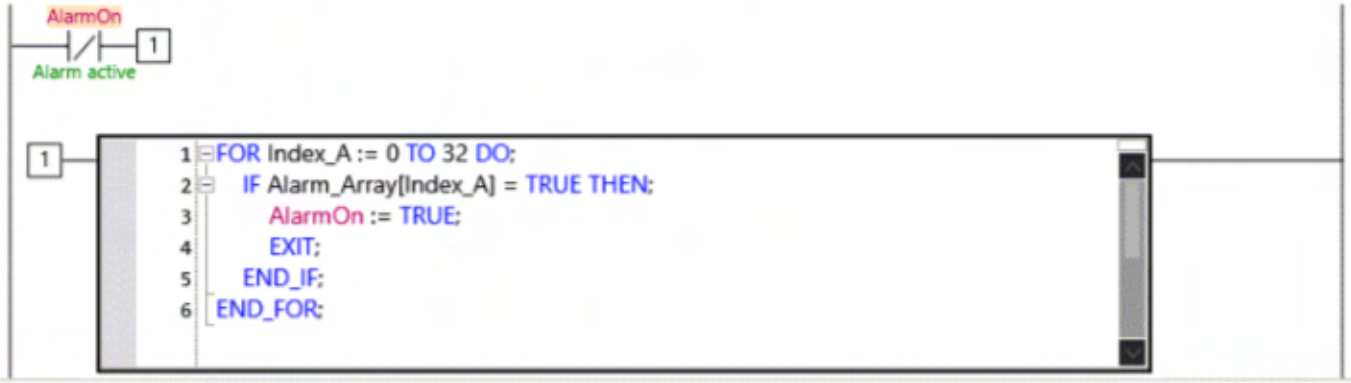

2 Alarm has been called off.



3 Motor cooling Fan Alarm.



4 Inverter fault.



5 Machine in emergency mode.




6 Motor thermal cutout.



7 Front Guard Alarm




8 Web Brake.

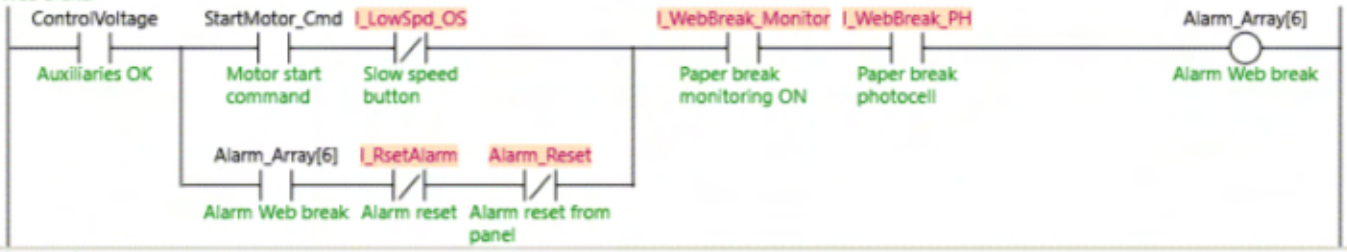

9 Cooling fan.



10 Encoder Stopped !

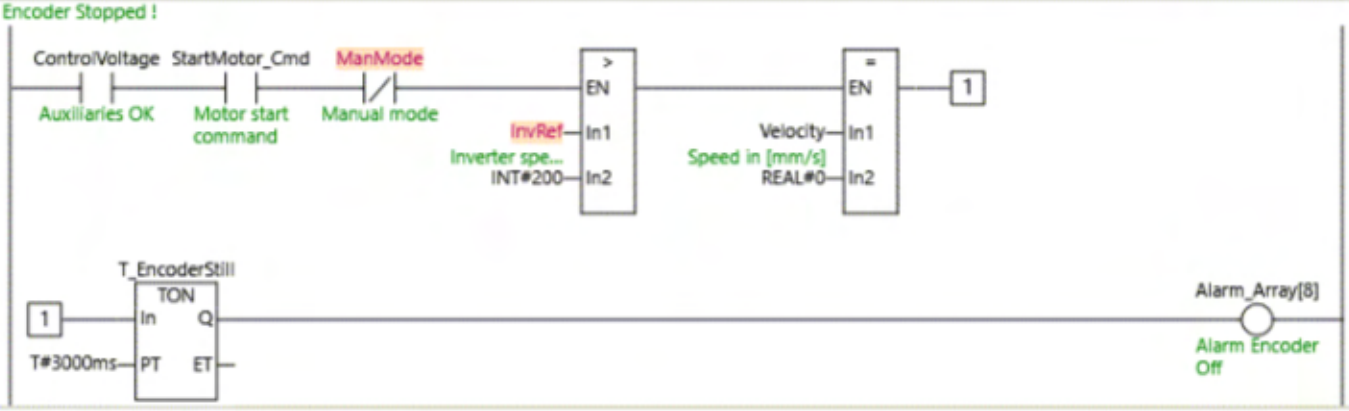

11 Open-ended roll holder joint.



12 Rewinder Diameter Sensor Fault.



13 Rewinder Diameter Sensor Fault - Reset



14 Rewinder max diameter Machine protection.



15 Rewinder max diameter Machine protection - Reset



16 Rewinder GSM learning fault



17 Rewinder learning fault - Reset



18 Hub not in position.



19 Emergency Stop by Holding Stop PB 2s



20 Slow-down photocell active.



21 End-of-roll Alarm.




22 Unwinder Roll is Empty



23 Unwinder Roll is Empty - Reset




24 Active end-of-roll photocell.

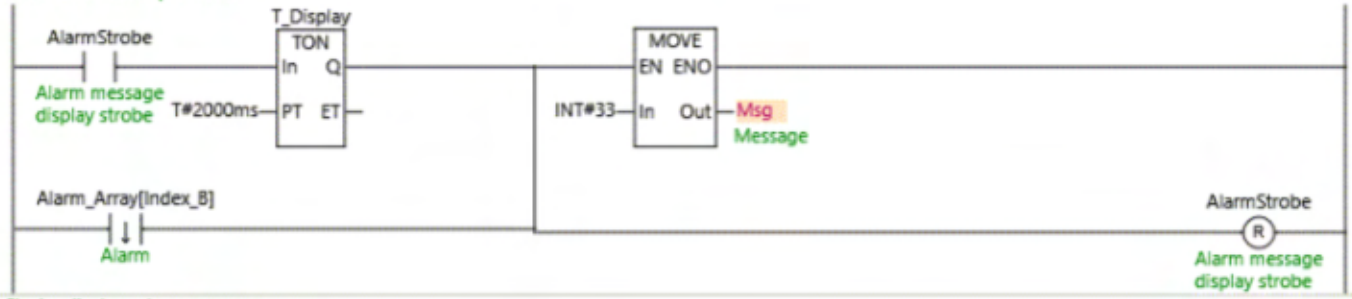

25 Strobe displays alarm message.




26 Alarm presence check cycle.

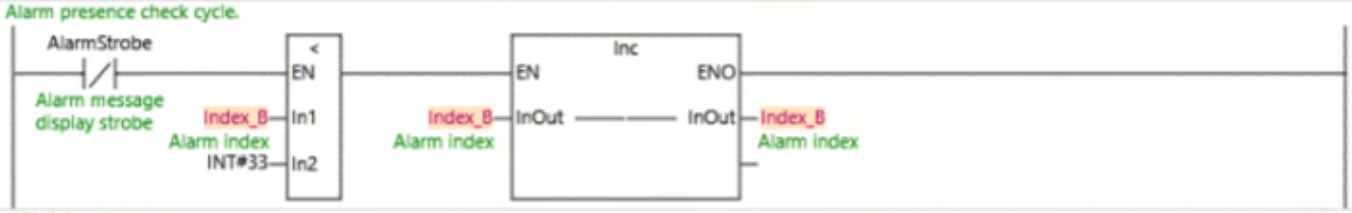


27 Initializing alarm message.



1-8-1-1-7.Output_Manager

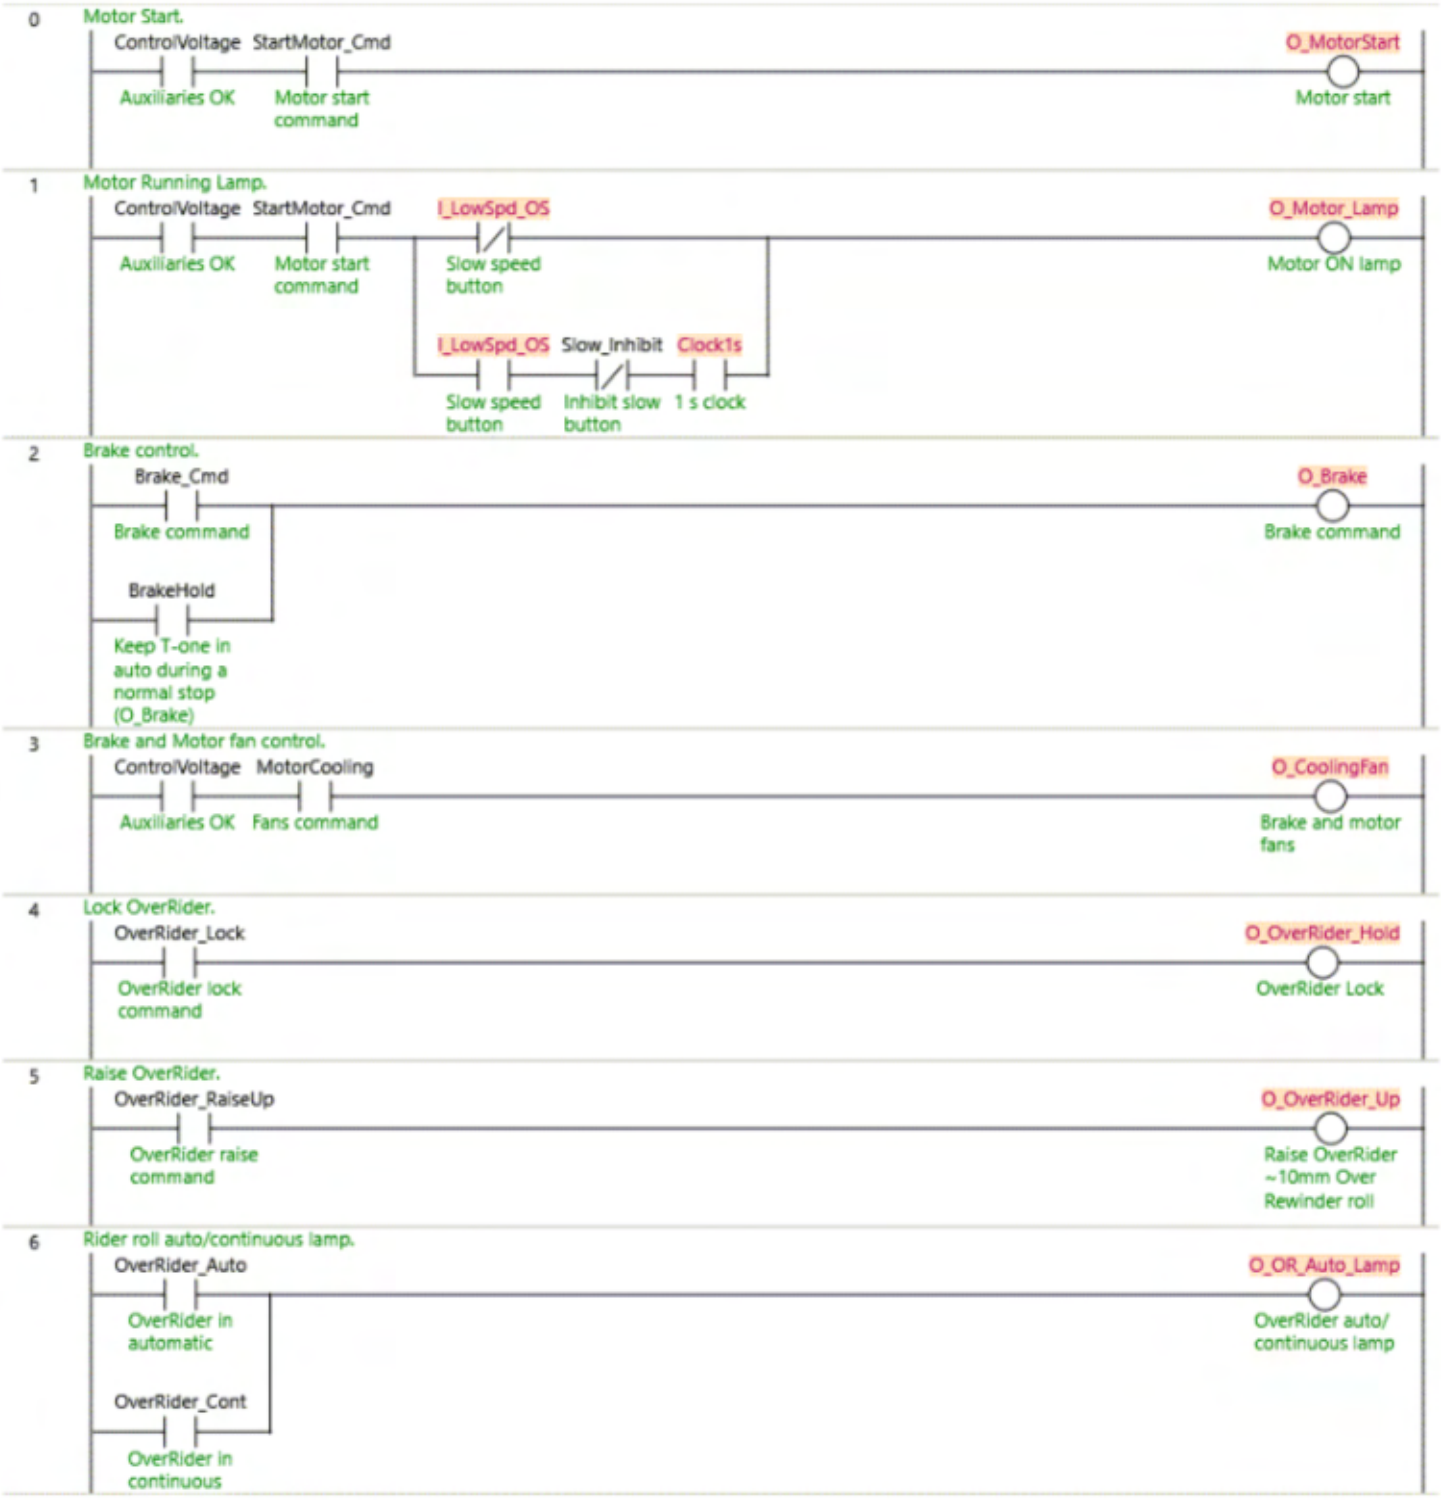


7
Alarm lamp.
ControlVoltage
Auxiliaries OK
O_Alarm_Array
Alarm lamp
Alarm_Array[1]
Alarm Motor fan thermal
Clock1s
1 s clock
Alarm_Array[2]
Alarm Inverter fault
Alarm_Array[3]
Alarm Emergency stop
Alarm_Array[4]
Alarm Motor thermal switch
Alarm_Array[5]
Alarm Front Guard moving
Alarm_Array[6]
Alarm Web break
Alarm_Array[7]
Alarm Vacuum fan thermal
Alarm_Array[8]
Alarm Encoder Off
Alarm_Array[10]
Alarm Rewinder Diam Sensor Fault
Alarm_Array[11]
Alarm Rewinder max diam Protection.
Alarm_Array[15]
Alarm Unwinder Roll is Empty
Alarm_Array[16]
Alarm Rewinder GSM learning fault

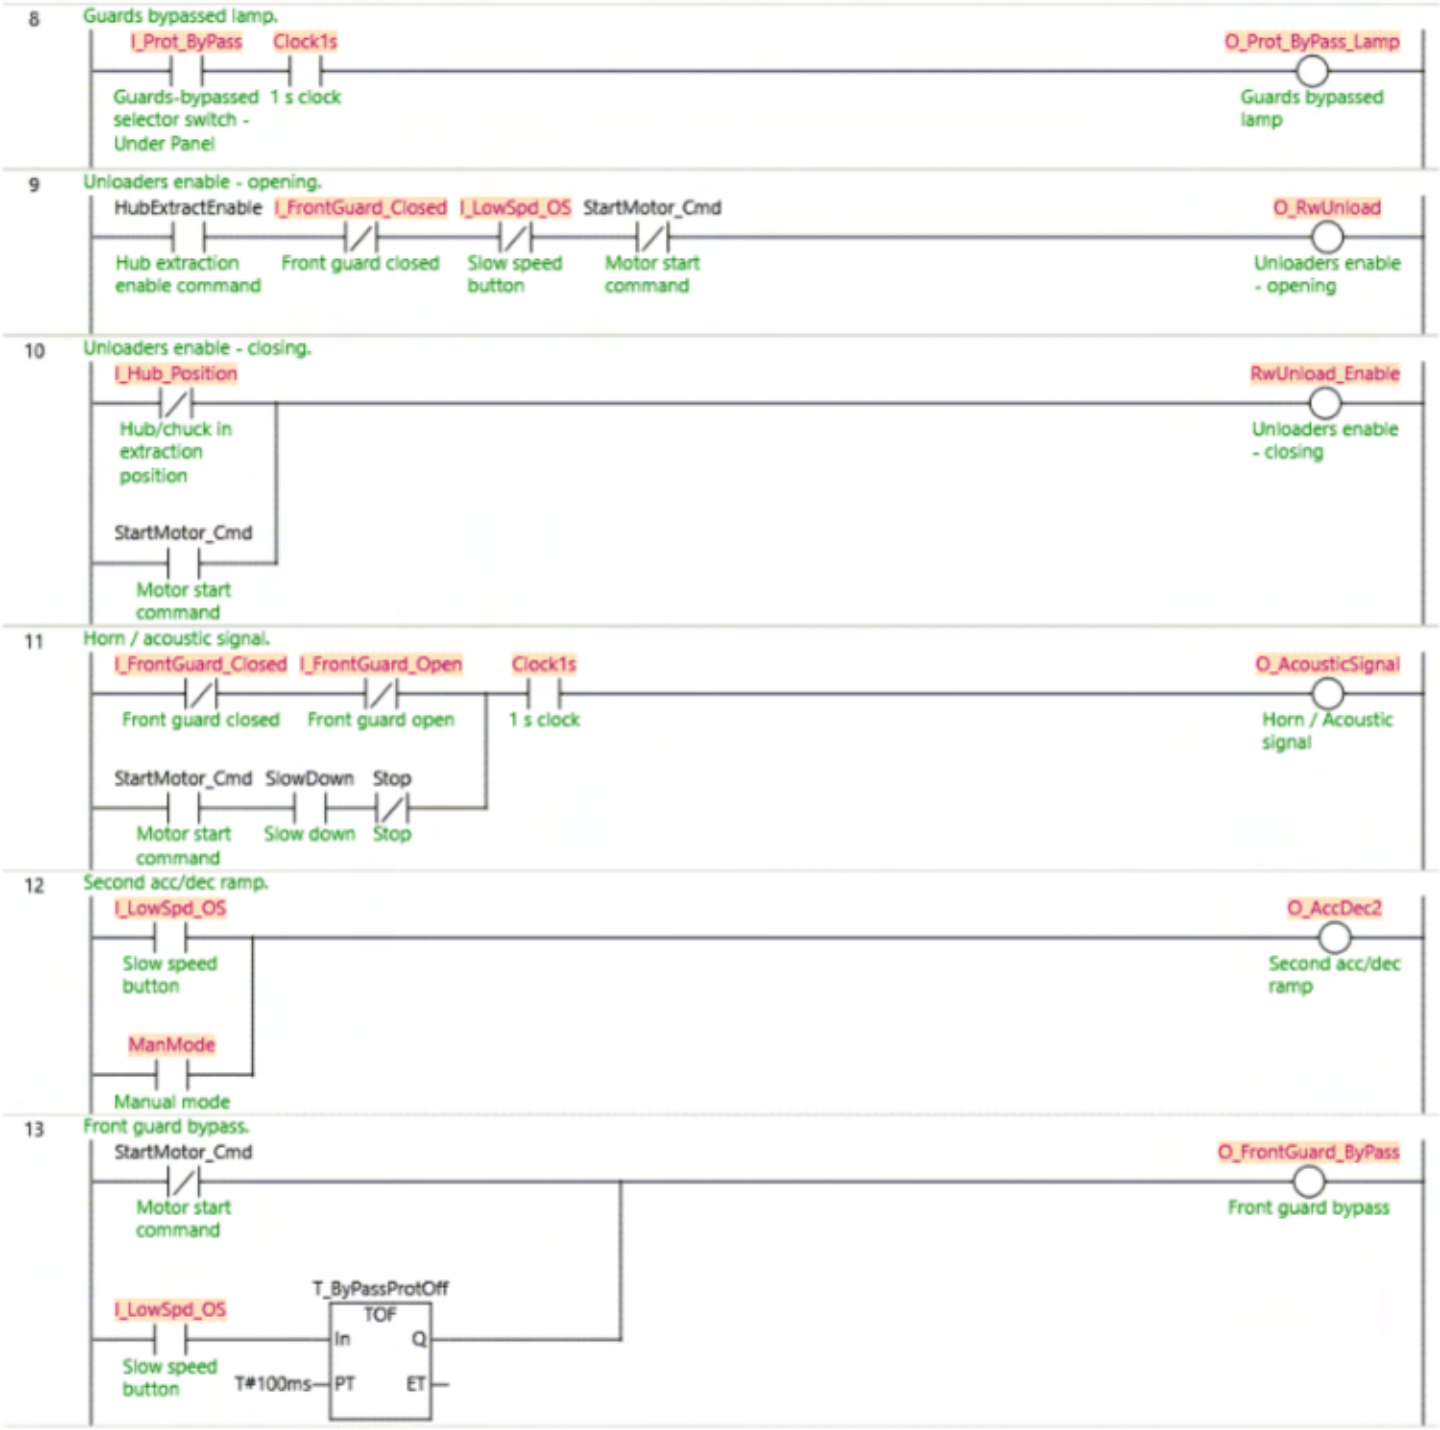
8
Guards bypassed lamp.
I_Prot_ByPass
Clock1s
Guards-bypassed selector switch - Under Panel
1 s clock
O_Prot_ByPass_Lamp
Guards bypassed lamp
9
Unloaders enable - opening.
HubExtractEnable
I_FrontGuard_Closed
I_LowSpd_OS
StartMotor_Cmd
Hub extraction enable command
Front guard closed
Slow speed button
Motor start command
O_RwUnload
Unloaders enable - opening
10
Unloaders enable - closing.
I_Hub_Position
Hub/chuck in extraction position
StartMotor_Cmd
Motor start command
RwUnload_Enable
Unloaders enable - closing
11
Horn / acoustic signal.
I_FrontGuard_Closed
I_FrontGuard_Open
Clock1s
Front guard closed
Front guard open
1 s clock
StartMotor_Cmd
SlowDown
Stop
Motor start command
Slow down
Stop
O_AcousticSignal
Horn / Acoustic signal
12
Second acc/dec ramp.
I_LowSpd_OS
Slow speed button
ManMode
Manual mode
O_AccDec2
Second acc/dec ramp
13
Front guard bypass.
StartMotor_Cmd
Motor start command
T_ByPassProtOff
TOF
I_LowSpd_OS
Slow speed button
T#100ms
In
PT
Q
ET
O_FrontGuard_ByPass
Front guard bypass

1-8-1-1-8.AutoStop_Control

0 Auto Stop Process

```
(*
=============================================================
====================
  AutoStop_Control  v6x  -  Automatic slow-down / stop
  Project : 04820KA001 Mono Canada II  (NX1P2, PrimaryTask 4 ms)
  Rewinder (Rw) : SICK DT35 0-10 V -> AI_Diam_Rewinder (AD2603 Ch2)
  Unwinder (Uw) : meter counter mode + sonar diameter (UwDiam_Act)

  NAMING  Uw_ = unwinder   Rw_ = rewinder
        _mm = millimeters   _m = meters
        _Pls = encoder pulses (counts)   _Pps = pulses per second
        _Pps2 = pulses per second squared

  v6x: new parent roll on the unwinder -> GsmAsk (HMI popup "did you change
     the paper?"); GsmAskYes forgets the learned thickness.
  v6w: paper thickness window is LENGTH-based instead of 10 s, modulated by
     the diameter (RwWinGrow_mm 2.5 mm of growth, 4 m .. RwWinLen_m 30 m):
     same accuracy at every speed and roll size; stopped window = dropped.
     ALARM RESET also clears LearnFailCnt / StopFailCnt (alarm 16).
  v6v: BrakeHold released on the SIGNED web speed (Velocity_M_min < 5),
     so a web pulled back after the stop releases the T-one at once.
  v6u: stop learning: a stop shorter than the reaction distance or faster
     than RwDecelMax_mm is ignored (not a fault). Only a too slow stop
     (< RwDecelMin_mm) counts toward alarm 16.
  v6t: rewinder slow-down fallback while the paper thickness is not
     learned: RwSlowReq at RwTargetDiam - RwSlowFallbackMm (30 mm).
  v6s: paper change: a learning window more than RwMatChangePct (25 %) away
     from RwMat_K is ignored once, taken directly the 2nd time in a row
     (automatic). RwMatReset (HMI "NEW PAPER") forgets RwMat_K.
  v6p: section 5c: RwLearnReset clears RwStopDecelK, RwStopDecel and
     RwSlowDecelK (the v6f seed that refilled RwStopDecelK is removed).
  v6l: previous value saved before every TEACH CORE (RwAxisDist_Prev,
       UwCoreDist_Prev, Retain) + UNDO buttons (RwTeachUndo,
       UwTeachUndo): swap current <-> previous. State 4 = RESTORED.
  v6k: unwinder TEACH CORE (Core_Measure) works like the rewinder one:
       same checks, 2 s stable with sonar AVERAGE, status UwTeachState.
       Replaces General rung 15 (one immediate sonar reading).
  v6j: TEACH CORE (section 14): HMI button RwTeachCore, empty core on the
       rewinder, machine stopped -> after 2 s stable:
       RwAxisDist := RwDist + RwCoreDiameter / 2. Status in RwTeachState.
  v6i: auto: pots scaled to WorkSpd_Max / FinalSpd_Max (Motor_Manager rung 6,
       Pot1_Mem / Pot2_Mem). ManMode keeps the raw pots (percent),
       so section 6 uses the raw pots in ManMode.
  v6h: BrakeHold keeps O_Brake (T-one "reel brake automatic") ON during a
       normal stop until the web is almost stopped (< 5 m/min, max 15 s).
       Before: T-one switched to "stop" with the run command, while the
       rewinder was decelerating hard -> unwinder overran, web on the
       floor (field 10/20/2026). Used in Output_Manager rung 2.
  v6g: slow-down AND stop decel proportional to the rewinder diameter.
       The ATV930 ramp is in Hz/s (motor = rewind shaft), so the web
       decel [mm/s2] = shaft decel x radius. Field data 10/20/2026:
       24 mm/s2 at 120 mm -> 90 mm/s2 at 600 mm.
       Learned: RwSlowDecelK, RwStopDecelK [mm/s2 per mm of diameter].
       Live:    RwSlowDecelLrn [mm/s2], RwStopDecel [pulses/s2] = K x DecelDiam.
  v6f: learn the REAL slow-down deceleration (section 5b) -> RwSlowDecelLrn
       (mm/s2). The ATV930 stretches its ramp with a heavy roll (no
```

```
55          braking resistor), so the PLC ramp (DecelCoarse) was too
56          optimistic: the stop came before final speed was reached.
57          Priority in section 6: RwSlowDecel (manual) > RwSlowDecelLrn
58          (learned) > DecelCoarse/DecelTrim model.
59      v6e: GSM_Learned_OK (replaces global RwLearnFault): TRUE only when
60          RwMat_K is learned, RwStopDecel is learned (if RwLearnStop) and
61          there is no learning fault. Alarm 16 uses GSM_LearnFault.
62      v6d: exact 100 ms tick (25 x 4 ms scan counter, the self-resetting
63          TON ran ~104-108 ms -> speed ~4-8 % too high)
64          standstill = <= 2 counts / 100 ms (encoder jitter)
65          stop learning skipped after jog / manual / slow-button runs and
66           when the auxiliaries drop (E-stop): RunWasJog, StopLearnValid
67          work / final speed from the potentiometers in BOTH modes
68           (Speed_Display / LowSpd_Display are not m/min in ManMode)
69          slow-down length includes the DecelTrim tail inside the
70           SpdDelta_Percent band (Motor_Manager rungs 14/15)
71      v6c: learning supervision -> RwLearnFault (alarm 16), learned paper
72          thickness RwThick_mm, plausibility limits for K and stop decel
73      v6b: RwMaxSlowAtDiam display + RwMaxSlowFallback (slow-down warning
74          while RwMat_K is not learned yet)
75      v6 : consistent internal names, units in names.
76          Globals renamed: RwRemain_m, RwStopLen_m, RwSlowLen_m,
77                      RwSlowMargin_m, UwSlowMargin_m
78      v5 : max diameter protection (always active), sensor plausibility,
79          12SA5 master (section 9), alarms in section Alarms (ladder)
80      v4b: AUTO interlock + single HMI display (SlowAtDisp / SlowAtMode)
81
    ============================================================
    ==================== *)
82
83  (* ---- 1. 100 ms tick, mm per encoder pulse ------------------------------ *)
84  (* v6d: 25 scans x 4 ms PrimaryTask = exactly 100 ms.                      *)
85  (*      Change 25 if the PrimaryTask period is changed.                    *)
86  TickCnt := TickCnt + 1;
87  IF TickCnt >= 25 THEN
88      TickCnt := 0;
89      Tick := TRUE;
90  ELSE
91      Tick := FALSE;
92  END_IF;
93
94  IF (Encoder_Pulse > 0) AND (EncoderWheel_Diam > 0.0) THEN
95      MmPerPulse := EncoderWheel_Diam / (INT_TO_REAL(Encoder_Pulse) * 4.0);
96  ELSE
97      MmPerPulse := 0.0;
98  END_IF;
99
100 (* ---- 2. Rewinder DT35 -> filtered distance -> diameter ----------------- *)
101 RwDistRaw_mm := RwDist0V + (INT_TO_REAL(AI_Diam_Rewinder) / 4000.0)
102             * (RwDist10V - RwDist0V);
103
104 IF Tick THEN
105     IF NOT RwFiltInit THEN
106         RwDist := RwDistRaw_mm;
107         RwFiltInit := TRUE;
108     ELSE
109         RwDist := RwDist + RwFilter_K * (RwDistRaw_mm - RwDist);
110     END_IF;
111 END_IF;
```

```
112
113  RwSensFault := (AI_Diam_Rewinder < RwRawMin) OR (AI_Diam_Rewinder >
     RwRawMax)
114              OR (RwDist > RwAxisDist);
115
116  RwDiam := 2.0 * (RwAxisDist - RwDist);
117 IF RwDiam < 0.0 THEN
118     RwDiam := 0.0;
119  END_IF;
120 (* RwAxisDist = DT35 reference to rewind shaft centre (mm), set manually *)
121
122 (* v6g: diameter used by the decel model (last valid on sensor fault)     *)
123 IF NOT RwSensFault THEN
124     DecelDiam := RwDiam;
125  ELSE
126     DecelDiam := RwLastValidDiam;
127  END_IF;
128 IF DecelDiam < 100.0 THEN
129     DecelDiam := 100.0;                    (* core *)
130  END_IF;
131
132 (* ---- 3. Actual speed from encoder, 100 ms window ---------------------- *)
133 IF Tick THEN
134     IF NOT SpdInit THEN
135         EncPrev := Encoder_Pos;
136         SpdInit := TRUE;
137     END_IF;
138     SpdAct_Pps := DINT_TO_REAL(ABS(Encoder_Pos - EncPrev)) * 10.0;
139     EncPrev := Encoder_Pos;
140  END_IF;
141 RwSpeed := SpdAct_Pps * MmPerPulse * 0.06;        (* m/min *)
142
143 (* ---- 4a. v6s: NEW PAPER button: forget the learned thickness ---------- *)
144 (* RwMat_K = 0 -> the first valid 10 s window sets it directly.           *)
145 (* HMI momentary button: must be HELD 3 s, then the reset is done once and *)
146 (* the PLC clears the bit (HMI lamp goes off = done).                     *)
147  T_MatReset(In := RwMatReset, PT := T#3s);
148 IF T_MatReset.Q THEN
149     RwMat_K := 0.0;
150     LearnFailCnt := 0;
151     MatChangeCnt := 0;
152     RwMatReset := FALSE;
153  END_IF;
154
155 (* ---- 4. Learn material factor  K = dDiam/dPulse * Diam ----------------- *)
156 IF Tick THEN
157     LearnWinTicks := LearnWinTicks + 1;
158     IF NOT LearnInit THEN
159         LearnWinStartPos := Encoder_Pos;  LearnWinStartDiam := RwDiam;
160         LearnWinTicks := 0;
161         LearnWinRunning := O_MotorStart;
162         LearnInit := TRUE;
163     ELSE
164         LearnWinRunning := LearnWinRunning AND O_MotorStart;
165         (* v6w: LENGTH-based window, modulated by the diameter: closes    *)
166         (* when the roll should have grown RwWinGrow_mm (2.5 mm), so the  *)
167         (* accuracy vs DT35 noise is the same at every speed and size.    *)
168         (* Pulses = growth x diameter / K (K = learned RwMat_K).          *)
169         (* Limits: min 4 m, max RwWinLen_m (30 m). K not learned: max.    *)
```

```
170         (* Motor stopped during the window -> window dropped (no fault).  *)
171
172         IF MmPerPulse > 0.0 THEN
173           IF (RwMat_K > 0.0) AND (RwWinGrow_mm > 0.0) THEN
174             LearnWinLen_Pls := RwWinGrow_mm * MAX(RwDiam, REAL#100.0) /
    RwMat_K;
175           ELSE
176             LearnWinLen_Pls := RwWinLen_m * 1000.0 / MmPerPulse;
177           END_IF;
178           IF LearnWinLen_Pls < 4000.0 / MmPerPulse THEN
179             LearnWinLen_Pls := 4000.0 / MmPerPulse;          (* 4 m *)
180           END_IF;
181           IF (RwWinLen_m > 0.0)
182             AND (LearnWinLen_Pls > RwWinLen_m * 1000.0 / MmPerPulse) THEN
183             LearnWinLen_Pls := RwWinLen_m * 1000.0 / MmPerPulse;
184           END_IF;
185         ELSE
186           LearnWinLen_Pls := 300000.0;
187         END_IF;
188         IF (DINT_TO_REAL(ABS(Encoder_Pos - LearnWinStartPos)) >= LearnWinLen_Pls)
189           OR NOT LearnWinRunning THEN
190           LearnWin_Pls := ABS(Encoder_Pos - LearnWinStartPos);
191           LearnWinDiamDelta := RwDiam - LearnWinStartDiam;
192           (* A window SHOULD learn: ran all the time, enough length.  *)
193           (* DT35 OK. Then it must give a plausible paper thickness. *)
194           IF LearnWinRunning AND (LearnWin_Pls >= RwMinPulses)
195             AND NOT RwSensFault THEN
196             LearnWinOk := FALSE;
197             IF (LearnWinDiamDelta > 0.0) AND (MmPerPulse > 0.0) THEN
198               MatK_Window := (LearnWinDiamDelta / DINT_TO_REAL(LearnWin_Pls))
199                           * ((RwDiam + LearnWinStartDiam) / 2.0);
200               (* K = 2 * thickness * mm-per-pulse / PI        *)
201               ThickWin_mm := MatK_Window * 3.14159 / (2.0 * MmPerPulse);
202               IF (ThickWin_mm >= RwThickMin_mm)
203                 AND (ThickWin_mm <= RwThickMax_mm) THEN
204                 LearnWinOk := TRUE;
205                 IF RwMat_K <= 0.0 THEN
206                   RwMat_K := MatK_Window;
207                   MatChangeCnt := 0;
208                 ELSIF (RwMatChangePct > 0.0)
209                     AND (ABS(MatK_Window - RwMat_K)
210                         > RwMat_K * RwMatChangePct / 100.0) THEN
211                   (* v6s: far from the learned value: 1 window = ignored *)
212                   (* (outlier). 2 in a row = paper changed -> take it.  *)
213                   MatChangeCnt := MatChangeCnt + 1;
214                   IF MatChangeCnt >= 2 THEN
215                     RwMat_K := MatK_Window;
216                     MatChangeCnt := 0;
217                   END_IF;
218                 ELSE
219                   MatChangeCnt := 0;
220                   RwMat_K := RwMat_K + RwLearn_K * (MatK_Window - RwMat_K);
221                 END_IF;
222               END_IF;
223             END_IF;
224             IF LearnWinOk THEN
225               LearnFailCnt := 0;
226             ELSIF LearnFailCnt < 1000 THEN
227               LearnFailCnt := LearnFailCnt + 1;  (* no growth / implausible *)
```

```
            END_IF;
          END_IF;
          LearnWinStartPos := Encoder_Pos;  LearnWinStartDiam := RwDiam;
          LearnWinTicks := 0;
          LearnWinRunning := O_MotorStart;
        END_IF;
    END_IF;
END_IF;

(* ---- 5. Learn real stop deceleration on every stop ---------------------- *)
(* v6d: a run with jog / manual / slow button uses the 2nd ramp (O_AccDec2) *)
(*      -> its stop must not be learned. Latched for the whole run because  *)
(*      I_LowSpd_OS is already released on the stop edge.                   *)
IF O_MotorStart AND NOT MotorRunMem THEN          (* start edge *)
    RunWasJog := FALSE;
END_IF;
IF O_MotorStart AND (ManMode OR I_LowSpd_OS) THEN
    RunWasJog := TRUE;
END_IF;

IF MotorRunMem AND NOT O_MotorStart THEN          (* stop command edge *)
    StopMeasActive := TRUE;
    StopStartPos := Encoder_Pos;
    StopStartSpd_Pps := SpdAct_Pps;
    StopStartDiam := DecelDiam;
    StandstillTicks := 0;
    (* STOP button and automatic stop take the same path (drive DI1 and    *)
    (* O_Brake -> T-one drop together, electrical plan sheets 1/9/15),     *)
    (* so both are learned.                                                *)
    StopLearnValid := ControlVoltage AND NOT RunWasJog AND NOT ManMode;
END_IF;
MotorRunMem := O_MotorStart;

IF O_MotorStart THEN
    StopMeasActive := FALSE;                  (* restarted: abort *)
ELSIF StopMeasActive AND Tick THEN
    IF NOT ControlVoltage THEN
        StopLearnValid := FALSE;              (* E-stop during the stop *)
    END_IF;
    IF SpdAct_Pps <= 20.0 THEN                (* <= 2 counts / 100 ms *)
        StandstillTicks := StandstillTicks + 1;
    ELSE
        StandstillTicks := 0;
    END_IF;
    IF StandstillTicks >= 3 THEN              (* standstill 300 ms *)
        StopMeasActive := FALSE;
        StopMeas_Pls := DINT_TO_REAL(ABS(Encoder_Pos - StopStartPos));
        IF RwLearnStop AND StopLearnValid
          AND (StopStartSpd_Pps * MmPerPulse * 0.06 >= RwMinLearnSpd) THEN
            (* This stop SHOULD learn: result must be plausible       *)
            (* v6u: a stop shorter than the reaction distance, or     *)
            (* faster than RwDecelMax_mm, is NOT a fault: the web     *)
            (* stopped within a few mm, nothing to learn (trace       *)
            (* 10/28/2026: 23 m/min -> stopped in 102 pulses = 10 mm). *)
            (* Only a too SLOW stop (< RwDecelMin_mm) counts as fail.  *)
            StopLearnOk := FALSE;
            IF StopMeas_Pls > StopStartSpd_Pps * RwTreact THEN
                StopDecelMeas := (StopStartSpd_Pps * StopStartSpd_Pps)
                        / (2.0 * (StopMeas_Pls - StopStartSpd_Pps * RwTreact));
```

```
287             StopDecelMeas_mm := StopDecelMeas * MmPerPulse;  (* mm/s2 *)
288             IF (StopDecelMeas_mm >= RwDecelMin_mm)
289               AND (StopDecelMeas_mm <= RwDecelMax_mm) THEN
290                 StopLearnOk := TRUE;
291                 (* v6g: learn per mm of diameter *)
292                 DecelK_Meas := StopDecelMeas_mm / ((StopStartDiam + DecelDiam) /
    2.0);
293                 IF RwStopDecelK <= 0.0 THEN
294                   RwStopDecelK := DecelK_Meas;
295                 ELSE
296                   RwStopDecelK := RwStopDecelK + 0.3 * (DecelK_Meas -
    RwStopDecelK);
297                 END_IF;
298                 StopFailCnt := 0;
299               ELSIF StopDecelMeas_mm < RwDecelMin_mm THEN
300                 IF StopFailCnt < 1000 THEN
301                   StopFailCnt := StopFailCnt + 1;    (* stop too long *)
302                 END_IF;
303               END_IF;                          (* too fast: ignored *)
304             END_IF;                            (* too short: ignored *)
305           END_IF;
306         END_IF;
307       END_IF;
308
309   (* ---- 5b. v6f: learn real slow-down deceleration ---------------------- *)
310   (* From the SlowDown edge (at speed) until final speed is reached. or     *)
311   (* until the stop comes first. a = (v0^2 - v1^2) / (2 * distance).        *)
312   (* Not learned in jog / manual / slow button (2nd ramp).                  *)
313   IF SlowDown AND NOT SlowMem AND O_MotorStart
314     AND NOT ManMode AND NOT I_LowSpd_OS
315     AND (SpdAct_Pps > SpdFinal_Pps + SpdBand_Pps) THEN
316       SlowMeasActive := TRUE;
317       SlowStartPos := Encoder_Pos;
318       SlowStartSpd_Pps := SpdAct_Pps;
319       SlowStartDiam := DecelDiam;
320   END_IF;
321   SlowMem := SlowDown;
322
323   IF SlowMeasActive THEN
324     IF NOT SlowDown OR ManMode OR I_LowSpd_OS THEN
325       SlowMeasActive := FALSE;                 (* aborted *)
326     ELSIF Tick AND ((SpdAct_Pps <= SpdFinal_Pps + 0.25 * SpdBand_Pps)
327                 OR NOT O_MotorStart) THEN      (* final reached or stopped *)
328       SlowMeasActive := FALSE;
329       SlowMeas_Pls := DINT_TO_REAL(ABS(Encoder_Pos - SlowStartPos));
330       IF (SlowMeas_Pls > 0.0) AND (MmPerPulse > 0.0)
331         AND ((SlowStartSpd_Pps - SpdAct_Pps) * MmPerPulse * 0.06 >= 10.0) THEN
332           SlowDecelMeas_mm := (SlowStartSpd_Pps * SlowStartSpd_Pps
333                              - SpdAct_Pps * SpdAct_Pps)
334                             / (2.0 * SlowMeas_Pls) * MmPerPulse;  (* mm/s2 *)
335         IF (SlowDecelMeas_mm >= RwDecelMin_mm)
336           AND (SlowDecelMeas_mm <= RwDecelMax_mm) THEN
337           (* v6g: learn per mm of diameter *)
338           DecelK_Meas := SlowDecelMeas_mm / ((SlowStartDiam + DecelDiam) /
    2.0);
339           IF RwSlowDecelK <= 0.0 THEN
340             RwSlowDecelK := DecelK_Meas;
341           ELSE
342             RwSlowDecelK := RwSlowDecelK + 0.5 * (DecelK_Meas -
```

```
 RwSlowDecelK);
343                 END_IF;
344             END_IF;
345         END_IF;
346     END_IF;
347 END_IF;
348
349 (* ---- 5c. v6g: live decels = learned K x current diameter ---------- *)
350 (* v6p: the one-time v6f seed is removed (it re-filled RwStopDecelK from    *)
351 (* RwStopDecel, so the learning could never be reset).                      *)
352 (* RwLearnReset (HMI / Watch tab, PLC resets it): clear the learned decels. *)
353 (* Both are re-learned at the next auto slow-down / stop >= RwMinLearnSpd.  *)
354 IF RwLearnReset THEN
355     RwStopDecelK := 0.0;
356     RwStopDecel := 0.0;
357     RwSlowDecelK := 0.0;
358     StopFailCnt := 0;
359     RwLearnReset := FALSE;
360 END_IF;
361 IF (RwStopDecelK > 0.0) AND (MmPerPulse > 0.0) THEN
362     RwStopDecel := RwStopDecelK * DecelDiam / MmPerPulse;     (* pulses/s2 *)
363 END_IF;
364 IF RwSlowDecelK > 0.0 THEN
365     RwSlowDecelLrn := RwSlowDecelK * DecelDiam;               (* mm/s2 *)
366 ELSE
367     RwSlowDecelLrn := 0.0;
368 END_IF;
369
370 (* ---- 6. Lengths in pulses: stop, slow-down, remaining ------------------ *)
371 (* Stop length uses the ACTUAL speed (precision)                            *)
372 IF RwStopDecel > 0.0 THEN
373     StopLen_Pls := SpdAct_Pps * RwTreact
374                 + (SpdAct_Pps * SpdAct_Pps) / (2.0 * RwStopDecel);
375 ELSE
376     StopLen_Pls := SpdAct_Pps * (RwTreact + RwTstopDef / 2.0);
377 END_IF;
378 StopLen_Pls := StopLen_Pls * RwTrim;
379
380 (* Slow-down uses SpdRef = MAX(actual, work-speed setpoint):                *)
381 (* stable value, shown to the operator even before start                    *)
382 SlowLenBase_Pls := 0.0;  RwSlowLen_Pls := 0.0;  UwSlowLen_Pls := 0.0;
383 IF MmPerPulse > 0.0 THEN
384     (* v6f: manual > learned > PLC ramp model *)
385     IF RwSlowDecel > 0.0 THEN
386         SlowDecel_Pps2 := RwSlowDecel / MmPerPulse;
387         SlowOneRamp := TRUE;
388     ELSIF RwSlowDecelLrn > 0.0 THEN
389         SlowDecel_Pps2 := RwSlowDecelLrn / MmPerPulse;  (* real, incl. trim tail *)
390         SlowOneRamp := TRUE;
391     ELSE
392         SlowDecel_Pps2 := DecelCoarse * 250.0 / MmPerPulse; (* 1 = 250 mm/s2 *)
393         SlowOneRamp := FALSE;
394     END_IF;
395     (* v6d: DecelTrim ramp used inside the +/- SpdDelta_Percent band *)
396     IF DecelTrim > 0.0 THEN
397         TrimDecel_Pps2 := DecelTrim * 250.0 / MmPerPulse;
398     ELSE
399         TrimDecel_Pps2 := SlowDecel_Pps2;
400     END_IF;
```

```
401     SpdBand_Pps := SpdDelta_Percent * 1000.0 / 60.0 / MmPerPulse;
402
403     (* v6d: speeds from the potentiometers, valid in auto AND ManMode     *)
404     (*      (m/min = Pot / Input_Ratio, same as Motor_Manager rung 8)     *)
405     IF (Input_Ratio > 0.0) AND ManMode THEN
406        (* v6i: ManMode drives the inverter with the raw pots (rung 17) *)
407        SpdFinal_Pps := INT_TO_REAL(Pot2_Slow_Velocity) / Input_Ratio * 1000.0 /
    60.0 / MmPerPulse;
408        SpdWork_Pps  := INT_TO_REAL(Pot1_Work_Velocity) / Input_Ratio * 1000.0 /
    60.0 / MmPerPulse;
409     ELSIF Input_Ratio > 0.0 THEN
410        SpdFinal_Pps := INT_TO_REAL(Pot2_Mem) / Input_Ratio * 1000.0 / 60.0 /
    MmPerPulse;
411        SpdWork_Pps  := INT_TO_REAL(Pot1_Mem) / Input_Ratio * 1000.0 / 60.0 /
    MmPerPulse;
412     ELSE
413        SpdFinal_Pps := LowSpd_Display * 1000.0 / 60.0 / MmPerPulse;
414        SpdWork_Pps  := Speed_Display  * 1000.0 / 60.0 / MmPerPulse;
415     END_IF;
416     SpdRef_Pps := MAX(SpdAct_Pps, SpdWork_Pps);
417
418     IF RwStopDecel > 0.0 THEN
419        StopLenFinal_Pls := SpdFinal_Pps * RwTreact
420                          + (SpdFinal_Pps * SpdFinal_Pps) / (2.0 * RwStopDecel);
421     ELSE
422        StopLenFinal_Pls := SpdFinal_Pps * (RwTreact + RwTstopDef / 2.0);
423     END_IF;
424
425     SlowLenBase_Pls := StopLenFinal_Pls * RwTrim;
426     IF (SpdRef_Pps > SpdFinal_Pps) AND (SlowDecel_Pps2 > 0.0) THEN
427        IF SlowOneRamp OR (TrimDecel_Pps2 <= 0.0) THEN
428           (* manual or learned decel: one constant ramp *)
429           SlowLenBase_Pls := SlowLenBase_Pls
430              + (SpdRef_Pps * SpdRef_Pps - SpdFinal_Pps * SpdFinal_Pps)
431               / (2.0 * SlowDecel_Pps2);
432        ELSE
433           (* auto: coarse ramp down to the band, trim ramp inside it *)
434           SpdKnee_Pps := SpdFinal_Pps + SpdBand_Pps;
435           IF SpdRef_Pps > SpdKnee_Pps THEN
436              SlowLenBase_Pls := SlowLenBase_Pls
437                 + (SpdRef_Pps * SpdRef_Pps - SpdKnee_Pps * SpdKnee_Pps)
438                  / (2.0 * SlowDecel_Pps2)
439                 + (SpdKnee_Pps * SpdKnee_Pps - SpdFinal_Pps * SpdFinal_Pps)
440                  / (2.0 * TrimDecel_Pps2);
441           ELSE
442              SlowLenBase_Pls := SlowLenBase_Pls
443                 + (SpdRef_Pps * SpdRef_Pps - SpdFinal_Pps * SpdFinal_Pps)
444                  / (2.0 * TrimDecel_Pps2);
445           END_IF;
446        END_IF;
447     END_IF;
448
449     RwSlowLen_Pls := SlowLenBase_Pls + RwSlowMargin_m * 1000.0 / MmPerPulse;
450
451     IF UwSlowMargin_m > 0.0 THEN
452        UwMarginUsed_m := UwSlowMargin_m;
453     ELSE
454        UwMarginUsed_m := RwSlowMargin_m;
```

```
    END_IF;
    UwSlowLen_Pls := SlowLenBase_Pls + UwMarginUsed_m * 1000.0 / MmPerPulse;
END_IF;

IF RwDiam >= RwTargetDiam THEN
    RwRemain_Pls := 0.0;
ELSIF RwMat_K > 0.0 THEN
    RwRemain_Pls := (RwTargetDiam * RwTargetDiam - RwDiam * RwDiam)
                  / (2.0 * RwMat_K);
ELSE
    RwRemain_Pls := 1.0E9;                    (* K not learned: plain target *)
END_IF;

RwRemain_m  := RwRemain_Pls  * MmPerPulse / 1000.0;
RwStopLen_m := StopLen_Pls   * MmPerPulse / 1000.0;
RwSlowLen_m := RwSlowLen_Pls * MmPerPulse / 1000.0;

(* ---- 6b. Live operator displays ---------------------------------------- *)
(* Rewinder: diameter where slow-down / stop command will happen          *)
IF RwMat_K > 0.0 THEN
    SqrtArg := RwTargetDiam * RwTargetDiam - 2.0 * RwMat_K * RwSlowLen_Pls;
    IF SqrtArg > 0.0 THEN
        RwSlowAtDiam := SQRT(SqrtArg);
    ELSE
        RwSlowAtDiam := 0.0;
    END_IF;
    SqrtArg := RwTargetDiam * RwTargetDiam - 2.0 * RwMat_K * StopLen_Pls;
    IF SqrtArg > 0.0 THEN
        RwStopAtDiam := SQRT(SqrtArg);
    ELSE
        RwStopAtDiam := 0.0;
    END_IF;
ELSE
    (* v6t: thickness not learned: fixed slow-down point before the target *)
    IF RwUseSlow AND (RwSlowFallbackMm > 0.0) THEN
        RwSlowAtDiam := RwTargetDiam - RwSlowFallbackMm;
    ELSE
        RwSlowAtDiam := RwTargetDiam;
    END_IF;
    RwStopAtDiam := RwTargetDiam;
END_IF;

(* Unwinder: meter count where the slow-down will start                   *)
IF MmPerPulse > 0.0 THEN
    UwSlow_at_Metre := UwStop_At_Meter - UwSlowLen_Pls * MmPerPulse / 1000.0;
ELSE
    UwSlow_at_Metre := UwStop_At_Meter;
END_IF;
IF UwSlow_at_Metre < 0.0 THEN
    UwSlow_at_Metre := 0.0;
END_IF;

(* Unwinder slow-down request, latched                                    *)
IF (Current_Metre < UwSlow_at_Metre - 50.0) OR (UwStop_At_Meter <= 0.0) THEN
    UwSlowReq := FALSE;                       (* counter reset / longer roll *)
END_IF;
IF (UwStop_At_Meter > 0.0) AND (Current_Metre >= UwSlow_at_Metre) THEN
    UwSlowReq := TRUE;
END_IF;
```

```
514
515 (* ---- 7. Rewinder requests: latched, reset when a new core is loaded ---- *)
516 IF NOT RwStopEnable
517    OR ((RwDiam < RwTargetDiam - RwResetHyst) AND NOT RwSensFault) THEN
518    RwStopReq := FALSE;
519    RwSlowReq := FALSE;
520 END_IF;
521
522 IF RwStopEnable THEN
523    IF (RwRemain_Pls <= StopLen_Pls) OR (RwSensFault AND RwStopOnFault) THEN
524       RwStopReq := TRUE;
525    END_IF;
526    IF RwUseSlow AND (RwRemain_Pls <= RwSlowLen_Pls) THEN
527       RwSlowReq := TRUE;
528    END_IF;
529    (* v6t: thickness not learned (RwMat_K = 0): slow down at a fixed     *)
530    (* distance before the target instead of stopping from full speed.   *)
531    IF RwUseSlow AND (RwMat_K <= 0.0) AND (RwSlowFallbackMm > 0.0)
532       AND NOT RwSensFault
533       AND (RwDiam >= RwTargetDiam - RwSlowFallbackMm) THEN
534       RwSlowReq := TRUE;
535    END_IF;
536 END_IF;
537
538 (* ---- 8. One AUTO at a time + single "SLOW DOWN AT" display ------------- *)
539 IF UwStopEnable AND NOT UwEnMem THEN              (* unwinder AUTO switched
    ON *)
540    RwStopEnable := FALSE;
541 END_IF;
542 IF RwStopEnable AND NOT RwEnMem THEN              (* rewinder AUTO switched
    ON *)
543    UwStopEnable := FALSE;
544 END_IF;
545 UwEnMem := UwStopEnable;
546 RwEnMem := RwStopEnable;
547
548 IF RwStopEnable THEN
549    SlowAtDisp := RwSlowAtDiam;                 (* mm *)
550    SlowAtMode := 2;
551 ELSIF UwStopEnable THEN
552    SlowAtDisp := UwSlow_at_Metre;              (* m  *)
553    SlowAtMode := 1;
554 ELSE
555    SlowAtDisp := 0.0;
556    SlowAtMode := 0;                            (* hide display *)
557 END_IF;
558 SlowAtShow := (SlowAtMode <> 0);
559
560 (* ---- 9. Automatic stop master = selector 12SA5 (I_AutoStop_OS) -------- *)
561 AutoSlowCmd := I_AutoStop_OS AND
562             ((UwStopEnable AND UwSlowReq) OR (RwStopEnable AND RwSlowReq));
563
564 AutoStopCmd := I_AutoStop_OS AND
565             ((UwStopEnable AND (UwStop_At_Meter > 0.0)
566               AND (Current_Metre >= UwStop_At_Meter))
567              OR (RwStopEnable AND RwStopReq));
568
569 (* ---- 10. Unwinder roll empty (for alarm 15) ---------------------------- *)
570 IF UwDiam_Act > (UwDiamStop + UwEmptyHyst) THEN
```

```
    UnWinder_Empty := FALSE;                    (* new roll loaded *)
END_IF;
IF (UwDiam_Act > 0.0) AND (UwDiam_Act <= UwDiamStop) THEN
    UnWinder_Empty := TRUE;                     (* roll empty *)
END_IF;

(* v6x: new parent roll loaded (empty -> not empty) -> HMI popup        *)
(* "DID YOU CHANGE THE PAPER (GSM)?". YES = forget the learned thickness *)
(* (same as NEW PAPER). NO = the HMI resets GsmAsk.                      *)
IF UwEmptyMem AND NOT UnWinder_Empty AND Measure_ON THEN
    GsmAsk := TRUE;
END_IF;
UwEmptyMem := UnWinder_Empty;
IF GsmAskYes THEN
    RwMat_K := 0.0;
    LearnFailCnt := 0;
    MatChangeCnt := 0;
    GsmAskYes := FALSE;
    GsmAsk := FALSE;
END_IF;

(* ---- 11. Rewinder max diameter protection - ALWAYS active ------------ *)
(* Independent of selector 12SA5 and of the AUTO buttons.                *)
(* Mechanical limit 680 mm radius = 1360 mm                              *)
IF NOT RwSensFault THEN
    RwLastValidDiam := RwDiam;
END_IF;

IF RwDiam >= RwMaxDiam THEN
    RwRemainMax_Pls := 0.0;
ELSIF RwMat_K > 0.0 THEN
    RwRemainMax_Pls := (RwMaxDiam * RwMaxDiam - RwDiam * RwDiam)
                       / (2.0 * RwMat_K);
ELSE
    RwRemainMax_Pls := 1.0E9;                   (* K not learned: plain limit *)
END_IF;

(* Display: diameter where the max-protection slow-down will start       *)
IF RwMat_K > 0.0 THEN
    SqrtArg := RwMaxDiam * RwMaxDiam - 2.0 * RwMat_K * RwSlowLen_Pls;
    IF SqrtArg > 0.0 THEN
        RwMaxSlowAtDiam := SQRT(SqrtArg);
    ELSE
        RwMaxSlowAtDiam := 0.0;
    END_IF;
ELSIF RwMaxSlowFallback > 0.0 THEN
    RwMaxSlowAtDiam := RwMaxSlowFallback;       (* fallback in use *)
ELSE
    RwMaxSlowAtDiam := RwMaxDiam;
END_IF;

(* Reset only after the roll is removed (diameter well below the limit)  *)
IF (RwDiam < RwMaxDiam - RwResetHyst) AND NOT RwSensFault THEN
    RwMaxStop := FALSE;
    RwMaxSlow := FALSE;
END_IF;

IF NOT RwSensFault THEN
    IF RwRemainMax_Pls <= StopLen_Pls THEN
```

```
630         RwMaxStop := TRUE;                  (* speed-compensated stop *)
631       END_IF;
632       IF RwRemainMax_Pls <= RwSlowLen_Pls THEN
633         RwMaxSlow := TRUE;                  (* warning slow-down + horn *)
634       END_IF;
635       IF (RwMat_K <= 0.0) AND (RwMaxSlowFallback > 0.0)
636         AND (RwDiam >= RwMaxSlowFallback) THEN
637         RwMaxSlow := TRUE;                  (* fallback while K not learned *)
638       END_IF;
639     ELSIF (AI_Diam_Rewinder < RwRawMin) AND (RwLastValidDiam > RwMaxDiam -
      100.0) THEN
640       RwMaxStop := TRUE;                  (* roll grew into the DT35 near zone *)
641     END_IF;
642
643   (* Max diameter protection added OUTSIDE the 12SA5 master (section 9)     *)
644     AutoSlowCmd := AutoSlowCmd OR RwMaxSlow;
645     AutoStopCmd := AutoStopCmd OR RwMaxStop;
646
647   (* ---- 12. Learning supervision -> alarm 16 (section Alarms) ---------- *)
648   (* Learned paper thickness, for display / plausibility check            *)
649   IF MmPerPulse > 0.0 THEN
650       RwThick_mm := RwMat_K * 3.14159 / (2.0 * MmPerPulse);
651     ELSE
652       RwThick_mm := 0.0;
653     END_IF;
654
655   (* Fault: too many consecutive windows / stops that should have          *)
656   (* learned but did not. Clears by itself on the next good result.       *)
657   (* v6w: ALARM RESET (panel button or HMI) also clears the fail counters, *)
658   (* so alarm 16 resets in one press. It comes back only if the learning  *)
659   (* fails again RwLearnFailMax / RwStopFailMax times in a row.           *)
660   IF I_RsetAlarm OR Alarm_Reset THEN
661       LearnFailCnt := 0;
662       StopFailCnt := 0;
663     END_IF;
664     GSM_LearnFault := (LearnFailCnt >= RwLearnFailMax)
665               OR (StopFailCnt >= RwStopFailMax);      (* -> alarm 16 *)
666
667   (* v6e: learning status for the HMI. FALSE until learned.               *)
668     GSM_Learned_OK := (RwMat_K > 0.0)
669                 AND ((RwStopDecel > 0.0) OR NOT RwLearnStop)
670                 AND NOT GSM_LearnFault;
671
672   (* ---- 13. v6h: keep T-one in automatic tension control during the stop - *)
673   (* While running: BrakeHold = Brake_Cmd (no change in running behaviour).  *)
674   (* After the stop: stays ON until the web is below 5 m/min, after 15 s,   *)
675   (* or on E-stop. Already TRUE on the stop scan (Output_Manager runs before *)
676   (* this section), so O_Brake never drops for one scan.                    *)
677   (* Output_Manager rung 2:  O_Brake := Brake_Cmd OR BrakeHold              *)
678   IF O_MotorStart THEN
679       BrakeHold := Brake_Cmd AND ControlVoltage;
680       BrakeHoldTicks := 0;
681     ELSIF BrakeHold THEN
682       IF Tick THEN
683         BrakeHoldTicks := BrakeHoldTicks + 1;
684       END_IF;
685       (* v6v: signed web speed: a web pulled BACK (negative speed) also     *)
686       (* releases the T-one (trace 10/28 15:00: -6.6 m/min, about 20 cm).  *)
687       IF NOT ControlVoltage OR (Velocity_M_min < 5.0) OR (BrakeHoldTicks >= 150)
```

```
    THEN
688         BrakeHold := FALSE;
689     END_IF;
690 END_IF;
691
692 (* ---- 14. v6j: TEACH CORE - automatic offset with an empty core -------- *)
693 (* HMI: set RwTeachCore (button, Set ON). Conditions: motor stopped, web  *)
694 (* not moving, DT35 OK. After 2 s stable (filter settled):               *)
695 (*    RwAxisDist := RwDist + RwCoreDiameter / 2   -> RwDiam = RwCoreDiameter
    *)
696 (* RwTeachState: 0 idle, 1 teaching (wait 2 s), 2 done OK,               *)
697 (*              3 refused (motor running / web moving / DT35 fault).     *)
698 (* Only the offset is taught: the scale is RwDist10V - RwDist0V          *)
699 (* (= real distance between the two DT35 taught points).                 *)
700 IF RwTeachCore THEN
701     IF O_MotorStart OR (RwSpeed > 1.0) OR RwSensFault
702       OR NOT RwFiltInit OR (RwCoreDiameter <= 0.0) THEN
703         RwTeachState := 3;                  (* refused *)
704         RwTeachCore := FALSE;
705         TeachTicks := 0;
706     ELSE
707         RwTeachState := 1;                  (* teaching *)
708         IF Tick THEN
709             TeachTicks := TeachTicks + 1;
710         END_IF;
711         IF TeachTicks >= 20 THEN            (* 2 s stable *)
712             RwAxisDist_Prev := RwAxisDist;  (* v6l: keep previous *)
713             RwAxisDist := RwDist + RwCoreDiameter / 2.0;
714             RwTeachState := 2;              (* done *)
715             RwTeachCore := FALSE;
716             TeachTicks := 0;
717         END_IF;
718     END_IF;
719 ELSE
720     TeachTicks := 0;
721     IF O_MotorStart THEN
722         RwTeachState := 0;                  (* clear status on next run *)
723     END_IF;
724 END_IF;
725
726 (* ---- 14b. v6k: unwinder TEACH CORE (HMI button Core_Measure) ---------- *)
727 (* Same behaviour as section 14. Sonar is not filtered, so the 2 s are   *)
728 (* averaged:  UwCoreDistance := average(UwDiam_Measure)  (sonar -> core   *)
729 (* surface). UwDiam_Act = (UwCoreDistance - UwDiam_Measure) * 2          *)
730 (*                      + UwCoreDiameter   (General rung 14, unchanged). *)
731 (* UwTeachState: 0 idle, 1 teaching, 2 done OK, 3 refused.               *)
732 IF Core_Measure THEN
733     IF O_MotorStart OR (RwSpeed > 1.0) OR (UwCoreDiameter <= 0.0)
734       OR (UwDiam_Measure <= 0.0) THEN
735         UwTeachState := 3;                  (* refused *)
736         Core_Measure := FALSE;
737         UwTeachTicks := 0;
738         UwTeachSum := 0.0;
739     ELSE
740         UwTeachState := 1;                  (* teaching *)
741         IF Tick THEN
742             UwTeachTicks := UwTeachTicks + 1;
743             UwTeachSum := UwTeachSum + UwDiam_Measure;
744         END_IF;
```

```
        IF UwTeachTicks >= 20 THEN              (* 2 s, 20 samples *)
            UwCoreDist_Prev := UwCoreDistance;     (* v6l: keep previous *)
            UwCoreDistance := UwTeachSum / INT_TO_REAL(UwTeachTicks);
            UwTeachState := 2;                  (* done *)
            Core_Measure := FALSE;
            UwTeachTicks := 0;
            UwTeachSum := 0.0;
        END_IF;
    END_IF;
ELSE
    UwTeachTicks := 0;
    UwTeachSum := 0.0;
    IF O_MotorStart THEN
        UwTeachState := 0;                  (* clear status on next run *)
    END_IF;
END_IF;

(* ---- 14c. v6l: UNDO teach = swap current <-> previous (machine stopped) *)
(* Pressing UNDO twice goes back to the taught value. State 4 = RESTORED. *)
IF RwTeachUndo THEN
    IF NOT O_MotorStart AND (RwAxisDist_Prev > 0.0) THEN
        TeachSwap := RwAxisDist;
        RwAxisDist := RwAxisDist_Prev;
        RwAxisDist_Prev := TeachSwap;
        RwTeachState := 4;                  (* restored *)
    ELSE
        RwTeachState := 3;                  (* refused *)
    END_IF;
    RwTeachUndo := FALSE;
END_IF;
IF UwTeachUndo THEN
    IF NOT O_MotorStart AND (UwCoreDist_Prev > 0.0) THEN
        TeachSwap := UwCoreDistance;
        UwCoreDistance := UwCoreDist_Prev;
        UwCoreDist_Prev := TeachSwap;
        UwTeachState := 4;                  (* restored *)
    ELSE
        UwTeachState := 3;                  (* refused *)
    END_IF;
    UwTeachUndo := FALSE;
END_IF;
```

1-9.Data

1-9-1.Data Types

Name	Type	Comment

1-9-2.Global Variables

Name	Data Type	Initial Value	AT	Retain	Constant	Network Publish	Comment
VAR_GLOBAL							
Pot1_Work_Velocity	INT		BuiltInIO://opt/#0/Ch1_Analog_Input_Value	False	False	Publish Only	Potentiometer 1 value - Work speed -
InvRef	INT		BuiltInIO://opt/#0/Ch2_Analog_Output_Value	False	False	Publish Only	Inverter speed reference
Fix10Vdc	INT		BuiltInIO://opt/#0/Ch1_Analog_Output_Value	False	False	Publish Only	Fixed 10 Vdc generator
VelMax	REAL	800		True	False	Publish Only	Maximum speed
VelSet	REAL			False	False	Publish Only	Set speed
RwSlowDecelK	REAL	0.15		True	False	Publish Only	Learned slow-down decel per mm of rewinder diameter (mm/s2 per mm)
RwMaxSlowFallback	REAL	1360.0		True	False	Publish Only	Rewinder max: slow-down diameter while K not learned (mm)
RwThickMin_mm	REAL	0.02		True	False	Publish Only	Learning: min plausible paper thickness (mm)
RwThickMax_mm	REAL	2.0		True	False	Publish Only	Learning: max plausible paper thickness (mm)
RwDecelMin_mm	REAL	20.0		True	False	Publish Only	Learning: min plausible stop decel (mm/s2)
RwDecelMax_mm	REAL	5000.0		True	False	Publish Only	Learning: max plausible stop decel (mm/s2)
RwLearnFailMax	INT	12		True	False	Publish Only	Learning: failed windows before alarm (12 = 2 min)
RwStopFailMax	INT	3		True	False	Publish Only	Learning: failed stops before alarm
RwThick_mm	REAL			False	False	Publish Only	Learned paper thickness (mm)
OverSpeed	BOOL			False	False	Publish Only	Speed too high
WorkSpd_Max	REAL	400.0		True	False	Publish Only	Work speed pot full scale (m/min), 50..VelMax
SoftStartTime	REAL	3.0		True	False	Publish Only	AUTO start S-curve: time for the accel ramp to rise from 5 % to 100 % (s), 0 = off
WorkSpd_Max_Set	REAL	400.0		True	False	Publish Only	HMI request: work pot full scale (m/min), applied only with motor stopped
RwWinLen_m	REAL	30.0		True	False	Publish Only	Paper thickness learning: MAX window length (m of paper)
RwMatReset	BOOL	False		False	False	Publish Only	HMI NEW PAPER: forget the learned paper thickness RwMat_K (PLC resets it)
FinalSpd_Max_Set	REAL	40.0		True	False	Publish Only	HMI request: final pot full scale (m/min), applied only with motor stopped
FinalSpd_Max	REAL	40.0		True	False	Publish Only	Final speed pot full scale (m/min), 5..WorkSpd_Max
UnderSpeed	BOOL			False	False	Publish Only	Speed too low
RwLearnReset	BOOL	False		False	False	Publish Only	HMI / Watch: clear learned decels RwStopDecelK, Rw

							StopDecel, RwSlowDecelK (PLC resets it)
RwCoreDiameter	REAL	100.0		True	False	Publish Only	Rewinder core outside diameter for TEACH CORE (mm)
RwTeachCore	BOOL	False		False	False	Publish Only	HMI: TEACH CORE request (PLC resets it)
RwTeachState	INT	0		False	False	Publish Only	TEACH CORE: 0 idle 1 teaching 2 done 3 refused
SpdDelta_Percent	REAL			True	False	Publish Only	Speed difference percentage
Encoder_Pos	DINT		IOBus://unit#3/Ch1 Encoder Present Position	False	False	Publish Only	Encoder counter
UwTeachState	INT	0		False	False	Publish Only	Unwinder TEACH CORE: 0 idle 1 teaching 2 done 3 refused
PulseRate	UDINT		IOBus://unit#3/Ch1 Pulse Rate	False	False	Publish Only	Pulses per 100 ms
Encoder_On	BOOL		IOBus://unit#3/Ch1 Encoder Counter Operation Command/Ch1 Counter Enable	False	False	Publish Only	Encoder enable
Encoder_Reset	BOOL		IOBus://unit#3/Ch1 Encoder Counter Operation Command/Ch1 Internal Reset Execution	False	False	Publish Only	Encoder reset
HMI_Screen	ARRAY[0..1] OF DINT			False	False	Publish Only	HMI panel Screen
Velocity_M_min	REAL			True	False	Publish Only	Speed in m/min
Current_Metre	REAL			True	False	Publish Only	Current metres
I_RsetCnt	BOOL			False	False	Publish Only	Metre counter reset button
Speed_Display	REAL			True	False	Publish Only	Set speed (displayed)
I_ControlVoltage	BOOL		BuiltInIO://cpu/#0/Input_Bit_00	False	False	Publish Only	Auxiliaries ON
I_Start_PB	BOOL		BuiltInIO://cpu/#0/Input_Bit_01	False	False	Publish Only	Start button
I_Stop_PB	BOOL		BuiltInIO://cpu/#0/Input_Bit_02	False	False	Publish Only	Stop button
I_Motor_Thermal	BOOL		BuiltInIO://cpu/#0/Input_Bit_03	False	False	Publish Only	Motor thermal switch
I_Prot_ByPass	BOOL		BuiltInIO://cpu/#0/Input_	False	False	Publish Only	Guards-bypassed selector switch - Under Panel

			Bit_04				
I_Hub_Position	BOOL		BuiltInIO://cpu/#0/Input_Bit_05	False	False	Publish Only	Hub/chuck in extraction position
I_FrontGuard_Closed	BOOL		BuiltInIO://cpu/#0/Input_Bit_06	False	False	Publish Only	Front guard closed
I_LowSpd_OS	BOOL		BuiltInIO://cpu/#0/Input_Bit_07	False	False	Publish Only	Slow speed button
I_VFD_Alarm	BOOL		BuiltInIO://cpu/#0/Input_Bit_08	False	False	Publish Only	Inverter in alarm
I_SafeGuard_Closed	BOOL			False	False	Publish Only	Side doors closed
I_OverRider_PH	BOOL		BuiltInIO://cpu/#0/Input_Bit_13	False	False	Publish Only	Roll diameter photocell
I_OR_Position_Sens	BOOL		ECAT://node#[1,0]/IB IL 24 DI 8/HD-ECO Input-_IN01 (Pin 1.1) _6000_01	False	False	Publish Only	OverRider position sens
I_OR_Pressure_Sens	BOOL		ECAT://node#[1,0]/IB IL 24 DI 8/HD-ECO Input-_IN02 (Pin 2.1) _6000_02	False	False	Publish Only	OverRider pressure switch
I_OR_Auto_OS	BOOL		ECAT://node#[1,0]/IB IL 24 DI 8/HD-ECO Input-_IN03 (Pin 1.2) _6000_03	False	False	Publish Only	OverRider in automatic
I_OR_Cont_OS	BOOL		ECAT://node#[1,0]/IB IL 24 DI 8/HD-ECO Input-_IN04 (Pin 2.2) _6000_04	False	False	Publish Only	OverRider in continuous
O_MotorStart	BOOL		BuiltInIO://cpu/#0/Output_Bit_00	False	False	Publish Only	Motor start
I_FanTemp_Ok	BOOL		ECAT://node#[1,0]/IB IL 24 DI 8/HD-ECO Input-_IN06 (Pin 2.3) _6000_06	False	False	Publish Only	Motor (fan) thermal OK
O_Alarm_Array	BOOL		ECAT://node#[1,1]/IB IL 24 DO 8/HD-ECO Output_OUT01 (Pin 1.1) _7000_01	False	False	Publish Only	Alarm lamp

O_Prot_ByPass_Lamp	BOOL			False	False	Publish Only	Guards bypassed lamp
O_Motor_Lamp	BOOL		BuiltInIO://cpu/#0/Output_Bit_01	False	False	Publish Only	Motor ON lamp
O_RwUnload	BOOL		ECAT://node #[1,1]/IB IL 24 DO 8/HD-ECO Output_OUT 03 (Pin 1.2) _7000_03	False	False	Publish Only	Unloaders enable - opening
O_FrontGuard_ByPass	BOOL		ECAT://node #[1,1]/IB IL 24 DO 8/HD-ECO Output_OUT 04 (Pin 2.2) _7000_04	False	False	Publish Only	Front guard bypass
O_Brake	BOOL		BuiltInIO://cpu/#0/Output_Bit_02	False	False	Publish Only	Brake command
O_OR_Auto_Lamp	BOOL		BuiltInIO://cpu/#0/Output_Bit_06	False	False	Publish Only	OverRider auto/continuous lamp
O_OverRider_Up	BOOL		BuiltInIO://cpu/#0/Output_Bit_09	False	False	Publish Only	Raise OverRider ~10mm Over Rewinder roll
O_OverRider_Hold	BOOL		BuiltInIO://cpu/#0/Output_Bit_04	False	False	Publish Only	OverRider Lock
O_CoolingFan	BOOL		BuiltInIO://cpu/#0/Output_Bit_03	False	False	Publish Only	Brake and motor fans
Fan_Timeout	REAL	0.5		True	False	Publish Only	Fans stop timeout [min]
OverRider_TimeOFF	REAL	0.01		True	False	Publish Only	OverRider photocell OFF timeout (panel)
OverRider_TimeON	REAL	0.05		True	False	Publish Only	OverRider photocell ON timeout (panel)
AlarmOn	BOOL			False	False	Publish Only	Alarm active
BuzzerOn	BOOL			False	False	Publish Only	Panel buzzer command
Msg	INT			False	False	Publish Only	Message
Index_B	INT			False	False	Publish Only	Alarm index
MotStop	BOOL			False	False	Publish Only	Motor stopped
Run_Normal_Spd	BOOL			False	False	Publish Only	Motor running - normal speed
Clock1s	BOOL			False	False	Publish Only	1 s clock
ManMode	BOOL			True	False	Publish Only	Manual mode
Speed_Man_SP	INT			True	False	Publish Only	% speed in manual
Counter_Reset	BOOL			False	False	Publish Only	Counter reset from panel
I_FrontGuard_Open	BOOL		BuiltInIO://cpu/#0/Input_Bit_09	False	False	Publish Only	Front guard open
RwUnload_Enable	BOOL		BuiltInIO://cpu/#0/Output_Bit_07	False	False	Publish Only	Unloaders enable - closing
JogSpd_SP	REAL	10.0		True	False	Publish Only	Speed in manual
O_AccDec2	BOOL		BuiltInIO://cpu/#0/Output_Bit_05	False	False	Publish Only	Second acc/dec ramp

AccelTrim	REAL			True	False	Publish Only	Acceleration coefficient in run
DecelTrim	REAL			True	False	Publish Only	Deceleration coefficient in run
DecelCoarse	REAL			True	False	Publish Only	Acceleration coefficient at start (orig. comment; name suggests decel)
AccelCoarse	REAL			True	False	Publish Only	Acceleration coefficient at start (orig. comment; name suggests accel)
O_AcousticSignal	BOOL		BuiltInIO://cpu/#0/Output_Bit_08	False	False	Publish Only	Horn / Acoustic signal
Pot2_Slow_Velocity	INT		BuiltInIO://opt/#0/Ch2_Analog_Input_Value	False	False	Publish Only	Potentiometer 2 value - Final speed -
I_AutoStop_OS	BOOL		BuiltInIO://cpu/#0/Input_Bit_10	False	False	Publish Only	Stop on metre counter
I_RollEnd_SlowDown	BOOL		BuiltInIO://cpu/#0/Input_Bit_11	False	False	Publish Only	Slow down at end of roll
I_WebBreak_Monitor	BOOL		BuiltInIO://cpu/#0/Input_Bit_12	False	False	Publish Only	Paper break monitoring ON
I_Vacuum_OK	BOOL		IOBus://unit#3/Ch1 Reset/External Input Status/Ch1 External Input 0 Status	False	False	Publish Only	Extractor fan thermal OK
I_SlowSens_PH	BOOL		ECAT://node#[1,0]/IB IL 24 DI 8/HD-ECO Input-_IN05 (Pin 1.3) _6000_05	False	False	Publish Only	Slow-down photocell
I_WebBreak_PH	BOOL		ECAT://node#[1,0]/IB IL 24 DI 8/HD-ECO Input-_IN07 (Pin 1.4) _6000_07	False	False	Publish Only	Paper break photocell
UwStop_At_Meter	REAL	5100		True	False	Publish Only	Unwinder Stop at metres
UwSlowMargin_m	REAL	10		True	False	Publish Only	Unwinder Slow-down metres
LowSpd_Display	REAL			True	False	Publish Only	Slow-down speed (displayed)
RwMaxDiam	REAL	1380.0		True	False	Publish Only	Rewinder max diameter protection (mm)
RwMaxStop	BOOL			False	False	Publish Only	Rewinder max diameter STOP (latched)
Encoder_Pulse	INT	1000		True	False	Publish Only	Encoder pulses/Rotation
RwSlowDecelLrn	REAL	0.0		True	False	Publish Only	Learned real slow-down decel (mm/s2) - 0 = not lear

							ned
LowSpd_Man_SP	INT			False	False	Publish Only	% slow-down speed in manual
CountReset_Req	BOOL			False	False	Publish Only	Counter reset requested
Psw	INT			False	False	Publish Only	Password
Language	DINT			True	False	Publish Only	Language
I_RsetAlarm	BOOL		ECAT://node #[1,0]/IB IL 24 DI 8/HD-ECO Input-_IN08 (Pin 2.4) _6000_08	False	False	Publish Only	Alarm reset
Fix10Vdc_1	UINT			False	False	Publish Only	Fixed 10 Vdc generator
EncoderWheel_Diam	REAL	400		True	False	Publish Only	Encoder wheel diameter
AlarmCodeSV	ARRAY[0..32] OF BOOL			False	False	Publish Only	Panel alarms
SafeGuard_ByPass	BOOL			False	False	Publish Only	Guards bypassed
FrontGuard_Closed	BOOL			False	False	Publish Only	Front guard closed
Anal3	UINT			False	False	Publish Only	(?) Analog 3
Anal4	UINT			False	False	Publish Only	(?) Analog 4
SoftStop	BOOL	False		False	False	Publish Only	Soft stop in progress (HMI)
SoftStopEnable	BOOL	True		True	False	Publish Only	STOP button = soft stop (False = immediate as before)
SoftStopEndSpd	REAL	5.0		True	False	Publish Only	Soft stop: run command drops below this speed (m/min)
UwDiam_Measure	REAL			True	False	Publish Only	Measured distance
UwCoreDiameter	REAL	100		True	False	Publish Only	Core Outside diameter [mm]
Core_Measure	BOOL	False		True	False	Publish Only	Stored core value
UwCoreDistance	REAL	785.56		True	False	Publish Only	Sonar distance to empty core. [mm]
AI_Diam_Unwinder	INT		IOBus://unit#2/Ch1 Analog Input Value	False	False	Publish Only	Analog value - UnWinder Diameter
Measure_ON	BOOL	True		True	False	Publish Only	Measurement enabled
UwDiam_Act	REAL			True	False	Publish Only	Measured roll diameter
UwSlowDown_Diam	REAL	200		True	False	Publish Only	Unwinder Slow-down diameter [mm]
UwDiamStop	REAL	110		True	False	Publish Only	Stop diameter
Alarm_Reset	BOOL			False	False	Publish Only	Alarm reset from panel
Psw22	BOOL			False	False	Publish Only	Password 22
Psw44	BOOL			False	False	Publish Only	Password 44
I_Roll_OK	BOOL			False	False	Publish Only	Roll OK / Broken Holder Joint
I_RollEnd_PH	BOOL			False	False	Publish Only	End-of-roll photocell
AI_Diam_Rewinder	INT		IOBus://unit#2/Ch2 Analog Input Value	False	False	Publish Only	Analog value - ReWinder Diameter
RwStopEnabl	BOOL	False		True	False	Publish Only	Rewinder diameter stop ena

e							bled
RwTargetDiam	REAL	300.0		True	False	Publish Only	Rewinder final diameter (mm)
RwUseSlow	BOOL	True		True	False	Publish Only	Slow down before target
RwSlowMargin_m	REAL	10.0		True	False	Publish Only	Rewinder Metres at slow speed before stop
RwSlowDecel	REAL	0.0		True	False	Publish Only	Rewinder Slow-down decel mm/s2 - 0 = auto from DecStart
RwResetHyst	REAL	100.0		True	False	Publish Only	Reset requests below target - this [mm]
RwDist0V	REAL	0.0		True	False	Publish Only	DT35 distance at 0 V (mm)
RwDist10V	REAL	750.0		True	False	Publish Only	DT35 distance at 10 V (mm)
RwRawMin	INT	10		True	False	Publish Only	Raw below = sensor fault
RwRawMax	INT	3900		True	False	Publish Only	Raw above = sensor fault
RwStopOnFault	BOOL	True		False	False	Publish Only	Stop on sensor fault
RwAxisDist	REAL	675.3		True	False	Publish Only	Sensor to shaft centre (mm) - teach
RwFilter_K	REAL	0.2		True	False	Publish Only	Distance filter per 100 ms (0..1)
RwWinTicks	INT	100		True	False	Publish Only	Material learn window (100 = 10 s)
RwMinPulses	DINT	1000		True	False	Publish Only	Min pulses in window to learn
RwLearn_K	REAL	0.3		True	False	Publish Only	Material factor filter weight
RwMat_K	REAL	0.0		True	False	Publish Only	Learned material factor
RwLearnStop	BOOL	True		True	False	Publish Only	Learn stop decel on every stop
RwMinLearnSpd	REAL	50.0		True	False	Publish Only	Min speed to learn a stop (m/min)
RwStopDecel	REAL	0.0		True	False	Publish Only	Learned stop decel (pulses/s2)
RwTreact	REAL	0.1		True	False	Publish Only	Stop reaction time (s)
RwTstopDef	REAL	3.0		True	False	Publish Only	Stop time until decel learned (s)
RwTrim	REAL	1.0		True	False	Publish Only	Stop length trim (>1 = earlier)
RwDist	REAL			False	False	Publish Only	Filtered distance (mm)
RwDiam	REAL			False	False	Publish Only	Rewinder diameter (mm)
RwSpeed	REAL			False	False	Publish Only	Line speed from encoder (m/min)
RwRemain_m	REAL			False	False	Publish Only	Metres to target diameter
RwStopLen_m	REAL			False	False	Publish Only	Stopping length now (m)
RwSlowLen_m	REAL			False	False	Publish Only	Rewinder Slow-down length [m]
RwStopReq	BOOL			False	False	Publish Only	Rewinder diameter STOP request
RwSlowReq	BOOL			False	False	Publish Only	Rewinder diameter SLOW request
RwSensFault	BOOL			False	False	Publish Only	Rewinder DT35 sensor fault
UwStopEnable	BOOL	False		True	False	Publish Only	Unwnder Auto Stop - Enable
SlowAtDisp	REAL			False	False	Publish Only	HMI: slow-down starts at (m or mm, see SlowAtMode)
SlowAtMode	INT			False	False	Publish Only	HMI: 0=none 1=unwinder [m] 2=rewinder [mm]

SlowAtShow	BOOL			False	False	Publish Only	HMI: show slow-down display
UwSlow_at_Metre	REAL			False	False	Publish Only	Unwinder: slow-down starts at [m]
UwSlowReq	BOOL			False	False	Publish Only	Unwinder metre slow-down request (latched)
RwSlowAtDiam	REAL			False	False	Publish Only	Rewinder slow-down starts at diameter [mm]
RwStopAtDiam	REAL			False	False	Publish Only	Rewinder: stop command at diameter (mm)
RwMaxSlow	BOOL			False	False	Publish Only	Rewinder max diameter SLOW (latched)
UwEmptyHyst	REAL	5.0		True	False	Publish Only	Unwinder Empty Hysteresis
GSM_Learned_OK	BOOL			False	False	Publish Only	Paper [Grams / Square Meter] FALSE until GSM learned
RwMaxSlowAtDiam	REAL	1370.0		False	False	Publish Only	Rewinder max: slow-down starts at diameter (mm)
RwStopDecelK	REAL	0.0		True	False	Publish Only	Learned stop decel per mm of rewinder diameter (mm/s2 per mm)
SoftStopDecel	REAL	0.0		True	False	Publish Only	Soft stop decel (mm/s2), 0 = DecelCoarse
SpdMax_Pending	BOOL	False		False	False	Publish Only	New pot range waiting for the motor to stop
RwAxisDist_Prev	REAL	675.3		True	False	Publish Only	Rewinder: RwAxisDist before the last TEACH (for UNDO)
UwCoreDist_Prev	REAL	785.56		True	False	Publish Only	Unwinder: UwCoreDistance before the last TEACH (for UNDO)
RwTeachUndo	BOOL	False		False	False	Publish Only	HMI: UNDO rewinder TEACH (PLC resets it)
UwTeachUndo	BOOL	False		False	False	Publish Only	HMI: UNDO unwinder TEACH (PLC resets it)
Psw33	BOOL			False	False	Publish Only	Password 33
RwMatChangePct	REAL	25.0		True	False	Publish Only	Paper change detection: window deviation (%), 2 windows in a row = new paper, 0 = off
RwSlowFallbackMm	REAL	30.0		True	False	Publish Only	Rewinder: slow-down this many mm before the target while the paper thickness is not learned (0 = off)
RwWinGrow_mm	REAL	2.5		True	False	Publish Only	Paper thickness learning: window = this diameter growth (mm), 4 m .. RwWinLen_m
GsmAsk	BOOL	False		False	False	Publish Only	HMI popup: new parent roll, did you change the paper? (HMI NO resets it)
GsmAskYes	BOOL	False		False	False	Publish Only	HMI popup YES: forget the learned thickness (PLC resets it)