
# MODE-S Wind · the receiving station


Airliners as weather sensors — wind, temperature and the heights of the pressure surfaces from the Mode S and ADS-B replies heard in Tuusula, north of Helsinki-Vantaa (EFHK)

Otso Laakso · OH2GAX
Version v.30102026
October 2026 · 1 / 7


## 1 HARDWARE — one ADS-B antenna, one receiver, one small computer; the users are served from the cloud (page 4)

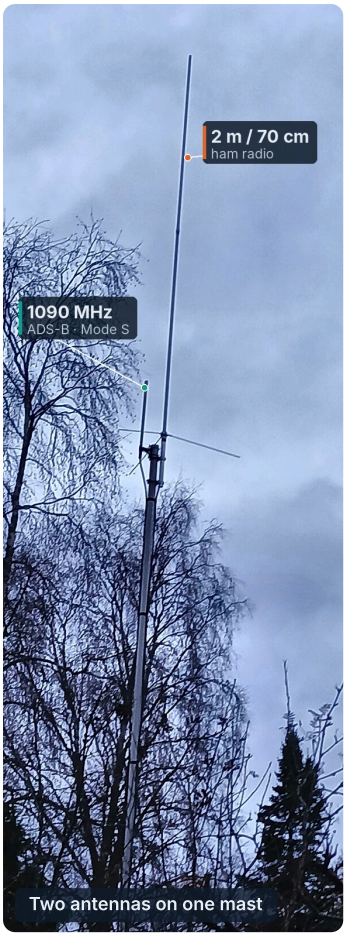

Two antennas on one mast

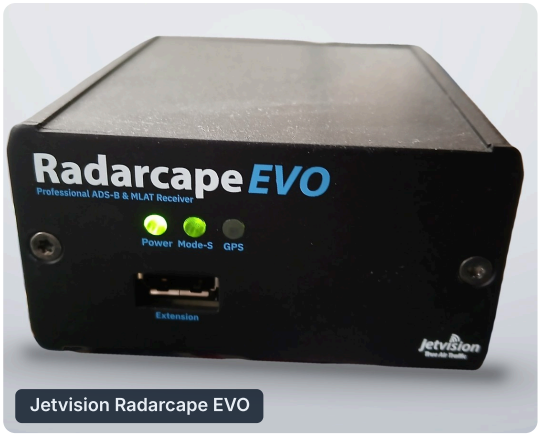

Jetvision Radarcape EVO

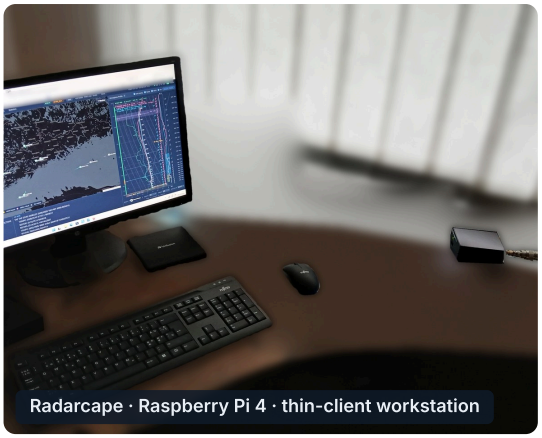
Radarcape · Raspberry Pi 4 · thin-client workstation

### Signal chain

Aircraft transponder › 1090 MHz › GP antenna › coax › Radarcape › Ethernet › Raspberry Pi 4 › browser · phone

**Antenna**
Two antennas share the mast: the **short ground-plane without radials** is the 1090 MHz ADS-B / Mode S antenna, the tall one with radials the author's 2 m / 70 cm ham-radio antenna. Aircraft at cruise levels are heard to about 160 NM.

**Raspberry Pi 4**
The local station: the Python collector with **pyModeS** decoding, the SQLite database, the hourly jobs and the web server — and the encrypted tunnel that feeds the cloud server.

**Jetvision Radarcape EVO**
An FPGA Mode S decoder with GPS-disciplined nanosecond timestamps — the basis of multilateration (MLAT). Every frame goes out as **Beast binary** over TCP (with its signal level), the aircraft list with MLAT positions as JSON.

**Thin client and phone**
Viewers: the pages run in any browser, and /app gives the Skew-T, time–height, ILS approach, windshear, history and statistics on a phone (page 5).

## 2 WHAT THE AIRCRAFT SEND

The ground radars and Fintraffic's **wide-area multilateration (WAM)** network interrogate the aircraft on 1030 MHz, and the transponders answer on **1090 MHz**. The station only **listens**: it hears the answers, never the questions.

In Europe, Mode S **Enhanced Surveillance (EHS)** makes the larger aircraft answer with **Comm-B registers** — 56-bit snapshots of their own air-data and inertial systems: true airspeed, Mach, magnetic heading, roll, track and ground speed. Air traffic control uses them to see what the aircraft is doing; MODE-S Wind uses the same numbers to measure the air the aircraft flies through. On top come the aircraft's own **ADS-B** squitters with GNSS positions and the GNSS − barometric height difference.

Because the request is not heard, the reply does not say which register it holds. pyModeS infers it from the content (and finds the aircraft's address hidden in the reply's parity bits); ambiguous replies are dropped, and the Statistics page counts how often this happens.

**≈ 130 /s**
Mode S and ADS-B messages, 24-hour mean

**1.3–1.9 s**
median interval between one aircraft's BDS 5,0 replies (en route → final)

**945 000**
stored observations, 24 Sep – 26 Oct 2026

**≈ 85 %**
of the observations with a wind pair also give a temperature

## FORMATS AND REGISTERS — used by MODE-S Wind

| Format · register | Content |
|---|---|
| DF17 ADS-B | Sent by the aircraft itself: positions (TC 9–18), velocity with the **GNSS − baro height difference** (TC 19, about twice a second), operational status; NACp / NIC give the GNSS quality |
| DF20 / DF21 | Comm-B reply to a radar or WAM request, with altitude (20) or squawk (21); carries one 56-bit register: |
| BDS 5,0 | **Track and turn report**: roll angle, true track, ground speed, track-angle rate, true airspeed |
| BDS 6,0 | **Heading and speed report**: magnetic heading, indicated airspeed, Mach, barometric and inertial vertical rate |
| BDS 4,0 | Selected vertical intention: selected altitude and the pilot's QNH setting |
| BDS 4,4 / 4,5 | Meteorological routine (MRAR) and hazard (MHR) reports — rare here; MHR temperatures are rejected (mostly other registers misidentified) |
| BDS 1,0 · 1,7 · 2,0 | Data-link capability · supported registers · callsign |
| DF11 | All-call reply — its parity carries the **interrogator code** (II / SI): which radar or WAM station is asking |
| DF4 / DF5 | Surveillance replies: altitude, squawk — the reply rhythm per flight phase |
| DF0 / DF16 | Airborne collision avoidance (ACAS / TCAS) traffic |

**Quality gates** — GNSS values only with NACp ≥ 8 and outside the airframe's jamming episodes (from the GPS Quality monitor); MLAT keeps aircraft placed when jamming removes their ADS-B positions; WAM ground stations, helicopters and frozen or spoofed positions are filtered out before any meteorological use.

© 2026 Otso Laakso (OH2GAX) · MODE-S Wind, GPLv3

## 3 FROM REPLIES TO WEATHER

### Wind — ground vector minus air vector

$W = (GS, \text{true track}) - (TAS, \text{true heading})$

$\text{true heading} = \text{magnetic heading} + \text{declination} - \delta(\text{airframe})$

A BDS 5,0 and a BDS 6,0 reply of the same aircraft at most 10 s apart; none while it banks or turns fast, and on final only from replies at most 6 s old. The declination comes from the World Magnetic Model 2025 at the aircraft's own position (8.7–12.6° around Helsinki) — 1° of heading is about 8 kt of wind at 450 kt.

### Temperature — from the air-data computer

$a = TAS / M, \quad T = a^2 / (\gamma R)$

$T\ [K] = 288.15 \cdot (TAS / (661.47\ kt \cdot M))^2$

The static air temperature follows from the true airspeed (2 kt steps) and the Mach number (0.004 steps) of the same aircraft: about ±1.3 K per reply at cruise and ±3–4 K on approach, so profiles use trimmed means of many replies and aircraft.

### Heights of the pressure surfaces

$z = (\text{p-alt} + \Delta_{GNSS-baro}) \cdot 0.3048 - N_{EGM96} - \text{curve(alt)} - \text{offset}$

$T_v = g_0\ \Delta H / (R \ln(p_1/p_2))$

The pressure altitude tells which pressure surface the aircraft flies on, the GNSS difference how high that surface lies: D-values, height contours and the geostrophic wind, and from every climb an independent layer temperature.

## 4 SELF-CORRECTION & CALIBRATION — learnt from the data itself, checked against independent references

**Aircraft** hundreds of airframes a day, each with its own small instrument errors ⇄ **Each other** every airframe is compared with the other aircraft of the same layer and hour ⇄ **Jokioinen radiosonde** FMI open data, soundings at 00, 06 and 12 UTC: the independent truth ⇄ **MEPS model** MET Norway open data, every hour, taken at the aircraft's own positions

### Heading offset of each airframe

Many avionics convert their inertial true heading to magnetic heading with a magnetic-variation table that is years old, while the declination at Helsinki has grown from 7.0° (2005) to 10.5° (2026). A heading offset shows as a wind error across the heading, proportional to the airspeed, so each airframe's offset δ is learnt from its wind against the other aircraft of its layer (fleet mean +1.5°, E190 3.5°, B777 ≈ 0°), faded with a 30-day half-life; by type or fleet median until the airframe has two flights.

**Wind against the soundings 11.5 → 9.1 kt RMS; single-aircraft scatter halved.**

### Upper-level temperature

The fleet's Mach/TAS temperature reads about +0.7 K warm at 300–250 hPa — against both the model and the soundings, steady for a month. A correction per level (400–200 hPa) is learnt every hour from the MEPS check of the last 21 days and added when the Skew-T and time–height are served, faded out below FL180. A per-airframe temperature calibration was tested and rejected: it gained only 1 %.

**200–300 hPa error against the soundings 1.27 → 0.96 K RMS.**

### GNSS heights of the pressure surfaces

After every sounding the aircraft that passed a level within ±1 h and 150 km of the drifting balloon are compared with its measured height of that surface. The fit gives a curve per 5 000 ft band — the altimeter's speed-dependent static-pressure error — and a small, shrunk offset per airframe, refitted from 30 days. The EGM96 geoid (about 18 m here, sloping 3 m per 100 km) is removed at every aircraft position.

**Within ±2 m of MEPS at 400–250 hPa, hourly correlation 0.996–0.999.**

### Airspeed, declination and the checks

When an aircraft sends Mach but no TAS, the airspeed uses the live ISA deviation measured by the other aircraft per 5 000 ft band. Every sounding gets a **Sonde check** and every hour a **MEPS check**, with the model taken where the aircraft actually flew. Raw values are always stored and the corrections are applied when served, so they can be learnt again and checked independently — and everything works without the model.


**Area wind within 2.4–3.1 kt (vector RMS) of MEPS at 925–400 hPa.**

## 5 DATA STORAGE — SQLite (WAL) on each server

| Table / data | Content | Kept |
|---|---|---|
| `observations` · `flights` | per-aircraft rows: wind and temperature (raw and corrected), GNSS difference, sources | configurable |
| `profile_hours` | hourly area profile archive (Skew-T, time–height) | indefinitely |
| `approach_history` | every landing: wind per 200 ft, ACI, windshear report | indefinitely |
| `gnss_hours` · `height_series` | hourly height cells · dense climb / descent series | long · 30 d |
| `heading_cal` · `t_correction` · `gnss_cal` | the learnt calibrations, saved hourly | current |
| `meps_*` · `soundings/` | model profiles (kept) and maps · radiosondes as files | maps 7 d · 1 year |
| `gps_quality_*` · `gps_episodes` | GNSS degradation by hour and episode | manual purge |
| `msg_stats_hours` | receiver statistics, one row an hour | 7 d |

**Light on the SD card by design.** The live aircraft state, the windshear and GPS trackers and the message statistics live in RAM; a per-aircraft write throttle and an optional meteo-only mode limit the rows; one batched writer thread and hourly jobs that write one row per hour. About 12 MB of database a day; the Maintenance page shows every table and purges by date.

## 6 WHAT THE SYSTEM SHOWS

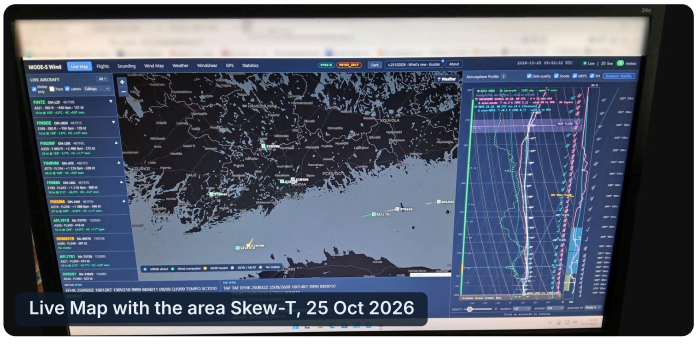
Live Map with the area Skew-T, 25 Oct 2026

**Live Map** aircraft by meteo source, wind barbs, MEPS or radar weather, area Skew-T; ATC style — page 7

**Sounding** Skew-T now, any hour or per flight; time–height (also the boundary layer); indices; sonde and MEPS checks

**Wind Map** wind and temperature at a level, isotachs, streamlines, heights, geostrophic wind, cross-sections

**Windshear** ILS profile, headwind-ramp alerts (ADV / WSA / MBA), go-arounds, ACI — page 3; EDR, boundary layer — page 6

**Weather · GPS** MEPS maps with a 48 h forecast · area-wide GNSS jamming monitor and episodes

**Statistics · /app** formats, registers, interrogators, range rings, system health · the phone view — page 5

© 2026 Otso Laakso (OH2GAX) · MODE-S Wind, GPLv3

## 7 WINDSHEAR DETECTION — from the aircraft's own replies, for every landing and departure

**Low-level windshear** is a sudden change of the wind along the approach or climb-out path. ICAO counts it below 1 600 ft above the runway; a headwind change of 15 kt or more, lasting longer than a gust, is significant. What matters to an aircraft is the change of the **headwind along its own path** — and that is exactly what each aircraft reports in its **BDS 5,0** replies: the difference of its true airspeed and ground speed.

The station follows this headwind about every two seconds along the path of every aircraft on final and on the climb-out (noise about 1.1 kt per reply, a new value about every 290 m). The method follows the **Hong Kong Observatory**, which finds headwind **ramps** along the glide path in Doppler-lidar scans — the lidar's one-dimensional headwind profile is the same thing an approaching aircraft samples itself.

`headwind = TAS − GS (each BDS 5,0 reply)`


$\Delta V_{1\ km} = \Delta V \cdot (1\ km\ /\ L)^{1/3}, \quad L = 400 \ldots 4\,000\ m$

Replies in a bank, repeated registers and spikes are dropped; the profile is a 400 m running mean along the path. The strongest loss and gain of each flight are scaled to a 1-km equivalent, so a quick change counts more than a slow one. Only the zone below 1 600 ft above the threshold or within 5 NM counts.


$\Delta H_{band}$ `= headwind(200-ft band) − median of the flights of the last 45 min`

A front or gust front shows as a change *between* flights: each 200-ft band from 400 to 1 800 ft is compared, on the wind vector, with the landings and departures of the previous 45 minutes — landings with landings and departures with departures, because the airspeed reads about 1.4 kt differently in the two flight phases.

Weak ramps (10–12 kt) count only when they stand out from what the other flights met at the same heights; each ramp alert is marked **confirmed** when another landing within 15 minutes saw the same change at the same height, or **isolated** (probably turbulence) when none did. The detection runs on the Pi for every flight, whether or not a page is open; every landing and departure gets a stored **windshear report**, and the Windshear page and `/app` show live alerts, a 24-hour log and the ILS profile.

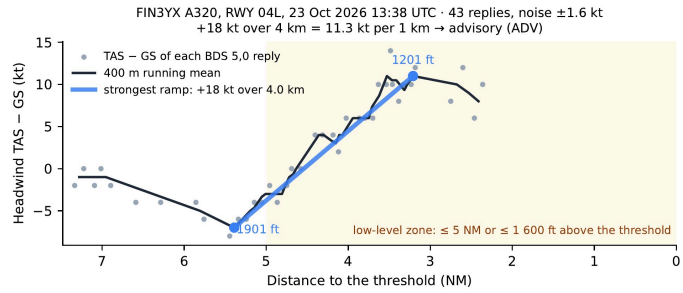


**A headwind ramp.** The headwind of one landing, reply by reply (dots) and as the 400 m running mean, with its strongest ramp — a persistent shear layer before the front of 23 Oct 2026 (advisory).

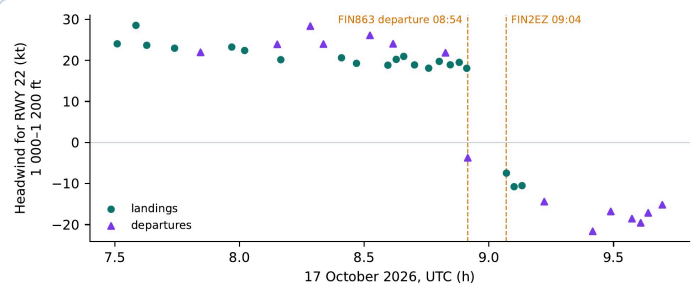


**A change between flights, 17 Oct 2026.** Headwind at 1 000–1 200 ft of the landings and departures on runway 22: a departure met 25 kt less headwind ten minutes before the first landing; three landings in a row then confirmed it (band WSA), before the wind reversed and runway 04 came into use.

**ADV** advisory ≥ 10 kt **WSA** alert ≥ 15 kt (ΔV ≥ 14) **MBA** ≥ 30 kt loss

**The alert message** — in the short form that airport windshear systems (LLWAS, TDWR, Hong Kong) give to the tower:

`15A WSA 15K+ 2MF` *"Runway one five arrival, windshear alert, one five knot gain, two mile final"*

Runway + **A**rrival / **D**eparture · level · change in kt (**−** loss, **+** gain) · where first met: RWY, n-mile final or, climbing out, the altitude. Marked *research*.

## 8 THE ONGOING STUDY — windshear from passively received Mode S EHS at Helsinki-Vantaa

No published study has detected low-level windshear from Mode S EHS replies received passively. MODE-S Wind tests it at EFHK, and every step is documented with its reason and checked on the stored flights — a **study log** for aviation meteorologists and atmospheric scientists, updated as the study goes on (`doc/EFHK_MODE_S_EHS_Windshear_Detection_Study.pdf`; how to read the page: `doc/Windshear_User_Guide.pdf`).

**May – 24 Oct 2026**
**Six browser algorithms**
3 084 calm landings: they mostly saw the normal wind increase with height — retired.


**24 Oct**
**Ramps and band comparison**
The Hong Kong method on the server; bands on the wind vector with departures as references.

**26 Oct**
**Weak advisories relative**
A stable evening: 10 of 39 landings flagged for the normal profile; 59 → 26.

**27 Oct**
**Confirmed or isolated**
A turbulent day: one shear layer seen by four landings among single-aircraft eddies.

**27 Oct**
**By flight phase**
Departures read +1.4, landings −1.5 kt against the MEPS model — an airspeed effect, now removed.

**28 Oct**
**14-kt rule · ICAO form**
As at Hong Kong, an alert needs a real 14-kt change; messages in the controllers' form.

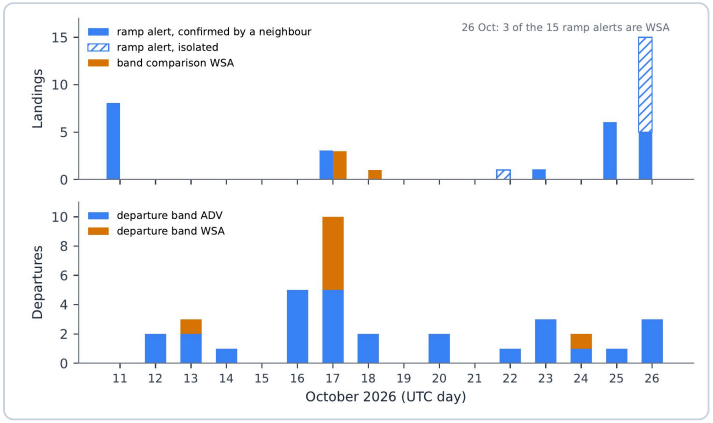


**Windshear flags per day, 11–26 Oct 2026** (current method on all stored flights). Top: landings — ramp alerts confirmed or isolated, and band-comparison WSAs. Bottom: departures.

**3 778 · 3 539**
landings · departures with a windshear report, 9–27 Oct 2026

**36 · 25 ✓**
landings with a ramp alert · of them confirmed by a neighbour (11 isolated)

**0.9 % · 0.03 %**
landings with an advisory · with a ramp windshear alert (14-kt rule)

**232–733 ft**
lowest height followed above the threshold, by runway

### Next


- **ADS-B ground speed** (about twice a second) to sharpen the ramps — test from early November 2026
- **Convective season 2027**: gust fronts and microburst outflows are the real test of the levels
- **Validation** against the METAR windshear groups and the pilots' reports (stored from 29 Oct 2026) and go-arounds; turbulence and the boundary layer — page 6

**Research only** — passive and uncertified; the alerts describe air already flown through. Not for flight operations or ATC.

© 2026 Otso Laakso (OH2GAX) · MODE-S Wind, GPLv3

## 9 ONE SYSTEM, TWO SITES — from 27 October 2026

MODE-S Wind now runs in two places with the **same software**. The **local station** at the receiver site keeps the original idea: with power and the local network alone, the receiver's data flows into its own database — no internet needed (only the model, sounding and METAR downloads wait for it). A **cloud server** at Amazon Web Services runs a complete second copy of MODE-S Wind, fed live from the same receiver, and serves all users at **https://mode-s-wind.oh2gax.org**.

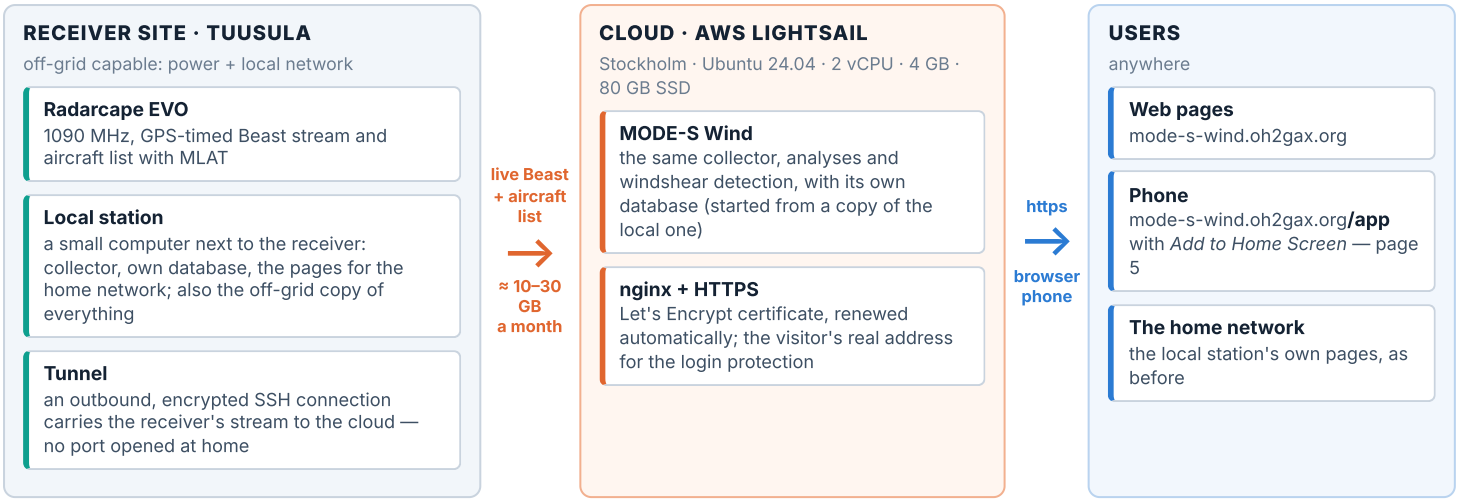


**One code base** on GitHub (oh2gax/mode_s_wind) — both servers run the same version; a change is tried at the local station first and reaches the cloud when it runs well. The few settings in which the servers differ are kept on each server.

| | Local station | Cloud server |
|---|---|---|
| **Role** | development station; off-grid observing site | production: the public service for all users |
| **Network** | home fibre; the home network | data-centre network, 4 TB of traffic a month included |
| **Without internet** | keeps collecting, analysing and serving the home network | no new data until the tunnel is back |
| **Database** | SQLite on the station; the reference of the data checks and the windshear study | SQLite on SSD; backed up before every update |
| **Calibrations** | learnt independently on each server (heading offsets, upper-level temperature, GNSS heights) — they stay close, and each can be checked against the other | |

**2 copies** of the database, each complete — at the receiver site and in the cloud

**1 tunnel** outbound and encrypted: the cloud sees the receiver as if it were next to it

**≈ 10–30 GB** of Beast data a month to the cloud, plus the aircraft list every 2 s

**https** a permanent, secure address with a certificate — also for the phone view

## 10 WHY A CLOUD SERVER

- **Room for many users.** Every open page asks for new data every few seconds and the Live Map keeps a live stream open. A Raspberry Pi on a home connection serves a handful of users; the cloud server has a data-centre connection and its own processor, memory and SSD for them.
- **The receiver site is not exposed.** Users connect to the cloud, never to the home network; the site's only connection is outbound.
- **Secure and simple to reach.** A permanent https address with a certificate, also for the phone view.
- **Two independent copies.** The local station collects even when the internet or the cloud is down; the cloud keeps serving when the station is serviced or replaced.

## 11 KEPT IN STEP

new commits › database backup › update (fast-forward only) › compile check › restart › log check

Every update goes the same way: it lists what is new, copies the database, takes the new version from GitHub, checks the changed program files — going back at once if one fails — restarts and checks the log; the previous version can be restored with one step. Settings that differ between the servers live only on each server, so an update never overwrites them.

**Development at home, production in the cloud.** A change runs first on the local station, with the same live data, before it reaches the users. The local station's former users are pointed to the new address by a notice on its pages.

## 12 NEXT — growing from one receiver into a network

soon
**Independent tunnel**
the tunnel gets its own small device at the site, so the cloud's feed no longer depends on the local server.

planned
**Filling gaps**
after an outage, each server copies the missing hours from the other — two databases, nothing lost.

planned
**Second receiver**
close to EFHK, with a view of every threshold: approaches and departures followed down to the runway.

later
**Own multilateration**
three or more GPS-timed receivers: aircraft positions independent of GNSS jamming, also at low level.

**Status, 27 October 2026.** The cloud server went live with HTTPS on its first day, fed through the tunnel from Tuusula and started from the local station's database; both servers were updated from GitHub the same evening, and the users of the local station are being guided to **https://mode-s-wind.oh2gax.org**.


© 2026 Otso Laakso (OH2GAX) · MODE-S Wind, GPLv3 · github.com/oh2gax/mode_s_wind

## 13 MODE-S WIND ON YOUR PHONE — mode-s-wind.oh2gax.org/app, for all users


The web pages are made for a large screen. For the phone there is a light version of its own, **/app**: open the address of MODE-S Wind with **/app** at the end and log in with the same personal user name and password as on the web pages. It shows **one product at a time, filling the screen**, and every choice is in the ☰ menu — tiles for the views, tap buttons and switches for their options, remembered on the phone. The diagrams are the same as on the full site and come from the same live data: the profiles measured by the aircraft over the last minutes, the approaches and the windshear reports of every landing and departure, and the receiver's own statistics.

**Add to Home Screen** (Safari: Share › *Add to Home Screen*; Chrome: menu › *Add to Home screen*) puts a MODE-S Wind icon on the phone that opens the view full screen, like an app — no app store needed. The user guide *MODE-S Wind on a phone* explains every view; the menu's *General* section opens it, the other guides and the *About* text.


**mode-s-wind.oh2gax.org/app**
scan with the phone's camera

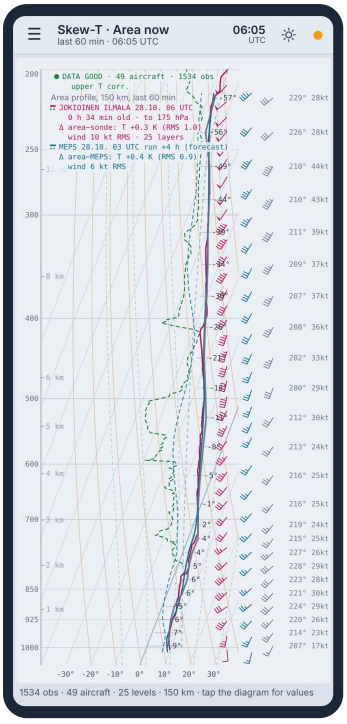



**Skew-T · Area now**
The temperature and wind measured by 49 aircraft within 150 km over the last 60 min (grey), with the Jokioinen 06 UTC sounding (pink) and the MEPS model (teal): on average the aircraft are 0.3 K warmer, the wind differs by 6–10 kt RMS. Tap the diagram for the values of a level. 28 Oct 2026, 06:05 UTC.

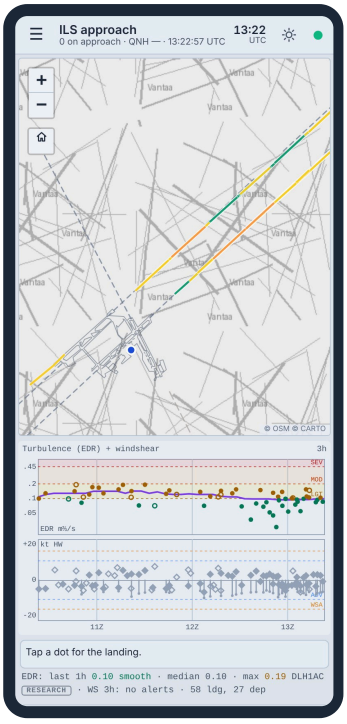


**ILS approach · turbulence**
The approach map with the last hour's turbulence (research): each 2-km piece of every landing's and departure's path coloured by its EDR — green smooth, yellow light, orange moderate; below, the EDR and windshear of the last 3 h. The live profile and strips are in the same view. 28 Oct 2026, 12:22–13:22 UTC replayed: 32 landings, 2 departures, peak 0.26.

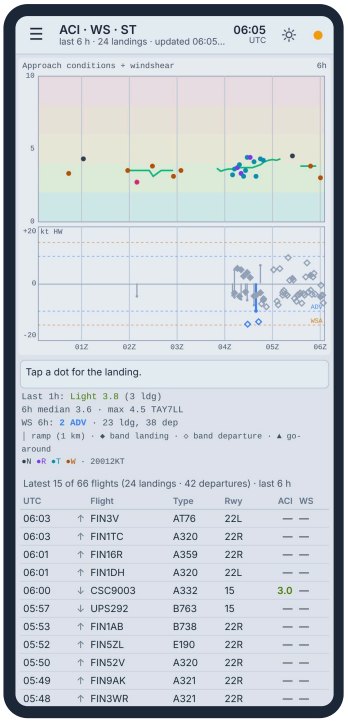


**ACI · WS · ST — ACI + windshear**
Top: how rough each landing was (Approach Conditions Index); bottom: the windshear report of every landing and departure as a change of headwind in kt, with the advisory and alert limits. Under it the flights of the period. 6 h to 28 Oct 2026 06:05 UTC: departures climbing into a night-time low-level jet, two advisories (ADV).

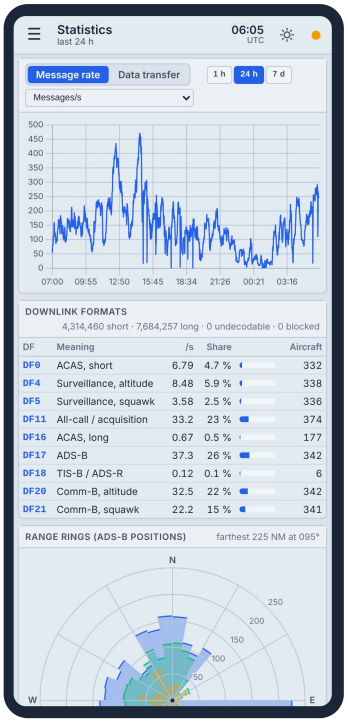


**Statistics**
What the receiver hears: the message rate of the last 24 h, the downlink formats (ADS-B, the Comm-B replies that carry the weather registers, all-call and ACAS) and the range rings. The sections are chosen in the menu — also signal strength, registers, interrogators, the Radarcape receiver and the system health.

## 14 SEVEN VIEWS — one tile each in the menu

| | | | | | | |
|---|---|---|---|---|---|---|
| **Skew-T · now** the area profile of the last 30 min – 3 h, with sonde and MEPS | **Skew-T · hour** any stored hourly profile, day and hour steppers | **Time–height** hourly profiles side by side, 12 h – 14 days: fronts, inversions, jets | **ILS approach** glideslope profile, barbs, alerts, strips; the approach map with turbulence | **ACI · WS · ST** approach conditions, windshear, turbulence, the space–time diagram, the boundary layer | **History** landings and departures as cards with their winds per height band and turbulence; search | **Statistics** message rate, formats, meteo yield, range rings and more |

## 15 MADE FOR ONE HAND

- **Tap for values** — what the mouse shows on the full site: a level of the Skew-T, a landing on the ACI chart, a cell of the space–time diagram, an aircraft on the approach.
- **Portrait or landscape** — turn the phone for a longer time axis or a wider approach.
- **UTC at the top** — all times in MODE-S Wind are UTC; the clock beside the title shows it.
- **Dark, light or automatic** — one button; *Auto* follows the phone's own setting.

## 16 LIGHT ON MOBILE DATA

- Only the view on the screen is updated, and nothing while the screen is off.
- The live ILS view loads only the aircraft on the approach, compressed: about **1–4 MB an hour**.
- The landing and departure lists come compressed and without the details the phone does not show.
- The chart program and the map are loaded only when a view first needs them.

## 17 THE SAME SYSTEM

- The same server and database as the web pages — the phone view is another way to look at them.
- The **health dot** at the top right turns amber or red when a part of the system is late or has stopped; the menu says which.
- Skew-T settings and the theme are shared with the full site in the same browser.

© 2026 Otso Laakso (OH2GAX) · MODE-S Wind, GPLv3 · github.com/oh2gax/mode_s_wind

## 18 TURBULENCE (EDR) — how rough the air was on every approach and climb-out, from the same headwind replies


**EDR** (eddy dissipation rate, $\varepsilon^{1/3}$ in $m^{2/3}\ s^{-1}$) is the measure of turbulence that ICAO uses in the aircraft's own automatic reports: **light** from 0.10, **moderate** from 0.20, **severe** from 0.45. MODE-S Wind computes it for every landing and departure from the headwind series it already follows for the windshear detection — no extra data.

$$EDR = \sqrt{(D - N_0) / (2 \cdot r^{2/3})}, \quad r \approx 141\ m, \quad N_0 = 0.35\ m^2/s^2$$

D is the mean square difference of the headwind between replies 100–200 m apart along the path, on straight 2-km pieces only (a turn changes the headwind of the steady wind and would read as turbulence). $N_0$ is the noise of the 2-kt steps of the airspeed and ground speed — the floor of the calmest days. The landing gets the mean of its pieces, a low and a high part and the roughest piece; departures are followed up to 5 000 ft, so most climb-outs get a value too.

It measures **the air, not the aircraft**: the ratio of each aircraft class to its neighbours within 45 minutes is 0.85–1.06 (the approach conditions index ACI needs class factors of 1.0–1.5). It grows with the surface wind — median 0.03 at 0–4 kt, 0.16 at 15–19 kt — and is higher near the ground (0.09 below 1 000 ft, 0.06 above).

**Where:** the Windshear page's Approach History has an **EDR** view (with a filter for light / moderate), the ACI chart an **ACI + EDR + WS** view, and on the phone the History shows an EDR chip on each card and the approach map colours every landing's and departure's path by its EDR (page 5).

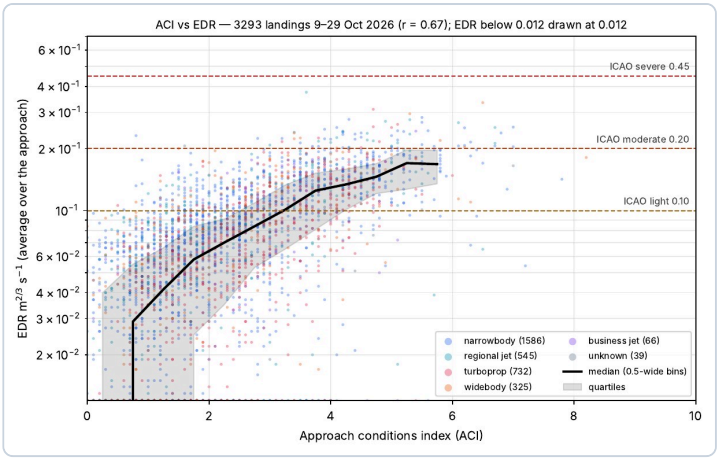


**ACI and EDR of 3 293 landings, 9–29 Oct 2026** (r = 0.67; the daily medians agree at 0.98). The black line is the median EDR at each ACI: light turbulence (0.10) is reached at ACI ≈ 3.3.

**29 % · 2.4 %**
of the landings with light (≥ 0.10) · moderate (≥ 0.20) turbulence on average over the approach

**0.145 · 0.065**
median EDR of landings with a confirmed ramp alert · without any windshear level

**A research estimate.** The replies come about every 2 s (140 m apart) — coarser than the scales the definition is based on, so the values are a *Mode S EDR*, still to be calibrated against the pilots' turbulence reports (ARS / WXREP) that MODE-S Wind now collects.


## 19 THE BOUNDARY LAYER — the low-level jet and the surface inversion, hour by hour

Every hour the station builds the **profile of the lowest 5 000 ft** over the airport from the aircraft themselves: the wind of all aircraft within 25 km in 250-ft layers (the median of at least three replies), and the temperature of the landings and departures in 200-ft layers against the METAR surface temperature. Two features of a stable night are then looked for:

- **Low-level jet** — a band of strong wind a few hundred metres up, mostly at night when the ground cools and the air above decouples from it: a wind maximum at or below 2 000 ft that weakens by at least 2.5 m/s and 25 % within 1 500 ft above it and is at least 4 kt stronger than below (after Baas et al. 2009, made stricter: as such it found a "jet" in 39 % of the hours).
- **Surface inversion** — air above warmer than at the ground: the layer where the temperature rises with height, and its top.

Each hour is stored (about 1–1.5 kB, kept indefinitely). In the month 29 Sep – 29 Oct 2026 (594 hours with traffic) a jet was found in **10 %** of the hours — 16 % at night, 4 % at midday — typically at 1 500 ft and 23 kt; a surface inversion in **15 %**.

**Where:** the Windshear page's **BL** view; the Sounding page's time–height section (*Boundary layer · wind / temperature* and an overlay on any field); an **LLJ** / **INV** tag on every windshear alert and report made in such an hour; the Skew-T's airport profile (◆ jet, red bracket inversion); the phone's ACI · WS · ST view.

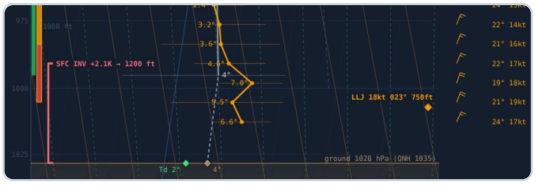


**The airport profile on the Skew-T** (lowest 2 000 ft): a jet of 18 kt from 023° at 750 ft (◆) and a surface inversion of +2.1 K up to 1 200 ft (red bracket); orange: the temperature of the last hour's landings and departures.

**0.5 % · 1.2 % · 0 %**
of the landings with a windshear level in jet hours · in other hours · under a surface inversion (2 / 421, 47 / 3 840, 0 / 460) — a stable layer damps the turbulence: median EDR 0.048 in jet hours, 0.019 under an inversion, 0.076 otherwise




**Time–height section of the boundary layer, 17–20 Oct 2026** (Sounding page): the wind of each hour and 250-ft layer coloured by speed, with barbs; on the evening of 17 Oct a north-easterly jet of 30 → 24 kt at 1 500–1 800 ft (◆), on the following nights surface inversions (red bars, the line their top). Hatched: no flights.

## 20 THE ATC-STYLE MAP — the Live Map and the Windshear map as a radar display, from 30 October 2026 (research)


Many of the users have an air traffic control background. For them both maps have an **ATC style** — on the Live Map the **Style** button (*Meteo* / *ATC*), on the Windshear page the **ATC** map button. The street map gives way to a plain grey background (dark in the Dark theme, light in the Light theme) with only the airport layout, the ILS finals (short dashes), the RNP finals (long dashes) and the coastline; range rings every 5 or 10 NM can be added (**Rings**).

The aircraft are **open squares** as on a radar display — light below 6 000 ft, grey above, the selected aircraft yellow (blue in the Light theme) — with **history plots** behind them (**Hist**: 5, 10 or 20 plots, one about every 6 s), a **speed vector** ahead (**Vec**: 30 s, 1 or 2 min at the ground speed along the track) and a **label** with a leader line. How much the label shows is chosen with **Lbl**: the callsign, registration, ICAO24 address or type alone, two lines (callsign / level) or the full three lines below.

**Labels kept apart.** Each label tries sixteen positions around its square (eight directions, near and far) and takes the one that overlaps least with the labels already placed, the other squares, the plots and vectors and the panels over the map; it keeps its place as long as that stays free, so the labels do not jump from one update to the next. The selected aircraft is placed first, then the others from the lowest up, so the approach traffic gets the clearest places.

**The level** is written as on a controller's label, in hundreds of feet: up to the transition altitude of 5 000 ft the altitude on the latest METAR QNH (**038** = 3 800 ft), above it the flight level (**063** = FL063), with ↑ / ↓ when climbing or descending at 300 ft/min or more.

**The selected level** is the altitude the crew has set on the autopilot panel (MCP / FCU), downlinked in the Mode S register BDS 4,0 when the radars ask for it, or in the ADS-B target-state message; it is shown when heard within the last 2 minutes. It is *not* the cleared level of the controllers' system, but it follows the clearance closely: in a capture at 11:32 UTC on 30 Oct FIN122's selected level changed from 050 to 030 in flight. On final the selected level is often above the aircraft — many crews set the missed-approach altitude once established (FIN8SM in the map below: **018↓020**).

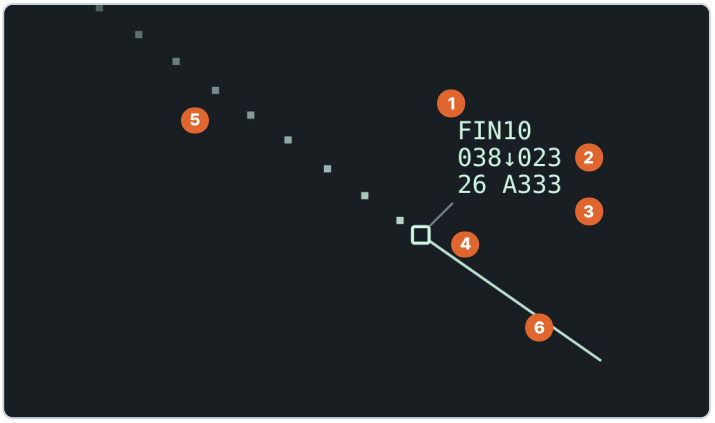



**Reading the label (Lbl Full)** — FIN10, an A330-300 descending towards Helsinki-Vantaa:

1. **FIN10** — the callsign (ICAO24 address when none is known)
2. **038↓023** — at 3 800 ft on the QNH, descending; 2 300 ft selected on the autopilot panel
3. **26 A333** — ground speed in tens of knots (260 kt) and the ICAO aircraft type
4. the open square at the latest position, the leader line to its label
5. history plots, one about every 6 s, older ones fainter (Hist 10)
6. the speed vector: where the aircraft is in 30 s at its ground speed (Vec 30 s)

**Hover — the extended label** (from 30 Oct 2026). With the **Hover** button on, the label of the aircraft under the mouse grows into six lines, as a controller's extended label — what the station has just heard from it, refreshed every 2 s (FIN33V in the map below):

| | |
|---|---|
| 1 | callsign · type · registration |
| 2 | level · selected level · vertical rate · AP / APP |
| 3 | ground speed · true and indicated airspeed · Mach |
| 4 | magnetic heading and track · drift · bank (L25 = 25° left) |
| 5 | wind · tail- or headwind · crosswind · temperature |
| 6 | distance and bearing from EFHK · NACp · squawk |

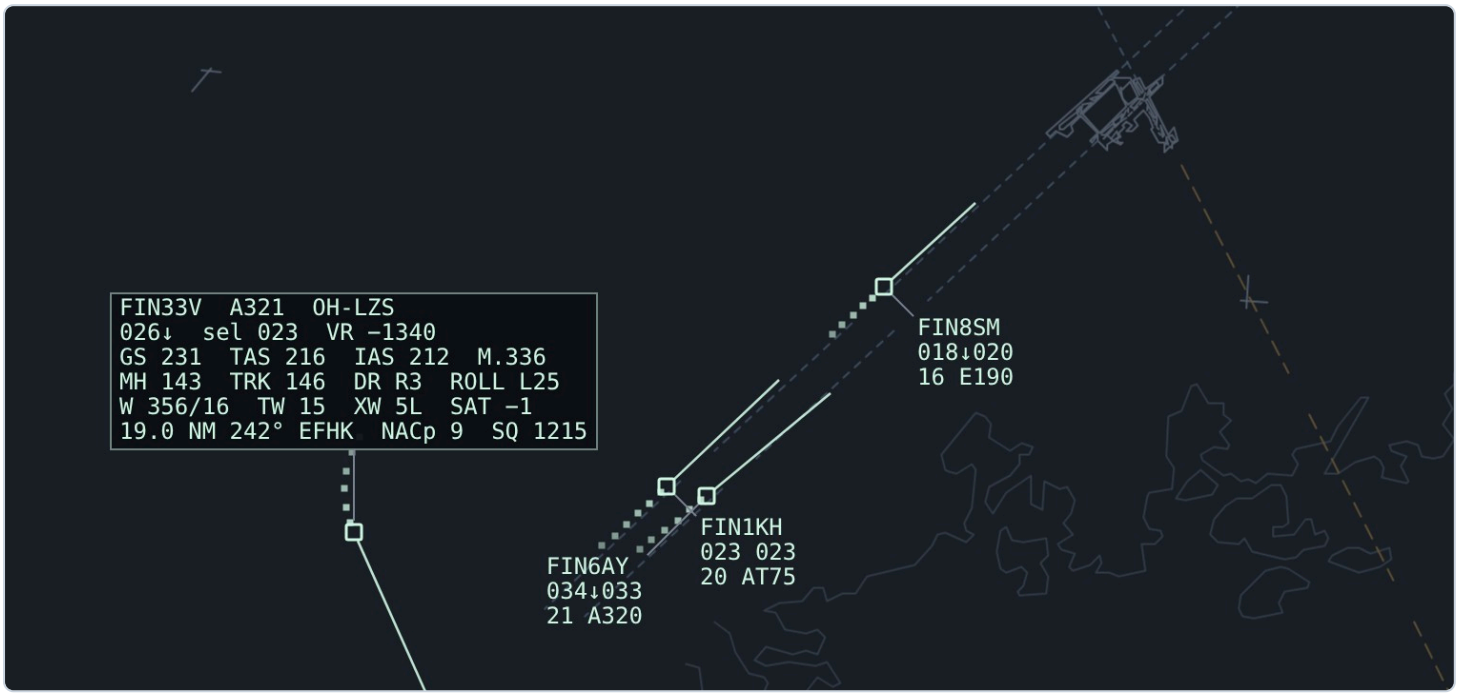


**Live traffic with Hover, 30 Oct 2026, 13:23–13:24 UTC**, as received by the station, in the ATC style with Lbl Full, Hist 10 and Vec 1 min (QNH 1019). The mouse is on **FIN33V**, an A321 turning left at 25° of bank (**ROLL L25**), descending through 2 600 ft towards its selected 2 300 ft with a 15-kt tailwind on this track (**TW 15**: ground speed 231 kt, true airspeed 216 kt). FIN6AY and FIN1KH on the finals of 04R and 04L, FIN8SM ahead on 04L with 2 000 ft set — pointed at, its label reads **APP**: the autopilot in approach mode. Stream and hover replies captured from the station, redrawn on a test copy; four aircraft without a position update in the last minute left out.

**A research display, not for air traffic control.** The positions are what this one station receives — ADS-B and the receiver's MLAT, updated every 3 s — without the radar data processing, flight plans, cleared levels or the safety nets of an ATC system; a gap in reception is a gap on the map. Do not use it for separation or any other operational decision. The style follows the conventions of European radar displays such as Thales TopSky (in use in Finland), whose screens and settings are not public — it is not a copy of any one system. Comments from controllers on what to show and how are welcome.

© 2026 Otso Laakso (OH2GAX) · MODE-S Wind, GPLv3 · github.com/oh2gax/mode_s_wind