

Network Configuration Compliance

Assessed 75 device(s) against 15 controls · Generated 2026-09-16T17:30:53 · Controls version 5b608a7


Executive Summary

Overall Configuration Posture: LOW RISK. 75 network device(s) were evaluated against 15 configuration controls. Strict verified compliance is 93.8% with 100.0% assessment coverage. 65 device(s) contain unresolved deviations. Local and emergency users represents the largest systemic gap.

Key Metrics


93.8% STRICT COMPLIANCE	100.0% ASSESSMENT COVERAGE
75 DEVICES ASSESSED	10 FULLY COMPLIANT DEVICES
65 DEVICES WITH FINDINGS	0 CRITICAL FINDINGS
70 FAILED CHECKS	0 APPROVED EXCEPTIONS
0 ASSESSMENT ERRORS	

Device Posture

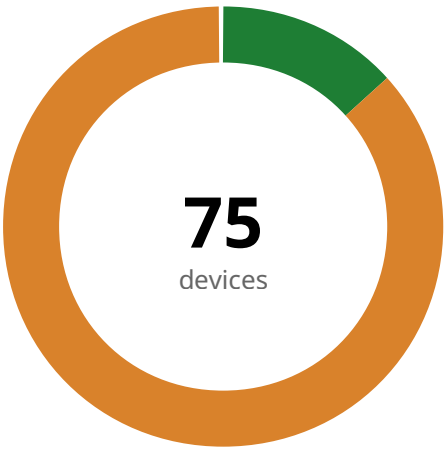

- Fully Compliant: 10
- Compliant With Approved Exceptions: 0
- Needs Remediation: 65
- Critical Non-Compliant: 0
- Not Fully Assessed: 0

Findings by Severity

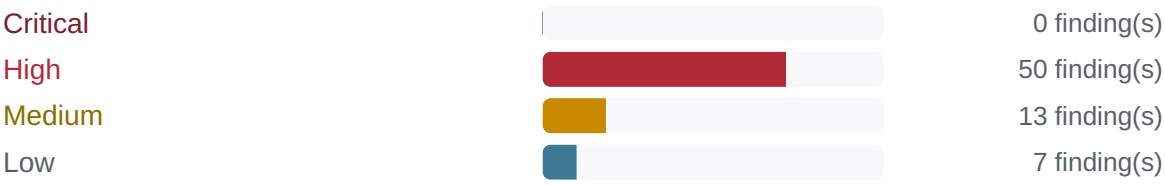

Compliance by Control

Sorted lowest compliance first.

control_00005 - Local and emergency users		92.0% (69/75) · 6 affected
control_00006 - SSH		92.0% (69/75) · 6 affected
control_00015 - Local user and enable secret		92.0% (69/75) · 6 affected
control_00002 - Domain		93.3% (70/75) · 5 affected
control_00003 - AAA		93.3% (70/75) · 5 affected
control_00008 - ACL for VTY		93.3% (70/75) · 5 affected
control_00009 - NTP		93.3% (70/75) · 5 affected
control_00010 - Syslog		93.3% (70/75) · 5 affected
control_00011 - SNMP		93.3% (70/75) · 5 affected
control_00013 - Passwords		93.3% (70/75) · 5 affected
control_00014 - VTY Lines		93.3% (70/75) · 5 affected
control_00007 - Global password encryption		94.7% (71/75) · 4 affected
control_00004 - TACACS		96.0% (72/75) · 3 affected
control_00012 - Banners		96.0% (72/75) · 3 affected
control_00001 - Hostname		97.3% (73/75) · 2 affected


Top Failing Controls

CONTROL	FAILURES	CUMULATIVE %	SEVERITY
control_00005 - Local and emergency users	6	8.6%	HIGH
control_00006 - SSH	6	17.1%	HIGH
control_00015 - Local user and enable secret	6	25.7%	HIGH
control_00002 - Domain	5	32.9%	LOW
control_00003 - AAA	5	40.0%	HIGH
control_00008 - ACL for VTY	5	47.1%	HIGH
control_00009 - NTP	5	54.3%	MEDIUM
control_00010 - Syslog	5	61.4%	MEDIUM
control_00011 - SNMP	5	68.6%	HIGH
control_00013 - Passwords	5	75.7%	HIGH

Top Non-Compliant Devices

DEVICE	COMPLIANCE	FAILED CONTROLS	CRITICAL?
domain_config_02	86.7% (13/15)	2	
hostname_config_02	86.7% (13/15)	2	
local_enable_config_02	86.7% (13/15)	2	
local_enable_config_05	86.7% (13/15)	2	
local_user_config_04	86.7% (13/15)	2	
aaa_config_01	93.3% (14/15)	1	
aaa_config_02	93.3% (14/15)	1	
aaa_config_03	93.3% (14/15)	1	
aaa_config_04	93.3% (14/15)	1	
aaa_config_05	93.3% (14/15)	1	

Compliance Trend

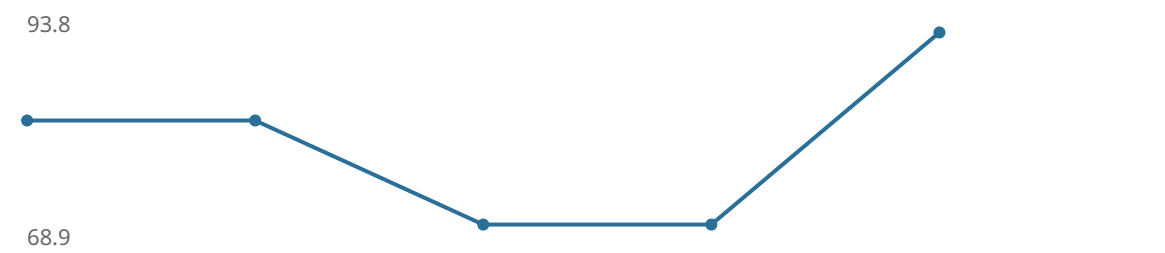

5 run(s) in history (compliance_history/).

	01	02	03	04	05	06	07	08	09	10	11
DEVICE	01	02	03	04	05	06	07	08	09	10	11
DOMAIN_CONFIG_02	OK	WARN	OK	OK	OK	WARN	OK	OK	OK	OK	OK
HOSTNAME_CONFIG_02	WARN	OK	OK	OK	OK	WARN	OK	OK	OK	OK	OK
LOCAL_ENABLE_CONFIG_02	OK	OK	OK	OK	WARN	OK	OK	OK	OK	OK	OK
LOCAL_ENABLE_CONFIG_05	OK	OK	OK	OK	WARN	OK	OK	OK	OK	OK	OK
LOCAL_USER_CONFIG_04	OK	OK	OK	OK	WARN	OK	OK	OK	OK	OK	OK
AAA_CONFIG_01	OK	OK	WARN	OK	OK	OK	OK	OK	OK	OK	OK
AAA_CONFIG_02	OK	OK	WARN	OK	OK	OK	OK	OK	OK	OK	OK
AAA_CONFIG_03	OK	OK	WARN	OK	OK	OK	OK	OK	OK	OK	OK
AAA_CONFIG_04	OK	OK	WARN	OK	OK	OK	OK	OK	OK	OK	OK
AAA_CONFIG_05	OK	OK	WARN	OK	OK	OK	OK	OK	OK	OK	OK
ACL_VTY_CONFIG_01	OK	OK	OK	OK	OK	OK	OK	WARN	OK	OK	OK
ACL_VTY_CONFIG_02	OK	OK	OK	OK	OK	OK	OK	WARN	OK	OK	OK
ACL_VTY_CONFIG_03	OK	OK	OK	OK	OK	OK	OK	WARN	OK	OK	OK
ACL_VTY_CONFIG_04	OK	OK	OK	OK	OK	OK	OK	WARN	OK	OK	OK
ACL_VTY_CONFIG_05	OK	OK	OK	OK	OK	OK	OK	WARN	OK	OK	OK
BANNER_CONFIG_01	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
BANNER_CONFIG_04	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
BANNER_CONFIG_05	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
DOMAIN_CONFIG_01	OK	WARN	OK	OK	OK	OK	OK	OK	OK	OK	OK
DOMAIN_CONFIG_03	OK	WARN	OK	OK	OK	OK	OK	OK	OK	OK	OK
DOMAIN_CONFIG_04	OK	WARN	OK	OK	OK	OK	OK	OK	OK	OK	OK
DOMAIN_CONFIG_05	OK	WARN	OK	OK	OK	OK	OK	OK	OK	OK	OK
HOSTNAME_CONFIG_05	WARN	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
LOCAL_ENABLE_CONFIG_01	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
LOCAL_ENABLE_CONFIG_03	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
LOCAL_ENABLE_CONFIG_04	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK	OK
LOCAL_USER_CONFIG_01	OK	OK	OK	OK	WARN	OK	OK	OK	OK	OK	OK
LOCAL_USER_CONFIG_02	OK	OK	OK	OK	WARN	OK	OK	OK	OK	OK	OK
LOCAL_USER_CONFIG_03	OK	OK	OK	OK	WARN	OK	OK	OK	OK	OK	OK

DEVICE	01	02	03	04	05	06	07	08	09	10	11
VTY_LINES_CONFIG_01											
VTY_LINES_CONFIG_02											
VTY_LINES_CONFIG_03											
VTY_LINES_CONFIG_04											
VTY_LINES_CONFIG_05											
BANNER_CONFIG_02											
BANNER_CONFIG_03											
HOSTNAME_CONFIG_01											
HOSTNAME_CONFIG_03											
HOSTNAME_CONFIG_04											
LOCAL_USER_CONFIG_05											
PASSWORD_ENCRYPTION_CONFIG_01											
SSH_CONFIG_01											
TACACS_CONFIG_04											
TACACS_CONFIG_05											

Legend: PASS FAIL APPROVED_EXCEPTION N_A MANUAL_REVIEW ASSESSMENT_ERROR NOT_ASSESSED

Device Detail

domain_config_02 - 86.7% (13/15)			
CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	FAIL	LOW	No 'ip domain name' command found in device configuration. Remediation: Apply the correct domain using: ip domain name <company_name>.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	FAIL	HIGH	IP domain-name is not configured. Remediation: Generate RSA keys with a minimum modulus of 2048 bits after setting the hostname and domain.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
HIGH			

CONTROL	STATUS	SEVERITY	FINDING
control_00013 - Passwords	PASS		'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

hostname_config_02 - 86.7% (13/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	FAIL	LOW	No 'hostname' command found in device configuration. Remediation: Configure the hostname following the corporate naming convention: <code>hostname <COMPANY>_<COUNTRY>_<TYPE>_<FUNCTION>_<SITE>_<DEPARTMENT></code>
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	FAIL	HIGH	Hostname is not configured. Remediation: Generate RSA keys with a minimum modulus of 2048 bits, configure the hostname and domain.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' o
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-e
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configura

local_enable_config_02 - 86.7% (13/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	FAIL	HIGH	No 'enable secret' command found in device configuration. Remediation: Configure a local admin user and 'enable secret' using high-security hashing algorithms like scrypt (type 8/9), consistently across all local accounts.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	FAIL	HIGH	Enable secret is missing. Remediation: Ensure an 'enable secret' and a privilege 15 local administrator account are present and secured.

local_enable_config_05 - 86.7% (13/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	FAIL	HIGH	No 'enable secret' command found in device configuration. Remediation: Configure a local admin user and 'enable secret' using high-security hashing algorithms like scrypt (type 8/9), consistently across all local accounts.

HIGH

CONTROL	STATUS	SEVERITY	FINDING
control_00006 - SSH	PASS		Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	FAIL	HIGH	Enable secret is missing. Remediation: Ensure an 'enable secret' and a privilege 15 local administrator account are present and secured.

local_user_config_04 - 86.7% (13/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00004 - TACACS			'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	FAIL	HIGH	No local emergency user with 'algorithm-type scrypt' found. Remediation: Configure a local admin user and 'enable secret' using high-security hashing algorithms like scrypt (type 8/9), consistently across all local accounts.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	FAIL	HIGH	Local administrator username 'admin_bckp' does not match the corporate standard 'admin'. Remediation: Ensure an 'enable secret' and a privilege 15 local administrator account are present and secured.

aaa_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	FAIL	HIGH	Required AAA command missing (expected to match '^aaa authentication login default group \S+ local'). Remediation: Implement the full AAA suite (Authentication, Authorization, and Accounting) pointing to the authorized TACACS group.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00014 - VTY Lines			Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

aaa_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	FAIL	HIGH	Required AAA command missing (expected to match '^aaa authentication enable default group \S+ enable'). Remediation: Implement the full AAA suite (Authentication, Authorization, and Accounting) pointing to the authorized TACACS group.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

aaa_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	FAIL	HIGH	Required AAA command missing (expected to match '^aaa authorization config-commands'). Remediation: Implement the full AAA suite (Authentication, Authorization, and Accounting) pointing to the authorized TACACS group.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
HIGH			

CONTROL	STATUS	SEVERITY	FINDING
control_00008 - ACL for VTY	PASS		'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

aaa_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	FAIL	HIGH	Required AAA command missing (expected to match '^aaa authorization exec default group \S+ local if-authenticated'). Remediation: Implement the full AAA suite (Authentication, Authorization, and Accounting) pointing to the authorized TACACS group.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00005 - Local and emergency users			'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

aaa_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
	FAIL	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00003 - AAA			Required AAA command missing (expected to match '^aaa accounting commands 15 default start-stop group \S+'). Remediation: Implement the full AAA suite (Authentication, Authorization, and Accounting) pointing to the authorized TACACS group.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

acl_vty_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	FAIL	HIGH	ACL 'ACME_VTY_MGMT_ACL' rule #1: expected 'deny ip any 173.245.48.0 0.0.15.255', found 'deny ip any 103.21.244.0 0.0.3.255'. Remediation: Apply the corporate-standard ACL content, in order, inside the VTY configuration module.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
			'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

acl_vty_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	FAIL	HIGH	ACL 'ACME_VTY_MGMT_ACL' rule #2: expected 'deny ip any 103.21.244.0 0.0.3.255', found 'deny ip any 103.21.244.0 0.0.255.255'. Remediation: Apply the corporate-standard ACL content, in order, inside the VTY configuration module.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-

CONTROL	STATUS	SEVERITY	FINDING
			key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

acl_vty_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.

CONTROL	STATUS	SEVERITY	FINDING
control_00008 - ACL for VTY	FAIL	HIGH	ACL 'ACME_VTY_MGMT_ACL' rule #16: expected 'permit tcp any any eq 22', found 'permit tcp any any eq 23'. Remediation: Apply the corporate-standard ACL content, in order, inside the VTY configuration module.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

acl_vty_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
emergency users			'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	FAIL	HIGH	ACL 'ACME_VTY_MGMT_ACL' rule #17: expected 'permit tcp any eq 22 any', found 'deny ip any any log'. Remediation: Apply the corporate-standard ACL content, in order, inside the VTY configuration module.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

acl_vty_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	FAIL	HIGH	ACL 'ACME_VTY_MGMT_ACL' rule #18: expected 'deny ip any any log', found 'nothing (ACL ends early)'. Remediation: Apply the corporate-standard ACL content, in order, inside the VTY configuration module.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.

CONTROL	STATUS	SEVERITY	FINDING
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

banner_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	FAIL	MEDIUM	'banner motd' is not configured. Remediation: Configure a 'banner motd' containing approved legal language regarding authorized access and monitoring.

CONTROL	STATUS	SEVERITY	FINDING
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

banner_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
HIGH			

CONTROL	STATUS	SEVERITY	FINDING
control_00011 - SNMP	PASS		'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	FAIL	MEDIUM	'banner motd' is not configured. Remediation: Configure a 'banner motd' containing approved legal language regarding authorized access and monitoring.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

banner_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	FAIL	MEDIUM	'banner motd' opening delimiter '\$' has no matching closing '\$' - the banner is malformed/incomplete. Remediation: Configure a 'banner motd' containing approved legal language regarding authorized access and monitoring.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

domain_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	FAIL	LOW	Domain 'name acme.net' does not match the corporate domain 'name acme.com'. Remediation: Apply the correct domain using: ip domain name <company_name>.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

domain_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	FAIL	LOW	Domain 'acme.com' does not match the corporate domain 'name acme.com'. Remediation: Apply the correct domain

CONTROL	STATUS	SEVERITY	FINDING
			using: ip domain name <company_name>.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

domain_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	FAIL	LOW	Domain 'name acme' does not match the corporate domain 'name acme.com'. Remediation: Apply the correct domain using: ip domain name <company_name>.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.

CONTROL	STATUS	SEVERITY	FINDING
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

domain_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	FAIL	LOW	Domain 'name acme.local' does not match the corporate domain 'name acme.com'. Remediation: Apply the correct domain using: ip domain name <company_name>.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication- key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
	PASS	MEDIUM	

CONTROL	STATUS	SEVERITY	FINDING
control_00012 - Banners			'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

hostname_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	FAIL	LOW	Hostname 'ACME-USA-RT-INT-GOLDEN-01' does not follow the COMPANY_COUNTRY_TYPE_FUNCTION_SITE_DEVICE convention (expected at least 6 underscore-separated parts). Remediation: Configure the hostname following the corporate naming convention. hostname <COMPANY>_<COUNTRY>_<TYPE>_<FUNCTION>_<SITE>_<DEVICE>
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
	PASS	MEDIUM	

CONTROL	STATUS	SEVERITY	FINDING
control_00009 - NTP			'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and 'access-list'.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

local_enable_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00008 - ACL for VTY			'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	FAIL	HIGH	Local administrator with privilege 15 is not created. Remediation: Ensure an 'enable secret' and a privilege 15 local administrator account are present and secured.

local_enable_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00006 - SSH			Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	FAIL	HIGH	Local administrator 'admin': privilege level is '1', expected 15. Remediation: Ensure an 'enable secret' and a privilege 15 local administrator account are present and secured.

local_enable_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	FAIL	HIGH	Local administrator username 'administrator' does not match the corporate standard 'admin'. Remediation: Ensure an 'enable secret' and a privilege 15 local administrator account are present and secured.

local_user_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
LOW			

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS		The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	FAIL	HIGH	Emergency user name 'admin_backup' does not match the corporate standard 'admin_bckp'. Remediation: Configure a local admin user and 'enable secret' using high-security hashing algorithms like scrypt (type 8/9), consistently across all local accounts.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00014 - VTY Lines			Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

local_user_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	FAIL	HIGH	No local emergency user with 'algorithm-type scrypt' found. Remediation: Configure a local admin user and 'enable secret' using high-security hashing algorithms like scrypt (type 8/9), consistently across all local accounts.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00011 - SNMP			'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

local_user_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	FAIL	HIGH	Emergency user 'admin_bckp': privilege level is '1', expected 15. Remediation: Configure a local admin user and 'enable secret' using high-security hashing algorithms like scrypt (type 8/9), consistently across all local accounts.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

ntp_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running

CONTROL	STATUS	SEVERITY	FINDING
control_00007 - Global password encryption			configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	FAIL	MEDIUM	NTP server '10.10.10.200' does not match any corporate NTP server (['10.10.10.100', '20.20.20.100']). Remediation: Configure at least two reliable NTP servers, use the 'prefer' keyword for the primary source, and enable NTP authentication.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

ntp_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	FAIL	MEDIUM	NTP server '20.20.20.200' does not match any corporate NTP server (['10.10.10.100', '20.20.20.100']). Remediation: Configure at least two reliable NTP servers, use the 'prefer' keyword for the primary source, and enable NTP authentication.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

ntp_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	FAIL	MEDIUM	NTP authentication is not configured ('ntp authenticate' / 'ntp authentication-key' / 'ntp trusted-key' missing). Remediation: Configure at least two reliable NTP servers, use the 'prefer' keyword for the primary source, and enable NTP authentication.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00015 - Local user and enable secret			

ntp_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	FAIL	MEDIUM	'ntp trusted-key 2' does not match 'ntp authentication-key 1'. Remediation: Configure at least two reliable NTP servers, use the 'prefer' keyword for the primary source, and enable NTP authentication.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00013 - Passwords			'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

ntp_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	FAIL	MEDIUM	'ntp server 10.10.10.100 key 2 prefer': references key '2', expected '1'. Remediation: Configure at least two reliable NTP servers, use the 'prefer' keyword for the primary source, and enable NTP authentication.
PASS		MEDIUM	

CONTROL	STATUS	SEVERITY	FINDING
control_00010 - Syslog			'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

password_encryption_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	FAIL	HIGH	'key config-key password-encrypt <device_master_key>' is missing. Remediation: Apply 'key config-key password-encrypt <device_master_key>' and 'password encryption aes' on the device.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00008 - ACL for VTY			'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

password_encryption_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.

CONTROL	STATUS	SEVERITY	FINDING
control_00007 - Global password encryption	FAIL	HIGH	'password encryption aes' is missing. Remediation: Apply 'key config-key password-encrypt <device_master_key>' and 'password encryption aes' on the device.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

password_encryption_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
			'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	FAIL	HIGH	'key config-key password-encrypt' uses a weak/guessable master key value. Remediation: Apply 'key config-key password-encrypt <device_master_key>' and 'password encryption aes' on the device.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

password_encryption_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	FAIL	HIGH	'key config-key password-encrypt <device_master_key>' is missing. Remediation: Apply 'key config-key password-encrypt <device_master_key>' and 'password encryption aes' on the device.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00015 - Local user and enable secret			'enable secret' and 'username ... privilege 15' in configuration.

passwords_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	FAIL	HIGH	'security passwords min-length' is set to 8, below the required minimum of 10.

CONTROL	STATUS	SEVERITY	FINDING
			Remediation: Set a global minimum password length (at least 10) and enable the password encryption service.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

passwords_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	FAIL	HIGH	'security passwords min-length' is not configured. Remediation: Set a global minimum password length (at least 10) and enable the password encryption service.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

passwords_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	FAIL	HIGH	'service password-encryption' is missing. Remediation: Set a global minimum password length (at least 10) and enable the password encryption service.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

passwords_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.

CONTROL	STATUS	SEVERITY	FINDING
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	FAIL	HIGH	'service password-encryption' is missing. Remediation: Set a global minimum password length (at least 10) and enable the password encryption service.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

passwords_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00004 - TACACS			'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	FAIL	HIGH	'security passwords min-length' is set to 1, below the required minimum of 10. Remediation: Set a global minimum password length (at least 10) and enable the password encryption service.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

snmp_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	FAIL	HIGH	'snmp-server user' references group 'acme_snmp_grp01', which has no matching 'snmp-server group acme_snmp_grp01 v3 priv' definition.; SNMP group 'acme_snmp_grp02' does not match the corporate group 'acme_snmp_grp01'. Remediation: Use SNMPv3 with authentication (SHA) and privacy (AES) exclusively; remove any SNMPv1/v2c community strings.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

snmp_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
HIGH			

CONTROL	STATUS	SEVERITY	FINDING
control_00011 - SNMP	FAIL		SNMP trap host '40.40.40.200' does not match the corporate host '40.40.40.100'. Remediation: Use SNMPv3 with authentication (SHA) and privacy (AES) exclusively; remove any SNMPv1/v2c community strings.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

snmp_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00008 - ACL for VTY			'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	FAIL	HIGH	SNMP trap host is missing. Remediation: Use SNMPv3 with authentication (SHA) and privacy (AES) exclusively; remove any SNMPv1/v2c community strings.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

snmp_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	FAIL	HIGH	'snmp-server enable traps' command is missing. Remediation: Use SNMPv3 with authentication (SHA) and privacy (AES) exclusively; remove any SNMPv1/v2c community strings.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

snmp_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
HIGH			

CONTROL	STATUS	SEVERITY	FINDING
control_00003 - AAA	PASS		All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	FAIL	HIGH	SNMPv3 user is not created with SHA/AES configuration. Remediation: Use SNMPv3 with authentication (SHA) and privacy (AES) exclusively; remove any SNMPv1/v2c community strings.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

ssh_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	FAIL	HIGH	'crypto key generate rsa modulus <bits>' is missing - SSH cannot function without it. Remediation: Generate RSA keys with a minimum modulus of 2048 bits after setting the hostname and domain.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.

CONTROL	STATUS	SEVERITY	FINDING
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

ssh_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	FAIL	HIGH	'ip ssh version' is set to '1', expected '2' per corporate standard. Remediation: Generate RSA keys with a minimum modulus of 2048 bits after setting the hostname and domain.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
	PASS	MEDIUM	

CONTROL	STATUS	SEVERITY	FINDING
control_00012 - Banners			'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

ssh_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	FAIL	HIGH	'ip ssh time-out' is set to '120', expected '60' per corporate standard. Remediation: Generate RSA keys with a minimum modulus of 2048 bits after setting the hostname and domain.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-

CONTROL	STATUS	SEVERITY	FINDING
			key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

ssh_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	FAIL	HIGH	'ip ssh authentication-retries' is set to '5', expected '3' per corporate standard. Remediation: Generate RSA keys with a minimum modulus of 2048 bits after setting the hostname and domain.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00007 - Global password encryption			'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

syslog_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00005 - Local and emergency users			
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	FAIL	MEDIUM	Logging host '30.30.30.200' does not match the corporate syslog server '30.30.30.100'. Remediation: Enable global logging and point it to a secure, external syslog server with an informational trap level.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

syslog_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	FAIL	MEDIUM	'logging on' command is missing. Remediation: Enable global logging and point it to a secure, external syslog server with an informational trap level.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

syslog_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	FAIL	MEDIUM	Logging trap level is not set to 'informational'. Remediation: Enable global logging and point it to a secure, external syslog server with an informational trap level.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
			Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

syslog_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	FAIL	MEDIUM	'logging source-interface' ('source-interface loopback1') does not match the corporate standard ('source-interface loopback0'). Remediation: Enable global logging and point it to a secure, external syslog server with an informational trap level.

CONTROL	STATUS	SEVERITY	FINDING
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

syslog_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-

CONTROL	STATUS	SEVERITY	FINDING
			key' lines, and 'show ntp associations' output.
control_00010 - Syslog	FAIL	MEDIUM	Logging host IP address is missing. Remediation: Enable global logging and point it to a secure, external syslog server with an informational trap level.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

tacacs_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	FAIL	HIGH	'tacacs server ACME_TACACS_01': address '192.168.100.201' does not match the corporate TACACS server address '192.168.100.101'. Remediation: Define the TACACS+ servers with the appropriate keys and timeouts as specified by the security policy, using Type 6 key encryption instead of Type 7.
PASS		HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00005 - Local and emergency users			'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

tacacs_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00003 - AAA			All 'aaa' commands in the running configuration.
control_00004 - TACACS	FAIL	HIGH	'tacacs server ACME_TACACS_02': address '192.168.100.202' does not match the corporate TACACS server address '192.168.100.102'. Remediation: Define the TACACS+ servers with the appropriate keys and timeouts as specified by the security policy, using Type 6 key encryption instead of Type 7.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00015 - Local user and enable secret			'enable secret' and 'username ... privilege 15' in configuration.

tacacs_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	FAIL	HIGH	'tacacs server ACME_TACACS_PRIMARY': server name does not match the corporate TACACS server name 'ACME_TACACS_01'.; 'aaa group server tacacs+ ACME_TACACS_SERVER_GROUP': references server 'ACME_TACACS_01', which has no matching 'tacacs server ACME_TACACS_01' definition. Remediation: Define the TACACS+ servers with the appropriate keys and timeouts as specified by the security policy, using Type 6 key encryption instead of Type 7.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key'

CONTROL	STATUS	SEVERITY	FINDING
			lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

vty_lines_config_01 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running

CONTROL	STATUS	SEVERITY	FINDING
			configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	FAIL	HIGH	'line vty 0 4': no 'access-class' ACL is bound to this VTY line. Remediation: Apply 'exec-timeout' and a password on all access lines; use 'login local' on console and 'login authentication default' on VTY; restrict transport input and output to secure protocols; bind VTY lines to a named ACL via 'access-class <name> in'.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

vty_lines_config_02 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00004 - TACACS			'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	FAIL	HIGH	'line vty 5 15': no 'access-class' ACL is bound to this VTY line. Remediation: Apply 'exec-timeout' and a password on all access lines; use 'login local' on console and 'login authentication default' on VTY; restrict transport input and output to secure protocols; bind VTY lines to a named ACL via 'access-class <name> in'.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

vty_lines_config_03 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	FAIL	HIGH	'line vty 0 4': 'transport input' is not restricted to secure protocols. Remediation: Apply 'exec-timeout' and a password on all access lines; use 'login local' on console and 'login authentication default' on VTY; restrict transport input

CONTROL	STATUS	SEVERITY	FINDING
			and output to secure protocols; bind VTY lines to a named ACL via 'access-class <name> in'.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

vty_lines_config_04 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
	PASS	MEDIUM	

CONTROL	STATUS	SEVERITY	FINDING
control_00012 - Banners			'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	FAIL	HIGH	'line vty 0 4': 'login authentication default' is missing. Remediation: Apply 'exec-timeout' and a password on all access lines; use 'login local' on console and 'login authentication default' on VTY; restrict transport input and output to secure protocols; bind VTY lines to a named ACL via 'access-class <name> in'.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

vty_lines_config_05 - 93.3% (14/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	FAIL	HIGH	'line vty 5 15': 'exec-timeout 0 0' disables session timeout entirely (sessions never expire). Remediation: Apply 'exec-timeout' and a password on all access lines; use 'login local' on console and 'login authentication default' on VTY; restrict transport input and output to secure protocols; bind VTY lines to a named ACL via 'access-class <name> in'.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

banner_config_02 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00005 - Local and emergency users			
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

banner_config_03 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00003 - AAA			All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

hostname_config_01 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
	PASS	LOW	

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname			The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

hostname_config_03 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
	PASS	HIGH	

CONTROL	STATUS	SEVERITY	FINDING
control_00015 - Local user and enable secret			'enable secret' and 'username ... privilege 15' in configuration.

hostname_config_04 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.

CONTROL	STATUS	SEVERITY	FINDING
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

local_user_config_05 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
	PASS	MEDIUM	

CONTROL	STATUS	SEVERITY	FINDING
control_00012 - Banners			'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

password_encryption_config_01 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
	PASS	MEDIUM	

CONTROL	STATUS	SEVERITY	FINDING
control_00010 - Syslog			'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

ssh_config_01 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

tacacs_config_04 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running

CONTROL	STATUS	SEVERITY	FINDING
control_00007 - Global password encryption			configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

tacacs_config_05 - 100.0% (15/15)

CONTROL	STATUS	SEVERITY	FINDING
control_00001 - Hostname	PASS	LOW	The 'hostname' line in the running configuration.
control_00002 - Domain	PASS	LOW	The 'ip domain name' command in the running configuration.
control_00003 - AAA	PASS	HIGH	All 'aaa' commands in the running configuration.
control_00004 - TACACS	PASS	HIGH	'tacacs server' definitions and keys in the running configuration.
control_00005 - Local and emergency users	PASS	HIGH	'username' and 'enable secret' lines in the running configuration.

CONTROL	STATUS	SEVERITY	FINDING
control_00006 - SSH	PASS	HIGH	Output of 'show ip ssh' or absence of zeroize commands.
control_00007 - Global password encryption	PASS	HIGH	'key 6 <encrypted_string>' format on sensitive keys in the running configuration, and 'password encryption aes' present.
control_00008 - ACL for VTY	PASS	HIGH	'ip access-list extended' in the running configuration.
control_00009 - NTP	PASS	MEDIUM	'ntp server' lines, 'ntp authenticate'/'ntp authentication-key' lines, and 'show ntp associations' output.
control_00010 - Syslog	PASS	MEDIUM	'logging' commands in the running configuration.
control_00011 - SNMP	PASS	HIGH	'snmp-server' configuration lines and 'show snmp user' output.
control_00012 - Banners	PASS	MEDIUM	'banner motd' section in the running configuration.
control_00013 - Passwords	PASS	HIGH	'security passwords min-length' and 'service password-encryption' commands.
control_00014 - VTY Lines	PASS	HIGH	Configuration blocks for 'line console 0' and 'line vty', and the referenced access-list.
control_00015 - Local user and enable secret	PASS	HIGH	'enable secret' and 'username ... privilege 15' in configuration.

Control Detail

control_00001 - Hostname (97.3% compliant, 2 affected)

DEVICE	STATUS	FINDING
hostname_config_02	FAIL	No 'hostname' command found in device configuration.
hostname_config_05	FAIL	Hostname 'ACME-USA-RT-INT-GOLDEN-01' does not follow COMPANY_COUNTRY_TYPE_FUNCTION_SITE_DEVICE convention (expected at least 6 underscore-separated parts).

control_00002 - Domain (93.3% compliant, 5 affected)

DEVICE	STATUS	FINDING
domain_config_01	FAIL	Domain 'name acme.net' does not match the corporate domain 'name acme.com'.
domain_config_02	FAIL	No 'ip domain name' command found in device configuration.
domain_config_03	FAIL	Domain 'acme.com' does not match the corporate domain 'name acme.com'.
domain_config_04	FAIL	Domain 'name acme' does not match the corporate domain 'name acme.com'.
domain_config_05	FAIL	Domain 'name acme.local' does not match the corporate domain 'name acme.com'.

control_00003 - AAA (93.3% compliant, 5 affected)

DEVICE	STATUS	FINDING
aaa_config_01	FAIL	Required AAA command missing (expected to match '^aaa authentication login default group \S+ local').
aaa_config_02	FAIL	Required AAA command missing (expected to match '^aaa authentication enable default group \S+ enable').
aaa_config_03	FAIL	Required AAA command missing (expected to match '^aaa authorization config-commands').
aaa_config_04	FAIL	Required AAA command missing (expected to match '^aaa authorization exec default group \S+ local if-authenticated').
aaa_config_05	FAIL	

DEVICE	STATUS	FINDING
		Required AAA command missing (expected to match '^aaa accounting commands 15 default start-stop group \S+').

control_00004 - TACACS (96.0% compliant, 3 affected)

DEVICE	STATUS	FINDING
tacacs_config_01	FAIL	'tacacs server ACME_TACACS_01': address '192.168.100.201' does not match the corporate TACACS server address '192.168.100.101'.
tacacs_config_02	FAIL	'tacacs server ACME_TACACS_02': address '192.168.100.202' does not match the corporate TACACS server address '192.168.100.102'.
tacacs_config_03	FAIL	'tacacs server ACME_TACACS_PRIMARY': server name does not match the corporate TACACS server name 'ACME_TACACS_01'.; 'aaa group server tacacs+ ACME_TACACS_SERVER_GROUP': references server 'ACME_TACACS_01', which has no matching 'tacacs server ACME_TACACS_01' definition.

control_00005 - Local and emergency users (92.0% compliant, 6 affected)

DEVICE	STATUS	FINDING
local_enable_config_02	FAIL	No 'enable secret' command found in device configuration.
local_enable_config_05	FAIL	No 'enable secret' command found in device configuration.
local_user_config_01	FAIL	Emergency user name 'admin_backup' does not match the corporate standard 'admin_bckp'.
local_user_config_02	FAIL	No local emergency user with 'algorithm-type scrypt' found.
local_user_config_03	FAIL	Emergency user 'admin_bckp': privilege level is '1', expected 15.
local_user_config_04	FAIL	No local emergency user with 'algorithm-type scrypt' found.

control_00006 - SSH (92.0% compliant, 6 affected)

DEVICE	STATUS	FINDING
domain_config_02	FAIL	IP domain-name is not configured.
hostname_config_02	FAIL	Hostname is not configured.
ssh_config_02	FAIL	'crypto key generate rsa modulus <bits>' is missing - SSH cannot function without it.
ssh_config_03	FAIL	'ip ssh version' is set to '1', expected '2' per corporate standard.
ssh_config_04	FAIL	'ip ssh time-out' is set to '120', expected '60' per corporate standard.
ssh_config_05	FAIL	'ip ssh authentication-retries' is set to '5', expected '3' per corporate standard.

control_00007 - Global password encryption (94.7% compliant, 4 affected)

DEVICE	STATUS	FINDING
password_encryption_config_02	FAIL	'key config-key password-encrypt <device_master_key>' is missing.
password_encryption_config_03	FAIL	'password encryption aes' is missing.
password_encryption_config_04	FAIL	'key config-key password-encrypt' uses a weak/guessable master key value.
password_encryption_config_05	FAIL	'key config-key password-encrypt <device_master_key>' is missing.

control_00008 - ACL for VTY (93.3% compliant, 5 affected)

DEVICE	STATUS	FINDING
acl_vty_config_01	FAIL	ACL 'ACME_VTY_MGMT_ACL' rule #1: expected 'deny ip any 173.245.48.0 0.0.15.255', found 'deny ip any 103.21.244.0 0.0.3.255'.
acl_vty_config_02	FAIL	ACL 'ACME_VTY_MGMT_ACL' rule #2: expected 'deny ip any 103.21.244.0 0.0.3.255', found 'deny ip any 103.21.244.0 0.0.255.255'.

DEVICE	STATUS	FINDING
acl_vty_config_03	FAIL	ACL 'ACME_VTY_MGMT_ACL' rule #16: expected 'permit tcp any any eq 22', found 'permit tcp any any eq 23'.
acl_vty_config_04	FAIL	ACL 'ACME_VTY_MGMT_ACL' rule #17: expected 'permit tcp any eq 22 any', found 'deny ip any any log'.
acl_vty_config_05	FAIL	ACL 'ACME_VTY_MGMT_ACL' rule #18: expected 'deny ip any any log', found 'nothing (ACL ends early)'.

control_00009 - NTP (93.3% compliant, 5 affected)

DEVICE	STATUS	FINDING
ntp_config_01	FAIL	NTP server '10.10.10.200' does not match any corporate NTP server (['10.10.10.100', '20.20.20.100']).
ntp_config_02	FAIL	NTP server '20.20.20.200' does not match any corporate NTP server (['10.10.10.100', '20.20.20.100']).
ntp_config_03	FAIL	NTP authentication is not configured ('ntp authenticate' / 'ntp authentication-key' / 'ntp trusted-key' missing).
ntp_config_04	FAIL	'ntp trusted-key 2' does not match 'ntp authentication-key 1'.
ntp_config_05	FAIL	'ntp server 10.10.10.100 key 2 prefer': references key '2', expected '1'.

control_00010 - Syslog (93.3% compliant, 5 affected)

DEVICE	STATUS	FINDING
syslog_config_01	FAIL	Logging host '30.30.30.200' does not match the corporate syslog server '30.30.30.100'.
syslog_config_02	FAIL	'logging on' command is missing.
syslog_config_03	FAIL	Logging trap level is not set to 'informational'.
syslog_config_04	FAIL	'logging source-interface' ('source-interface loopback1') does not match the corporate standard ('source-interface loopback0').
syslog_config_05	FAIL	Logging host IP address is missing.

control_00011 - SNMP (93.3% compliant, 5 affected)

DEVICE	STATUS	FINDING
snmp_config_01	FAIL	'snmp-server user' references group 'acme_snmp_grp01', which has no matching 'snmp-server group acme_snmp_grp01 v3 priv' definition.; SNMP group 'acme_snmp_grp02' does not match the corporate group 'acme_snmp_grp01'.
snmp_config_02	FAIL	SNMP trap host '40.40.40.200' does not match the corporate host '40.40.40.100'.
snmp_config_03	FAIL	SNMP trap host is missing.
snmp_config_04	FAIL	'snmp-server enable traps' command is missing.
snmp_config_05	FAIL	SNMPv3 user is not created with SHA/AES configuration.

control_00012 - Banners (96.0% compliant, 3 affected)

DEVICE	STATUS	FINDING
banner_config_01	FAIL	'banner motd' is not configured.
banner_config_04	FAIL	'banner motd' is not configured.
banner_config_05	FAIL	'banner motd' opening delimiter '\$' has no matching closing '\$' - the banner is malformed/incomplete.

control_00013 - Passwords (93.3% compliant, 5 affected)

DEVICE	STATUS	FINDING
passwords_config_01	FAIL	'security passwords min-length' is set to 8, below the required minimum of 10.
passwords_config_02	FAIL	'security passwords min-length' is not configured.
passwords_config_03	FAIL	'service password-encryption' is missing.
passwords_config_04	FAIL	'service password-encryption' is missing.
passwords_config_05	FAIL	'security passwords min-length' is set to 1, below the required minimum of 10.

control_00014 - VTY Lines (93.3% compliant, 5 affected)

DEVICE	STATUS	FINDING
vty_lines_config_01	FAIL	'line vty 0 4': no 'access-class' ACL is bound to this VTY line.
vty_lines_config_02	FAIL	'line vty 5 15': no 'access-class' ACL is bound to this VTY line.
vty_lines_config_03	FAIL	'line vty 0 4': 'transport input' is not restricted to secure protocols.
vty_lines_config_04	FAIL	'line vty 0 4': 'login authentication default' is missing.
vty_lines_config_05	FAIL	'line vty 5 15': 'exec-timeout 0 0' disables session timeout entirely (sessions never expire).

control_00015 - Local user and enable secret (92.0% compliant, 6 affected)

DEVICE	STATUS	FINDING
local_enable_config_01	FAIL	Local administrator with privilege 15 is not created.
local_enable_config_02	FAIL	Enable secret is missing.
local_enable_config_03	FAIL	Local administrator 'admin': privilege level is '1', expected 15.
local_enable_config_04	FAIL	Local administrator username 'administrator' does not match the corporate standard 'admin'.
local_enable_config_05	FAIL	Enable secret is missing.
local_user_config_04	FAIL	Local administrator username 'admin_bckp' does not match the corporate standard 'admin'.

Findings & Remediation

PRIORITY	DEVICE	CONTROL	FINDING
HIGH	aaa_config_01	control_00003 - AAA	Required AAA command missing (authentication login default group 'default').
HIGH	aaa_config_02	control_00003 - AAA	Required AAA command missing (authentication enable default group 'default').
HIGH	aaa_config_03	control_00003 - AAA	Required AAA command missing (authorization config-commands').
HIGH	aaa_config_04	control_00003 - AAA	Required AAA command missing (authorization exec default group 'default').
HIGH	aaa_config_05	control_00003 - AAA	Required AAA command missing (accounting commands 15 default group 'default').
HIGH	acl_vty_config_01	control_00008 - ACL for VTY	ACL 'ACME_VTY_MGMT_ACL' rule 173.245.48.0 0.0.15.255', found 'deny ip 173.245.48.0 0.0.15.255 any eq 22'.
HIGH	acl_vty_config_02	control_00008 - ACL for VTY	ACL 'ACME_VTY_MGMT_ACL' rule 103.21.244.0 0.0.3.255', found 'deny ip 103.21.244.0 0.0.3.255 any eq 22'.
HIGH	acl_vty_config_03	control_00008 - ACL for VTY	ACL 'ACME_VTY_MGMT_ACL' rule 103.21.244.0 0.0.3.255', found 'deny ip 103.21.244.0 0.0.3.255 any eq 22'.
HIGH	acl_vty_config_04	control_00008 - ACL for VTY	ACL 'ACME_VTY_MGMT_ACL' rule 103.21.244.0 0.0.3.255', found 'deny ip 103.21.244.0 0.0.3.255 any eq 22'.
HIGH	acl_vty_config_05	control_00008 - ACL for VTY	ACL 'ACME_VTY_MGMT_ACL' rule 103.21.244.0 0.0.3.255', found 'deny ip 103.21.244.0 0.0.3.255 any eq 22'.
HIGH	domain_config_02	control_00006 - SSH	IP domain-name is not configured.
HIGH	hostname_config_02	control_00006 - SSH	Hostname is not configured.
HIGH	local_enable_config_01	control_00015 - Local user and enable secret	Local administrator with privilege 15 is not configured.
HIGH	local_enable_config_02	control_00005 - Local and emergency users	No 'enable secret' command found.

PRIORITY	DEVICE	CONTROL	FINDING
HIGH	local_enable_config_02	control_00015 - Local user and enable secret	Enable secret is missing.
HIGH	local_enable_config_03	control_00015 - Local user and enable secret	Local administrator 'admin': privile
HIGH	local_enable_config_04	control_00015 - Local user and enable secret	Local administrator username 'adm corporate standard 'admin'.
HIGH	local_enable_config_05	control_00005 - Local and emergency users	No 'enable secret' command found
HIGH	local_enable_config_05	control_00015 - Local user and enable secret	Enable secret is missing.
HIGH	local_user_config_01	control_00005 - Local and emergency users	Emergency user name 'admin_bac standard 'admin_bckp'.
HIGH	local_user_config_02	control_00005 - Local and emergency users	No local emergency user with 'al
HIGH	local_user_config_03	control_00005 - Local and emergency users	Emergency user 'admin_bckp': pri
HIGH	local_user_config_04	control_00005 - Local and emergency users	No local emergency user with 'al
HIGH	local_user_config_04	control_00015 - Local user and enable secret	Local administrator username 'adm corporate standard 'admin'.
HIGH	password_encryption_config_02		'key config-key password-encrypt

PRIORITY	DEVICE	CONTROL	FINDING
		control_00007 - Global password encryption	
HIGH	password_encryption_config_03	control_00007 - Global password encryption	'password encryption aes' is missing.
HIGH	password_encryption_config_04	control_00007 - Global password encryption	'key config-key password-encryption' key value.
HIGH	password_encryption_config_05	control_00007 - Global password encryption	'key config-key password-encryption' key value.
HIGH	passwords_config_01	control_00013 - Passwords	'security passwords min-length' is minimum of 10.
HIGH	passwords_config_02	control_00013 - Passwords	'security passwords min-length' is minimum of 10.
HIGH	passwords_config_03	control_00013 - Passwords	'service password-encryption' is missing.
HIGH	passwords_config_04	control_00013 - Passwords	'service password-encryption' is missing.
HIGH	passwords_config_05	control_00013 - Passwords	'security passwords min-length' is minimum of 10.
HIGH	snmp_config_01	control_00011 - SNMP	'snmp-server user' references group 'acme_snmp_group' but no matching 'snmp-server group' definition.; SNMP group 'acme_snmp_group' is not defined.
HIGH	snmp_config_02	control_00011 - SNMP	SNMP trap host '40.40.40.200' does not match '40.40.40.100'.
HIGH	snmp_config_03	control_00011 - SNMP	SNMP trap host is missing.
HIGH	snmp_config_04	control_00011 - SNMP	'snmp-server enable traps' command is missing.
HIGH	snmp_config_05	control_00011 - SNMP	SNMPv3 user is not created with 'snmp-server user' command.

PRIORITY	DEVICE	CONTROL	FINDING
HIGH	ssh_config_02	control_00006 - SSH	'crypto key generate rsa modulus' function without it.
HIGH	ssh_config_03	control_00006 - SSH	'ip ssh version' is set to '1', expecting '2'.
HIGH	ssh_config_04	control_00006 - SSH	'ip ssh time-out' is set to '120', expecting '0'.
HIGH	ssh_config_05	control_00006 - SSH	'ip ssh authentication-retries' is set to '4', expecting '0' (standard).
HIGH	tacacs_config_01	control_00004 - TACACS	'tacacs server ACME_TACACS_01' not match the corporate TACACS server.
HIGH	tacacs_config_02	control_00004 - TACACS	'tacacs server ACME_TACACS_02' not match the corporate TACACS server.
HIGH	tacacs_config_03	control_00004 - TACACS	'tacacs server ACME_TACACS_03' not match the corporate TACACS server. 'aaa group server tacacs+ ACME_TACACS_03' references server 'ACME_TACACS_01'.
HIGH	vty_lines_config_01	control_00014 - VTY Lines	'line vty 0 4': no 'access-class' ACL configured.
HIGH	vty_lines_config_02	control_00014 - VTY Lines	'line vty 5 15': no 'access-class' ACL configured.
HIGH	vty_lines_config_03	control_00014 - VTY Lines	'line vty 0 4': 'transport input' is not configured.
HIGH	vty_lines_config_04	control_00014 - VTY Lines	'line vty 0 4': 'login authentication' is not configured.
HIGH	vty_lines_config_05	control_00014 - VTY Lines	'line vty 5 15': 'exec-timeout 0 0' configured (sessions never expire).
MEDIUM	banner_config_01	control_00012 - Banners	'banner motd' is not configured.
MEDIUM	banner_config_04	control_00012 - Banners	'banner motd' is not configured.
MEDIUM	banner_config_05	control_00012 - Banners	'banner motd' opening delimiter '\$' not closed. banner is malformed/incomplete.
MEDIUM	ntp_config_01	control_00009 - NTP	NTP server '10.10.10.200' does not exist in allowed list (['10.10.10.100', '20.20.20.100']).
MEDIUM			

PRIORITY	DEVICE	CONTROL	FINDING
	ntp_config_02	control_00009 - NTP	NTP server '20.20.20.200' does not match the corporate standard ('10.10.10.100', '20.20.20.100').
MEDIUM	ntp_config_03	control_00009 - NTP	NTP authentication is not configured. 'ntp authentication-key' / 'ntp trusted-key'.
MEDIUM	ntp_config_04	control_00009 - NTP	'ntp trusted-key 2' does not match the corporate standard.
MEDIUM	ntp_config_05	control_00009 - NTP	'ntp server 10.10.10.100 key 2 pre shared-key' is missing. '1'.
MEDIUM	syslog_config_01	control_00010 - Syslog	Logging host '30.30.30.200' does not match the corporate standard '30.30.30.100'.
MEDIUM	syslog_config_02	control_00010 - Syslog	'logging on' command is missing.
MEDIUM	syslog_config_03	control_00010 - Syslog	Logging trap level is not set to 'informational'.
MEDIUM	syslog_config_04	control_00010 - Syslog	'logging source-interface' ('source-interface') is missing. match the corporate standard ('source-interface').
MEDIUM	syslog_config_05	control_00010 - Syslog	Logging host IP address is missing.
LOW	domain_config_01	control_00002 - Domain	Domain 'name acme.net' does not match the corporate standard 'name acme.com'.
LOW	domain_config_02	control_00002 - Domain	No 'ip domain name' command found in configuration.
LOW	domain_config_03	control_00002 - Domain	Domain 'acme.com' does not match the corporate standard acme.com'.
LOW	domain_config_04	control_00002 - Domain	Domain 'name acme' does not match the corporate standard acme.com'.
LOW	domain_config_05	control_00002 - Domain	Domain 'name acme.local' does not match the corporate standard 'name acme.com'.
LOW	hostname_config_02	control_00001 - Hostname	No 'hostname' command found in configuration.
LOW	hostname_config_05	control_00001 - Hostname	Hostname 'ACME-USA-RT-INT-GE-100' does not match the corporate standard COMPANY_COUNTRY_TYPE_FUNCTIONALITY convention (expected at least 6 underscores).