

TOTEM Keymap

as it is flashed today

A Miryoku-shaped layout on a 38-key split: five layers reached from the thumbs, modifiers living on the home row, and symbols pulled out of the layers into chords. Everything below is read straight from `totem.keymap` and `combos.dtsi`.

5 layers

30 combos

8 home-row mods


xiao_ble

totem_left · totem_right

☐ Plain key
 ☐ Hold = modifier
 ☐ Hold = layer
 ☐ Symbol
 ☐ Navigation & editing
☐ Bluetooth & media
 ▾ Falls through to base


L0 Base

Always on · QWERTY

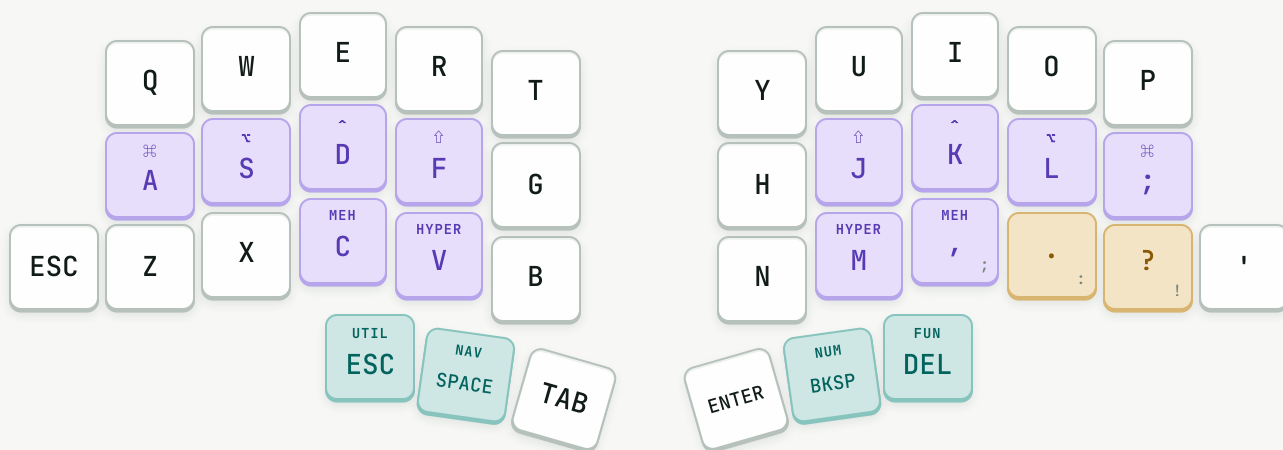


L1 Nav

Hold **space** · left middle thumb

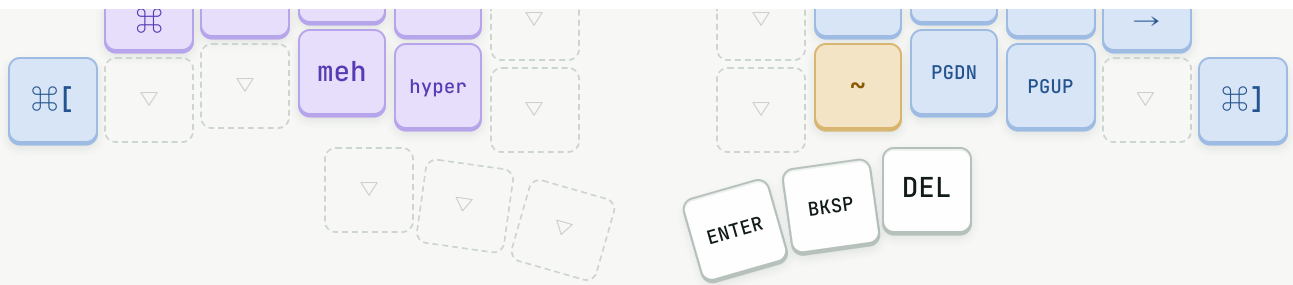


L2 Num

Hold **backspace** · right middle thumb

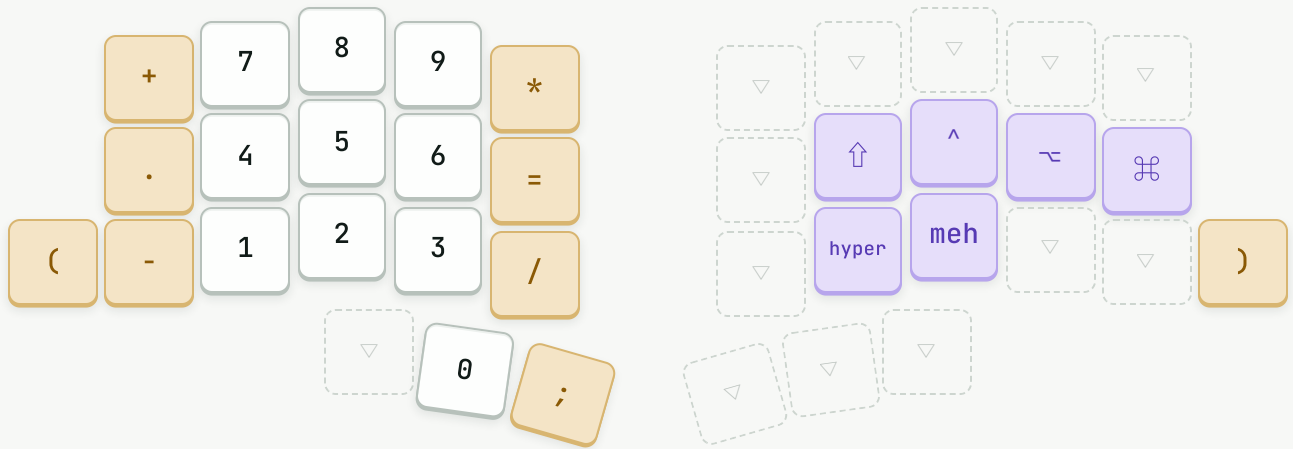


L3 Fun

Hold **delete** · right outer thumb

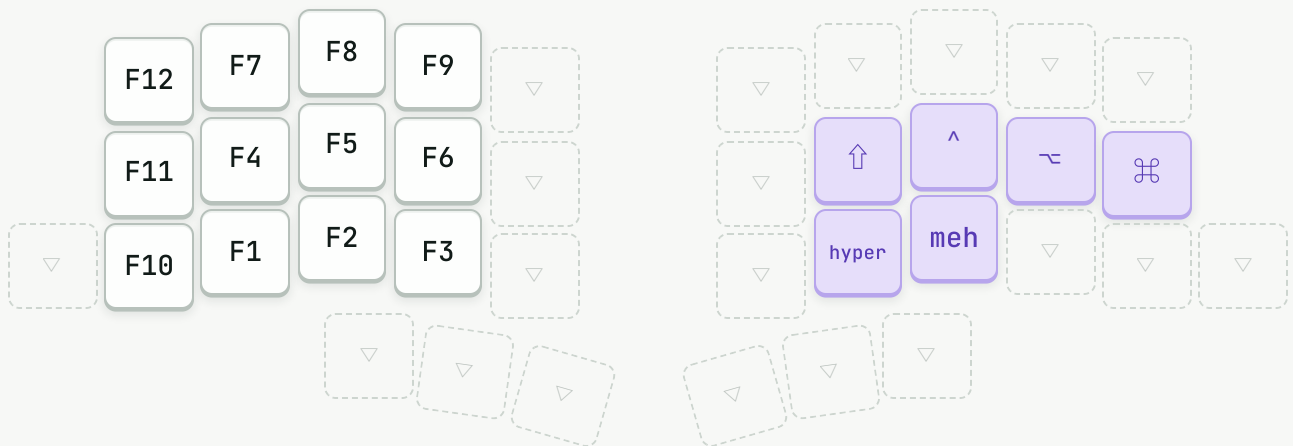


L4 Util

Hold **esc** · left outer thumb

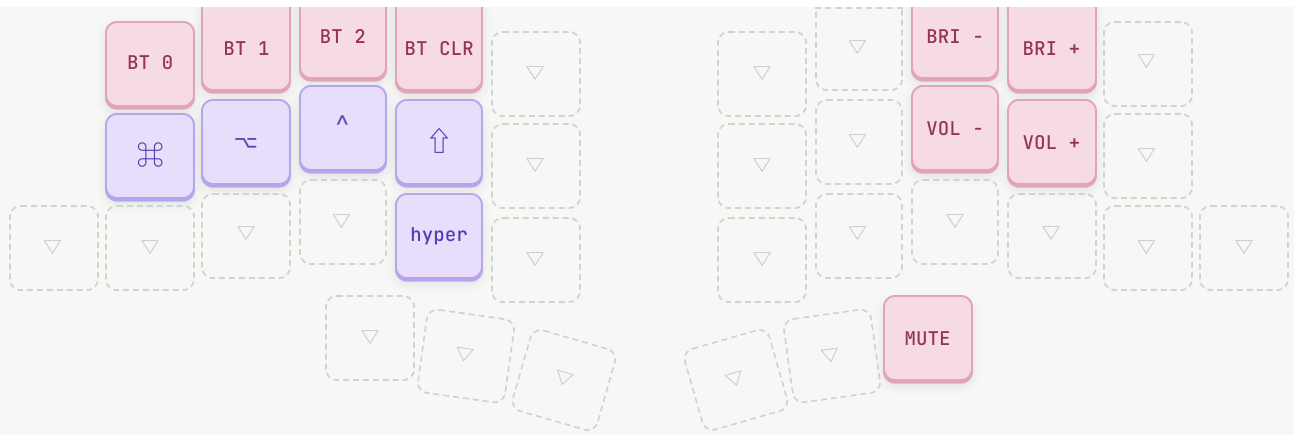

Combos

Live on Base, Nav and Num. Vertical pairs sit between the two keys that make them; the rest are listed underneath.

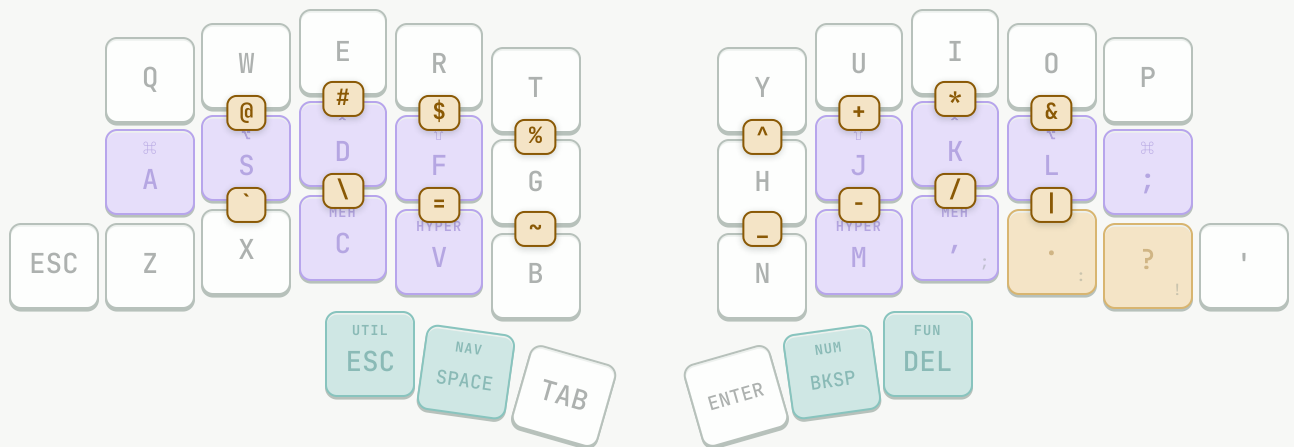

LEFT HAND · SAME ROW

W + E → {
E + R → (
W + E + R → [
Q + R → <

EDITING

X + C → ⌘C Copy
C + V → ⌘V Paste
X + V → ⌘X Cut

RIGHT HAND · SAME ROW

I + O → }
U + I →)
U + I + O →]
U + P → >

SHIFT

S + F → ⇧ Sticky shift · left
J + L → ⇨ Sticky shift · right
Z + X → CAPS Caps word

How the keys behave

HOME-ROW MODS

Balanced flavour, **280 ms** hold, **175 ms** quick-tap. Needs **125 ms** of idle first, only fires against the **opposite hand or a thumb**, and decides on release — so rolls never turn into modifiers.

COMBOS

20 ms window for same-row chords, **30 ms** for the vertical ones, after **100 ms** of idle.

CAPS WORD

Survives ☒ ⇧ ☒ _ -. ignore-number s is deleted, so a digit ends it.

MORPHING KEYS

Three keys change under shift: , becomes ; , . becomes . , and ? becomes !

LAYER TAPS

Balanced flavour, **200 ms** hold, **175 ms** quick-tap.

STICKY SHIFT

Holds for **2 s** or until the next key, with quick-release so it never doubles up.

KEY REPEAT

Repeats consumer keys as well as normal ones.

POWER & RADIO

Sleeps after **30 min** idle. Up to **4** Bluetooth connections and **4** pairings. USB logging off.