

NOMAD

Toronto · 725 Queen Street East

Technical Pack

VOID Acoustics Permanent Installation · April 2026

Capacity: 550 standing

System: VOID Acoustics · 18 speakers · 5 active amplifiers

DJ Equipment: 4× Pioneer CDJ-3000 · Pioneer DJM-V10 · Allen & Heath CQ-12T

DSP Control: Armonia Pro Audio Suite · 192.168.10.x

As-built: March 2026 · CQ-12T confirmed April 2026

Prepared by: Emblem Projects Inc. · admin+claudio@emblemprojects.com

Nomad Toronto — System Overview

Venue: NØMAD Toronto · 725 Queen Street East, Toronto, ON M4M 1H1 · 647-643-8823 · info@nomad725.ca

Capacity: 550 standing

System type: Permanent VOID Acoustics installation

Operated by: In-house production team

Prepared by: Emblem Projects Inc. · admin+claudio@emblemprojects.com

As-built date: March 2026 (Armonía-verified) · CQ-12T confirmed April 2026

Venue Summary

Nomad Toronto is a nightclub/bar venue with a permanent professional PA system. The system is designed for DJ-format events (4-deck setup) with full FOH sound reinforcement, DJ booth monitoring, and entrance fill.

Signal Chain (Quick Reference)

4x Pioneer CDJ-3000

| Pro DJ Link

Pioneer DJM-V10 (DJ mixer)

| Master XLR L/R | Booth XLR L/R

Allen & Heath CQ-12T (matrix mixer · FW 1.2.1 · IP 169.254.182.156)

| Main LR 0 dB | MonOut -32 dB | BakFil -34 dB

Drawmer SP2120 Q2 #1 Athens x2

(limiter/processor) (DJ booth) (entrance, self-pwr)

| XLR stereo

Bias V3 #2 "Outside Subs" [signal hub]

CH1 → Xair L-3 Line Out 1 → Q5 → Xair x4 (middle)

CH2 → Xair R-3 Line Out 2 → Q2 #2 → Air Motion x2 (bi-amp)

Line Out 3 → V3 #1 → Airten V3 x2

Speaker Zones

Zone	Speakers	Qty	Amplifier
FOH Mains	VOID Air Motion V2 Red	2	Bias Q2 #2 (bi-amp, 4ch)
FOH Fill	VOID Airten V3	2	Bias V3 #1
Outside Subs	VOID Stasys Xair (L-3, R-3)	2	Bias V3 #2 CH1/CH2
Middle Subs	VOID Stasys Xair (L-1/2, R-1/2)	4	Bias Q5 (4ch)
DJ Booth Monitors	VOID Air Vantage	2	Bias Q2 #1 CH1/CH2

DJ Booth Sub	VOID Venu 215 V2	2	Bias Q2 #1 CH3/CH4
Entrance	Athens TCS-AN (Turbosound)	2	Self-powered (CQ-12T BakFil)
Total		18	5 active amps

Amplifier Rack Summary

U	Device	Role	IP	Status
2	Drawmer SP2120	Stereo limiter	—	✔ Active
3	Bias V3 #1	Airten fills	192.168.10.13	✔ Active
4	Bias Q2 #1	DJ booth	192.168.10.12	✔ Active
5	Bias V9	OFFLINE	—	✖ Offline
6	Bias Q2 #2	Air Motion bi-amp	192.168.10.11	✔ Active
7	Bias V3 #2	Outside subs + hub	192.168.10.14	✔ Active
8	Bias Q5	Middle subs	192.168.10.10	✔ Active

DSP control: Armonía Pro Audio Suite · 192.168.10.x network

Mixer control: Allen & Heath MixPad app (iOS/Android) or front panel

DJ Equipment

Item	Model	Qty
Media player	Pioneer CDJ-3000	4
DJ mixer	Pioneer DJM-V10	1
Matrix mixer	Allen & Heath CQ-12T	1

Available inputs: CH5–CH10 on CQ-12T (unassigned — Mic/Line XLR-TRS combo)

Booth monitor feed: CQ-12T MonOut → Q2 #1 (–32 dB)


Entrance fill feed: CQ-12T BakFil → Athens self-powered (–34 dB)

Key Reference Documents


Document	Location
Full system spec (Rev 2.0)	01-source-documents/nomad-system-spec-v2.md
Cable schedule (41 cables)	07-tech-pack/cable-schedule.md
Signal flow diagram	07-tech-pack/signal-flow.svg
Rack elevation	07-tech-pack/rack-elevation.svg
Speaker zone map	07-tech-pack/speaker-zone-map.svg
Firmware changelog	06-reference-docs/firmware-changelog.md

02 System Diagrams

Rack Elevation

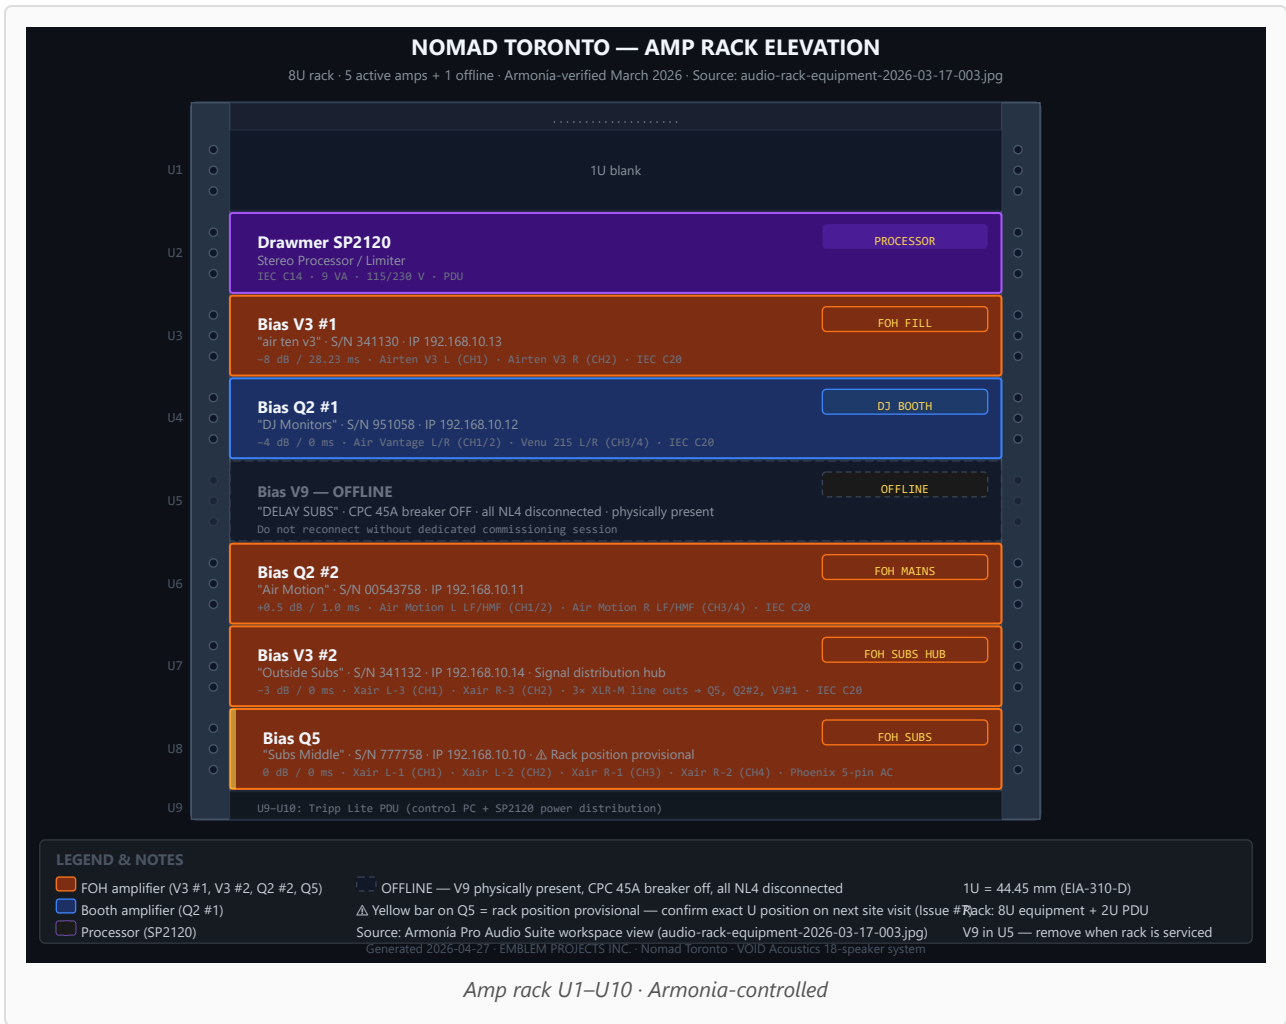

Signal Flow

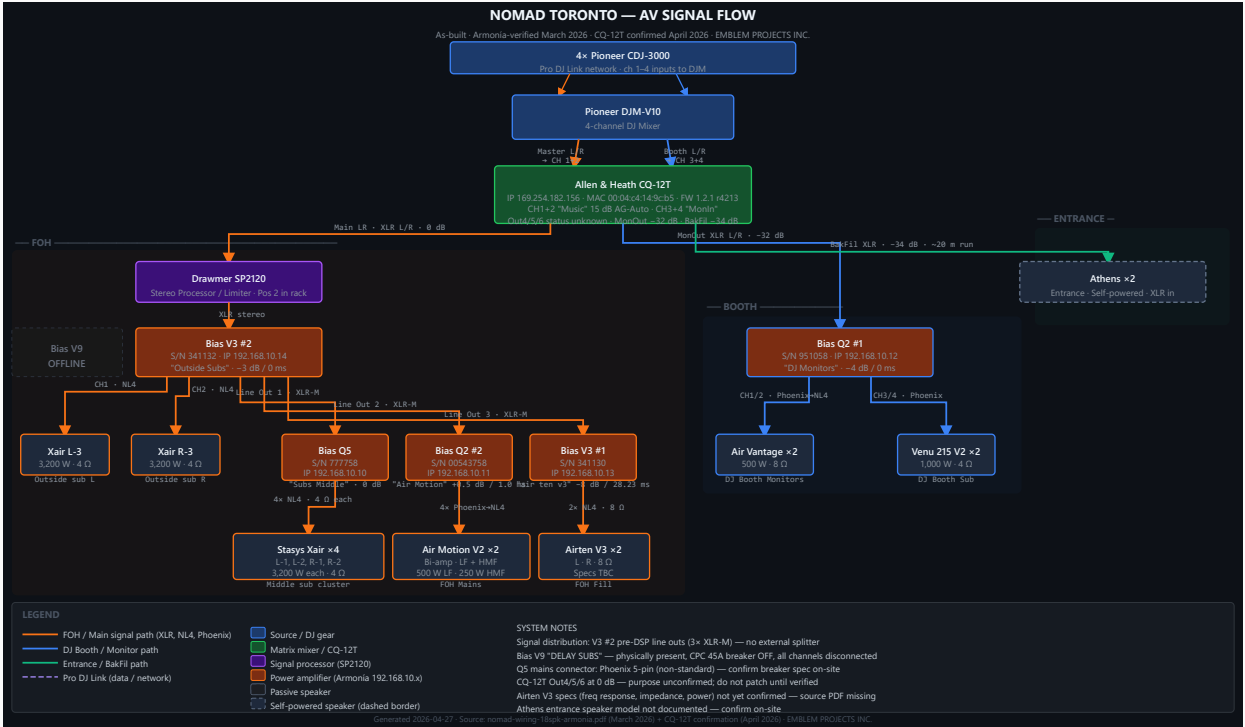


Full signal chain: CDJ-3000 sources to speaker zones

Speaker Zone Map

NOMAD TORONTO — SPEAKER ZONE MAP

Top-down schematic · 18 speakers · 5 amplifier zones · VOID Acoustics system

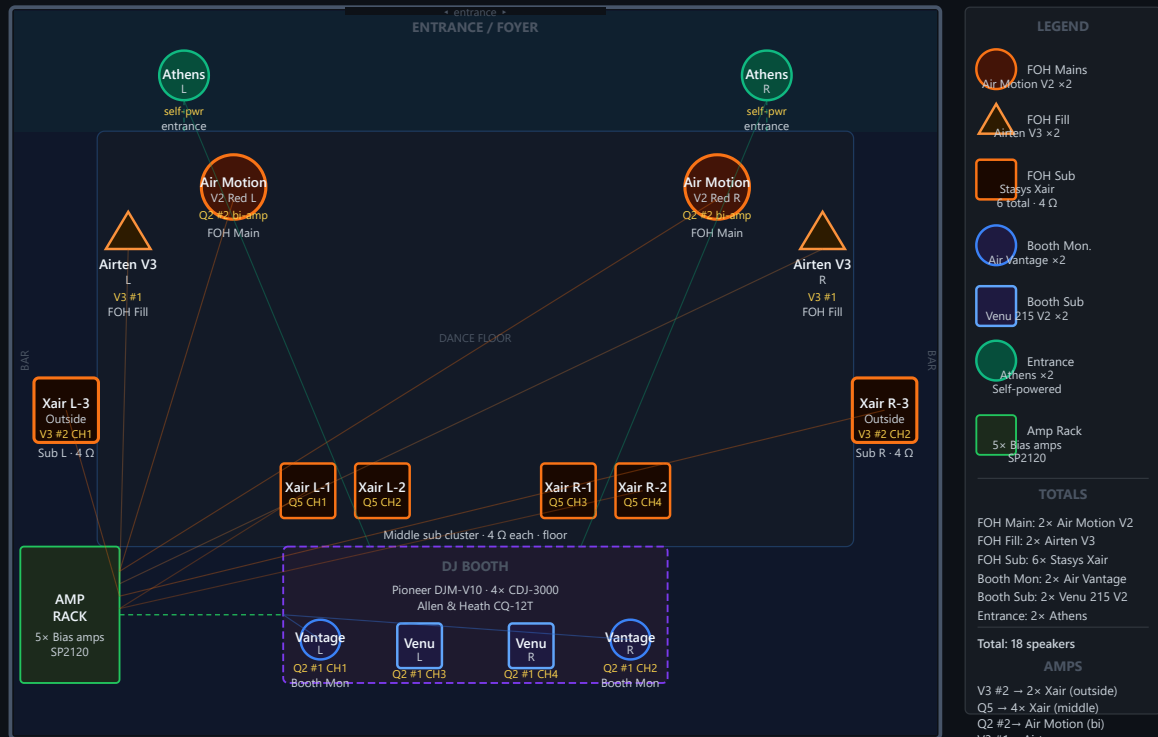

△ Schematic only — speaker positions approximate. Not to architectural scale.

Bias V9 "DELAY SUBS" omitted — offline, all channels disconnected.

Generated 2026-04-27 · Armonia-verified March 2026 · EMBLEM PROJECTS INC. · Nomad Toronto

18-speaker zone layout · FOH / Booth / Entrance

Nomad Toronto — Technical Available Rider

Venue: NØMAD Toronto

Address: 725 Queen Street East, Toronto, ON M4M 1H1

Phone: 647-643-8823

General email: info@nomad725.ca

Website: nomad725.ca

Instagram / Facebook: @nomadtorontoofficial

Capacity: 550 (standing)

Booking contact: *(named production contact TBC — Issue #5)*

Technical contact: *(TBC — Issue #5)*

Load-in access: *(confirm with venue)*

DJ Equipment

Media Players

4× Pioneer CDJ-3000 Multi Player

- 9" touchscreen display
- USB / SD card / Pro DJ Link streaming
- 4-deck Pro DJ Link network (linked via DJM-V10)
- Rekordbox compatible (USB export recommended)
- Digital coax output per unit

DJ Mixer

Pioneer DJM-V10 6-Channel DJ Mixer

- 6 channels (channels 1–4 available for guest use)
- Fader curve, crossfader assign fully adjustable
- Built-in Beat FX + Sound Color FX
- 3-band isolator per channel
- Master output: XLR balanced L/R to house matrix
- Booth output: XLR balanced L/R to house monitors

House Matrix Mixer

Allen & Heath CQ-12T Digital Mixer (not typically artist-operated)

Managed by house technician. Handles routing to:

- Main PA (FOH)
 - DJ booth monitors + sub
 - Entrance fill speakers
-

Available Inputs

Input	Type	Location	Notes
CH 1–2	XLR or XLR/TRS combo	CQ-12T rear	Currently: DJM-V10 Master (house default)
CH 3–4	XLR or XLR/TRS combo	CQ-12T rear	Currently: DJM-V10 Booth (house default)
CH 5–10	XLR or XLR/TRS combo	CQ-12T rear	Available for guest inputs

For touring acts with their own mixer: Connect your stereo master output to CQ-12T CH5+6 (XLR L/R). Advise production contact in advance.

For live acts: Up to 6 additional mono inputs (CH5–10) available. XLR or TRS ¼". All channels have full HPF, gate, PEQ, compressor, and delay on input.

Monitor / Booth Outputs

Output	Feed	Level	Type	Notes
DJ Booth Monitors	CQ-12T MonOut	–32 dB	VOID Air Vantage ×2	Near-field monitors in booth
DJ Booth Sub	CQ-12T MonOut	–32 dB	VOID Venu 215 V2 ×2	Booth floor sub
Entrance fill	CQ-12T BakFil	–34 dB	Turbosound Athens ×2	Entrance/foyer

No traditional wedge monitors. DJ booth has dedicated near-field monitors (VOID Air Vantage) and floor sub (VOID Venu 215 V2).

PA System

VOID Acoustics permanent installation · 18 speakers total

Zone	Model	Qty	Notes
FOH Mains	VOID Air Motion V2 Red	2	Bi-amped, 500 W LF + 250 W HMF per side
FOH Fill	VOID Airten V3	2	Wide-dispersion fill
Outside Subs	VOID Stasys Xair	2	Floor-coupled, 3,200 W each
Middle Subs	VOID Stasys Xair	4	Centre cluster, 3,200 W each
Booth Monitors	VOID Air Vantage	2	Near-field, 500 W
Booth Sub	VOID Venu 215 V2	2	1,000 W
Entrance	Turbosound Athens TCS-AN	2	Self-powered

Total sub power: 6× Stasys Xair = 19,200 W peak

DSP: Armonía Pro Audio Suite — gain, delay, and crossover per amplifier channel

System limiter: Drawmer SP2120 on main FOH path

Power

Item	Spec	Notes
DJ table power	2× standard North American 15A duplex	(confirm count and location)

Amp rack	Dedicated circuits — see below	Managed by venue
Total system load (estimate)	~100 A @ 120 V	Based on amp nameplate ratings

Amp mains summary:

Amp	Mains	Current	Breaker
Bias V3 #1	IEC C20	16 A	20 A
Bias Q2 #1	IEC C20	16 A	20 A
Bias Q2 #2	IEC C20	16 A	20 A
Bias V3 #2	IEC C20	16 A	20 A
Bias Q5	Phoenix 5-pin	TBC	TBC

⚠ Power spec for Bias Q5 not yet confirmed. Managed by venue — do not connect external equipment to the amp rack circuits.

Network / Pro DJ Link

Network	Use	Notes
Pro DJ Link (Cat5e)	CDJ-3000 ×4 ↔ DJM-V10	In-house switch, do not unplug
Armonía LAN (192.168.10.x)	DSP control	House network — do not connect
CQ-12T link-local	Mixer control	IP 169.254.182.156, do not modify

Rekordbox: USB export recommended. SD card playback also supported. Link play from laptop not tested — consult production contact in advance.

What to Bring

Recommended:

- USB sticks formatted exFAT or FAT32 (Rekordbox analysed)
- Personal laptop with Rekordbox for library management (optional)
- Stage plot / input list if bringing own front-end

Not required (provided by house):

- DJ mixer, media players, monitor speakers
- Main PA, subs, processing

Not available:

- Analogue turntables / phono preamp
- Outboard effects rack (unless DJM-V10 effects chain is suitable)
- Stage lighting control (*confirm with venue*)

Stage / Booth Layout

(Floor plan to be added — pending venue measurement)

- DJ booth: centre rear of venue

- CDJs: 4× in standard 2+2 layout
- Mixer: centre position between CDJ stacks
- Booth dimensions: *(confirm)*

Contact

Role	Name	Phone	Email
Production manager	<i>(TBC — Issue #5)</i>		
Technical / systems	<i>(TBC — Issue #5)</i>		
Booking	<i>(TBC)</i>		

Nomad Toronto · Technical Available Rider · Rev 1.0 · April 2026 · EMBLEM PROJECTS INC.

Subject to change — confirm all technical requirements with production contact no later than 72 hours before event.

Nomad Toronto — Cable Schedule

Venue: Nomad Toronto

System: VOID Acoustics 18-speaker installation

Status: Updated April 2026 — CQ-12T replaces Yamaha MG12

Source docs: nomad-wiring-18spk-armonia.pdf · CQ-12T confirmation April 2026

Section 1 — DJ Source to Matrix Mixer

#	Type	Con. A	From	Con. B	To	Qty	Notes
1	XLR balanced	XLR-M	DJM-V10 Master Out L	XLR-F	CQ-12T CH1	1	15 dB gain, AG Auto ON
2	XLR balanced	XLR-M	DJM-V10 Master Out R	XLR-F	CQ-12T CH2	1	Stereo link with CH1
3	XLR balanced	XLR-M	DJM-V10 Booth Out L	XLR-F	CQ-12T CH3	1	"MonIn" — monitor/booth feed
4	XLR balanced	XLR-M	DJM-V10 Booth Out R	XLR-F	CQ-12T CH4	1	Stereo link with CH3
5	Cat5e/6 RJ45	RJ45	CDJ-3000 #1	RJ45	DJM-V10 network	1	Pro DJ Link
6	Cat5e/6 RJ45	RJ45	CDJ-3000 #2	RJ45	DJM-V10 network	1	Pro DJ Link
7	Cat5e/6 RJ45	RJ45	CDJ-3000 #3	RJ45	DJM-V10 network	1	Pro DJ Link
8	Cat5e/6 RJ45	RJ45	CDJ-3000 #4	RJ45	DJM-V10 network	1	Pro DJ Link

Section 2 — CQ-12T Outputs to Amplifiers / Destinations

#	Type	Con. A	From	Con. B	To	Qty	Level	Notes
9	XLR balanced	XLR-M	CQ-12T Main L	XLR-F	SP2120 Input L	1	0 dB	FOH main path
10	XLR balanced	XLR-M	CQ-12T Main R	XLR-F	SP2120 Input R	1	0 dB	FOH main path
11	XLR balanced	XLR-M	CQ-12T MonOut L	Phoenix signal	Q2 #1 Input L	1	−32 dB	Booth/monitor path
12	XLR balanced	XLR-M	CQ-12T MonOut R	Phoenix signal	Q2 #1 Input R	1	−32 dB	Booth/monitor path

13	XLR balanced	XLR-M	CQ-12T BakFil L	XLR-F	Athens L (entrance)	1	-34 dB	~20 m run to entrance
14	XLR balanced	XLR-M	CQ-12T BakFil R	XLR-F	Athens R (entrance)	1	-34 dB	~20 m run to entrance

⚠ Out4/5/6 on CQ-12T currently at 0 dB — purpose unconfirmed. Do not patch until verified on-site.

Section 3 — Processor to FOH Driver Amp

#	Type	Con. A	From	Con. B	To	Qty	Notes
15	XLR balanced	XLR-M	SP2120 Output L	XLR-F	Bias V3 #2 Input L	1	Rack pos 2 → pos 7
16	XLR balanced	XLR-M	SP2120 Output R	XLR-F	Bias V3 #2 Input R	1	

Section 4 — V3 #2 Distribution (Signal Hub)

V3 #2 pre-DSP line outputs (3× XLR-M) are the signal distribution point — no external splitter.

#	Type	Con. A	From	Con. B	To	Qty	Notes
17	XLR-M → Phoenix	XLR-M	V3 #2 Line Out 1	Phoenix 12-pin	Q5 Input	1	XLR-M to Phoenix signal adapter
18	XLR-M → Phoenix	XLR-M	V3 #2 Line Out 2	Phoenix 12-pin	Q2 #2 Input	1	XLR-M to Phoenix signal adapter
19	XLR balanced	XLR-M	V3 #2 Line Out 3	XLR-F	Bias V3 #1 Input	1	Standard XLR

Section 5 — Amplifier to Speaker (FOH)

Bias V3 #2 → Outside Sub cluster

#	Type	Con. A	From	Con. B	To	Qty	Load	Notes
20	NL4 speaker	NL4	V3 #2 CH1 Spk Out	NL4	Xair L-3 (NL4 In)	1	4 Ω	Outside sub Left
21	NL4 speaker	NL4	V3 #2 CH2 Spk Out	NL4	Xair R-3 (NL4 In)	1	4 Ω	Outside sub Right

Bias Q5 → Middle Sub cluster (4× Xair)

#	Type	Con. A	From	Con. B	To	Qty	Load	Notes
22	NL4 speaker	NL4	Q5 CH1 Spk Out	NL4	Xair L-1 (NL4 In)	1	4 Ω	Middle sub L-1
23	NL4 speaker	NL4	Q5 CH2 Spk Out	NL4	Xair L-2 (NL4 In)	1	4 Ω	Middle sub L-2
24	NL4 speaker	NL4	Q5 CH3 Spk Out	NL4	Xair R-1 (NL4 In)	1	4 Ω	Middle sub R-1
25	NL4 speaker	NL4	Q5 CH4 Spk Out	NL4	Xair R-2 (NL4 In)	1	4 Ω	Middle sub R-2

Bias Q2 #2 → Air Motion V2 (bi-amp, 4 channels)

Air Motion V2 uses NL4 connector wired for bi-amp: NL4#1 = LF (pins 1+/1-), NL4#2 = HMF (pins 2+/2-)

#	Type	Con. A	From	Con. B	To	Qty	Load	Notes
26	Phoenix → NL4	Phoenix 8-pin	Q2 #2 CH1 Spk Out	NL4 #1	Air Motion L — LF	1	8 Ω LF	NL4 pins 1+/1–
27	Phoenix → NL4	Phoenix 8-pin	Q2 #2 CH2 Spk Out	NL4 #2	Air Motion L — HMF	1	8 Ω HMF	NL4 pins 2+/2–
28	Phoenix → NL4	Phoenix 8-pin	Q2 #2 CH3 Spk Out	NL4 #1	Air Motion R — LF	1	8 Ω LF	NL4 pins 1+/1–
29	Phoenix → NL4	Phoenix 8-pin	Q2 #2 CH4 Spk Out	NL4 #2	Air Motion R — HMF	1	8 Ω HMF	NL4 pins 2+/2–

Bias V3 #1 → Airten V3

#	Type	Con. A	From	Con. B	To	Qty	Load	Notes
30	NL4 speaker	NL4	V3 #1 CH1 Spk Out	NL4	Airten V3 L	1	8 Ω	FOH fill Left
31	NL4 speaker	NL4	V3 #1 CH2 Spk Out	NL4	Airten V3 R	1	8 Ω	FOH fill Right

Section 6 — Amplifier to Speaker (Booth)

Bias Q2 #1 → DJ Monitors + Booth Sub

#	Type	Con. A	From	Con. B	To	Qty	Load	Notes
32	Phoenix → NL4	Phoenix 8-pin	Q2 #1 CH1 Spk Out	NL4	Air Vantage L	1	8 Ω	DJ booth monitor Left
33	Phoenix → NL4	Phoenix 8-pin	Q2 #1 CH2 Spk Out	NL4	Air Vantage R	1	8 Ω	DJ booth monitor Right
34	Phoenix → Phoenix	Phoenix 8-pin	Q2 #1 CH3 Spk Out	Phoenix	Venu 215 V2 L	1	4 Ω	Booth sub Left
35	Phoenix → Phoenix	Phoenix 8-pin	Q2 #1 CH4 Spk Out	Phoenix	Venu 215 V2 R	1	4 Ω	Booth sub Right

Venu 215 connector note: Both Phoenix and NL4 inputs are present on the Venu 215 recessed panel. Current connection is via Phoenix. NL4 wiring: pin 1+ / 1–.

Section 7 — Network / Control

#	Type	From	To	Notes
36	Cat5e RJ45	Network switch / router	Bias V3 #2 (192.168.10.14)	Armonía control network
37	Cat5e RJ45	Network switch / router	Bias Q5 (192.168.10.10)	Armonía control network
38	Cat5e RJ45	Network switch / router	Bias Q2 #2 (192.168.10.11)	Armonía control network
39	Cat5e RJ45	Network switch / router	Bias V3 #1 (192.168.10.13)	Armonía control network
40	Cat5e RJ45	Network switch / router	Bias Q2 #1 (192.168.10.12)	Armonía control network
41	Cat5e RJ45	Separate network / link-local	CQ-12T (169.254.182.156)	Not on Armonía subnet — link-local only

Section 8 — Power (Mains)

#	Device	Rack Pos	Connector	Max Current	Breaker	Status
P1	Drawmer SP2120	2	IEC C14 (115/230 V sw)	<1 A	PDU	Active
P2	Bias V3 #1	3	IEC C20	16 A	20 A C/D-curve	Active
P3	Bias Q2 #1	4	IEC C20	16 A	20 A C/D-curve	Active
P4	Bias V9	5	CPC 45A	32 A	OFFLINE — breaker OFF	Inactive
P5	Bias Q2 #2	6	IEC C20	16 A	20 A C/D-curve	Active
P6	Bias V3 #2	7	IEC C20	16 A	20 A C/D-curve	Active
P7	Bias Q5	—	Phoenix 5-pin	TBC	TBC	Active — ⚠ confirm breaker
P8	Allen & Heath CQ-12T	—	IEC C14	<3 A	PDU	Active

Cable Summary

Section	Cable count
DJ source → CQ-12T (audio)	4
Pro DJ Link (data)	4
CQ-12T outputs	6
Processor to V3 #2	2
V3 #2 line out distribution	3
V3 #2 speaker outputs (direct)	2
Q5 speaker outputs	4
Q2 #2 speaker outputs (bi-amp)	4
V3 #1 speaker outputs	2
Q2 #1 speaker outputs (booth)	4
Armonía network (control)	5
CQ-12T network	1
Total signal cables	36
Total network/data cables	10

Open Items

- [] **Cable 13/14 length:** BakFil run to Athens entrance estimated ~20 m — confirm actual run
- [] **Cable 17/18:** Confirm XLR-M → Phoenix adapter spec for Q5 and Q2 #2 inputs
- [] **Power P7:** Q5 mains is Phoenix 5-pin — confirm circuit breaker rating on-site
- [] **Out4/5/6:** CQ-12T outputs 4–6 cabling unknown — audit before patching
- [] **V9 cables:** All V9 speaker cables should be removed or clearly tagged DISCONNECTED

- [] **Athens model:** Identify Athens speaker model to confirm XLR input wiring polarity

Updated 2026-04-27 · Supersedes pre-CQ-12T schedule (39 cables, Yamaha MG12 era) · EMBLEM PROJECTS INC.

Nomad Toronto — Emergency Procedures (AV System)

For fire / medical / security emergencies: follow venue emergency plan first. Audio system is secondary.

1. Full Emergency Shutdown (fastest)

Use when: fire alarm, power emergency, venue evacuation, or uncontrolled feedback/noise.

1. Press the **MASTER** fader on the **DJM-V10** to minimum (zero).
2. Press **MUTE ALL** on the **Allen & Heath CQ-12T** (front panel button or MixPad app).
3. If sound continues — cut power at the **Tripp Lite PDU** (rear of rack, U9–U10).
4. If PA is still active — the amp rack has individual IEC C20 breakers. Pull the rack from power at the wall breaker panel.

Do NOT touch the Bias V9 CPC 45A breaker — it is already OFF and the unit is disconnected. Leave it alone.

2. Feedback / Runaway Noise

Use when: loud feedback, uncontrolled oscillation, or distortion from PA.

1. **DJM-V10:** Pull master fader to zero immediately.
2. **CQ-12T:** Press MUTE on the affected output (Main LR, MonOut, or BakFil).
3. Identify source:
 - Check all open mic/line inputs on CQ-12T CH5–CH10 for accidental signal.
 - Check DJM-V10 channel gains — ensure no channel is peaking.
 - Check SP2120 clip indicators (front panel LED bargraphs).
1. Once muted, investigate root cause before un-muting.

3. Amplifier Fault / Blown Amp

Signs: single zone suddenly silent, amp STATUS LED red, burning smell from rack.

1. Mute the CQ-12T output feeding that amp.
2. In Armonía (if accessible): check Device Status for the affected amp (192.168.10.x).
3. Do NOT leave the rack running if there is a burning smell — shut down the full system.
4. **Affected zones and their impact:**

Amp	Zone lost if amp fails
V3 #2	Outside subs L+R AND signal to Q5 + Q2 #2 + V3 #1 (entire FOH!)
Q5	Middle subs only
Q2 #2	FOH mains (Air Motion)
V3 #1	FOH fills (Airten)

⚠ V3 #2 is the signal hub. If V3 #2 fails, the entire FOH system loses signal — not just outside subs. Use the Drawmer SP2120 line outputs directly to patch Q5/Q2 #2/V3 #1 as a bypass if needed (requires cabling change).

4. CQ-12T Freeze / App Disconnect

Use when: MixPad app loses connection or CQ-12T touchscreen freezes.

1. All audio continues at last set levels — this is NOT a system emergency.
2. Restart the MixPad app on the control device.
3. If the unit is frozen: hold the power button on the CQ-12T for 5 seconds to reboot. Audio will drop briefly during reboot (~30 seconds).
4. Scene recall: the CQ-12T stores the last scene on power cycle. Confirm all output levels after reboot.
5. Firmware note: V1.2.2 (available) fixes some CQ-12T stability issues. Update at next maintenance window.

5. Armonía DSP Loss (amps go to default)

Use when: control PC or Armonía software disconnects from amp network.

1. All amps continue operating at their **last DSP settings** — this is normal and safe.
2. Armonía is control-only; amps are standalone and do not require it to run.
3. Reconnect the control PC to the 192.168.10.x network and relaunch Armonía to restore remote monitoring.
4. Do NOT factory reset any amplifier unless explicitly authorised — all crossover, delay, and gain settings will be lost.

6. Power Failure (partial)

If one amp circuit trips:

1. Check the venue breaker panel for the affected circuit.
2. Do NOT reset a tripped breaker without investigating the cause.
3. The Q5 uses a Phoenix 5-pin mains connector — its breaker rating is TBC (Issue #7). Confirm with the venue electrician before resetting.

If total power loss:

1. All amps have soft-start protection — they will come up automatically when power is restored.
2. The CQ-12T will reboot and recall its last scene.
3. Allow 30–60 seconds for amps to initialise before sending signal.
4. Check Armonía for any fault flags after power restoration.

7. Booth Monitor Loss

Use when: DJ cannot hear monitors.

1. Check the CQ-12T MonOut fader — confirm it is not muted and is set to –32 dB or above.
2. Check Q2 #1 STATUS LED (Pos 4 in rack) — should be green.
3. Check Phoenix→NL4 cables at rear of Q2 #1 — confirm not unplugged.

4. If booth sub (Venu 215) is working but monitors (Air Vantage) are not: check Phoenix→NL4 adapter cables for Air Vantage (Q2 #1 CH1/CH2).

8. Entrance Speakers (Athens) Silent

Use when: entrance fill speakers not producing sound.

1. Athens speakers are **self-powered** — check their individual power switches (rear panel).
2. Check the XLR cables from the CQ-12T BakFil output to each Athens speaker.
3. Check the BakFil level on CQ-12T — confirm not muted, set to -34 dB or above.
4. Athens firmware may need updating (V2.3) — see `06-reference-docs/firmware-changelog.md`.

9. Contact for Technical Emergencies

Role	Contact
Venue general	647-643-8823 · info@nomad725.ca
In-house technician	(named contact TBC — Issue #5)
VOID Acoustics support	+44 (0) 1202 666 006 · hello@voidacoustics.com
Allen & Heath support	support@allen-heath.com
Emblem Projects	admin+claudio@emblemprojects.com

10. Post-Emergency Checklist

After any emergency shutdown or fault:

- [] Identify and document the cause
- [] Inspect SP2120 clip indicators — reset if tripped
- [] Check all amplifier STATUS LEDs in Armonía before full restart
- [] Confirm CQ-12T scene settings are intact after any reboot
- [] Log the incident with date, time, and description