.param tdv=1 tdt=1 fn1=50 omega_n={2*pi*fn1}
.options vntol=1m abstol=1u reltol=0.003

.tran 0 4 0 0.1ms

For the overhead line configuration see ATPDraw File:
Ltspice_400kV_Donaumast.acp with geometry of line

For converting ATP to LTspice subcircuit in .libfile see file
ATP_cables_and_lines.xlsx

Line 1 is closed
Line 2 is closed than opened
Voltagesource is switched on exponentially

comp1
VN=400e3 Q=6e6 fn=50 r_x=0.01

Net Impedance
SK=40GVA

.param len=10

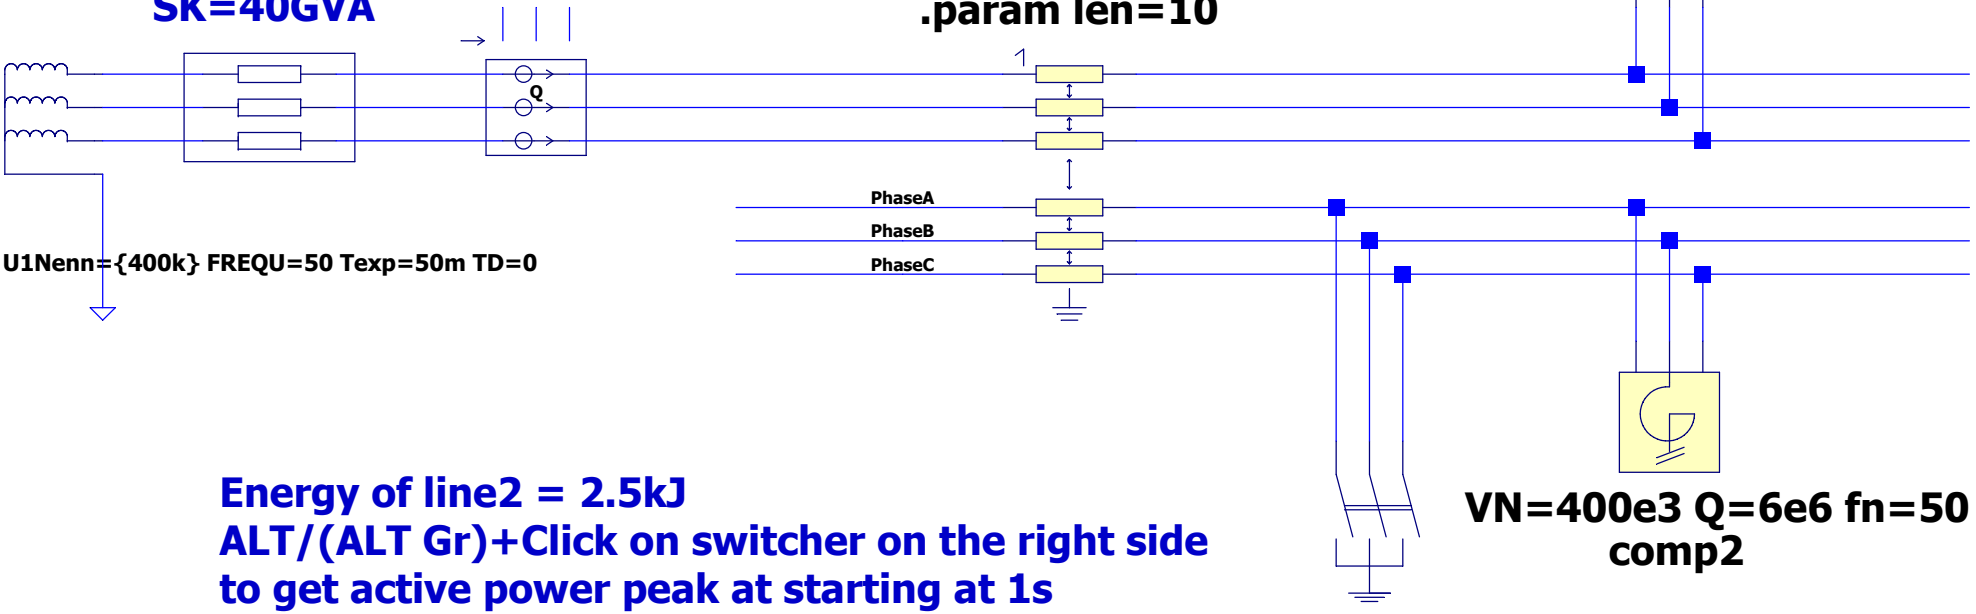

VN=400e3 Q=6e6 fn=50 r_x=0.01
comp2

Energy of line2 = 2.5kJ
ALT/(ALT Gr)+Click on switcher on the right side
to get active power peak at starting at 1s
Set x-axis to 1s-2s.
Then ctrl+click on named trace expression above plot
to get the energy