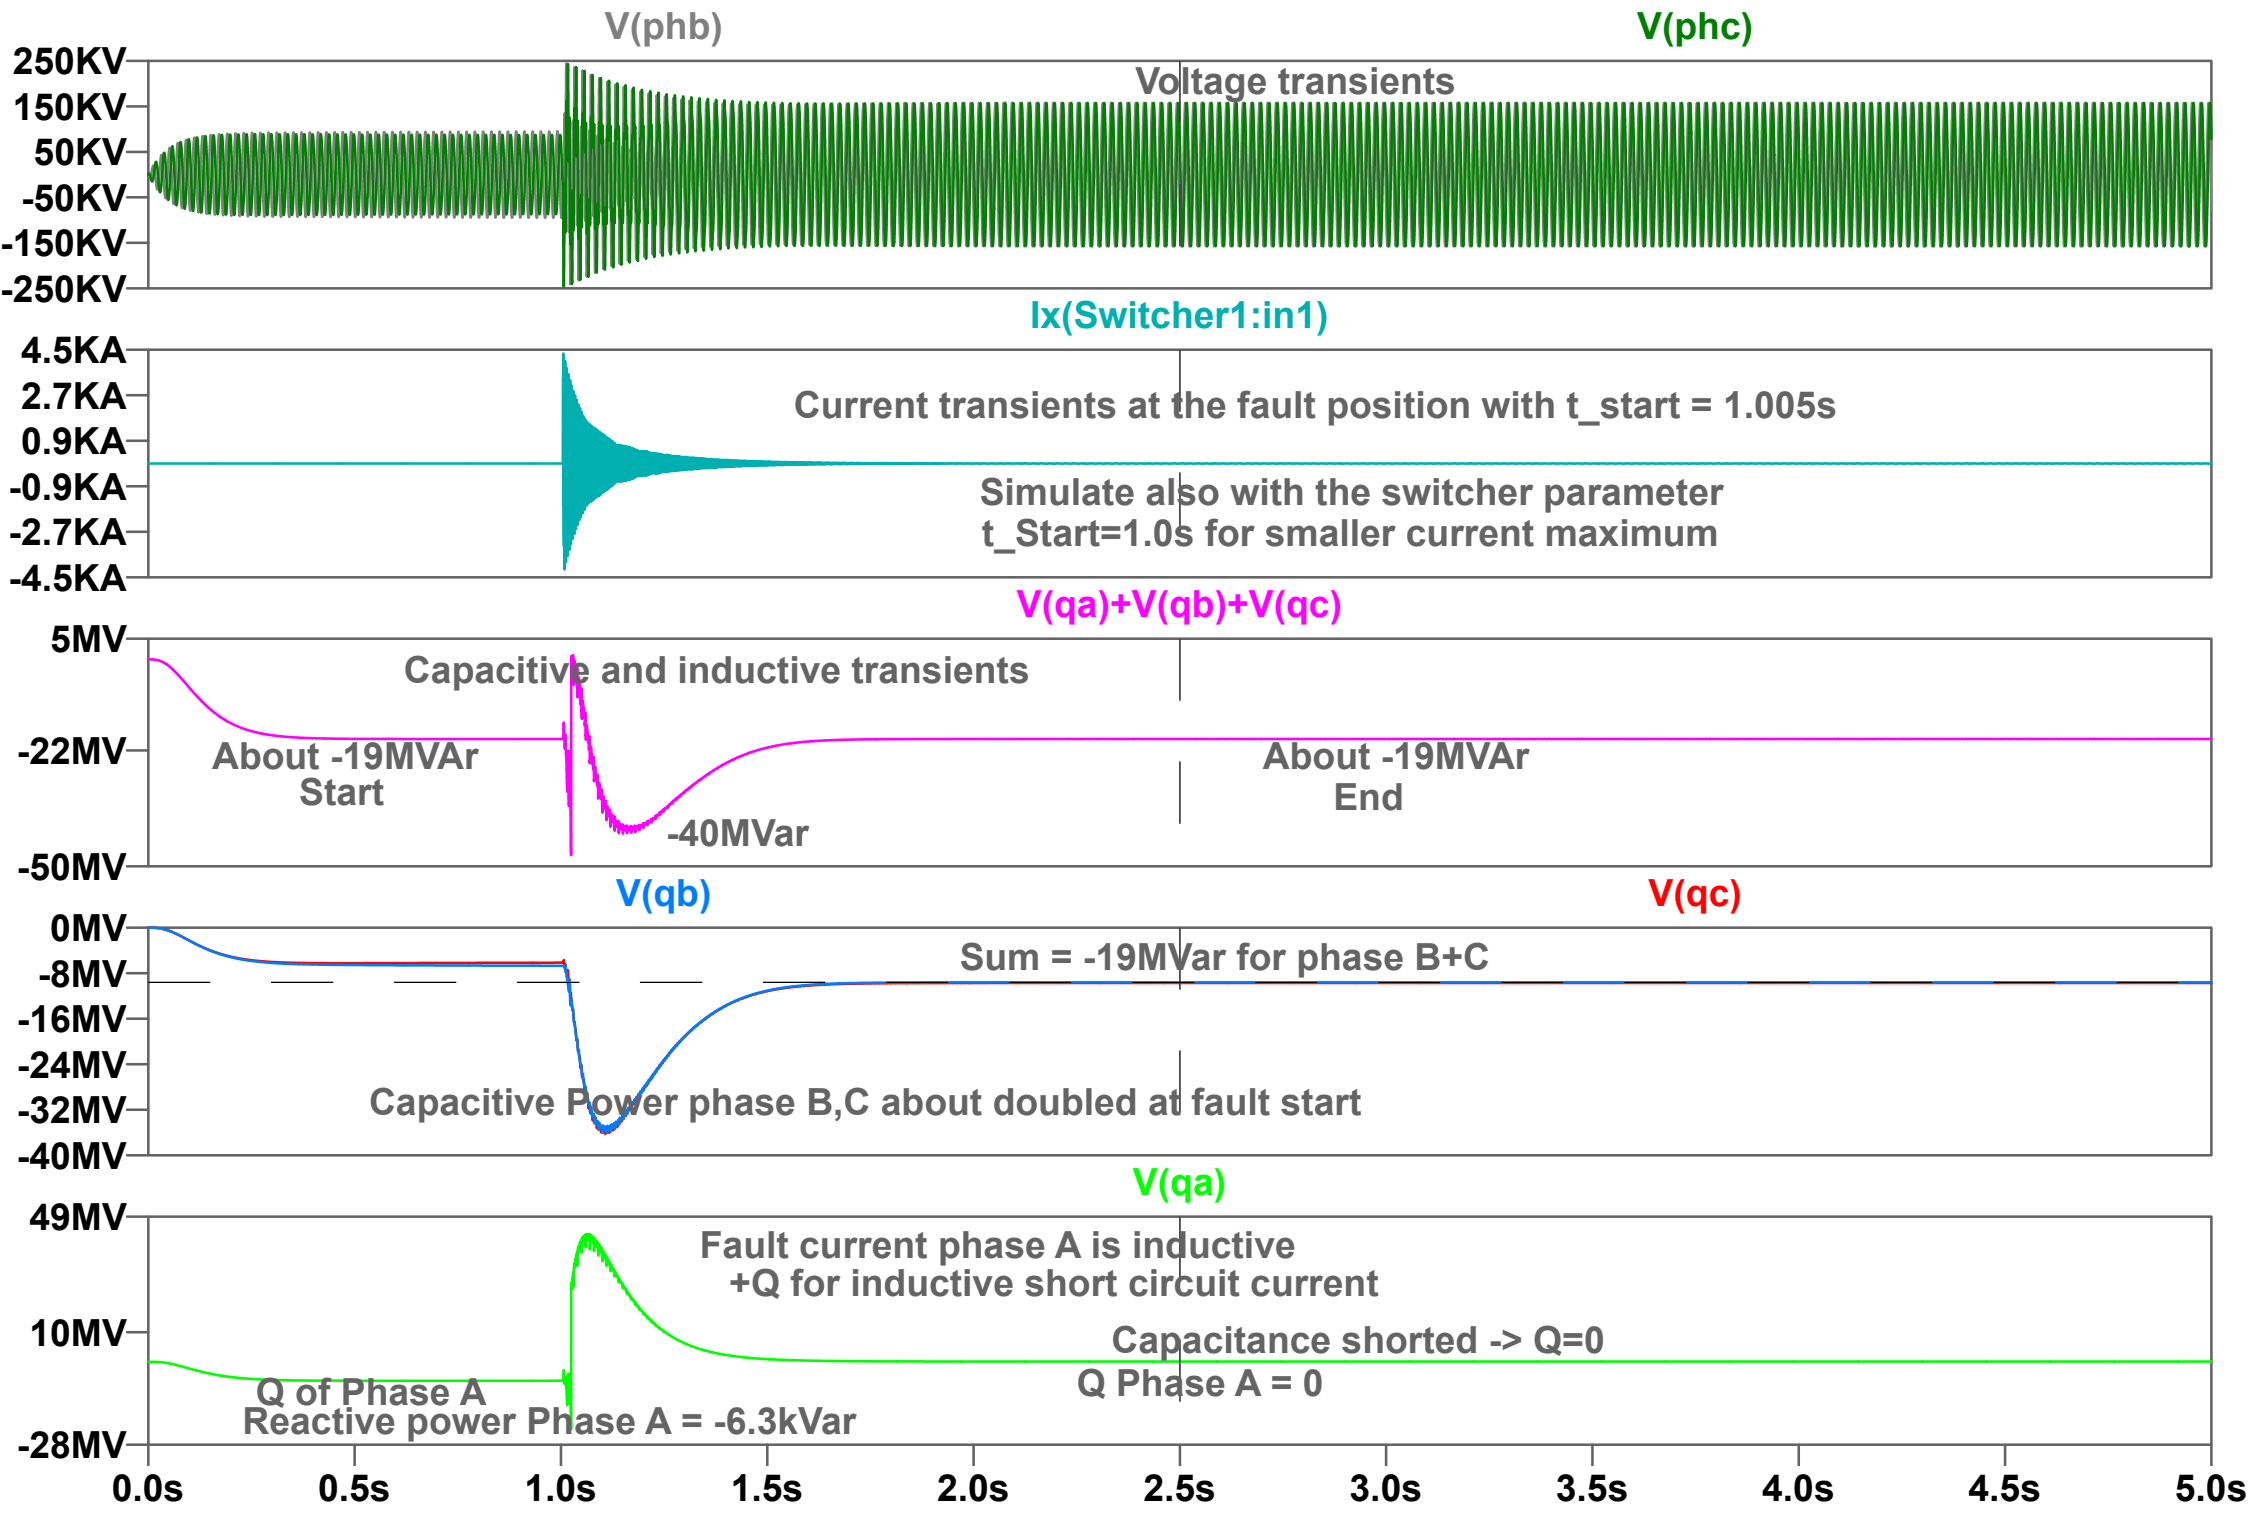

V(phb)
V(phc)
250KV
150KV
50KV
-50KV
-150KV
-250KV
Voltage transients
Ix(Switcher1:in1)
4.5KA
2.7KA
0.9KA
-0.9KA
-2.7KA
-4.5KA
Current transients at the fault position with t_start = 1.005s
Simulate also with the switcher parameter
t_Start=1.0s for smaller current maximum
V(qa)+V(qb)+V(qc)
5MV
-22MV
-50MV
Capacitive and inductive transients
About -19MVAr
Start
-40MVar
About -19MVAr
End
V(qb)
V(qc)
0MV
-8MV
-16MV
-24MV
-32MV
-40MV
Sum = -19MVar for phase B+C
Capacitive Power phase B,C about doubled at fault start
V(qa)
49MV
10MV
-28MV
Fault current phase A is inductive
+Q for inductive short circuit current
Capacitance shorted -> Q=0
Q Phase A = 0
Q of Phase A
Reactive power Phase A = -6.3kVar
0.0s
0.5s
1.0s
1.5s
2.0s
2.5s
3.0s
3.5s
4.0s
4.5s
5.0s