NTNU
Kunnskap for en bedre verden

Department of Engineering Cybernetics

TTK4550

Specialization Project

Authors:
Anders Haarberg Eriksen, Øyvind Stavdahl & Devon Rohlf

Date: 22nd April 2026

Contents

1 Introduction **1**

2 Theory **2**

2.1 Anatomy 2

2.1.1 Anatomical directional terms 2

2.1.2 Anatomical terms of movement 2

2.1.3 Hand anatomy 3

2.2 Control 6

2.2.1 State-Space representation 6

2.2.2 Controllability 6

3 Method **7**

4 Adaptive Controller **8**

4.1 Brushed DC Motor model 8

4.1.1 Estimating motor parameters 9

4.1.2 Estimating the armature inductance 10

4.2 Mass-spring-damper load 11

4.3 State-space model of brushed DC motor with load 12

4.4 Controllability of the system 13

List of Figures

2.1 The anatomical position, with the corresponding directional terms. Image from TeachMeAnatomy, 2026a. 3
2.2 Anatomical terms of movement. Image from TeachMeAnatomy, 2026b. 3
2.3 The bones of the hand. Image from author. 4
2.4 The joints of the hand. Image from author. 5

4.1 Circuit diagram of a brushed DC motor. 9
4.2 Parameter identification of the armature inductance L_a using a step input in the armature voltage E_a. 11

List of Tables

4.1 Relevant motor parameters extracted from the datasheet of the motor. 10

Chapter 1

Introduction

Hand exoskeletons have gained increasing attention in recent years due to their potential in rehabilitation, assistive technology, and human motion augmentation. By providing controlled support to the hand and fingers, such systems may help restore function in individuals with impaired motor ability, while also serving as platforms for studying human biomechanics and control. Because the hand is mechanically complex and highly dexterous, the development of effective hand exoskeletons requires accurate models of finger motion and dynamics.

A key challenge in the design of such systems is the interaction between the mechanical structure of the exoskeleton and the physiological properties of the human finger. The finger is a multi-joint system with coupled motion, passive elastic properties, and nonlinear dynamics. To design controllers that achieve stable and precise movement assistance, it is therefore important to establish a mathematical model that captures the essential kinematic and dynamic behavior of the finger, while remaining suitable for simulation and control design.

Chapter 2

Theory

2.1 Anatomy

The hand is a complex biomechanical system, comprised of many different bones, muscles, tendons, and ligaments. To explain different aspects of the hand in relation to one another, we use *anatomical terminology* [National Cancer Institute, 2026], or more specifically *anatomical directional terms*. Additionally when describing actions of muscles upon the skeleton, we use *anatomical terms of movement* [TeachMeAnatomy, 2026b].

2.1.1 Anatomical directional terms

Anatomical directional terms are used in relation to the *anatomical position*, shown in Figure 2.1, where the body is assumed standing upright, with arms at the sides and palms facing forward. Relevant terms include: *proximal*, *distal*.

- **Proximal** means toward or nearest the point of origin of a part.
- **Distal** means away from or farthest from the point of origin of a part.

2.1.2 Anatomical terms of movement

To explain the actions of muscles upon the skeleton, we use anatomical terms of movement, which describes the movement of a body part in relation to the anatomical position. Relevant terms include: *flexion*, *extension*, *abduction*, *adduction*.

- **Flexion** is a movement that decreases the angle between two body parts.
- **Extension** is a movement that increases the angle between two body parts.
- **Abduction** is a movement away from the midline of the body.

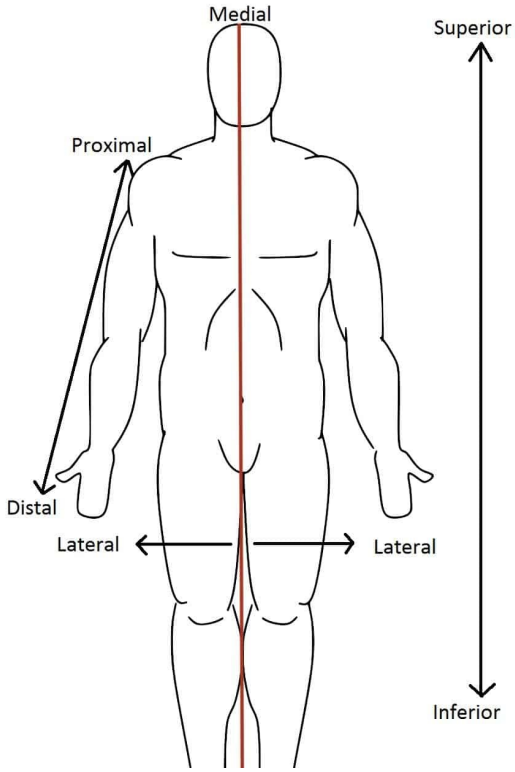

Figure 2.1: The anatomical position, with the corresponding directional terms. Image from TeachMeAnatomy, 2026a.

- **Adduction** is a movement toward the midline of the body.

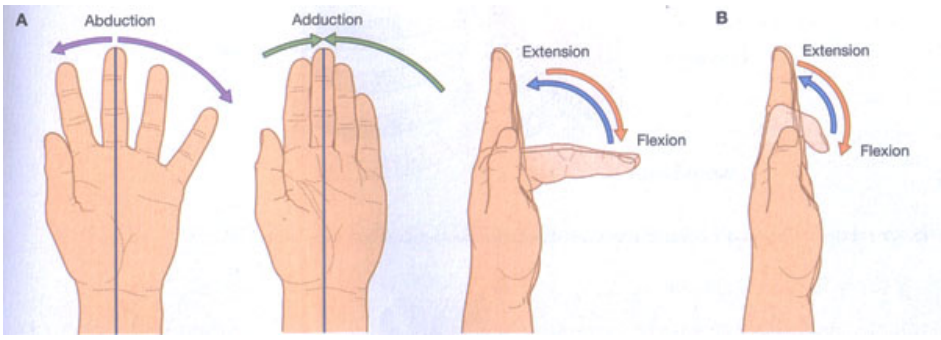

Figure 2.2: Anatomical terms of movement. Image from TeachMeAnatomy, 2026b.

2.1.3 Hand anatomy

The hand is comprised of several bones, muscles, tendons, and ligaments. The bones, illustrated in Figure 2.3, include the *carpals*, *metacarpals*, and *phalanges*. The carpals make out the wrist, the metacarpals make out the palm, and the phalanges make out the fingers. The thumb has two phalanges, while the other fingers have three. The bones of interest are the phalanges (marked in green), as they are the ones being moved by the exoskeleton. The metacarpals are assumed stationary for the task at hand, as the exoskeleton will provide stiffness to the palm and wrist.

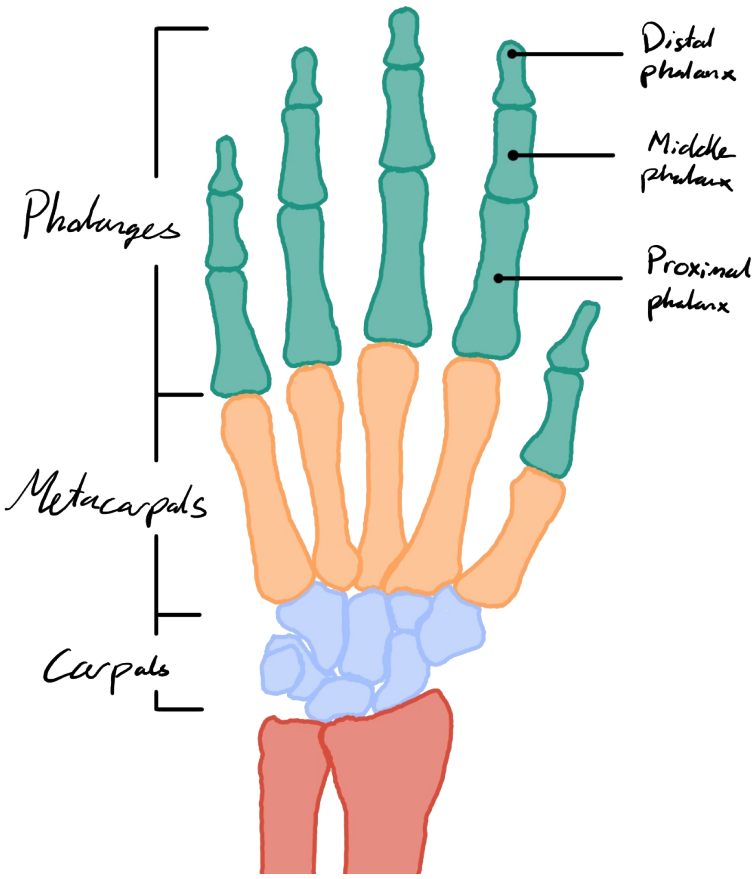

Figure 2.3: The bones of the hand. Image from author.

The phalanges are further divided into three sections: the *proximal phalanges*, the *middle phalanges*, and the *distal phalanges*. The proximal phalanges are the ones closest to the palm, while the distal phalanges are the ones furthest from the palm. The middle phalanges are the ones in between. The thumb does not have a middle phalanx, as it only has two phalanges.

Further details about the joints are shown in Figure 2.4. The joints of interest are the *metacarpophalangeal joints* (MCP), the *proximal interphalangeal joints* (PIP), and the *distal interphalangeal joints* (DIP). The MCP joints are the ones between the metacarpals and the proximal phalanges, while the PIP joints are the ones between the proximal phalanges and the middle phalanges, and the DIP joints are the ones between the middle phalanges and the distal phalanges. The thumb only has an MCP joint and an interphalangeal joint (IP), as it does not have a middle phalanx.

At each of the joints, there are collateral ligaments that provide stability. For the PIP, IP and DIP joints, they provide stiffness that prevents side to side motion. For the MCP joints they're relaxed when the finger is extended, facilitating for adduction and abduction, but stiff when the finger is flexed.

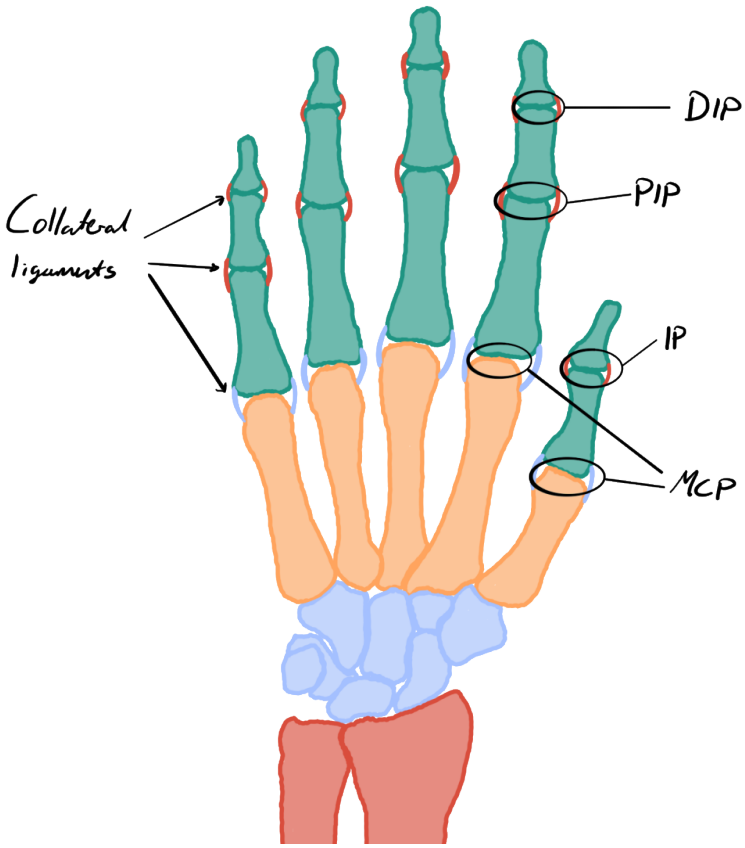

Figure 2.4: The joints of the hand. Image from author.

2.2 Control

2.2.1 State-Space representation

A way to express a n'th order ordinary differential equation (ODE) is to express it as a system of n first order ODEs. This is called the *state-space representation* of the system. A state-space representation commonly used in control theory for linear time-invariant (LTI) systems is the following:

$$\begin{aligned} &\dot{\mathbf{x}}(t) = \mathbf{A}\mathbf{x}(t) + \mathbf{B}\mathbf{u}(t) + \mathbf{d}(t), \qquad \mathbf{x}(t) \in \mathbb{R}^n, \qquad \mathbf{u}(t) \in \mathbb{R}^m, \qquad \mathbf{y}(t) \in \mathbb{R}^p, \qquad \mathbf{d}(t) \in \mathbb{R}^n, \\ &\mathbf{y}(t) = \mathbf{C}\mathbf{x}(t), \qquad \mathbf{A} \in \mathbb{R}^{n\times n}, \qquad \mathbf{B} \in \mathbb{R}^{n\times m}, \qquad \mathbf{C} \in \mathbb{R}^{p\times n}. \end{aligned} \tag{2.1}$$

Here, $\mathbf{x}(t)$ is the state vector, which contains all the information about the system at time t. $\mathbf{u}(t)$ is the input vector at time t. $\mathbf{y}(t)$ is the output vector, which contains all the measurements of the system at time t. $\mathbf{d}(t)$ is a disturbance vector.

2.2.2 Controllability

A system is said to be *controllable* if it is possible to drive the state of the system from any initial state to any desired final state in finite time, using an appropriate control input. For a LTI system, controllability can be determined by the rank of the controllability matrix $\mathcal{C}$, defined as:

$$\mathcal{C} = [\mathbf{B}, \mathbf{AB}, \mathbf{A}^2\mathbf{B}, \ldots, \mathbf{A}^{n-1}\mathbf{B}]. \tag{2.2}$$

If $\text{rank}(\mathcal{C}) = n$, where n is the dimension of the state vector $\mathbf{x}$, then the system is controllable.

Chapter 3

Method

For modelling the finger, we're assuming that the motion is limited to a 2D-plane. This is mostly true, due to the collateral ligaments at the DIP- and the PIP-joint, preventing excessive side-to-side bending [**TODO:Colateral ligaments**]. The MCP joint doesn't have the same support-structure, so it's free to move side to side, but this isn't as revelant to model for the task at hand.

For our model, we assume that the finger is composed of three links, with three revolute joints.

Chapter 4

Adaptive Controller

4.1 Brushed DC Motor model

In our system we're using a 12 V Brushed DC motor from Pololu [**Cite to motor**]. I've based my dynamical model from [**Cite to article describing Brushed DC Motor**]. The circuit diagram of a brushed DC motor is shown in Section 4.1. Equation (4.1) describes the mechanical dynamics of the motor, and Equation (4.2) describes the electrical dynamics of the motor, defined as:

$$J_m \frac{\mathrm{d}^2\theta}{\mathrm{d}t^2} + B_m \frac{\mathrm{d}\theta}{\mathrm{d}t} = \tau_m - \tau_l \tag{4.1}$$

$$R_a I_a + L_a \frac{\mathrm{d}I_a}{\mathrm{d}t} + E_b = E_a. \tag{4.2}$$

Here, θ defines the angle of the motor. The torque generated by the motor is given by $\tau_m = K_t I_a$, where K_t is the torque constant of the motor. The load torque τ_l represents the torque exerted by the finger on the motor. The friction within the rotor of the motor is modeled with $B_m \frac{\mathrm{d}\theta}{\mathrm{d}t}$, where B_m is a constant friction coefficient. The inertia of the rotor is given by J_m. The back electromotive force (EMF) is given by $E_b = K_b \frac{\mathrm{d}\theta}{\mathrm{d}t}$, where K_b is the back EMF constant of the motor. The armature voltage E_a is the control input to the system. R_a and L_a are the armature resistance and inductance, respectively. With the change to τ_m and E_b, we can rewrite the equations as:

$$J_m \frac{\mathrm{d}^2\theta}{\mathrm{d}t^2} + B_m \frac{\mathrm{d}\theta}{\mathrm{d}t} = K_t I_a - \tau_l \tag{4.3}$$

$$R_a I_a + L_a \frac{\mathrm{d}I_a}{\mathrm{d}t} + K_b \frac{\mathrm{d}\theta}{\mathrm{d}t} = E_a. \tag{4.4}$$

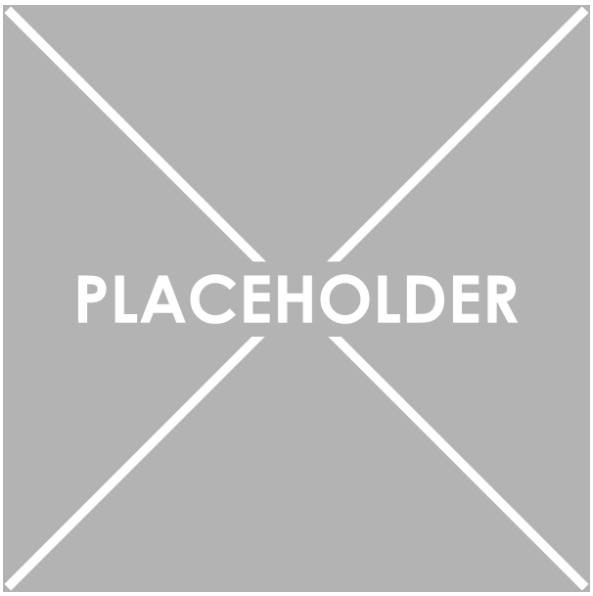

Figure 4.1: Circuit diagram of a brushed DC motor.

4.1.1 Estimating motor parameters

To estimate the parameters of the motor, we will use the datasheet from the manufacturer [**Cite motor datasheet**]. Relevant information extracted from the datasheet is shown in Table 4.1. Considering the motor at stall, we have $I_a = I_{a,stall}$ and $\tau_l = \tau_{l,stall}$. In addition we have $\frac{\mathrm{d}\theta}{\mathrm{d}t} \equiv 0$, and at stationarity, $\frac{\mathrm{d}I_a}{\mathrm{d}t} \equiv 0$. This allows us to rewrite Equation (4.4) as:

$$R_a I_{a,stall} = E_a \implies R_a = \frac{E_a}{I_{a,stall}} \approx 2.44\,\Omega. \tag{4.5}$$

Further, when the motor is stalled, we should expect the torque generated by the motor to be equal to the stall torque, giving us:

$$K_t I_{a,stall} = \tau_{l,stall} \implies K_t = \frac{\tau_{l,stall}}{I_{a,stall}} \approx 0.44\,\mathrm{N\,m\,A^{-1}}. \tag{4.6}$$

For the case when the motor is running at no-load speed, we have $I_a = I_{a,nl}$ and $\frac{\mathrm{d}\theta}{\mathrm{d}t} = \omega_{nl}$, and at stationarity, $\frac{\mathrm{d}I_a}{\mathrm{d}t} \equiv 0$. This allows us to rewrite Equation (4.4) as:

$$R_a I_{a,nl} + K_b \omega_{nl} = E_a \implies K_b = \frac{E_a - R_a I_{a,nl}}{\omega_{nl}} \approx 0.845\,\mathrm{V\,s\,rad^{-1}}. \tag{4.7}$$

Further, at no-load speed, we have $\tau_l \equiv 0$, and $\frac{\mathrm{d}^2\theta}{\mathrm{d}t^2} \equiv 0$. This allows us to rewrite Equation (4.3) as:

$$B_m \omega_{nl} = K_t I_{a,nl} \implies B_m = \frac{K_t I_{a,nl}}{\omega_{nl}} \approx 6.47\,\mathrm{mN\,m\,s\,rad^{-1}}. \tag{4.8}$$

Sadly it's not possible to estimate the inertia of the rotor J_m, nor the armature

Table 4.1: Relevant motor parameters extracted from the datasheet of the motor.

Parameter	Symbol	Value
Armature Voltage	E_a	12 V
Stall Torque	$\tau_{l,stall}$	2.158 N m
Stall Current	$I_{a,stall}$	4.9 A
No-load Speed	ω_{nl}	13.61 rad/sec
No-load Current	$I_{a,nl}$	0.20 A

inductance L_a from the datasheet. For simulation purposes, we will define $J_m = 0.093\,\text{kgm}^2$ and $L_a = 6\,\text{mH}$, which were given as common values brushed DC motors in [**Cite to article describing Brushed DC Motor**]. As for reasons that come later, estimating J_m offline is not necessary for our control design, but estimating L_a is. There are many ways to do this. One way that's probably a bit overkill, but that I think will be the most convenient for the N-Squared lab, is to use a parameter identification method.

4.1.2 Estimating the armature inductance

To estimate the armature inductance, we can use a parameter identification method. We'll start by converting Equation (4.4) to the Laplace domain, giving us:

$$E_a(s) = (L_a s + R_a)I_a(s) + K_b s\theta(s). \tag{4.9}$$

Since we only measure $I_a(t)$ and not its derivative, we have to apply a proper filter of order 1, defined as:

$$\Lambda_{I_a}(s) = s + \lambda_0, \quad \lambda_0 > 0. \tag{4.10}$$

Applying the filter to Equation (4.9) gives us:

$$\frac{1}{\Lambda_{I_a}(s)}E_a(s) = \frac{1}{\Lambda_{I_a}(s)}(L_a s + R_a)I_a(s) + \frac{1}{\Lambda_{I_a}(s)}K_b s\theta(s).$$

Ordering it around, moving all measured signals and known parameters to the left, and all factors with the unkown parameter L_a to the right, we get:

$$\underbrace{\frac{1}{\Lambda_{I_a}(s)}[E_a(s)] - \frac{1}{\Lambda_{I_a}(s)}[R_a I_a(s)] - \frac{s}{\Lambda_{I_a}(s)}[K_b\theta(s)]}_{z} = \underbrace{\frac{s}{\Lambda_{I_a}(s)}[I_a(s)]}_{\Phi}\underbrace{L_a}_{\theta^*} \tag{4.11}$$

$$\implies z = \theta^*\Phi.$$

Hence we've transformed the system to a SPM like discussed in [**Add reference to**

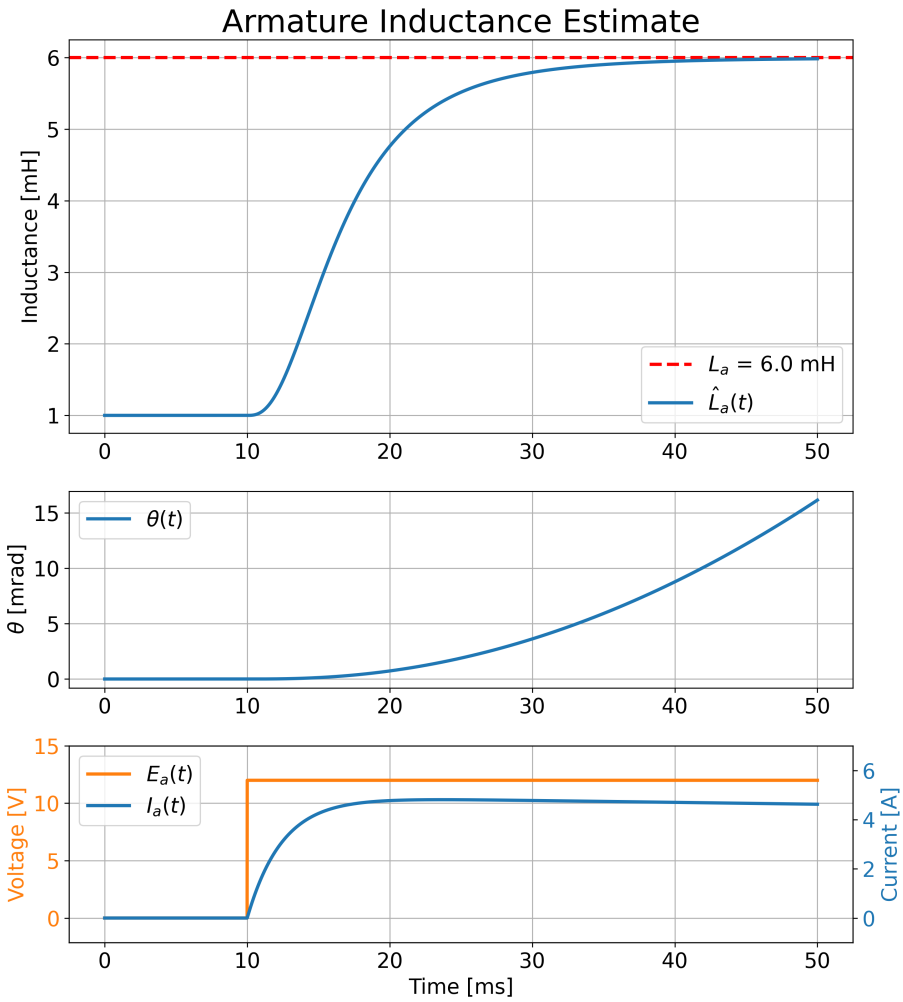

Figure 4.2: Parameter identification of the armature inductance L_a using a step input in the armature voltage E_a.

Theory:SPM]. Using the gradient method developed in [**Add reference to Theory: Gradient method**], with $\lambda_0 = 10$, $\Gamma = 10$, and $\theta_0 = \hat{L}_{a0} = 1\,\text{mH}$, while applying a step input $E_a = 12\,\text{V}$ at $t = 10\,\text{ms}$, the resulting estimate of $\hat{L}_a(t)$ is shown in Section 4.1.2. It is clear that the estimate converges exponentially fast to the true value. Since this is a static parameter that only needs to be estimated once, L_a will be assumed known for the further controller design.

4.2 Mass-spring-damper load

In [**Reference to finger model**] we assumed that the finger could be modelled as several torsional mass-spring-damper systems. Since we can't measure the finger-angles, the full model isn't observable, and can't be used for control design. Instead, we'll assume that finger can be modelled as a single mass-spring-damper system, acting on the motor as τ_l. Hence we'll model the load torque τ_l as:

$$\tau_l = J\frac{\mathrm{d}^2\theta}{\mathrm{d}t^2} + c\frac{\mathrm{d}\theta}{\mathrm{d}t} + k(\theta - \theta_{eq}), \tag{4.12}$$

where J is the total inertia of the finger, c is the total damping coefficient of the finger, k is the total stiffness of the finger, and θ_{eq} is the equilibrium angle of the finger. Substituting this into Equation (4.3), we get the updated dynamics:

$$(J_m + J)\frac{\mathrm{d}^2\theta}{\mathrm{d}t^2} + (B_m + c)\frac{\mathrm{d}\theta}{\mathrm{d}t} + k\theta = K_t I_a + k\theta_{eq} \tag{4.13}$$

$$R_a I_a + L_a\frac{\mathrm{d}I_a}{\mathrm{d}t} + K_b\frac{\mathrm{d}\theta}{\mathrm{d}t} = E_a. \tag{4.14}$$

4.3 State-space model of brushed DC motor with load

To design a controller for the system, we need to express the dynamics in state-space representation, shown in Section 2.2.1. Defining $\omega \triangleq \frac{\mathrm{d}\theta}{\mathrm{d}t}$, we can rewrite the Equation (4.13) and Equation (4.14) as:

$$\begin{aligned}\frac{\mathrm{d}\omega}{\mathrm{d}t} &= \frac{1}{J_m + J}\left(K_t I_a - (B_m + c)\omega - k(\theta - \theta_{eq})\right)\\ \frac{\mathrm{d}I_a}{\mathrm{d}t} &= \frac{1}{L_a}(E_a - R_a I_a - K_b\omega).\end{aligned}$$

Written more compactly, we have:

$$\underbrace{\frac{\mathrm{d}}{\mathrm{d}t}\begin{bmatrix}\theta\\ \omega\\ I_a\end{bmatrix}}_{\frac{\mathrm{d}}{dt}\mathbf{x}} = \underbrace{\begin{bmatrix}0 & 1 & 0\\ -\frac{k}{J_m+J} & -\frac{B_m+c}{J_m+J} & \frac{K_t}{J_m+J}\\ 0 & -\frac{K_b}{L_a} & -\frac{R_a}{L_a}\end{bmatrix}}_{\mathbf{A}}\underbrace{\begin{bmatrix}\theta\\ \omega\\ I_a\end{bmatrix}}_{\mathbf{x}} + \underbrace{\begin{bmatrix}0\\ 0\\ \frac{1}{L_a}\end{bmatrix}}_{\mathbf{B}}\underbrace{E_a}_{\mathbf{u}} + \underbrace{\begin{bmatrix}0\\ \frac{k\theta_{eq}}{J_m+J}\\ 0\end{bmatrix}}_{\mathbf{d}} \tag{4.15}$$

$$\implies \frac{\mathrm{d}}{\mathrm{d}t}\mathbf{x} = \mathbf{A}\mathbf{x} + \mathbf{B}\mathbf{u} + \mathbf{d}.$$

In addition we have an encoder measuring θ, aswell as an ammeter measuring I_a. Hence the output of the system is given by:

$$\underbrace{\begin{bmatrix}\theta\\ I_a\end{bmatrix}}_{\mathbf{y}} = \underbrace{\begin{bmatrix}1 & 0 & 0\\ 0 & 0 & 1\end{bmatrix}}_{\mathbf{C}}\underbrace{\begin{bmatrix}\theta\\ \omega\\ I_a\end{bmatrix}}_{\mathbf{x}} \tag{4.16}$$

$$\implies \mathbf{y} = \mathbf{C}\mathbf{x}.$$

4.4 Controllability of the system

Now that we have the system in state-space representation, we can check if the system is controllable, as described in Section 2.2.2. The controllability matrix $\mathcal{C}$ for our system is given by:

$$\mathcal{C} = [\mathbf{B}, \mathbf{AB}, \mathbf{A}^2\mathbf{B}]. \tag{4.17}$$

Substituting for our specific $\mathbf{A}$ and $\mathbf{B}$, we get:

Bibliography

National Cancer Institute. (2026). *Anatomical Terminology | SEER Training*. Retrieved March 13, 2026, from https://training.seer.cancer.gov/anatomy/body/terminology.html

TeachMeAnatomy. (2026a). *Anatomical terms of location*. Retrieved March 14, 2026, from https://teachmeanatomy.info/the-basics/anatomical-terminology/terms-of-location/

TeachMeAnatomy. (2026b). *Anatomical terms of movement*. Retrieved March 15, 2026, from https://teachmeanatomy.info/the-basics/anatomical-terminology/terms-of-movement/