



Qualcomm Technologies, Inc.

00274.1 Release Note for SW5100.LAW.1.0

Release Notes

SW5100.LAW.1.0

RNO-251215233401 Rev. 1

December 15, 2025

Qualcomm
Confidential - May Contain Trade Secrets
2026-06-17 10:13:32 GMT
arumugaraj@titan.co.in

Confidential - Qualcomm Technologies, Inc. and/or its affiliated companies - May Contain Trade Secrets

NO PUBLIC DISCLOSURE PERMITTED: Please report postings of this document on public servers or websites to:
DocCtrlAgent@qualcomm.com.

© Qualcomm Technologies, Inc. and/or its subsidiaries. All rights reserved.

Table Of Contents

Download.....	3
Release History.....	4
Getting Started.....	5
Software maturity of SP.....	5
Download QTI proprietary software from Qualcomm.....	5
ChipCode.....	5
Portal.....	5
Download HLOS software.....	6
Build Instructions.....	8
Metabuild Components.....	8
DDM Distro instruction:.....	8
. Android build information.....	8
. Build Instructions.....	9
. BOOT Build.....	11
. MPSS Build.....	12
.....	12
. TZ Build.....	12
.....	13
.....	13
. VIDEO Build.....	13
.....	13
. WLAN Build.....	13
. Meta Build.....	13
Memory configuration.....	15
Supported ASICs.....	15
Platform Information.....	15
Memory Platform Information.....	16
RF Card.....	16
.....	16
Memory Map Info.....	16
New Features.....	23
Limitations.....	24
Additional Information.....	25
Test Reports.....	26
References.....	29

1. Download

A. ChipCode Location:

https://chipcode.qti.qualcomm.com/38633/sw5100-law-1-0_ap_standard_oem

https://chipcode.qti.qualcomm.com/38633/sw5100-law-1-0_ap_oem_osh

https://chipcode.qti.qualcomm.com/38633/sw5100-law-1-0_test_device_ap

B. ChipCode Commands:

git clone --depth 1 <repo location>

Please note that the <repo location> and clone path can be obtained from the "Files" tab in the "Clone this repository" section of the above chipcode location.

Qualcomm
Confidential - May Contain Trade Secrets
2026-06-17 10:13:32 GMT
arumugaraj@titan.co.in

2. Release History

ChipCode Release History:

https://createpoint.qti.qualcomm.com/planner/link/search/newReleaseHistory/preset/sw5100-law-1-0_ap_standard_oem/master/r00274.1

https://createpoint.qti.qualcomm.com/planner/link/search/newReleaseHistory/preset/sw5100-law-1-0_ap_oem_osh/master/r00274.1

https://createpoint.qti.qualcomm.com/planner/link/search/newReleaseHistory/preset/sw5100-law-1-0_test_device_ap/master/r00274.1

Qualcomm
Confidential - May Contain Trade Secrets
2026-06-17 10:13:32 GMT
arumugaraj@titan.co.in

3. Getting Started

Software maturity of SP

Software product	Maturity level
SW5100.LAW.1.0	POST CS17

3.1 Download QTI proprietary software from Qualcomm ChipCodeTM Portal.

Qualcomm Technologies, Inc. (QTI) software can be downloaded from the Qualcomm ChipCode website. Designated points of contact in your organization can download the licensed software. The software is organized into distribution packages (distros) composed of subsystem image files. Each distro has a corresponding Git project. The Git tree includes revisions for previous builds that allow you to diff the changes between releases.

If you are new to ChipCode, review the following link for up-to-date documentation and a set of tutorial videos:

<https://chipcode.qti.qualcomm.com/projects/help/wiki>

Downloaded software will create below folder structure, <target_root> is the top-level directory?????:

```
<target_root>
./adsp_proc
./boot_images
./btfm_proc
./common
./contents.xml
./LINUX
./modem_proc
./qtee_tas
./rpm_proc
./trustzone_images
./venus_proc
./wlan_proc
```

3.2 Download HLOS software

The HLOS software can be obtained in two parts, a proprietary release from ChipCode and an open source release from the Code Aurora Forum (CAF) site.

3.2.1 Download open-source HLOS software from Codelinaro

1 Open the contents.xml file that was downloaded from ChipCode (see Section 4.1 and search for the <name>apps</name> tag.

2 Below this tag, locate the <build_id> tag. This identifies the corresponding open source HLOS software build similar to LAW.UM.2.0.r1-28700-SW5100.0

3 In an empty directory, use the repo init command with the correct branch and manifest as indicated in the branch releases table:

```
$ mkdir LAW.UM.2.0.r1
```

```
$ cd LAW.UM.2.0.r1
```

```
$ repo init -u https://git.codelinaro.org/clo/la/platform/manifest --repo-url=https://git.codelinaro.org/clo/la/tools/repo --repo-branch=qc-stable --current-branch --no-tags -b release -m AU_LINUX_ANDROID_LAW.UM.2.0.R1.11.00.00.846.287.xml
```

4 Type the following repo sync command:

```
$ repo sync -j8 (or repo sync --no-tags -j32 2>&1 | tee au_sync.txt )
```

5 After the repo sync finishes, copy the vendor/qcom/proprietary directory tree from the proprietary HLOS release into the open source HLOS source tree contained in your workspace.

```
$ cp -fr <target_root>/LINUX/android/vendor/qcom/proprietary  
<LAW.UM.2.0.r1>/vendor/qcom/
```

```
$ chmod 777 -R .
```

3.2.2 For Fast "Maintain audio playback volume level when user would put watch in charging cradle" feature verification, set below config.

- adb wait-for-device root && adb wait-for-device remount
- adb pull vendor/etc/resourcemanager_monaco_idp.xml /<folder_where_file_need_to_pull>.
- Find "<Charge_concurrency_enabled>0</Charge_concurrency_enabled>" tag in pulled file, change it to "<Charge_concurrency_enabled>1</Charge_concurrency_enabled>" and save it.
- adb push <folder_where_file_pulled>/resourcemanager_monaco_idp.xml /vendor/etc/
- adb shell stop audioserver

3.2.3 For Audio Cold latency measurement validations, make below code changes.

vendor/qcom/proprietary/args/ar_osal/src/ar_osal_log.c in function:

```
void ar_log_init(void)
```

```
//set this property to change the args debug logging enabled.
```

```
- if(!property_get_bool("vendor.audio.args.enable.debug.logs", 0)) {
```

```
+ if(property_get_bool("vendor.audio.args.enable.debug.logs", 0))
```

```
//set this property to change the args verbose logging enabled.
```

```
- if(!property_get_bool("vendor.audio.args.enable.verbose.logs", 0)) {
```

```
+ if(property_get_bool("vendor.audio.args.enable.verbose.logs", 0)) {
```

3.2.4 start to build APSS image

```
$ source build/envsetup.sh
```

```
$ lunch monaco_go-userdebug
```

```
$ ./build.sh dist -j8 ARCH=arm KERNEL_DEFCONFIG=vendor/monaco_defconfig -j8 2>&1  
| tee build_perf_log.log
```

Note: For Debug images use following command:

```
$ ./build.sh dist -j8 ARCH=arm -j8 2>&1 | tee build_log.log
```

Note: Some of the low-end configuration build machines won't support parallel threads, so in that case we have to use lower numbers with -j while doing above sync and make commands. In high-end build machines will support up to 32 parallel threads, we can use up to -j32.

4. Build Instructions

4.1 Metabuild Components

META build: SW5100.LAW.1.0-00274-STD.PROD-1

Software Image	Build ID
ADSP.IT.2.0	ADSP.IT.2.0-00483-ATHERTON-1
BOOT.XF.4.3	BOOT.XF.4.3-00258.1-ATHERTONLAZ-1
BTFM.CHE.2.1.7	BTFM.CHE.2.1.7-00058-QCACHROMZ-1
LAW.UM.2.0.r1	LAW.UM.2.0.r1-28700-SW5100.0-1
MPSS.HA.2.0	MPSS.HA.2.0.c1-00048-ATHERTON_GEN_PACK-1
RPM.BF.1.12	RPM.BF.1.12-00109-ATHERTONAAAAANAZR-1
TZ.APPS.2.0.1.1	TZ.APPS.2.0.1.1-00033-KAMORTAAAAANAZT-2
TZ.XF.5.1.5.1	TZ.XF.5.1.5.1-00022-ATHERTONAAAAANAZT-2
VIDEO.VE.6.0	VIDEO.VE.6.0-00053-PROD-2
WLAN.HL.3.4.1.c1	WLAN.HL.3.4.1.c1-00244-QCAHLSWMTPLZ-2

For the build components and IDs, refer to the [about.html](#) file in the root of the repository on Qualcomm ChipCode.

DDM Distro instruction:

1. Download **SW5100-LAW-1-0-HLOS-DEVICE-OSS** from chipcode
2. Load the build through fastboot command:
 - cd <target_root>/common/build
 - fastboot_complete.py
3. Load QCN for device camping.

Note: Since this is a DDM distro, no additional compilation of HLOS/NON_HLOS images is required.

4.2. Android build information

Tag / Build ID	Chipset	Manifest	Vendor AU	Android Version
LAW.UM.2.0.r1-28700-SW5100.0-1	SW5100	LAW.UM.2.0.r1-28700-SW5100.0.xml	AU_LINUX_ANDROID_LAW.UM.2.0.R1.11.00.00.846.287	Android R

CLO

link: https://git.codelinaro.org/clo/la/platform/manifest/-/blob/release/AU_LINUX_ANDROID_LAW.UM.2.0.R1.11.00.00.846.287.xml

NOTE: for HLOS build information please reference section 3.2

4.3. Build Instructions

4.3.1 ADSP Build

1. Set HEXAGON_ROOT environment variable before compilation (set the path where Hexagon tools are installed).
 - For example, on windows:
 - Set HEXAGON_ROOT=<path_of_the_installed_tools>
 - For example, on Linux:
 - export HEXAGON_ROOT=<path_of_installed_tools>
2. Set SECTOOLS environment variable before compilation (set the path where they are placed in)
 1. For example, on windows: set
SECTOOLS=<meta_build_root>\common\sectoolsv2\ext\Windows\sectools.exe
 2. For example, on Linux: export
SECTOOLS=<meta_build_root>/common/sectoolsv2/ext/Linux/sectools
3. Set up build environment by downloading and integrating nanopb dependency as mentioned in subsections “Set up nanopb dependency on Windows” or “Set up nanopb dependency on Linux”.
4. Open a command prompt and change to the following directory:
5. cd <target_root>\adsp_proc\build\ms
6. Use the appropriate command from below table based on the build environment.

aDSP build commands for Atherton

Build environment	Build command
Linux	◦ Build images - python ./build_variant.py atherton.adsp.prod ◦ Clean the build - python ./build_variant.py atherton.adsp.prod --clean
Windows	◦ Build images - python .\build_variant.py atherton.adsp.prod ◦ Clean the build - python .\build_variant.py atherton.adsp.prod --clean

Set up nanopb dependency on Windows

1. Integrate and set up nanopb dependency with ADSP build (one-time required for ADSP image).
 1. Download nanopb-0.3.9.5-windows-x86.zip from
<https://jpa.kapsi.fi/nanopb/download/nanopb-0.3.9.5-windows-x86.zip>
 2. Copy the nanopb-0.3.9.5-windows-x86.zip file to adsp_proc\ssc_api
 3. Open a command terminal, and cd to directory: adsp_proc\.
 4. Run the following command: “python ssc_api\build\config_nanopb_dependency.py -f <nanopb_gen_filename>”
 1. nanopb_gen_filename is the name of the .zip file from downloaded without the .zip

- extension, for example, nanopb-0.3.9.5-windows-x86
2. python ssc_api\build\config_nanopb_dependency.py -f nanopb-0.3.9.5-windows-x86
3. Output of this command looks similar to the following
 1. ssc_api\nanopb\inc
 2. pb_encode.h
 3. pb_common.h
 4. pb.h
 5. pb_decode.h
 6. ssc_api\nanopb/src
 7. pb_decode.c
 8. pb_encode.c
 9. pb_common.c
2. Change directory to build\ms "cd build\ms"
3. Run the command of ADSP as mentioned in above "*ADSP build commands for Atherton Table*".
4. The build log is saved in adsp_proc\build\ms\build.log txt file.

Set up nanopb dependency on Linux

1. Integrate and set up nanopb dependency with ADSP build (one-time required for ADSP image)
 1. Download nanopb-0.3.9.5-linux-x86.tar.gz from <https://jpa.kapsi.fi/nanopb/download/nanopb-0.3.9.5-linux-x86.tar.gz>
 2. Copy the nanopb-0.3.9.5-linux-x86.tar.gz file to adsp_proc/ssc_api
 3. Open a command terminal, and cd to directory: adsp_proc
 4. Run the following command: "python ssc_api/build/config_nanopb_dependency.py -f <nanopb_gen_filename>"
 1. nanopb_gen_filename is the name of the file from downloaded without the .tar.gz extension, for example, nanopb-0.3.9.5-linux-x86
 2. python ssc_api/build/config_nanopb_dependency.py -f nanopb-0.3.9.5-linux-x86
 3. Output of this command looks similar to the following:
 1. ssc_api/nanopb-0.3.9.5-linux-x86.tar.gz
 2. ssc_api/nanopb/nanopb-0.3.9.5-linux-x86
 3. ssc_api/nanopb/inc
 4. pb_encode.h
 5. pb_common.h
 6. pb.h
 7. pb_decode.h
 8. ssc_api/nanopb/src
 9. pb_decode.c
 10. pb_encode.c
 11. pb_common.c
2. Change directory to build\ms "cd build/ms"
3. Run the command of ADSP as mentioned in table. Run build command as mentioned in Table 5-7 or Table 5-8.
4. The build log is saved in adsp_proc/build/ms/build.log txt file.

4.3.2. BOOT Build

1. Install Qualcomm LLVM compiler for boot build:-
 1. Snapdragon LLVM Arm toolchain 10.0.3 for Windows Unzip LLVM to C:\Apps\LLVM\10.0.3
 2. Location of LLVM binary executable is C:\Apps\LLVM\10.0.3\bin\clang.exe
 3. Snapdragon LLVM Arm toolchain 10.0.3 for Linux Location of binaries:
/pkg/qct/software/llvm/release/arm/10.0.3/bin
2. Navigate to the directory: cd <target_root>/BOOT.xf.4.3/ Where <target_root> is the top-level
3. Use one of the command options listed in Table, depending on the build environment or release.

Build environment	Build command
Linux	python -u boot_images/QcomPkg/buildex.py --variant LAA -r RELEASE -t AthertonPkg
Windows	python -u boot_images\QcomPkg\buildex.py --variant LAA -r RELEASE -t AthertonPkg

Important NOTE:

- If RF is WTR2965, below code is a MUST to add in xBL
- WTR3K should NOT add below change

boot_images\QcomPkg\Library\PmicLib\target\atherton\system\src\pm_sbl_boot_oem.c

pm_driver_post_init(void)

{

.....

+ /*WA to QFPROM 2K failure */

+ err_flag |= pm_comm_write_byte(PM_PMW5100_INT_SLAVE_ID, PM_WTR2965_WA, 0x1);

//logic to issue HR if proper PON sequence not followed

err_flag |= pm_ldo_vreg_ready_status(0 ,PM_LDO_11 , &vreg_ready);

err_flag |= pm_comm_read_byte(PM_PMW5100_INT_SLAVE_ID, PM_WTR2965_WA,&data);

4.3.3. BTFM Build

- BTFM image is released as a binary and no build compilation is needed.

4.3.3. MPSS Build

Build Tools:

Toolchain – Hexagon 8.3.12, v67

Python version – 2.7.5

Perl version – 5.18.2 (Linux)

Supported build hosts - Ubuntu16_04, Windows 7

Build Environment	Build Commands
Linux	build.sh atherton.gen.prod -kClean the Build -./build.sh atherton.gen.prod -c
Windows	build.cmd atherton.gen.prod -kClean the Build -build.cmd atherton.gen.prod -c

4.3.3. RPM Build

Use the following commands to build RPM (<target_root> is the top-level directory).

Python version – 3.8.2

Supported build hosts - Ubuntu18_04, Windows 7

Compiler version – Snapdragon LLVM Arm Compiler 3.9.2 Linux builds may not work for early ES releases.

1. Open a command prompt and change to the cd <target_root>\rpm_proc\build directory
2. Use the appropriate command from the following table based on the build environment.

RPM build commands

Build environment	Build command
Linux	◦ Build images – sh build_atherton.sh ◦ Clean the build – sh build_atherton.sh -c
Windows	◦ Build images – build_atherton.bat ◦ Clean the build – build_atherton.bat -c

4.3.3. TZ Build

- TZ image is released as a binary and no build compilation is needed.

4.3.3. TZ APPS Build

- TZ APPS image is released as a binary and no build compilation is needed.

4.3.3. VIDEO Build

- Video image is released as a binary and no build compilation is needed.

4.3.3. WLAN Build

- WLAN image is released as a binary and no build compilation is needed.

4.3.3. Meta Build

If any of MPSS or aDSP is recompiled or updated, use the following commands to update the non-HLOS.bin file with the new images (<target_root> is the top-level directory):

1. Navigate to the directory: `cd <target_root>/common/build`
2. Enter the command:
 - `python build.py`

By default metabuild will compile NONHLOS.bin, which supports 2965 RF card, 32bit_go APSS binaries and LPDDR4

Product configuration	Contents.xml to be updated	Prerequisite: Individual images have to be compile	Meta compilation procedure	Comments
2965 RF card. Application processor 32 bit_go and LPDDR4	No change needed. The default meta supports this configuration	- APSS build should compile with 32-bit_go binaries. - Modem should be with 2K (2965) binaries	python build.py	Generates NON-HLOS.bin with 2965 RF card, 32bit_go APSS binaries and LPDDR4 Bin.
APQ RF card. Application processor 32 bit_go and LPDDR4	- copy "<Meta_root>.\common\build\contents_APQ.xml" to <Meta_root>. - rename and replace "contents_APQ.xml" to "contents.xml"	- APSS build should compile with 32-bit_go binaries. - Modem should be with APQ (gps) binaries	python build.py	Generates NON-HLOS.bin with APQ RF card, 32bit_go APSS binaries and LPDDR4 Bin.


 Confidential - May Contain Trade Secrets
 2026-06-17 10:13:32 GMT
 arumugaraj@titan.co.in

5. Memory configuration

Supported ASICs

This software can be used with the MSM™ ASICs and revisions, with the indicated release quality. ASIC revisions available at the time of this release are assumed to be supported unless otherwise indicated.

ASIC Hardware	ASIC Hardware Rev	Sample Type	Variant (PRR-BB)	Feature_ID	Source Configuration (s)	Note
SW5100	1.0	EA/ES/CS	100-AA	0x0	0	SW5100 (100-0-AA), PPSP572, 4 x A53, MLP configuration with modem
SW5100P	1.0	EA/ES/CS	100-AA	0x0	0	SW5100 (100-0-AA), PPSP572, 4 x A53, MLP configuration with no modem
PWM5100	1.0	ES	00-	N/A	0	
PWM5100	2.1	ES	02-	N/A	0	
PM8010	ES1		1U0-	N/A	N/A	
PM8010	ES2		1U2-	N/A	N/A	
PM8010	CS		1U3-	N/A	N/A	
WCN3980	CS		00B-	N/A	N/A	

Platform Information

The following platforms are supported in this release:

IDP	IDP, SW5100 MLP V1.0, SS 1GB LP4X+8GB EMMC, PMW5100, PM8010, WCN3980, WTR2965
WDP	DTP, WDP5100, EVT1.1, EXT SECURE, SW5100 MLP, 8GB EMMC+1GB LPDDR4X, PMW5100, PM8010, WCN3980, WTR2965

Memory Platform Information

The following memory platform is supported in this release

- Package-on-package (PoP) high-speed eMCP memory
 - 1GB LPDDR4X SDRAM, 8GB eMMC 5.1
 - DDR Frequencies supported

Low SVS	200 MHz
SVS	547 Mhz, 768 MHz, 1017 MHz, 1353 Mhz
NOM	1807 MHz
TURBO	2092 Mhz

RF Card

The following memory platform is supported in this release


WTR2965

Memory Map Info

NOTE: This is a preliminary memory map and may change in the future releases. It is for reference-only in this release and should not be used for optimization.

0x80000000	Region of DDR SW Map (481 MB)	Read -Write
0x61F00000	pIMEM Vault (17 MB)	Read -Write
0x60E00000	Region of DDR SW Map (13 MB)	Read -Write
0x60100000	TZ_STAT (1 MB)	Read -Write
0x60000000	UEFI (8 MB)	Read -Write
0x5F800000	Region of DDR SW Map (208 MB)	Read -Write
0x52800000	PIL_REGION (125 MB)	Read -Write
0x4AB00000	Region of DDR SW Map (72 MB)	Read -Write
0x46300000	WLAN (1 MB)	Read -Write
0x46200000	SMEM (2 MB)	Read -Write
0x46000000	Seedata / APSS (4 KB)	Read -Write
0x45FFF000	Region of DDR SW Map (936 KB)	Read -Write
0x45F10000	UEFI/XBL Minidump (64 KB)	Read -Write
0x45F00000	XBL(BOOT) (1 MB)	Read -Write
0x45E00000	HYP (3 MB)	Read -Write
0x45B00000	DeepSleep Backup (1 MB)	Read -Write
0x45A00000	Region of DDR SW Map (90 MB)	Read -Write
0x40000000		

Legend
Memory
Register
Reserved
Mixed
Unused
pIMEM
Static
Relocatable

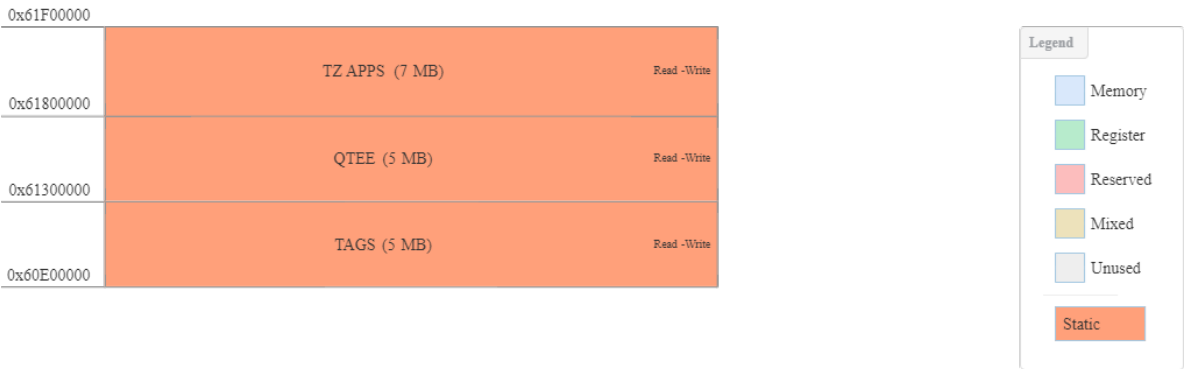

Qualcomm
Confidential - May Contain Trade Secrets
2026-06-17 10:13:32 GMT
arumugaraj@titan.co.in





Qualcomm

Confidential - May Contain Trade Secrets

2026-06-17 10:13:32 GMT

arumugaraj@titan.co.in

0x45B00000		
0x45AA4C00	Region of DeepSleep Backup (365 KB)	Read -Write
0x45A94C00	TZ_Config_Backup (64 KB)	Read -Write
0x45A92C00	DDR (8 KB)	Read -Write
0x45A80000	QUP FW (75 KB)	Read -Write
0x45A00000	RPM Backup (512 KB)	Read -Write

Legend

Memory

Register

Reserved

Mixed

Unused

Static

Note: Deep Sleep partition is created for Futiure use.

Qualcomm
Confidential - May Contain Trade Secrets
2026-06-17 10:13:32 GMT
arumugaraj@titan.co.in

6. New Features

Following features achieved L0 quality in this release:

1. FR100836:Voice wakeup on ADSP

Qualcomm
Confidential - May Contain Trade Secrets
2026-06-17 10:13:32 GMT
arumugaraj@titan.co.in

7. Limitations

Known Issues

- NA

Note: For a list of all completed and known Change Requests (CRs), see the Release History tab of the product in CreatePoint.

Qualcomm
Confidential - May Contain Trade Secrets
2026-06-17 10:13:32 GMT
arumugaraj@titan.co.in

8. Additional Information

Qualcomm
Confidential - May Contain Trade Secrets
2026-06-17 10:13:32 GMT
arumugaraj@titan.co.in

9. Test Reports

Following are the test reports for this release.

Request Pre-condition: ensure RPMB provision have done on DUT, follow below step:

- To do Provision RPMB:
qseecom_sample_client -v smplap32 14 1
then select option 1
- To check RPMB status
qseecom_sample_client -v smplap32 14 1
then select option 2

PDT Release Test Report

Test Area	Sub-area	Test Case Name	Result	Comments
CBSP	Boot	EDLModecheck	Pass	
	Boot	adb_reboot_bootloader	Pass	
	Boot	fastboot reboot	Pass	
	Boot	BootupTime	Pass	
	Boot	Boottime_Subsequent	Pass	
	Boot	DeviceInfo	Pass	
	Boot	Build Utilities	Pass	
	Boot	ADB Reboot	Pass	
	Boot	Reboot From Shell	Pass	
	Boot	Back-to-Back reboots using ADB	Pass	
	Boot	QPST Detect	Pass	
	Boot	Load_QCN	Pass	
	Boot	Check Dump collection	Pass	
	Peripherals	Check UART Logs	Pass	
	Peripherals	HW button functionalities	Pass	
	ThermalEngine	ThermalEngine	Pass	
Linux Kernel	Baseport	CPUDCVS_Cpufreq_Python	Pass	
		CPUGovernorChanges	Pass	
	SSR	MDSPSSR	Pass	
		ADSPSSR	Pass	
		VenusSSR	Pass	
Linux Security	Verity	EnableVerity	Pass	
		DisableVerity	Pass	
	ICEbasedFBE	ICEbasedFBE	Pass	
	FileSystem	F2FSforUserdata	Pass	
		Factory Data Reset	Pass	

Security	Security	RPMB	Pass	
FOTA	FOTA	PerformOTA	Pass	
MM	Camera	FrontCamera_PreviewsrMax	Pass	
		Front_Camera ZSL Snapshot srMax5MP	Pass	
		Front_Camera ZSL Snapshot srMax2MP	Pass	
		Back_CameraPreviewsrMax	Pass	
		Back_Camera ZSL Snapshot srMax5MP	Pass	
		Front_Camcorder_Recording_Max Resolution_FPS	Pass	
		Back_Camcorder Recording-Max Resulution/FPS	Pass	
		Camera Shutter sound	Pass	
	Video	WEBM VORBIS VP8	Pass	
		MP4 H264 AAC	Pass	
		MP4 HEVC AAC	Pass	
		Video_Decompose_Seeking	Pass	
	Audio	Audio	Pass	
		Audio playback recorded AMR-NB format file	Pass	
		Audio playback WAV	Pass	
		Audio playback ACC	Pass	
		Audio playback MP3	Pass	
	Display	Brightness control	Pass	
	Touch	Verify functionalities of all options in QSS layout	Pass	
Sensor	Physical Sensor	All Sensor Verification Qsensor Test (Accel/Gyro/Mag/Light/Pressure/PPG)	Pass	
Connectivity	Co-work	WLAN BT At Sametime	Pass	
	WLAN	Connect to an AP with Password	Pass	
		Browse Over WLAN	Pass	
		Remember Network-(Enable/Disable WLAN)	Pass	
	BT	Device Search	Pass	
		DevicePair	Pass	
		MP3 Audio over BT Headset	Pass	
		MO Voice call through BT Headset	Pass	
		MT Voice call with BT Headset connected	Pass	
		MO/MT Call Device Switch	Pass	
		Airplane Mode ON/OFF	Pass	

Telephony	CMCC LTE	LTE-CMCC MT/MO Call	Pass	
	CMCC LTE	LTE-CMCC MT/MO SMS/MMS	Pass	
	CMCC LTE	LTE-CMCC Data	Pass	
	CU-LTE	LTE-CU MT/MO Call	Pass	
	CU-LTE	LTE-CU Data	Pass	
	CT-LTE	LTE-CT MT/MO Call	Pass	
	CT-LTE	LTE-CT Data	Pass	
	VOLTE	VoLTE MT/MO Call	Pass	
	GSM	GSM MT/MO Call	Pass	
	GSM	GSM Data	Pass	
	CDMA	CDMA-1x MT/MO Call	Pass	
	CDMA	CDMA-Evdo Data	Pass	
	WCDMA	WCDMA MT/MO Call	Pass	
	WCDMA	WCDMA Data	Pass	
Location	GPS	Standalone app tracking	Pass	
Wear Tech	UI	Restart	Pass	
		ShutDown	Pass	
		Battery Charge indicator	Pass	
		Display time out (5 Sec)	Pass	
		DateAndTimeSync	Pass	
	Clock	Set Alarm	Pass	
		Start stopwatch	Pass	
		Set a timer	Pass	
	Ambient Mode	Ambient Mode to Interactive with USB Disconnected	Pass	
	Blank screen	Blank screen to Interactive mode Stress	Pass	
	User Experience / Usability	User Experience / Usability	Pass	
Product	Power	Vddmin	Pass	
	Power	Suspend/Resume	Pass	
FR	DS	DS enter/exit	Pass	

10. References

Related Documents

- [SW5100-0/SW5100P-0 DATA SHEET \(80-24633-1\)](#)
- [SW5100-1/SW5100P-1 DATA SHEET \(80-24634-1\)](#)
- [SW5100-1/SW5100P-1 DEVICE REVISION GUIDE \(80-24634-4\)](#)
- [SW5100-0/SW5100P-0 PIN ASSIGNMENT AND GPIO CONFIGURATION SPREADSHEET \(80-24633-1A\)](#)
- [SW5100-1/SW5100P-1 PIN ASSIGNMENT AND GPIO CONFIGURATION SPREADSHEET \(80-24634-1A\)](#)
- [SW5100 QFPROM PROGRAMMING REFERENCE GUIDE \(80-24634-97\)](#)
- [SW5100+ ANDROID WEAR SOFTWARE REFERENCE MANUAL \(80-20387-100\)](#)
- [SW5100+ ANDROID WEAR SOFTWARE PROGRAMMING GUIDE \(80-20387-200\)](#)
- [SW5100+ ANDROID WEAR QUICK START GUIDE \(80-20387-300\)](#)
- [SW5100 TECHNICAL REFERENCE MANUAL \(80-24634-5\)](#)
-

Qualcomm
Confidential - May Contain Trade Secrets
2026-06-17 10:13:32 GMT
arumugaraj@titan.co.in

LEGAL INFORMATION

Your access to and use of this material, along with any documents, software, specifications, reference board files, drawings, diagnostics and other information contained herein (collectively this "Material"), is subject to your (including the corporation or other legal entity you represent, collectively "You" or "Your") acceptance of the terms and conditions ("Terms of Use") set forth below. If You do not agree to these Terms of Use, you may not use this Material and shall immediately destroy any copy thereof.

1) Legal Notice.

This Material is being made available to You solely for Your internal use with those products and service offerings of Qualcomm Technologies, Inc. ("Qualcomm Technologies"), its affiliates and/or licensors described in this Material, and shall not be used for any other purposes. If this Material is marked as "Qualcomm Internal Use Only", no license is granted to You herein, and You must immediately (a) destroy or return this Material to Qualcomm Technologies, and (b) report Your receipt of this Material to qualcomm.support@qti.qualcomm.com. This Material may not be altered, edited, or modified in any way without Qualcomm Technologies' prior written approval, nor may it be used for any machine learning or artificial intelligence development purpose which results, whether directly or indirectly, in the creation or development of an automated device, program, tool, algorithm, process, methodology, product and/or other output. Unauthorized use or disclosure of this Material or the information contained herein is strictly prohibited, and You agree to indemnify Qualcomm Technologies, its affiliates and licensors for any damages or losses suffered by Qualcomm Technologies, its affiliates and/or licensors for any such unauthorized uses or disclosures of this Material, in whole or part.

Qualcomm Technologies, its affiliates and/or licensors retain all rights and ownership in and to this Material. No license to any trademark, patent, copyright, mask work protection right or any other intellectual property right is either granted or implied by this Material or any information disclosed herein, including, but not limited to, any license to make, use, import or sell any product, service or technology offering embodying any of the information in this Material.

THIS MATERIAL IS BEING PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, WHETHER EXPRESSED, IMPLIED, STATUTORY OR OTHERWISE. TO THE MAXIMUM EXTENT PERMITTED BY LAW, QUALCOMM TECHNOLOGIES, ITS AFFILIATES AND/OR LICENSORS SPECIFICALLY DISCLAIM ALL WARRANTIES OF TITLE, MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE, SATISFACTORY QUALITY, COMPLETENESS OR ACCURACY, AND ALL WARRANTIES ARISING OUT OF TRADE USAGE OR OUT OF A COURSE OF DEALING OR COURSE OF PERFORMANCE. MOREOVER, NEITHER QUALCOMM TECHNOLOGIES, NOR ANY OF ITS AFFILIATES AND/OR LICENSORS, SHALL BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY EXPENSES, LOSSES, USE, OR ACTIONS HOWSOEVER INCURRED OR UNDERTAKEN BY YOU IN RELIANCE ON THIS MATERIAL.

Certain product kits, tools and other items referenced in this Material may require You to accept additional terms and conditions before accessing or using those items.

Technical data specified in this Material may be subject to U.S. and other applicable export control laws. Transmission contrary to U.S. and any other applicable law is strictly prohibited.

Nothing in this Material is an offer to sell any of the components or devices referenced herein.

This Material is subject to change without further notification.

In the event of a conflict between these Terms of Use and the Website Terms of Use on www.qualcomm.com, the *Qualcomm Privacy Policy* referenced on www.qualcomm.com, or other legal statements or notices found on prior pages of the Material, these Terms of Use will control. In the event of a conflict between these Terms of Use and any other agreement (written or click-through, including, without limitation any non-disclosure agreement) executed by You and Qualcomm Technologies or a Qualcomm Technologies affiliate and/or licensor with respect to Your access to and use of this Material, the other agreement will control.

These Terms of Use shall be governed by and construed and enforced in accordance with the laws of the State of California, excluding the U.N. Convention on International Sale of Goods, without regard to conflict of laws principles. Any dispute, claim or controversy arising out of or relating to these Terms of Use, or the breach or validity hereof, shall be adjudicated only by a court of competent jurisdiction in the county of San Diego, State of California, and You hereby consent to the personal jurisdiction of such courts for that purpose.

2) Trademark and Product Attribution Statements.

Qualcomm is a trademark or registered trademark of Qualcomm Incorporated. Arm is a registered trademark of Arm Limited (or its subsidiaries) in the U.S. and/or elsewhere. The Bluetooth® word mark is a registered trademark owned by Bluetooth SIG, Inc. Other product and brand names referenced in this Material may be trademarks or registered trademarks of their respective owners.

Snapdragon and Qualcomm branded products referenced in this Material are products of Qualcomm Technologies, Inc. and/or its subsidiaries. Qualcomm patented technologies are licensed by Qualcomm Incorporated.

THE DOCUMENTATION ACCOMPANYING THE MATERIALS AND/OR RELEVANT PRODUCTS AND SERVICE OFFERINGS MAY INCLUDE IMPORTANT USE LIMITATIONS. ANY DEVIATIONS FROM APPLICABLE USE LIMITATIONS MAY ADVERSELY IMPACT PERFORMANCE, DURABILITY, QUALITY OR SAFETY. YOU ASSUME ALL RISKS AND LIABILITIES ASSOCIATED WITH ANY DEVIATIONS.