1 2 3 4 5 6 7 8 9 10

1 PolyPipe.Ax1In3

11

1 > Enable

COPY DATA
Source Destination
0 PolyPipe.Ax1Position
Type Copy Value

1 2 3 4 5 6 7 8 9 10

2 SystemEnable

11

2 > Enable_TM
DO-0.1.1.1
(OUT)

1 2 3 4 5 6 7 8 9 10

3 SystemEnable

11

3 > Enable_DM
DO-0.1.1.2
(OUT)

1 2 3 4 5 6 7 8 9 10

4 SystemEnable

11

4 > Enable

SIMPLE MOVE
Module Name: AMC-1
Channel/Axis: 2 Channel/Axis Name: Top Motor
Move Addressing Absolute
Direction N/A
Target 1
Velocity PolyPipe.Ax4Velocity
Acceleration DieAccelDecelRate
Deceleration DieAccelDecelRate
Stop Setup Stop at Maximum Decel Rate

1 2 3 4 5 6 7 8 9 10

5 SystemEnable

11

5 >

Enable

SIMPLE MOVE
Module Name: AMC-1
Channel/Axis: 1 Channel/Axis Name: Die Motor
Move Addressing Absolute
Direction N/A
Target 1
Velocity PolyPipe.Ax4Velocity
Acceleration DieAccelDecelRate
Deceleration DieAccelDecelRate
Stop Setup Immediate Stop

1 2 3 4 5 6 7 8 9 10

6

TriggerPosition ≥ 7 TriggerPosition ≤ 9

11

6 >

In_Disable_Range (SET)

1 2 3 4 5 6 7 8 9 10

7

TriggerPosition = 10

11

7 >

In_Disable_Range (RST)

1 2 3 4 5 6 7 8 9 10

8

SystemEnable PotentiometerPositionMM > Die Index Position1 CV > 25 In_Disable_Range

11

8 >

Enable

VELOCITY MOVE
Module Name: AMC-1
Channel/Axis: 3 Channel/Axis Name: Table Motor
Move Direction Negative
Velocity Table Motor Velocity
Ramp Rate Table Motor Ramp Rate
Stop Setup Immediate Stop

1 2 3 4 5 6 7 8 9 10

9

SystemEnable PotentiometerPositionMM < Die Index Position1 CV > 25

11

9 >

Enable

VELOCITY MOVE
Module Name: AMC-1
Channel/Axis: 3 Channel/Axis Name: Table Motor
Move Direction Positive
Velocity Table Motor Velocity
Ramp Rate Table Motor Ramp Rate
Stop Setup Immediate Stop

10

11

10 >

Enable

MATH
Result Table Motor Velocity
Numeric Result
Formula
abs(Die Index Position1- PotentiometerPositionMM) * 5

11

11 >

Enable

MATH
Result Table Motor Ramp Rate
Numeric Result
Formula
Table Motor Velocity * 1.2 * 5

12

DN

11

12 >

Time Up

SIMPLE TIMER
Preset Value 150 Current Value CV
On Delay Done DN
Time Base .001 sec

13

PolyPipe.Ax1In3

13.1

SystemEnable

13.2

CutCycleReset

13.3

SystemEnable

11

13 >

StopCutCycle

SET

13.1 >

TriggerCut

RST

13.2 >

Enable

SET POSITION
Module Name: AMC-1
Channel/Axis: 4 Channel/Axis Name: Encoder
Set Position To 0

13.3 >

TriggerCutAtPosition

RST

14

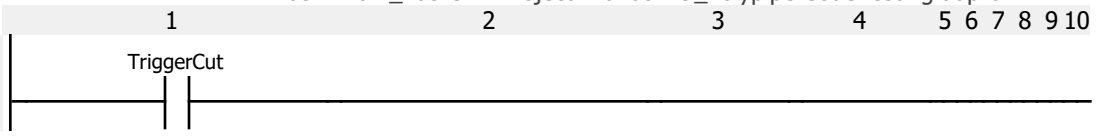

14 >

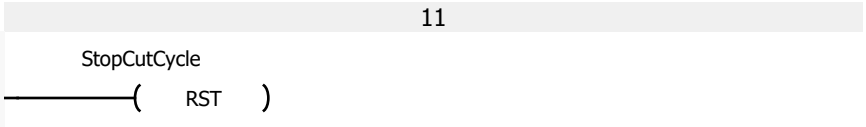

15

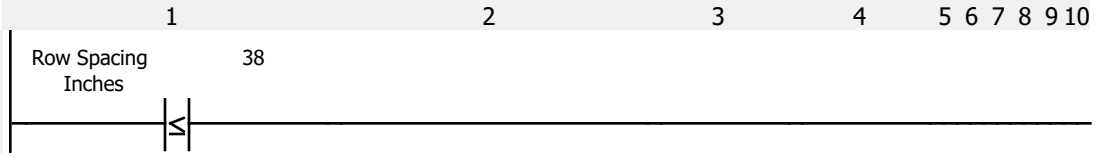

15 >

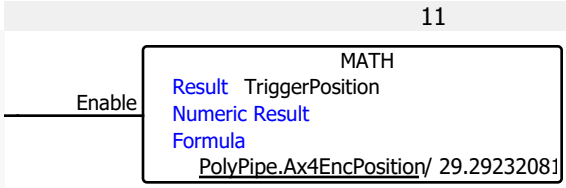

16

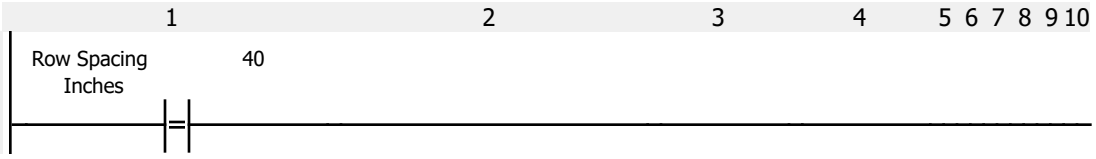

16 >

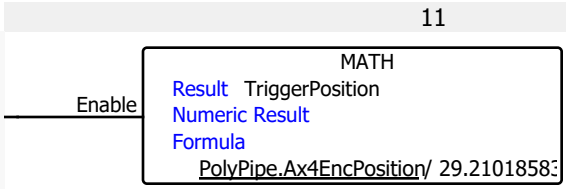

17

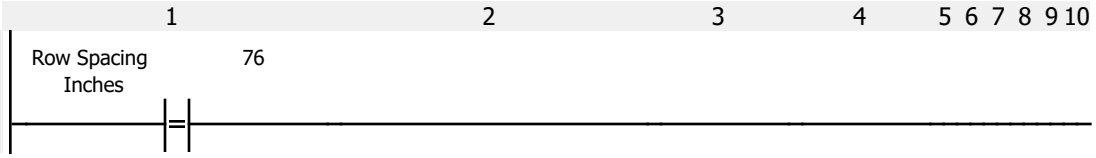

17 >

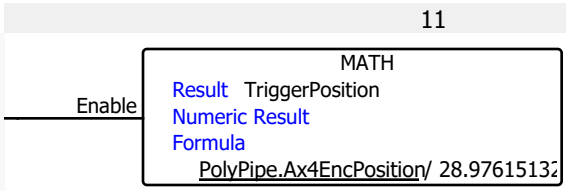

18

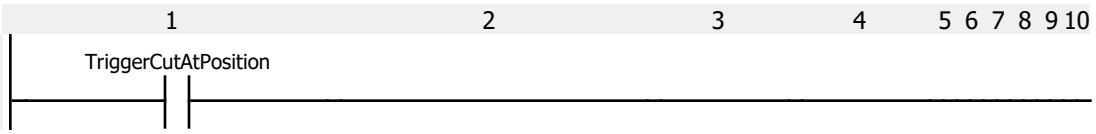

18 >

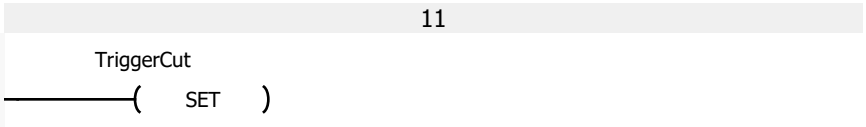

19

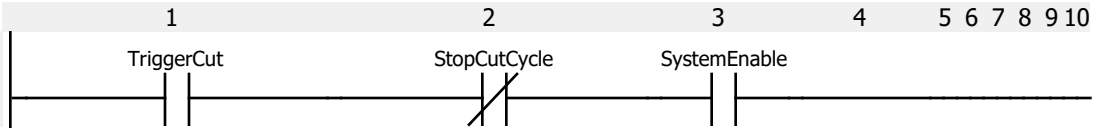

11

19 >

Enable

GEAR DRIVETRAIN
Module Name: AMC-1
Drivetrain Segments 1
Encoder as Primary Master Axis Yes

Primary
Master Encoder Slave Die Motor
Ratio 7.78 Disable

1 2 3 4 5 6 7 8 9 10

20

SystemEnable

11

20 >

Enable

GEAR DRIVETRAIN
Module Name: AMC-1
Drivetrain Segments 1
Encoder as Primary Master Axis Yes

Primary
Master Encoder Slave Top Motor
Ratio -7.777 Disable

1 2 3 4 5 6 7 8 9 10

21

11

21 >

Enable

SCALE NON-LINEAR
Input Edge Sensor Analog Output Edge Position MM

Input Value	Desired Output
11471	0
13210	.06
15694	1.48
21391	4.74
26289	7.55
32208	10.94
39272	14.98
45110	18.33
52250	22.42
59139	26.36
65160	29.82
65565	30

1 2 3 4 5 6 7 8 9 10

22

11

22 >

Enable

SCALE NON-LINEAR

Input R_edge sensor Output R_Edge Position MM

Input Value	Desired Output
11471	0
13210	.06
15694	1.48
21391	4.74
26289	7.55
32208	10.94
39272	14.98
45110	18.33
52250	22.42
59139	26.36
65160	29.82
65565	30

1 2 3 4 5 6 7 8 9 10

23

11

23 >

Enable

SCALE LINEAR

Input PolyPipe.Ax2EncPosition Output Cutting Motor Degrees

In Min 0

In Max 400

Out Min 360

Out Max 0

1 2 3 4 5 6 7 8 9 10

24

PolyPipePositionSet

11

24 >

Enable

COPY DATA

Source	Destination
PolyPipe.Ax4EncPosition	PolyPipePositionCapture
PolyPipe.Ax2EncPosition	Die Position Capture

Type Copy Value

1 2 3 4 5 6 7 8 9 10

25

11

25 >

Enable

MATH

Result PolyPipePunchTrigger

Numeric Result

Formula

PolyPipePositionCapture+ ((Row Spacing Inches / 6.31974025) * 360

1 2 3 4 5 6 7 8 9 10

26

11

26 >

Enable

MATH

Result Avg_Edge_Position

Numeric Result

Formula

(Edge Position MM + R_Edge Position MM) / 2

27

27 >
Enable
COMPARE VALUES
Input 1 PolyPipe.Ax4EncPosition Equal To PolyPipePositionSet
Input 2 PolyPipePunchTrigger

28

28 >
Enable
MATH
Result DieAccelDecelRate
Numeric Result
Formula
PolyPipe.Ax4Velocity ^2

29

29 >
Enable
MATH
Result Die Position Target
Numeric Result
Formula
Die Position Capture + 400

30

30 >
Enable
MATH
Result Diameter_MM
Numeric Result
Formula
(DiameterIn * 25.4)

31
Diameter_MM 0 =

31 >
Enable
COPY DATA
Source Destination
0 Hole Size
Type Copy Value

32
Diameter_MM 1.587 ≥ Diameter_MM 1.588 ≤

11

32 >

Enable

COPY DATA
Source 0.306510974
Destination Hole Size
Type Copy Value

1 2 3 4 5 6 7 8 9 10

33

Diameter_MM ≥ 3.17 Diameter_MM ≤ 3.18

11

33 >

Enable

COPY DATA
Source 0.751371601
Destination Hole Size
Type Copy Value

1 2 3 4 5 6 7 8 9 10

34

Diameter_MM ≥ 4.76 Diameter_MM ≤ 4.77

11

34 >

Enable

COPY DATA
Source 1.293767897
Destination Hole Size
Type Copy Value

1 2 3 4 5 6 7 8 9 10

35

Diameter_MM ≥ 6.3 Diameter_MM ≤ 6.4

11

35 >

Enable

COPY DATA
Source 1.918095495
Destination Hole Size
Type Copy Value

1 2 3 4 5 6 7 8 9 10

36

Diameter_MM ≥ 7.93 Diameter_MM ≤ 7.94

11

36 >

Enable

COPY DATA
Source 2.650424332
Destination Hole Size
Type Copy Value

1 2 3 4 5 6 7 8 9 10

37

Diameter_MM ≥ 9.52 Diameter_MM ≤ 9.53

11

37 >

Enable

COPY DATA
Source 3.347503545
Destination Hole Size
Type Copy Value

38
Diameter_MM ≥ 11.11 Diameter_MM ≤ 11.12

38 >
Enable COPY DATA
Source 4.180922369 Destination Hole Size
Type Copy Value

39
Diameter_MM ≥ 12.6 Diameter_MM ≤ 12.8

39 >
Enable COPY DATA
Source 5.081588517 Destination Hole Size
Type Copy Value

40
Diameter_MM ≥ 14.28 Diameter_MM ≤ 14.29

40 >
Enable COPY DATA
Source 5.957857812 Destination Hole Size
Type Copy Value

41
Diameter_MM ≥ 15.87 Diameter_MM ≤ 15.88

41 >
Enable COPY DATA
Source 6.959293606 Destination Hole Size
Type Copy Value

42
Diameter_MM ≥ 17.46 Diameter_MM ≤ 17.47

42 >
Enable COPY DATA
Source 7.997536308 Destination Hole Size
Type Copy Value

43
Diameter_MM ≥ 19.0 Diameter_MM ≤ 19.1

11

43 >

Enable

COPY DATA
Source 9.150634338
Destination Hole Size
Type Copy Value

1 2 3 4 5 6 7 8 9 10

44

Diameter_MM ≥ 20.63 Diameter_MM ≤ 20.64

11

44 >

Enable

COPY DATA
Source 10.31875
Destination Hole Size
Type Copy Value

1 2 3 4 5 6 7 8 9 10

45

RowNumber > 0

11

This function is to find the desired hole size that needs to be cut. Hole Size take into account the area of water flow desired for that row. this is added against the potentiometer which should always be searching for the zero value of the material. There is an offset value added to compensate for the true zero position as it is hard to find true zero by eyeballing it.

45 >

Enable

MATH
Result Die Index Target
Numeric Result
Formula
Hole Size + Potent_Edge_scale_mm + 1.809375

1 2 3 4 5 6 7 8 9 10

46

11

This is just for reference. I wanted to see the difference the Error Correction equation is having on the movement of the die.

46 >

Enable

MATH
Result Die Index Position1
Numeric Result
Formula
Hole Size + Potent_Edge_scale_mm + 1.809375

1 2 3 4 5 6 7 8 9 10

47

PolyPipe.Ax3In3

47.1

TestEdgePosZero

11

47 >

Enable

COPY DATA
Source Avg_Edge_Position
Destination Edge Position Reference Zero
Type Copy Value

48

48 >

```
Enable
MATH
Result   Die Index Velocity
Numeric Result
Formula
   abs(PolyPipe.Ax3Position- Die Index Position1)
```

49

49 >

```
Enable
MATH
Result   Die Index Ramp Rate
Numeric Result
Formula
   Die Index Velocity^2
```

50

50 >

Reference for die travel. Out min and Out Max are in mm. Gefran potentiometer linear position sensor

```
Enable
SCALE LINEAR
Input   Die Table Position Analog Output   PotentiometerPositionMM
In Min   0
In Max   65535
Out Min   0
Out Max   50.8
```

51

51 >

Not sure where the values are coming from yet. However, this is taking the 'Edge Position MM' which is the Edge Sensors analog signal converted to mm. Then it inverts the data so that '+' direction is the same as the '+' direction on the Potentiometer connected to the table.
This allows us to index the die.

```
Enable
SCALE LINEAR
Input   Avg_Edge_Position Output   Potent_Edge_scale_mm
In Min   0.0
In Max   30.0
Out Min   30.92
Out Max   0.92
```

52

52 > (END)

I/O Modules

Part Number	Group Number	Base Number	Slot Number	Description
P2-550	0	1	0	CPU Module
P2-06TRS	0	1	1	6PT, ISOLATED OUTPUT RELAY
P2-04AD	0	1	2	4CH, 16-BIT, VOLTAGE/CURRENT, ANALOG INPUT
P2-08SIM	0	1	3	8PT, INPUT SIMULATOR
P2-SCM	0	1	4	Serial Communication Module

GS Drives

Part Number	Node Number	Horse Power Rating
GS21-21P0	9	1.00

Protos X

Module P/N	Group	Position	Module Description

Modbus Devices

Device Name	Port Type	Ethernet Port	IP Address Type	IP Address	Port No.	Ethernet Slave Node	Enable TCP Connect	Serial Port	Serial Slave Node	TCP Connected	TCP/IP Error

Data Block	I/O Type	Enabled	Tag Name	Data Type	Element Count	Message Size	Connection Point (I/O)	Class (Explicit)	Instance (Explicit)	Attribute (Explicit)
1	Input	No					101 (0x65)	4 (0x4)	101 (0x65)	3 (0x3)
	Output	No					102 (0x66)	4 (0x4)	102 (0x66)	3 (0x3)

Devices

Device Name	Ethernet Port	IP Address	Port No.	Session Timeout Enabled	Session Timeout in secs	Byte Order Swap	TCP Connected	Adapter Name	Vendor ID	TCP/IP Error
GS21X	CPU	"10.10.10.2"	44818	No	30	No	TRUE			

Messages

Device Name	Message Name	Enable Bit	RPI in	Routing Enabled	Slot No.	Connection Online	General Status	Extended Status	Status Description
GS21X	MSG(1) [I/O]	GS21X_IO_Enable	msec	No	0	TRUE			

Data

Device Name	Message Name	Data Name	Config Enabled	Delivery Option	RPI in msec	Connection Point	Data Array	Element Count (Msg Size)	Status Header Included
GS21X	MSG(1) [I/O]	INPUT		Multicast	250	101	GS21X_In	4	No
		OUTPUT			250	100	GS21X_Out	4	Yes
		CONFIG	Yes			102	GS21X_Config	0	

Name	System ID	Retentive	Init Value	Wire Label	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Was_DI-0.1.4.2	C-000066	No	No		0	0	No	No	No	No	
Was_DI-0.1.4.3	C-000068	No	No		0	0	No	No	No	No	
Drivetrain Enable	DI-0.1.3.1	No	No		0	0	Yes	No	No	No	
Die Position Zero	C-000076	No	No		0	0	Yes	No	No	No	
Die Position Home	C-000078	No	No		0	0	Yes	No	No	No	
TestHomeSwitch	C-000559	No	No		0	0	No	No	No	No	
move die motor	DI-0.1.3.2	No	No		0	0	No	No	No	No	
move table motor	DI-0.1.3.3	No	No		0	0	No	No	No	No	
move top motor	DI-0.1.3.4	No	No		0	0	No	No	No	No	
SIM_Spd4	DI-0.1.3.5	No	No		0	0	No	No	No	No	
SIM_Spd3	DI-0.1.3.6	No	No		0	0	No	No	No	No	
SIM_Spd2	DI-0.1.3.7	No	No		0	0	No	No	No	No	
SIM_Spd1	DI-0.1.3.8	No	No		0	0	No	No	No	No	

Name	System ID	Retentive	Init Value	Wire Label	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Enable_TM	DO-0.1.1.1	No	No		0	0	No	No	No	No	
Enable_DM	DO-0.1.1.2	No	No		0	0	No	No	No	No	
DO-0.1.1.3	DO-0.1.1.3	No	No		0	0	No	No	No	No	
DO-0.1.1.4	DO-0.1.1.4	No	No		0	0	No	No	No	No	
DO-0.1.1.5	DO-0.1.1.5	No	No		0	0	No	No	No	No	
DO-0.1.1.6	DO-0.1.1.6	No	No		0	0	No	No	No	No	

Name	Type	System ID	Retentive	Init Value	Wire Label	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Was_AIS32-0.1.3.1	Analog Input, Integer, 32 Bit	S32-000053	No	0		0	0	No	No	0	No	
Edge Sensor Analog	Analog Input, Integer, 32 Bit	AIS32-0.1.2.1	No	0		0	0	No	No	0	No	
Die Table Position Analog	Analog Input, Integer, 32 Bit	AIS32-0.1.2.2	No	0		0	0	No	No	0	No	
Die Edge Position Analog	Analog Input, Integer, 32 Bit	S32-000118	No	0		0	0	No	No	0	No	
Ditcher Analog	Analog Input, Integer, 32 Bit	AIS32-0.1.2.3	No	0		0	0	No	No	0	No	
R_edge sensor	Analog Input, Integer, 32 Bit	AIS32-0.1.2.4	No	0		0	0	No	No	0	No	

Name	Type	System ID	Retentive	Init Value	Wire Label	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment

Name	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Top Motor On	No	No	0	0	Yes	No	No	No	
Cutting Motor On	No	No	0	0	Yes	No	No	No	
Table Motor On	No	No	0	0	Yes	No	No	No	
Cutting Motor Off	No	No	0	0	Yes	No	No	No	
Complete	No	No	0	0	No	No	No	No	
InProgress	No	No	0	0	No	No	No	No	
Home_Postion	No	No	0	0	Yes	No	No	No	
Die Position Move Enable	No	No	0	0	Yes	No	No	No	
PolyPipePositionSet	No	No	0	0	Yes	No	No	No	
Die Run	No	No	0	0	No	No	No	No	
Target Die Position Complete	No	No	0	0	No	No	No	No	
Die Position Move Reset	No	No	0	0	No	No	No	No	
HomePosition	No	No	0	0	No	No	No	No	
EnableCut	No	No	0	0	No	No	No	No	
TriggerCut	No	No	0	0	Yes	No	No	Yes	
CutCycleComplete	No	No	0	0	No	No	No	No	
StopCutCycle	No	No	0	0	No	No	No	No	
Ons	No	No	0	0	No	No	No	No	
ResetPosition	No	No	0	0	Yes	No	No	No	
MoveDiePosition	No	No	0	0	No	No	No	No	
CycleDie	No	No	0	0	No	No	No	No	
Always On Bit	No	No	0	0	No	No	No	No	
Home_Die_Motor	No	No	0	0	No	No	No	No	
TestEdgePosZero	No	No	0	0	No	No	No	No	
Home_Table_Motor	No	No	0	0	No	No	No	No	
block	No	No	0	0	No	No	No	No	
DoneBit	No	No	0	0	No	No	No	No	
SystemEnable	No	No	0	0	No	No	No	No	
LatchHomeDie	No	No	0	0	No	No	No	No	
LatchHomeTable	No	No	0	0	No	No	No	No	
DN	No	No	0	0	No	No	No	No	
LatchHomeTable1	No	No	0	0	No	No	No	No	
NextHoleSize	No	No	0	0	No	No	No	No	
IncrementCount	No	No	0	0	No	No	No	No	
TriggerCutAtPosition	No	No	0	0	No	No	No	No	
CutCycleReset	No	No	0	0	No	No	No	No	
Light1	No	No	0	0	No	No	No	No	
Light5	No	No	0	0	No	No	No	No	
Light4	No	No	0	0	No	No	No	No	
Light3	No	No	0	0	No	No	No	No	
Light2	No	No	0	0	No	No	No	No	

Name	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Light6	No	No	0	0	No	No	No	No	
Light7	No	No	0	0	No	No	No	No	
Light8	No	No	0	0	No	No	No	No	
Light9	No	No	0	0	No	No	No	No	
Light10	No	No	0	0	No	No	No	No	
Light11	No	No	0	0	No	No	No	No	
Light12	No	No	0	0	No	No	No	No	
Light13	No	No	0	0	No	No	No	No	
T1_Done	No	No	0	0	No	No	No	No	
Light14	No	No	0	0	No	No	No	No	
Light15	No	No	0	0	No	No	No	No	
Light16	No	No	0	0	No	No	No	No	
Light17	No	No	0	0	No	No	No	No	
Light18	No	No	0	0	No	No	No	No	
Light19	No	No	0	0	No	No	No	No	
Light20	No	No	0	0	No	No	No	No	
Light21	No	No	0	0	No	No	No	No	
In_Disable_Range	No	No	0	0	No	No	No	No	
Sensor_fallingEdge	No	No	0	0	No	No	No	No	
move table neg	No	No	0	0	No	No	No	No	
move table pos	No	No	0	0	No	No	No	No	
move top negative	No	No	0	0	No	No	No	No	
move die positive	No	No	0	0	No	No	No	No	
GPS_Complete_Flag	No	No	0	0	Yes	No	No	No	
GPS_New_Data_Ready_Pulse	No	No	0	0	Yes	No	No	No	
Master_Enable_bit	No	No	0	0	No	No	No	No	
GPS_Signal_Valid_Flag	No	No	0	0	Yes	No	No	No	
line_crossed_latched	No	No	0	0	No	No	No	No	
Master_Reset_Button	No	No	0	0	No	No	No	No	
PID_Manual_Auto_Ditcher	No	No	0	0	No	No	No	No	
PID_Enable_Ditcher	No	No	0	0	No	No	No	No	
GS21X_IO_Enable	No	No	0	0	No	No	No	No	
TRUE	No	No	0	0	No	No	No	No	
Valid4	No	No	0	0	No	No	No	No	
Valid3	No	No	0	0	No	No	No	No	
Valid2	No	No	0	0	No	No	No	No	
Valid1	No	No	0	0	No	No	No	No	
AnyValid	No	No	0	0	No	No	No	No	
Sample	No	No	0	0	No	No	No	No	
RunModeData	No	No	0	0	No	No	No	No	
Feed_Jog	No	No	0	0	No	No	No	No	

Name	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Reverse	No	No	0	0	No	No	No	No	
Stop	No	No	0	0	No	No	No	No	
Forward	No	No	0	0	No	No	No	No	

Name	Type	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Cutting Motor Degrees	Integer, 32 Bit	No	0	0	0	No	No	0	No	
Jerk	Integer, 32 Bit	No	0	0	0	No	No	0	No	
PresetPulseTime	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RegCount	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RegDecel	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RegDelay	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RegPulseTime	Integer, 32 Bit	No	0	0	0	No	No	0	No	
Status	Integer, 32 Bit	No	0	0	0	No	No	0	No	
PolyPipePunchTrigger	Integer, 32 Bit	No	0	0	0	No	No	0	No	
Row Spacing Inches	Integer, 32 Bit	No	0	0	0	Yes	No	0	No	
TimeRunning	Integer, 32 Bit	No	0	0	0	No	No	0	No	
SecondsRunning	Integer, 32 Bit	No	0	0	0	No	No	0	No	
StopPosition	Integer, 32 Bit	No	0	0	0	No	No	0	No	
TriggerPosition	Integer, 32 Bit	No	0	0	0	No	No	0	No	
DieOutOfPosition	Integer, 32 Bit	No	0	0	0	No	No	0	No	
dummydint	Integer, 32 Bit	No	0	0	0	No	No	0	No	
timerValue	Integer, 32 Bit	No	0	0	0	No	No	0	No	
CurrentCutCount	Integer, 32 Bit	No	0	0	0	No	No	0	No	
CV	Integer, 32 Bit	No	0	0	0	No	No	0	No	
Index	Integer, 32 Bit	No	0	0	0	No	No	0	No	
CurrentLoopCount	Integer, 32 Bit	No	0	0	0	No	No	0	No	
Reset	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount2	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount3	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount4	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount5	Integer, 32 Bit	No	0	0	0	No	No	0	No	
Total_Row_Number	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowNumber	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount6	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount7	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount8	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount9	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount10	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount11	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount12	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount13	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount14	Integer, 32 Bit BCD	No	0	0	0	No	No	0	No	
RowCount15	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount16	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount17	Integer, 32 Bit	No	0	0	0	No	No	0	No	

Name	Type	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
RowCount18	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount19	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount20	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount21	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount22	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount23	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount24	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount25	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount26	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount27	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount28	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount29	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount30	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount31	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount32	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount33	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount34	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount35	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount36	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount37	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount38	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount39	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount40	Integer, 32 Bit	No	0	0	0	No	No	0	No	
RowCount41	Integer, 32 Bit	No	0	0	0	No	No	0	No	
HoleS23	Integer, 32 Bit	No	0	0	0	No	No	0	No	
top Ramp Rate	Integer, 32 Bit	No	0	0	0	No	No	0	No	
Temp_Signal_Quality_Int	Integer, 32 Bit BCD	No	0	0	0	No	No	0	No	
SpeedSel	Integer, 32 Bit	No	0	0	0	No	No	0	No	
GS_JogFreq_x10	Integer, 32 Bit	No	0	0	0	No	No	0	No	
GS_RunFreq_x10	Integer, 32 Bit	No	0	0	0	No	No	0	No	
Direction_Control	Integer, 16 Bit	No	0	0	0	No	No	0	No	
VFD_CommandFreq	Integer, 32 Bit	No	0	0	0	No	No	0	No	
VFD_ActualFreq	Integer, 32 Bit	No	0	0	0	No	No	0	No	

Name	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Edge Position MM	No	22	0	0	No	No	0.0	No	
Hole Size	No	0.0	0	0	Yes	No	0.0	No	
Preset1Target	No	0.0	0	0	No	No	0.0	No	
Preset2Target	No	0.0	0	0	No	No	0.0	No	
RegCapture	No	0.0	0	0	No	No	0.0	No	
Desired Die Position MM	No	0.0	0	0	Yes	No	0.0	No	
Target Die Position MM	No	0.0	0	0	No	No	0.0	No	
PolyPipePositionCapture	No	0.0	0	0	No	No	0.0	No	
DieAccelDecelRate	No	0.0	0	0	No	No	0.0	No	
Die Position Capture	No	0.0	0	0	No	No	0.0	No	
Die Position Target	No	0.0	0	0	No	No	0.0	No	
Die Index Target	No	0.0	0	0	Yes	No	0.0	No	
Die Index Position	No	0.0	0	0	No	No	0.0	No	
Target Die Position Test	No	0.0	0	0	Yes	No	0.0	No	
Edge Position Reference Zero	No	0.0	0	0	No	No	0.0	No	
Die Index Velocity	No	0.0	0	0	No	No	0.0	No	
Die Index Ramp Rate	No	0.0	0	0	No	No	0.0	No	
Die Table MM	No	0.0	0	0	No	No	0.0	No	
Die Table Position MM	No	0.0	0	0	No	No	0.0	No	
InchesMoved	No	0.0	0	0	No	No	0.0	No	
HighLimit	No	0.0	0	0	No	No	0.0	No	
LowLimit	No	0.0	0	0	No	No	0.0	No	
PotentiometerPositionMM	No	0.0	0	0	No	No	0.0	No	
Step_Pulses	No	0.0	0	0	No	No	0.0	No	
Set_Potent	No	0.0	0	0	No	No	0.0	No	
HoleDistance1	No	0.0	0	0	No	No	0.0	No	
HoleDistance2	No	0.0	0	0	No	No	0.0	No	
HoleDistance3	No	0.0	0	0	No	No	0.0	No	
HoleDistance4	No	0.0	0	0	No	No	0.0	No	
HoleDistance5	No	0.0	0	0	No	No	0.0	No	
HoleDistance6	No	0.0	0	0	No	No	0.0	No	
HoleDistance7	No	0.0	0	0	No	No	0.0	No	
HoleDistance8	No	0.0	0	0	No	No	0.0	No	
HoleDistance9	No	0.0	0	0	No	No	0.0	No	
HoleDistance10	No	0.0	0	0	No	No	0.0	No	
Potent_Edge_scale_mm	No	0.0	0	0	No	No	0.0	No	
Table Motor Ramp Rate	No	0.0	0	0	No	No	0.0	No	
Table Motor Velocity	No	0.0	0	0	No	No	0.0	No	
HoleDistance11	No	0.0	0	0	No	No	0.0	No	
HoleDistance12	No	0.0	0	0	No	No	0.0	No	
HoleDistance13	No	0.0	0	0	No	No	0.0	No	

Name	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Diameter_MM	No	0.0	0	0	No	No	0.0	No	
area_in	No	0.0	0	0	No	No	0.0	No	
area_mm	No	0.0	0	0	No	No	0.0	No	
DitcherVelocity	No	0.0	0	0	No	No	0.0	No	
Ditcher Ramp Rate	No	0.0	0	0	No	No	0.0	No	
DitcherTarget	No	0.0	0	0	No	No	0.0	No	
Diameter_in	No	0.0	0	0	No	No	0.0	No	
DiameterIn	No	0.0	0	0	No	No	0.0	No	
HoleSize1	No	0.0	0	0	No	No	0.0	No	
HoleSize2	No	0.0	0	0	No	No	0.0	No	
HoleSize3	No	0.0	0	0	No	No	0.0	No	
HoleSize4	No	0.0	0	0	No	No	0.0	No	
HoleSize5	No	0.0	0	0	No	No	0.0	No	
HoleSize6	No	0.0	0	0	No	No	0.0	No	
HoleSize7	No	0.0	0	0	No	No	0.0	No	
HoleSize8	No	0.0	0	0	No	No	0.0	No	
HoleSize9	No	0.0	0	0	No	No	0.0	No	
HoleSize10	No	0.0	0	0	No	No	0.0	No	
HoleSize11	No	0.0	0	0	No	No	0.0	No	
HoleSize12	No	0.0	0	0	No	No	0.0	No	
HoleSize13	No	0.0	0	0	No	No	0.0	No	
HoleS1	No	0.0	0	0	No	No	0.0	No	
HoleS2	No	0.0	0	0	No	No	0.0	No	
HoleS3	No	0.0	0	0	No	No	0.0	No	
HoleS4	No	0.0	0	0	No	No	0.0	No	
HoleS5	No	0.0	0	0	No	No	0.0	No	
R_Edge Position MM	No	0.0	0	0	No	No	0.0	No	
Avg_Edge_Position	No	0.0	0	0	No	No	0.0	No	
Error Correction	No	0.0	0	0	No	No	0.0	No	
Die Index Position1	No	0.0	0	0	No	No	0.0	No	
Corrected Hole Size	No	0.0	0	0	No	No	0.0	No	
HoleSize14	No	0.0	0	0	No	No	0.0	No	
HoleSize15	No	0.0	0	0	No	No	0.0	No	
HoleS6	No	0.0	0	0	No	No	0.0	No	
HoleS7	No	0.0	0	0	No	No	0.0	No	
HoleS8	No	0.0	0	0	No	No	0.0	No	
HoleS9	No	0.0	0	0	No	No	0.0	No	
HoleS10	No	0.0	0	0	No	No	0.0	No	
HoleS11	No	0.0	0	0	No	No	0.0	No	
HoleS12	No	0.0	0	0	No	No	0.0	No	
HoleS13	No	0.0	0	0	No	No	0.0	No	

Name	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
HoleS14	No	0.0	0	0	No	No	0.0	No	
HoleS15	No	0.0	0	0	No	No	0.0	No	
HoleS16	No	0.0	0	0	No	No	0.0	No	
HoleS17	No	0.0	0	0	No	No	0.0	No	
HoleS18	No	0.0	0	0	No	No	0.0	No	
HoleS19	No	0.0	0	0	No	No	0.0	No	
HoleS20	No	0.0	0	0	No	No	0.0	No	
HoleS21	No	0.0	0	0	No	No	0.0	No	
HoleS22	No	0.0	0	0	No	No	0.0	No	
HoleS24	No	0.0	0	0	No	No	0.0	No	
HoleS25	No	0.0	0	0	No	No	0.0	No	
HoleS26	No	0.0	0	0	No	No	0.0	No	
HoleS27	No	0.0	0	0	No	No	0.0	No	
HoleS28	No	0.0	0	0	No	No	0.0	No	
HoleS29	No	0.0	0	0	No	No	0.0	No	
HoleS30	No	0.0	0	0	No	No	0.0	No	
HoleS31	No	0.0	0	0	No	No	0.0	No	
HoleS32	No	0.0	0	0	No	No	0.0	No	
HoleS33	No	0.0	0	0	No	No	0.0	No	
HoleS34	No	0.0	0	0	No	No	0.0	No	
HoleS35	No	0.0	0	0	No	No	0.0	No	
HoleS36	No	0.0	0	0	No	No	0.0	No	
HoleS37	No	0.0	0	0	No	No	0.0	No	
HoleS38	No	0.0	0	0	No	No	0.0	No	
HoleS39	No	0.0	0	0	No	No	0.0	No	
HoleS40	No	0.0	0	0	No	No	0.0	No	
HolePercentComplete	No	0.0	0	0	No	No	0.0	No	
Encoder_Reference	No	0.0	0	0	No	No	0.0	No	
Relative_Die_Motor_Position	No	0.0	0	0	No	No	0.0	No	
cyclic_position	No	0.0	0	0	No	No	0.0	No	
Table Ramp Rate	No	0.0	0	0	No	No	0.0	No	
die Ramp Rate	No	0.0	0	0	No	No	0.0	No	
die velocity	No	0.0	0	0	No	No	0.0	No	
table velocity	No	0.0	0	0	No	No	0.0	No	
top velocity	No	0.0	0	0	No	No	0.0	No	
GPS_Current_Lat_F	No	0.0	0	0	Yes	No	0.0	No	
GPS_Prev_Lat_F	No	0.0	0	0	Yes	No	0.0	No	
GPS_Current_Long_F	No	0.0	0	0	Yes	No	0.0	No	
GPS_Prev_Long_F	No	0.0	0	0	Yes	No	0.0	No	
GPS_Current_Heading_F	No	0.0	0	0	Yes	No	0.0	No	
GPS_Prev_Heading_F	No	0.0	0	0	Yes	No	0.0	No	

Name	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Tractor_Current_X_	No	0.0	0	0	No	No	0.0	No	
Tractor_Prev_X	No	0.0	0	0	No	No	0.0	No	
Tractor_Current_y	No	0.0	0	0	No	No	0.0	No	
Tractor_Prev_y	No	0.0	0	0	No	No	0.0	No	
Degrees_long_to_Meters	No	0.0	0	0	No	No	0.0	No	
Local_Ref_long	No	0.0	0	0	No	No	0.0	No	
Temp_x_current	No	0.0	0	0	No	No	0.0	No	
Degrees_lat_to_Meters	No	0.0	0	0	No	No	0.0	No	
Local_Ref_lat	No	0.0	0	0	No	No	0.0	No	
Temp_y_current	No	0.0	0	0	No	No	0.0	No	
Heading_rad	No	0.0	0	0	No	No	0.0	No	
cos_heading	No	0.0	0	0	No	No	0.0	No	
sin_heading	No	0.0	0	0	No	No	0.0	No	
offset_forward_meters	No	0.0	0	0	No	No	0.0	No	
offset_sideways_meters	No	0.0	0	0	No	No	0.0	No	
offset_x_world_meters	No	0.0	0	0	No	No	0.0	No	
offset_y_world_meters	No	0.0	0	0	No	No	0.0	No	
Line_P1_x	No	0.0	0	0	No	No	0.0	No	
Line_P2_x	No	0.0	0	0	No	No	0.0	No	
Line_vector_x	No	0.0	0	0	No	No	0.0	No	
Line_P1_y	No	0.0	0	0	No	No	0.0	No	
Line_P2_y	No	0.0	0	0	No	No	0.0	No	
Line_vector_y	No	0.0	0	0	No	No	0.0	No	
Temp_cp_prev_term1	No	0.0	0	0	No	No	0.0	No	
Temp_cp_prev_term2	No	0.0	0	0	No	No	0.0	No	
CrossProduct_Prev_Side	No	0.0	0	0	No	No	0.0	No	
Temp_cp_current_term1	No	0.0	0	0	No	No	0.0	No	
Temp_cp_current_term2	No	0.0	0	0	No	No	0.0	No	
CrossProduct_Current_Side	No	0.0	0	0	No	No	0.0	No	
RP1_x	No	0.0	0	0	No	No	0.0	No	
RP1_y	No	0.0	0	0	No	No	0.0	No	
RP2_x	No	0.0	0	0	No	No	0.0	No	
RP2_y	No	0.0	0	0	No	No	0.0	No	
Current_Ditch_Elevation_PV	No	0.0	0	0	No	No	0.0	No	
Desired_Ditch_Elevation_SP	No	0.0	0	0	No	No	0.0	No	
Ditcher_D_Time	No	0.0	0	0	No	No	0.0	No	
Ditcher_Hydraulic_Output	No	0.0	0	0	No	No	0.0	No	
Ditcher_I_Time	No	0.0	0	0	No	No	0.0	No	
Ditcher_P_Gain	No	0.0	0	0	No	No	0.0	No	
Implement GPS LAT Numeric	No	0.0	0	0	No	No	0.0	No	
Feed Velocity	No	0.0	0	0	No	No	0.0	No	

Name	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
PID_Derivative	No	0.0	0	0	No	No	0.0	No	
PID_Proportional	No	0.0	0	0	No	No	0.0	No	
PID_Integral	No	0.0	0	0	No	No	0.0	No	
Input_Feed_Speed	No	0.0	0	0	No	No	0.0	No	

Name	Num Chars	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Line2	10	No		0	0				No	
Line3	10	No		0	0				No	
Line4	10	No		0	0				No	
Implement GPS LAT	128	No		0	0				No	
Implement GPS Signal Quality	15	No		0	0				No	
Tractor GPS Positioning Mode	15	No		0	0				No	
Implement GPS RAW	128	No		0	0				No	
Tractor GPS True Heading	15	No		0	0				No	
Implement GPS LONG	128	No		0	0				No	
Implement GPS Elevation	128	No		0	0				No	
Tractor GPS Speed Kilometers/hr	15	No		0	0				No	
Tractor GPS RAW	128	No		0	0				No	
Implement GPS Time	128	No		0	0				No	

Name	Type	Num Chars	Retentive	Init Value	Mod Start	Mod End	Remote Access	Comment
DataFromGS21	Integer, 16 Bit Unsigned, 1D Array	0	No		0	0		
DataFromGS21(1)				0			No	
GS21X_Out	Integer, 16 Bit Unsigned, 1D Array	0	No		0	0		
GS21X_Out(1)				0			No	
GS21X_In	Integer, 16 Bit Unsigned, 1D Array	0	No		0	0		
GS21X_In(1)				0			No	
GS21X_Config	Integer, 16 Bit Unsigned, 1D Array	0	No		0	0		
GS21X_Config(1)				0			No	

Name	Type	Num Chars	Retentive	Init Value	Mod Start	Mod End	Remote Access	Comment

Name	Type	Num Chars	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
PolyPipe	Structure, System, AMC4	0	No		0	0				No	System Structure for an AMC Module
PolyPipe.ModuleReady	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.ModuleStatus	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
PolyPipe.Ax1In1	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax1In2	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax1In3	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax1In4	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax1In5	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax1In6	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax1Out1	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax1Out2	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax1Out3	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax1Deviation	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
PolyPipe.Ax1Position	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
PolyPipe.Ax1EncPosition	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
PolyPipe.Ax1Velocity	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
PolyPipe.Ax1ResetPosition	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
PolyPipe.Ax1AxisStatus	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
PolyPipe.Ax2In1	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax2In2	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax2In3	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax2In4	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax2In5	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax2In6	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax2Out1	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax2Out2	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax2Out3	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax2Deviation	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
PolyPipe.Ax2Position	Float, 32 Bit	0	Yes	142.29591	0	0	Yes	No	0.0	No	
PolyPipe.Ax2EncPosition	Integer, 32 Bit	0	Yes	0	0	0	Yes	No	0	No	
PolyPipe.Ax2Velocity	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
PolyPipe.Ax2ResetPosition	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
PolyPipe.Ax2AxisStatus	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
PolyPipe.Ax3In1	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax3In2	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax3In3	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax3In4	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax3In5	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax3In6	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax3Out1	Boolean	0	No	No	0	0	No	No	No	No	

Name	Type	Num Chars	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
PolyPipe.Ax3Out2	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax3Out3	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax3Deviation	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
PolyPipe.Ax3Position	Float, 32 Bit	0	Yes	0.0	400001	400002	Yes	No	0.0	No	
PolyPipe.Ax3EncPosition	Float, 32 Bit	0	Yes	0.0	0	0	Yes	No	0.0	No	
PolyPipe.Ax3Velocity	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
PolyPipe.Ax3ResetPosition	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
PolyPipe.Ax3AxisStatus	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
PolyPipe.Ax4In1	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax4In2	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax4In3	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax4In4	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax4In5	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax4In6	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax4Out1	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax4Out2	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax4Out3	Boolean	0	No	No	0	0	No	No	No	No	
PolyPipe.Ax4Deviation	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
PolyPipe.Ax4Position	Float, 32 Bit	0	Yes	0.0	0	0	No	No	0.0	No	
PolyPipe.Ax4EncPosition	Float, 32 Bit	0	Yes	2.121858E7	0	0	Yes	No	0.0	No	
PolyPipe.Ax4Velocity	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
PolyPipe.Ax4ResetPosition	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
PolyPipe.Ax4AxisStatus	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Top Motor	Structure, System, VMOV	0	No		0	0				No	System Structure for Velocity Move
Top Motor.Velocity	Float, 32 Bit	0	Yes	0.0	0	0	Yes	No	0.0	No	
Top Motor.RampRate	Float, 32 Bit	0	Yes	0.0	0	0	Yes	No	0.0	No	
Top Motor.Jerk	Float, 32 Bit	0	Yes	0.0	0	0	No	No	0.0	No	
Top Motor.RegCount	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Top Motor.RegDelay	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Top Motor.RegDecel	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Top Motor.RegCapture	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Top Motor.RegPulseTime	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Top Motor.InProgress	Boolean	0	No	No	0	0	No	No	No	No	
Top Motor.Complete	Boolean	0	No	No	0	0	No	No	No	No	
Top Motor.Status	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Cutting Motor	Structure, System, VMOV	0	No		0	0				No	System Structure for Velocity Move
Cutting Motor.Velocity	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Cutting Motor.RampRate	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	

Name	Type	Num Chars	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Cutting Motor.Jerk	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Cutting Motor.RegCount	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Cutting Motor.RegDelay	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Cutting Motor.RegDecel	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Cutting Motor.RegCapture	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Cutting Motor.RegPulseTime	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Cutting Motor.InProgress	Boolean	0	No	No	0	0	No	No	No	No	
Cutting Motor.Complete	Boolean	0	No	No	0	0	No	No	No	No	
Cutting Motor.Status	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table Motor	Structure, System, VMOV	0	No		0	0				No	System Structure for Velocity Move
Table Motor.Velocity	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Table Motor.RampRate	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Table Motor.Jerk	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Table Motor.RegCount	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table Motor.RegDelay	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table Motor.RegDecel	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Table Motor.RegCapture	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Table Motor.RegPulseTime	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Table Motor.InProgress	Boolean	0	No	No	0	0	No	No	No	No	
Table Motor.Complete	Boolean	0	No	No	0	0	No	No	No	No	
Table Motor.Status	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move	Structure, System, SMOV	0	No		0	0				No	System Structure for Simple Move
Table_Move.Target	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Table_Move.Velocity	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Table_Move.Accel	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Table_Move.Decel	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Table_Move.Jerk	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move.RegCount	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move.RegDelay	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move.RegDecel	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move.RegCapture	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move.RegPulseTime	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move.InProgress	Boolean	0	No	No	0	0	No	No	No	No	
Table_Move.Complete	Boolean	0	No	No	0	0	No	No	No	No	
Table_Move.Status	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move.PresetPulseTime	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move.Preset1Target	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table_Move.Preset2Target	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Edge_Home_Position	Structure, System, HOME	0	No		0	0				No	System Structure for Find Home

Name	Type	Num Chars	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Edge_Home_Position.Speed1	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Edge_Home_Position.Speed2	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Edge_Home_Position.Accel	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Edge_Home_Position.Decel	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Edge_Home_Position.Position	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Edge_Home_Position.InProgress	Boolean	0	No	No	0	0	No	No	No	No	
Edge_Home_Position.Complete	Boolean	0	No	No	0	0	Yes	No	No	No	
Edge_Home_Position.Status	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Table Motor Index In	Structure, System, VMOV	0	No		0	0				No	System Structure for Velocity Move
Table Motor Index In.Velocity	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Table Motor Index In.RampRate	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Table Motor Index In.Jerk	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table Motor Index In.RegCount	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table Motor Index In.RegDelay	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table Motor Index In.RegDecel	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table Motor Index In.RegCapture	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table Motor Index In.RegPulseTime	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Table Motor Index In.InProgress	Boolean	0	No	No	0	0	No	No	No	No	
Table Motor Index In.Complete	Boolean	0	No	No	0	0	No	No	No	No	
Table Motor Index In.Status	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Die Position	Structure, System, SMOV	0	No		0	0				No	System Structure for Simple Move
Die Position.Target	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Die Position.Velocity	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Die Position.Accel	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Die Position.Decel	Float, 32 Bit	0	No	0.0	0	0	Yes	No	0.0	No	
Die Position.Jerk	Float, 32 Bit	0	No	0.0	0	0	No	No	0.0	No	
Die Position.RegCount	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Die Position.RegDelay	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Die Position.RegDecel	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Die Position.RegCapture	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Die Position.RegPulseTime	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	

Name	Type	Num Chars	Retentive	Init Value	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
Die Position.InProgress	Boolean	0	No	No	0	0	No	No	No	No	
Die Position.Complete	Boolean	0	No	No	0	0	Yes	No	No	No	
Die Position.Status	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Die Position.PresetPulseTime	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Die Position.Preset1Target	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	
Die Position.Preset2Target	Integer, 32 Bit	0	No	0	0	0	No	No	0	No	

Name	Type	Num Chars	Mod Start	Mod End	Remote Access	Comment
Portable Memory Device Ready	Boolean, System, Read Only	0	0	0	No	PMD is installed and ready to use
CPU in Run	Boolean, System, Read Only	0	0	0	No	On during Run or Debug mode
Always Off Bit	Boolean, System, Read Only	0	0	0	No	always off
First Scan Bit	Boolean, System, Read Only	0	0	0	No	On during first scan in Run or Debug mode
Every Other Scan Bit	Boolean, System, Read Only	0	0	0	No	toggles at the start of each scan
Battery Low Bit	Boolean, System, Read Only	0	0	0	No	On if the battery is weak ("CPU Battery Alarm" in H/W Configuration)
Battery Disabled	Boolean, System, Read Only	0	0	0	No	On if the "CPU Battery Alarm" is disabled in H/W Configuration
Forces Enabled	Boolean, System, Read Only	0	0	0	No	On if any forces are enabled
1 Minute Bit	Boolean, System, Read Only	0	0	0	No	On for 30 seconds and Off for 30 seconds
2 Second Bit	Boolean, System, Read Only	0	0	0	No	On for 1 second and Off for 1 second
Switch in Run Bit	Boolean, System, Read Only	0	0	0	No	On if CPU Switch is up (Run)
Switch in Stop Bit	Boolean, System, Read Only	0	0	0	No	On if CPU Switch is down (Stop)
Critical Error Bit	Boolean, System, Read Only	0	0	0	No	On when a critical error is active
Noncritical Error Bit	Boolean, System, Read Only	0	0	0	No	On when a noncritical error is active
I/O Error	Boolean, System, Read Only	0	0	0	No	On for any module error (such as a blown fuse)
I/O Configuration Error	Boolean, System, Read Only	0	0	0	No	On if actual I/O configuration and project I/O configuration do not match
Watchdog Timeout	Boolean, System, Read Only	0	0	0	No	On if the actual scan time has exceeded the limit set in the project
Array out of range error	Boolean, System, Read Only	0	0	0	No	On if an array index is outside the range of the array
Initiate_New_Time	Boolean, System	0	0	0	No	set On to change clock time (see "Clock Hours Set" tag)
Initiate_New_Date	Boolean, System	0	0	0	No	set On to change clock date (see "Clock Year Set" tag)
Refresh Critical Error Log	Boolean, System	0	0	0	No	set On to refresh the "Critical Error Log"
Refresh Non-Critical Error Log	Boolean, System	0	0	0	No	set On to refresh the "Noncritical Error Log"

Name	Type	Num Chars	Mod Start	Mod End	Remote Access	Comment
Identify Module Request bit	Boolean, System	0	0	0	No	set On to refresh "Requested Module Name" tag per the 3 "Identify" GBS tags
Portable Memory Device Eject	Boolean, System	0	0	0	No	Users set to 1(ON) and the system reset to 0 as eject is completed
Critical Error Log 01	Integer, 16 Bit System, Read Only	0	0	0	No	most recent critical error
Critical Error Log 02	Integer, 16 Bit System, Read Only	0	0	0	No	2nd most recent critical error
Critical Error Log 03	Integer, 16 Bit System, Read Only	0	0	0	No	3rd most recent critical error
Critical Error Log 04	Integer, 16 Bit System, Read Only	0	0	0	No	4th most recent critical error
Critical Error Log 05	Integer, 16 Bit System, Read Only	0	0	0	No	5th most recent critical error
Critical Error Log 06	Integer, 16 Bit System, Read Only	0	0	0	No	6th most recent critical error
Critical Error Log 07	Integer, 16 Bit System, Read Only	0	0	0	No	7th most recent critical error
Critical Error Log 08	Integer, 16 Bit System, Read Only	0	0	0	No	8th most recent critical error
Critical Error Log 09	Integer, 16 Bit System, Read Only	0	0	0	No	9th most recent critical error
Critical Error Log 10	Integer, 16 Bit System, Read Only	0	0	0	No	10th most recent critical error
Critical Error Log 11	Integer, 16 Bit System, Read Only	0	0	0	No	11th most recent critical error
Critical Error Log 12	Integer, 16 Bit System, Read Only	0	0	0	No	12th most recent critical error
Critical Error Log 13	Integer, 16 Bit System, Read Only	0	0	0	No	13th most recent critical error
Critical Error Log 14	Integer, 16 Bit System, Read Only	0	0	0	No	14th most recent critical error
Critical Error Log 15	Integer, 16 Bit System, Read Only	0	0	0	No	15th most recent critical error
Critical Error Log 16	Integer, 16 Bit System, Read Only	0	0	0	No	16th most recent critical error
Critical Error Log 17	Integer, 16 Bit System, Read Only	0	0	0	No	17th most recent critical error
Critical Error Log 18	Integer, 16 Bit System, Read Only	0	0	0	No	18th most recent critical error
Critical Error Log 19	Integer, 16 Bit System, Read Only	0	0	0	No	19th most recent critical error
Critical Error Log 20	Integer, 16 Bit System, Read Only	0	0	0	No	20th most recent critical error
Noncritical Error Log 01	Integer, 16 Bit System, Read Only	0	0	0	No	most recent noncritical error
Noncritical Error Log 02	Integer, 16 Bit System, Read Only	0	0	0	No	2nd most recent noncritical error

Name	Type	Num Chars	Mod Start	Mod End	Remote Access	Comment
Noncritical Error Log 03	Integer, 16 Bit System, Read Only	0	0	0	No	3rd most recent noncritical error
Noncritical Error Log 04	Integer, 16 Bit System, Read Only	0	0	0	No	4th most recent noncritical error
Noncritical Error Log 05	Integer, 16 Bit System, Read Only	0	0	0	No	5th most recent noncritical error
Noncritical Error Log 06	Integer, 16 Bit System, Read Only	0	0	0	No	6th most recent noncritical error
Noncritical Error Log 07	Integer, 16 Bit System, Read Only	0	0	0	No	7th most recent noncritical error
Noncritical Error Log 08	Integer, 16 Bit System, Read Only	0	0	0	No	8th most recent noncritical error
Noncritical Error Log 09	Integer, 16 Bit System, Read Only	0	0	0	No	9th most recent noncritical error
Noncritical Error Log 10	Integer, 16 Bit System, Read Only	0	0	0	No	10th most recent noncritical error
Noncritical Error Log 11	Integer, 16 Bit System, Read Only	0	0	0	No	11th most recent noncritical error
Noncritical Error Log 12	Integer, 16 Bit System, Read Only	0	0	0	No	12th most recent noncritical error
Noncritical Error Log 13	Integer, 16 Bit System, Read Only	0	0	0	No	13th most recent noncritical error
Noncritical Error Log 14	Integer, 16 Bit System, Read Only	0	0	0	No	14th most recent noncritical error
Noncritical Error Log 15	Integer, 16 Bit System, Read Only	0	0	0	No	15th most recent noncritical error
Noncritical Error Log 16	Integer, 16 Bit System, Read Only	0	0	0	No	16th most recent noncritical error
Noncritical Error Log 17	Integer, 16 Bit System, Read Only	0	0	0	No	17th most recent noncritical error
Noncritical Error Log 18	Integer, 16 Bit System, Read Only	0	0	0	No	18th most recent noncritical error
Noncritical Error Log 19	Integer, 16 Bit System, Read Only	0	0	0	No	19th most recent noncritical error
Noncritical Error Log 20	Integer, 16 Bit System, Read Only	0	0	0	No	20th most recent noncritical error
Last Scan Interval [x100=usec]	Integer, 16 Bit System, Read Only	0	0	0	No	most recent overall scan time
Peak Scan Interval [x100=usec]	Integer, 16 Bit System, Read Only	0	0	0	No	longest overall scan time
Avg Scan Interval [x100=usec]	Integer, 16 Bit System, Read Only	0	0	0	No	average overall scan time
Last Logic Scan Time [x100=usec]	Integer, 16 Bit System, Read Only	0	0	0	No	most recent logic scan time
Peak Logic Scan Time [x100=usec]	Integer, 16 Bit System, Read Only	0	0	0	No	longest logic scan time
Avg Logic Scan Time [x100=usec]	Integer, 16 Bit System, Read Only	0	0	0	No	average logic scan time

Name	Type	Num Chars	Mod Start	Mod End	Remote Access	Comment
Total Scan Count1	Integer, 16 Bit System, Read Only	0	0	0	No	total number of scans since entering Run mode (S32 low word)
Total Scan Count2	Integer, 16 Bit System, Read Only	0	0	0	No	total number of scans since entering Run mode (S32 high word)
Firmware Version	Integer, 16 Bit System, Read Only	0	0	0	No	CPU Firmware Version Number in Hex (ex: 0x0102 is version 01.02 or 1.2)
Current Critical Error	Integer, 16 Bit System, Read Only	0	0	0	No	current critical error number
Current Non-critical Error	Integer, 16 Bit System, Read Only	0	0	0	No	current noncritical error number
Program Memory Size	Integer, 16 Bit System, Read Only	0	0	0	No	current percentage of CPU memory used by the project
Array range error task location	Integer, 16 Bit System, Read Only	0	0	0	No	Task Number in which "Array out of range error" occurred
Array range error rung location	Integer, 16 Bit System, Read Only	0	0	0	No	Rung Number in which "Array out of range error" occurred
Current I/O Config Error Group	Integer, 16 Bit System, Read Only	0	0	0	No	I/O group in which "I/O Configuration Error" occurred
Current I/O Config Error Base	Integer, 16 Bit System, Read Only	0	0	0	No	I/O base in which "I/O Configuration Error" occurred
Current I/O Config Error Slot	Integer, 16 Bit System, Read Only	0	0	0	No	I/O slot in which "I/O Configuration Error" occurred
Battery Voltage	Integer, 16 Bit System, Read Only	0	0	0	No	battery voltage in 10ths of a volt
Clock Seconds	Integer, 16 Bit System, Read Only	0	0	0	No	current Real Time Clock Seconds
Clock Minutes	Integer, 16 Bit System, Read Only	0	0	0	No	current Real Time Clock Minutes
Clock Hours	Integer, 16 Bit System, Read Only	0	0	0	No	current Real Time Clock Hours
Clock Day of Week	Integer, 16 Bit System, Read Only	0	0	0	No	current Real Time Clock Day of the week (1=Mon ...7=Sun)
Clock Day	Integer, 16 Bit System, Read Only	0	0	0	No	current Real Time Clock Calendar Day
Clock Month	Integer, 16 Bit System, Read Only	0	0	0	No	current Real Time Clock Calendar Month
Clock Year	Integer, 16 Bit System, Read Only	0	0	0	No	current Real Time Clock Calendar Year
Ethernet Speed [External]	Integer, 16 Bit System, Read Only	0	0	0	No	"Ethernet" port speed (Ethernet 10 or 100)
Ethernet Speed [Internal]	Integer, 16 Bit System, Read Only	0	0	0	No	"Remote I/O" port speed (Ethernet 10 or 100)
Firmware Version[major]	Integer, 16 Bit System, Read Only	0	0	0	No	CPU firmware Major version number in hex. (ex: 0x0100 = major version 1.0)

Name	Type	Num Chars	Mod Start	Mod End	Remote Access	Comment
Firmware Version[minor]	Integer, 16 Bit System, Read Only	0	0	0	No	CPU firmware Minor version number in hex. (ex: 0x0917 = minor version 9.23)
First Scan Interval [x100=usec]	Integer, 16 Bit System, Read Only	0	0	0	No	Holds the value of the First Scan time
Number of Critical Errors	Integer, 16 Bit System	0	0	0	No	number of critical errors
Number of Non-critical Errors	Integer, 16 Bit System	0	0	0	No	number of noncritical errors
Clock Seconds Set	Integer, 16 Bit System	0	0	0	No	new Real Time Clock Seconds (set all 3 time values then set "Initiate_New_Time" on)
Clock Minutes Set	Integer, 16 Bit System	0	0	0	No	new Real Time Clock Minutes (set all 3 time values then set "Initiate_New_Time" on)
Clock Hours Set	Integer, 16 Bit System	0	0	0	No	new Real Time Clock Hours (set all 3 time values then set "Initiate_New_Time" on)
Clock Day Set	Integer, 16 Bit System	0	0	0	No	new Real Time Clock Day (set all 3 date values then set "Initiate_New_Date" on)
Clock Month Set	Integer, 16 Bit System	0	0	0	No	new Real Time Clock Month (set all 3 date values then set "Initiate_New_Date" on)
Clock Year Set	Integer, 16 Bit System	0	0	0	No	new Real Time Clock Year (set all 3 date values then set "Initiate_New_Date" on)
Identify Module Group Number	Integer, 16 Bit System	0	0	0	No	group number of module to be identified (See "Requested Module Name" tag)
Identify Module Base Number	Integer, 16 Bit System	0	0	0	No	base number of module to be identified (See "Requested Module Name" tag)
Identify Module Slot Number	Integer, 16 Bit System	0	0	0	No	slot number of module to be identified (See "Requested Module Name" tag)
Critical Error Log String 01	String, System	50	0	0	No	most recent critical error message
Critical Error Log String 02	String, System	50	0	0	No	2nd most recent critical error message
Critical Error Log String 03	String, System	50	0	0	No	3rd most recent critical error message
Critical Error Log String 04	String, System	50	0	0	No	4th most recent critical error message
Critical Error Log String 05	String, System	50	0	0	No	5th most recent critical error message
Critical Error Log String 06	String, System	50	0	0	No	6th most recent critical error message
Critical Error Log String 07	String, System	50	0	0	No	7th most recent critical error message

Name	Type	Num Chars	Mod Start	Mod End	Remote Access	Comment
Critical Error Log String 08	String, System	50	0	0	No	8th most recent critical error message
Critical Error Log String 09	String, System	50	0	0	No	9th most recent critical error message
Critical Error Log String 10	String, System	50	0	0	No	10th most recent critical error message
Critical Error Log String 11	String, System	50	0	0	No	11th most recent critical error message
Critical Error Log String 12	String, System	50	0	0	No	12th most recent critical error message
Critical Error Log String 13	String, System	50	0	0	No	13th most recent critical error message
Critical Error Log String 14	String, System	50	0	0	No	14th most recent critical error message
Critical Error Log String 15	String, System	50	0	0	No	15th most recent critical error message
Critical Error Log String 16	String, System	50	0	0	No	16th most recent critical error message
Critical Error Log String 17	String, System	50	0	0	No	17th most recent critical error message
Critical Error Log String 18	String, System	50	0	0	No	18th most recent critical error message
Critical Error Log String 19	String, System	50	0	0	No	19th most recent critical error message
Critical Error Log String 20	String, System	50	0	0	No	20th most recent critical error message
Noncritical Error Log String 01	String, System	50	0	0	No	most recent noncritical error message
Noncritical Error Log String 02	String, System	50	0	0	No	2nd most recent noncritical error message
Noncritical Error Log String 03	String, System	50	0	0	No	3rd most recent noncritical error message
Noncritical Error Log String 04	String, System	50	0	0	No	4th most recent noncritical error message
Noncritical Error Log String 05	String, System	50	0	0	No	5th most recent noncritical error message
Noncritical Error Log String 06	String, System	50	0	0	No	6th most recent noncritical error message
Noncritical Error Log String 07	String, System	50	0	0	No	7th most recent noncritical error message
Noncritical Error Log String 08	String, System	50	0	0	No	8th most recent noncritical error message
Noncritical Error Log String 09	String, System	50	0	0	No	9th most recent noncritical error message
Noncritical Error Log String 10	String, System	50	0	0	No	10th most recent noncritical error message
Noncritical Error Log String 11	String, System	50	0	0	No	11th most recent noncritical error message
Noncritical Error Log String 12	String, System	50	0	0	No	12th most recent noncritical error message

Name	Type	Num Chars	Mod Start	Mod End	Remote Access	Comment
Noncritical Error Log String 13	String, System	50	0	0	No	13th most recent noncritical error message
Noncritical Error Log String 14	String, System	50	0	0	No	14th most recent noncritical error message
Noncritical Error Log String 15	String, System	50	0	0	No	15th most recent noncritical error message
Noncritical Error Log String 16	String, System	50	0	0	No	16th most recent noncritical error message
Noncritical Error Log String 17	String, System	50	0	0	No	17th most recent noncritical error message
Noncritical Error Log String 18	String, System	50	0	0	No	18th most recent noncritical error message
Noncritical Error Log String 19	String, System	50	0	0	No	19th most recent noncritical error message
Noncritical Error Log String 20	String, System	50	0	0	No	20th most recent noncritical error message
CPU Event Log String 01	String, System	50	0	0	No	most recent CPU event log message
CPU Event Log String 02	String, System	50	0	0	No	2nd most recent CPU event log message
CPU Event Log String 03	String, System	50	0	0	No	3rd most recent CPU event log message
CPU Event Log String 04	String, System	50	0	0	No	4th most recent CPU event log message
CPU Event Log String 05	String, System	50	0	0	No	5th most recent CPU event log message
CPU Event Log String 06	String, System	50	0	0	No	6th most recent CPU event log message
CPU Event Log String 07	String, System	50	0	0	No	7th most recent CPU event log message
CPU Event Log String 08	String, System	50	0	0	No	8th most recent CPU event log message
CPU Event Log String 09	String, System	50	0	0	No	9th most recent CPU event log message
CPU Event Log String 10	String, System	50	0	0	No	10th most recent CPU event log message
CPU Event Log String 11	String, System	50	0	0	No	11th most recent CPU event log message
CPU Event Log String 12	String, System	50	0	0	No	12th most recent CPU event log message
CPU Event Log String 13	String, System	50	0	0	No	13th most recent CPU event log message
CPU Event Log String 14	String, System	50	0	0	No	14th most recent CPU event log message
CPU Event Log String 15	String, System	50	0	0	No	15th most recent CPU event log message
CPU Event Log String 16	String, System	50	0	0	No	16th most recent CPU event log message
CPU Event Log String 17	String, System	50	0	0	No	17th most recent CPU event log message

Name	Type	Num Chars	Mod Start	Mod End	Remote Access	Comment
CPU Event Log String 18	String, System	50	0	0	No	18th most recent CPU event log message
CPU Event Log String 19	String, System	50	0	0	No	19th most recent CPU event log message
CPU Event Log String 20	String, System	50	0	0	No	20th most recent CPU event log message
CPU Model Name	String, System	50	0	0	No	CPU Model (ex: "P3-550")
CPU Program File Name	String, System	50	0	0	No	CPU program file name
Requested Module Name	String, System	50	0	0	No	name of specified module (see "Identify Module Request bit")
Firmware Version[CPU]	String, System	50	0	0	No	CPU firmware version viewed as 001.000.009.023
PLC LCD Display[CPU]	String, System	50	0	0	No	PLC LCD Data Display

Name	Retentive	Mod Start	Mod End	Forceable	Init Forced	Init Force Value	Remote Access	Comment
MST-0.0.0.1	No	0	0	No	No	No	No	RS232 Heartbeat Timeout Bit
MST-0.0.0.2	No	0	0	No	No	No	No	RS232 Port Buffer Full Bit (95% Full)
MST-0.0.0.3	No	0	0	No	No	No	No	RS232 Port Ready Bit
MST-0.0.0.33	No	0	0	No	No	No	No	RS485 Heartbeat Timeout Bit
MST-0.0.0.34	No	0	0	No	No	No	No	RS485 Port Buffer Full Bit (95% Full)
MST-0.0.0.35	No	0	0	No	No	No	No	RS485 Port Ready Bit
MST-0.0.0.65	No	0	0	No	No	No	No	Ethernet Heartbeat Timeout Bit
MST-0.0.0.66	No	0	0	No	No	No	No	Ethernet Port Buffer Full Bit (95% Full)
MST-0.0.0.67	No	0	0	No	No	No	No	Ethernet Port Ready Bit
MST-0.1.2.25	No	0	0	No	No	No	No	Module Failed
MST-0.1.2.26	No	0	0	No	No	No	No	Missing 24V
MST-0.1.2.57	No	0	0	No	No	No	No	Under Range Error (1)
MST-0.1.2.58	No	0	0	No	No	No	No	Under Range Error (2)
MST-0.1.2.59	No	0	0	No	No	No	No	Under Range Error (3)
MST-0.1.2.60	No	0	0	No	No	No	No	Under Range Error (4)
MST-0.1.2.89	No	0	0	No	No	No	No	Over Range Error (1)
MST-0.1.2.90	No	0	0	No	No	No	No	Over Range Error (2)
MST-0.1.2.91	No	0	0	No	No	No	No	Over Range Error (3)
MST-0.1.2.92	No	0	0	No	No	No	No	Over Range Error (4)
MST-0.1.4.1	No	0	0	No	No	No	No	Module Ready
MST-0.1.4.33	No	0	0	No	No	No	No	Port 1 Heartbeat Timeout Bit
MST-0.1.4.34	No	0	0	No	No	No	No	Port 1 Port Buffer Full Bit (95% Full)
MST-0.1.4.35	No	0	0	No	No	No	No	Port 1 Port Ready Bit
MST-0.1.4.37	No	0	0	No	No	No	No	Port 1 5V Failed or Overloaded
MST-0.1.4.49	No	0	0	No	No	No	No	Port 2 Heartbeat Timeout Bit
MST-0.1.4.50	No	0	0	No	No	No	No	Port 2 Port Buffer Full Bit (95% Full)
MST-0.1.4.51	No	0	0	No	No	No	No	Port 2 Port Ready Bit
MST-0.1.4.52	No	0	0	No	No	No	No	Port 2 CTS Timeout
MST-0.1.4.65	No	0	0	No	No	No	No	Port 3 Heartbeat Timeout Bit
MST-0.1.4.66	No	0	0	No	No	No	No	Port 3 Port Buffer Full Bit (95% Full)
MST-0.1.4.67	No	0	0	No	No	No	No	Port 3 Port Ready Bit
MST-0.1.4.68	No	0	0	No	No	No	No	Port 3 CTS Timeout
MST-0.1.4.81	No	0	0	No	No	No	No	Port 4 Heartbeat Timeout Bit
MST-0.1.4.82	No	0	0	No	No	No	No	Port 4 Port Buffer Full Bit (95% Full)
MST-0.1.4.83	No	0	0	No	No	No	No	Port 4 Port Ready Bit

Filters: {Tag: TriggerPosition}

Tag Name	Task Name	Rung Number	Column Number	Instruction
TriggerPosition	Main_Tasks	6	1	Compare Contact
	Main_Tasks	6	2	Compare Contact
	Main_Tasks	7	1	Compare Contact
	Main_Tasks	15	11	Math Editor
	Main_Tasks	16	11	Math Editor
	Main_Tasks	17	11	Math Editor
	Row_Info_Tasks	1	1	Compare Contact
	Row_Info_Tasks	2	1	Compare Contact
	Row_Info_Tasks	6.1	10	Compare Contact
	Row_Info_Tasks	7.2	10	Compare Contact
	Row_Info_Tasks	8.3	10	Compare Contact