

PVTRACE · DESIGN PRECIS

PVTrace design precis

Design Molecule Lab · designmolecule.com

DOCUMENT CONTROL

Document ID	PVT-PRC-001	Version	0.5
Status	Draft	Date	2026-10-01
Author	Amish Chadha	License	CERN-OHL-S-2.0
Project TRL	TRL 3 Proof of concept		
Repository	github.com/BoujeeEnjinia1701/pvtrace		
Source	docs/02-concept.md @ uncommitted		

REVISION HISTORY

Version	Date	Author	Change
0.5	2026-10-01	Amish Chadha	Constructable design (PVT-DDR-003): chassis plate, USB-C socket, fixings, pod clip; mass and cost updated; budget as a value-engineering target
0.4	2026-09-25	Amish Chadha	Recommendations accepted by Amish (DDR-002)
0.3	2026-09-25	Amish Chadha	TRL 3 update; design choices adopted per PVT-DDR-001 (6.6 mF, isolation barrier, TFT, reference cell, ESP32, grades); numbers from PVT-CAL-001; larger case; 33 J safety figure
0.2	2026-09-25	Amish Chadha	Concept for TRL 2; how it works, components, first-order numbers, proposed choices, safety, open questions
0.1	2026-09-25	Amish Chadha	Initial scaffold

PVTrace design precis

■ Summary


PVTrace is a handheld, battery-powered IV curve tracer for single PV modules and short strings up to 100 V and 20 A. It sweeps the module from short circuit to open circuit by letting it charge a 6.6 mF capacitor bank in about 20 to 68 ms, samples several hundred voltage and current pairs, reads irradiance from a reference cell and temperature from a probe on the module back, translates the curve to standard test conditions (STC) and shows fault flags and a second-life grade on its screen. A digital isolator and an isolated DC-DC converter separate the measurement side from the controller and USB port. Every sweep is saved as an open CSV file. Value-engineering target: USD 165. Estimated cost of the constructable design: USD 178 (USD 13 over the target). The capacitive load follows proven open designs (IV Swinger 2; Cáceres et al., 2020, see PVT-PRB-001); what is new is a standalone field instrument with sensing, translation and a transparent grading rule.

The design choices in this precis were decided by Amish on 2026-09-25 (go with recommendation; PVT-DDR-001 and PVT-DDR-002). Sizing is in PVT-CAL-001; the general arrangement is drawing PVT-DWG-001. The design was made constructable on 2026-10-01 (PVT-DDR-003): every part now has a fixing, and the prototype build plan PVT-BLD-001 shows how to make and fit each one.

PVTrace

github.com/BoujeeEnjinia1701/pvtrace

CONCEPT, NOT FOR FABRICATION

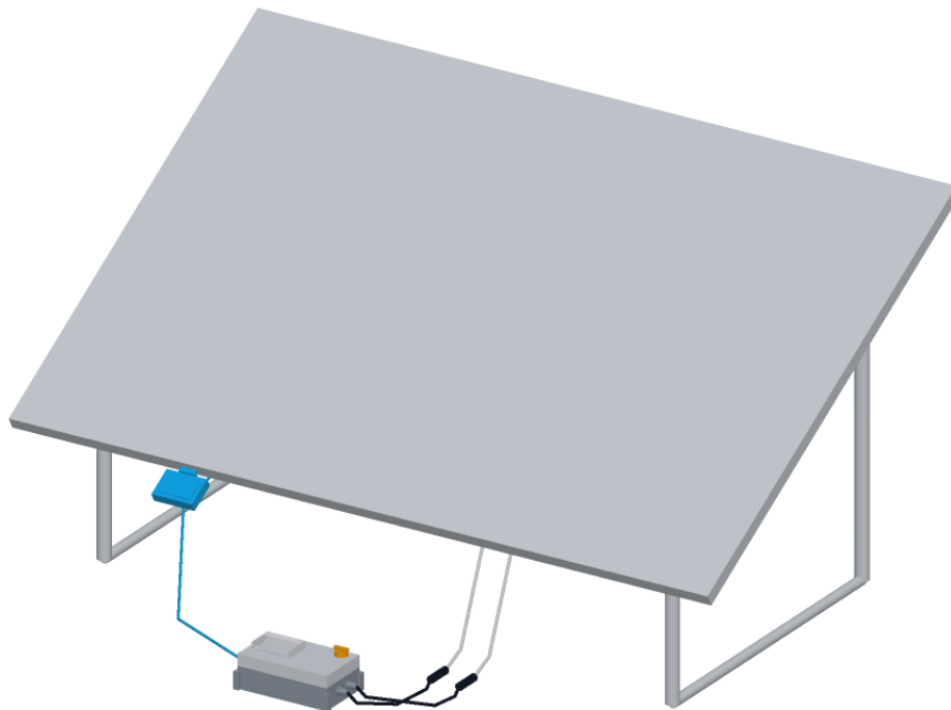

Seen from the front right and above, 24 deg elevation. Grey: PV module under test on a stand, with its own leads for scale

Figure 1. PVTrace in use (concept massing model; grey module and stand for scale).

■ How it works

1. **Connect.** The user mates the two MC4 test leads to the module's leads with the DC isolator open, clips the sensor pod to the module's lower frame so the reference cell lies in the module plane, and presses the probe onto the module back.
2. **Check.** With the isolator closed and the load switch off, the controller reads open-circuit voltage through the divider. It refuses to continue if the polarity is reversed or Voc exceeds 100 V.
3. **Sweep.** The load MOSFET closes onto the discharged capacitor bank. The module first delivers close to its short-circuit current, then the capacitor voltage rises through the knee to Voc. The ADC on the isolated measurement side samples voltage and current in pairs throughout and sends them to the controller through the digital isolator. The capacitor current decays toward zero near Voc; firmware keeps the MOSFET closed until the current is below 0.5 A, so it never opens a loaded DC circuit.
4. **Dump.** The load MOSFET opens and a second MOSFET discharges the bank through a 22 ohm aluminium-clad resistor, below 30 V in about 0.2 s. A permanent 10 kohm bleed resistor empties the bank if the controller fails.
5. **Analyze.** Firmware extracts Isc, Voc, Pmax, Vmp, Imp and fill factor, estimates series and shunt resistance from the slopes near Voc and Isc, and looks for steps that show bypass diode conduction.
6. **Translate and grade.** Using irradiance, module temperature and the datasheet coefficients the user selects, it translates the curve to STC with IEC 60891 procedure 1 and compares Pmax with nameplate to give a grade.
7. **Log.** The sweep, conditions, flags and grade go to microSD and can be exported by USB or to a phone over Wi-Fi.

PVTrace: one sweep, from panel to grade (calculated in PVT-CAL-001; energy in J for a 450 W module)

github.com/BoujeeEnjinai701/pvtrace

CONCEPT, NOT FOR FABRICATION

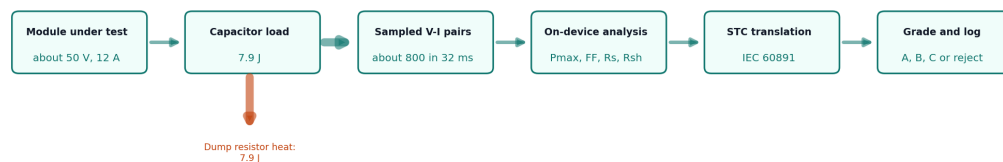


Figure 2. Measurement and energy flow for one sweep (estimates).

■ Main components

Numbers match `bom/bom.csv` and the exploded view (Figure 3).


Table 1. Main components

No.	Component	Role
1	Enclosure body, IP54 ABS handheld case about 220 x 130 x 80 mm, light grey, with rubber corner bumpers and three cable glands	Houses and protects the electronics
2	Enclosure lid with a 72 x 54 mm polycarbonate window bonded over a 62 x 46 mm opening	Closes the case; window for the display
3	Controller and 2.8 in display board (ESP32 class, microSD)	Runs the sweep, analysis, grading, logging, Wi-Fi export
4	Measurement board: 4 milliohm shunt, current-sense amplifier (INA240 class), voltage divider, dual 12-bit ADC with precision reference, MOSFET gate driver supply	Measures V and I during the sweep, on the PV side of the isolation barrier
5	Load capacitors, 3 x 2200 μ F 160 V electrolytic (6.6 mF)	The sweep load
6	Load and discharge MOSFETs (150 V class) with gate driver on an aluminium bar	Connects and empties the load
7	Discharge resistor, 22 ohm 50 W aluminium clad, plus 10 kohm 3 W passive bleed	Absorbs the stored energy
8	DC fuse, 20 A gPV 10 x 38 mm, in a DC-rated holder	Protects the leads and switch from a fault
9	DC isolator, 2-pole, rated 20 A at 250 V DC or more	Separates the instrument from the module when not sweeping
10	Li-ion 18650 protected cell, holder, USB-C charger with temperature cut-off, 5 V boost and protection	Powers the controller, display and, through item 14, the measurement side
11	Test leads, 2 x 1 m, 4 mm ² double-insulated PV cable with MC4 connectors	Connects to the module
12	Sensor pod: reference cell and shaded temperature probe, frame clip, 3 m cable	Measures irradiance and module temperature
13	Hardware and consumables (not modeled)	Screws, standoffs, wire, gaskets
14	Isolation barrier: 4-channel digital isolator and 1 W isolated DC-DC converter	Separates the PV-side measurement board from the controller, USB port and battery
15	Display sun hood, printed light grey PETG, 92 x 64 x 18 mm, three walls, a 20 mm roof lip and four screw tabs, open toward the user	Shades the display window to improve contrast in sun (PVT-DDR-002 item 12); its screws also hold the display board
16	Chassis plate, 1.5 mm polycarbonate on five standoffs	Carries every part in the case body; lifts out as one unit (PVT-DDR-003)
17	USB-C charging socket, IP65 with cap, in the left end	Charges the cell with the case closed (R14; PVT-DDR-003)

PVTrace: exploded viewgithub.com/BoujeeEnjinia1701/pvtrace

CONCEPT, NOT FOR FABRICATION

- 1 Enclosure body, IP54 ABS
- 2 Enclosure lid with window
- 3 Controller and 2.8 in display
- 4 Measurement board (shunt, ADC)
- 5 Load capacitors, 3 x 2200 uF 160 V
- 6 Load and discharge MOSFETs
- 7 Discharge resistor, 22 ohm 50 W
- 8 DC fuse, 20 A, and holder
- 9 DC isolator, 2-pole
- 10 Li-ion 18650 cell and charger
- 11 Test leads with MC4 connectors
- 12 Sensor pod: reference cell, temperature
- 14 Isolation barrier (isolator, DC-DC)
- 15 Display sun hood, printed
- 16 Chassis plate, polycarbonate
- 17 USB-C charging socket

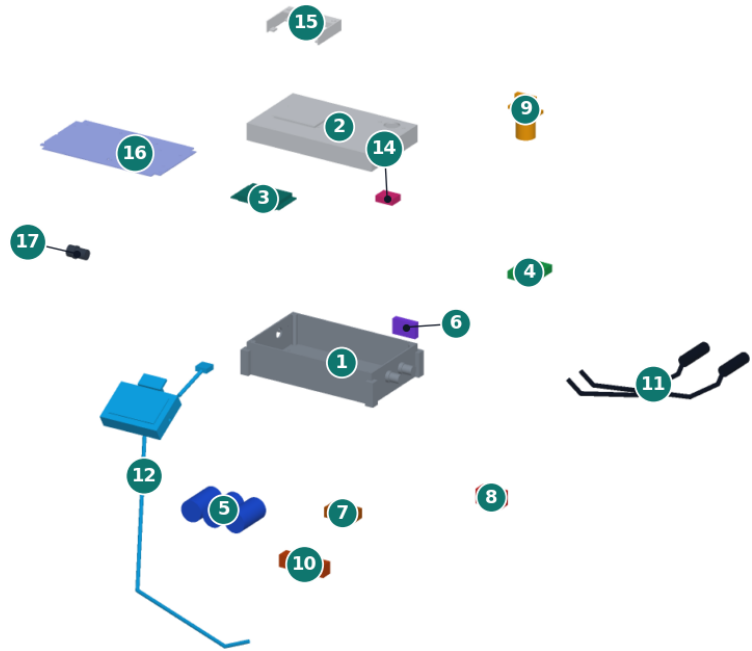


Seen from the front right and above, 24 deg elevation; numbers match bom/bom.csv

Figure 3. Exploded view; callouts match Table 1.

PVTrace: cutawaygithub.com/BoujeeEnjinia1701/pvtrace

CONCEPT, NOT FOR FABRICATION

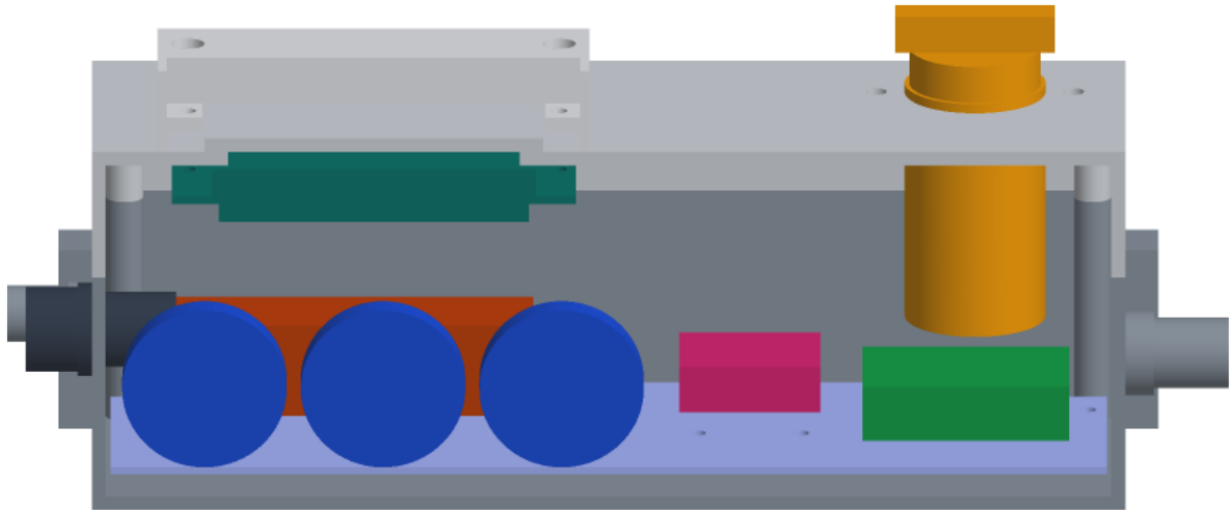

Front half removed; seen from the front and above, 18 deg elevation

Figure 4. Cutaway looking toward the back wall: the three capacitors (blue) in front of the battery (orange), isolation board (pink) and measurement board (green) on the floor, DC isolator (amber) through the lid, controller and display (teal) under the window.

■ Key numbers

All values are calculated in PVT-CAL-001 and are estimates for a paper design.

Table 2. Sweep with a 6.6 mF load (single-diode model, time from 0 V to 99 % of Voc)

Case	Voc (V)	Isc (A)	Sweep, nominal (ms)	Sweep, -20 % capacitance (ms)	Energy stored (J)
36-cell 100 W	22.0	6.0	28.9	23.1	1.6
108 half-cell 410 W (high current)	37.5	13.9	20.5	16.4	4.5
144 half-cell 450 W (reference)	49.5	11.6	32.2	25.8	7.9
2 x 60-cell 250 W in series (high voltage)	75.2	8.9	67.5	54.0	18.3
Rating limit	100	20	37.7	30.1	33 at 100 V

Assumptions: datasheet-class values; 56.6 mΩ loop resistance; module capacitance ignored (see PVT-CAL-001 section 2).

- **Sweep time.** The high-current case meets the 20 ms lower bound of R3 at nominal capacitance (20.5 ms) but not at -20 % tolerance (16.4 ms). R3 therefore stays not met; the options are open in PVT-DDR-001 item 11.
- **Samples.** At 25,000 pairs per second a sweep yields 410 pairs or more (R4). Firmware interpolates each voltage to the time of its current sample, which removes up to 0.16 % error in Pmax.
- **Resolution.** Voltage full scale 109.1 V, 26.6 mV per count; current full scale 20.48 A, 5.00 mA per count. After calibration about ± 0.2 % of reading ± 0.03 % of full scale (R5).
- **Discharge.** 22 ohm with 6.6 mF gives a 145 ms time constant: 100 V falls below 30 V in 0.21 s with +20 % capacitance. Peak dump power is 455 W for milliseconds; at one sweep every 5 s the average is 1.6 W for the reference module and 6.6 W at 100 V. The 10 kohm bleed takes 100 V below 60 V in 40 s and draws 10 mA at 100 V, which firmware subtracts.
- **Opening current.** At 99 % of Voc the module still delivers up to 2.5 A, so the load switch stays closed up to 6 ms longer until the current is below 0.5 A.
- **Battery.** 0.85 W at 5 V (controller, display and isolated side), 0.94 W from the cell: about 10.3 h from a 3,000 mAh 18650.
- **Heat.** In full sun at 45 °C ambient the inside of a light grey case reaches about 56 °C, a dark case about 73 °C. The case is therefore light grey, the charger has a temperature cut-off, a printed hood shades the display, and the tracer should stay in shade between sweeps.
- **STC uncertainty.** Root-sum-square ± 3.7 to ± 5.4 %; R8 (± 5 %) needs a reference cell calibrated within ± 4.5 %.
- **Mass.** About 1.49 kg with leads, sensor pod, sun hood and chassis plate (R12 met, about 14 g to spare).
- **Cost.** Value-engineering target: USD 165 (`budget_usd` , a hypothetical control target, not a limit). Estimated cost of the constructable design: USD 178 (USD 13 over the target; see `bom/bom.csv`).

■ Fault flags and grading (draft rules)

Table 3. Draft fault rules

Flag	Curve symptom	Draft rule
Shading or bypass diode active	Step or plateau in the curve	Local minimum in dI/dV , or current drop of 10 % or more within 3 % of Voc, below Vmp
High series resistance	Shallow slope near Voc	Estimated Rs more than 1.5 times the model value for the module type
Low shunt resistance	Steep slope near Isc	Estimated Rsh below 10 times Vmp/Imp
Current deficit (soiling, degradation, cracks)	Isc low against irradiance	Isc at STC below 90 % of nameplate
Missing substring	Voc about one third low	Voc at STC below 70 % of nameplate

Grades from STC Pmax against nameplate (decided by Amish, PVT-DDR-001 item 8): A 90 % or more, B 80 to 90 %, C 70 to 80 %, reject below 70 % or with any safety defect found by visual inspection (broken glass, burnt junction box, delaminated backsheet). Grades are indicative; they are not a certification.

■ Key design choices

Items 1 to 8 were decided by Amish on 2026-09-25: go with recommendation (PVT-DDR-001, PVT-DDR-002). The options considered are in PVT-PRC-001 v0.2 and `docs/REVIEW.md`.

1. **Load type.** Capacitive load: simple, fast, low heat, proven in open designs.
2. **Voltage and current rating.** 100 V, 20 A: single modules and two in series, below the 120 V DC extra-low-voltage limit. Two 450 W modules in series exceed it when cold and are refused.
3. **Load capacitance.** 6.6 mF with three capacitors. It meets R3 at nominal capacitance but not at -20 % tolerance (open item 11).
4. **Isolation of the controller from the PV side.** Option B: a digital isolator and isolated DC-DC converter between the measurement board and the controller, so a laptop on USB is not tied to PV potential.
5. **Display and interface.** 2.8 in TFT plus phone export. A printed sun hood is fitted (item 12, decided); readability in direct sun is still not shown on paper (R13).
6. **Irradiance sensing.** A small reference cell measured at short circuit and calibrated once against a pyranometer.
7. **Controller.** ESP32 display board.
8. **Grade thresholds.** As in the grading rules above, held in an editable table and still to be agreed with a second-life partner.

Also decided by Amish on 2026-09-25: the \$165 budget (a value-engineering target since 2026-10-01), the sun hood and the 220 x 130 x 80 mm case (items 9, 12 and 13). Still proposed, awaiting Amish: the first co-design partner (item 10, no preference stated) and the R3 shortfall at tolerance (item 11, no recommendation yet).

■ Links to other lab projects

- **CellCheck** grades salvaged lithium cells for rebuilt packs; PVTrace applies the same measure, grade and log approach to modules. A shared grade-label and CSV format would help both.
- **CalRig** can check PVTrace's module temperature probe from 10 to 40 °C (its reference is ± 0.2 °C). It does not reach module temperatures of 60 °C or more and does not provide irradiance references, so the reference cell needs a separate calibration route.
- PVTrace does not use a SwapCell pack; a single 18650 cell is enough.

■ Safety

Safety: PV modules are live whenever light falls on them. The tracer handles up to 100 V DC and 20 A, which can cause burns and sustained DC arcs. Mate and unmate MC4 connectors only with the isolator open and never under load. Use brand-matched MC4 connectors from one maker; mixed brands can overheat.

Safety: The load capacitors store up to 33 J at 100 V. Active and passive discharge paths are required; treat the capacitors as charged until the display reads below 30 V, and never open the case with the leads connected.

Safety: The discharge resistor and MOSFET bar get hot under repeated sweeps; firmware limits the sweep rate to one every 5 s.

Safety: The instrument contains a Li-ion cell. Use a protected cell, charge it only with the isolator open, in shade, on a non-flammable surface, within 0 to 45 °C, and never leave it charging unattended in a hot vehicle. In full sun the inside of the case can pass 45 °C (PVT-CAL-001); the charger's temperature cut-off must not be bypassed.

Safety: Handling modules involves sharp frame edges, heavy glass (about 20 to 25 kg for large modules) and work at height on rooftops. Broken modules can cut and may still be live. Wear gloves and eye protection, and follow local rules for work at height.

Safety: Do not connect PVTrace to a string of an installed grid-connected system unless the owner has isolated it from the inverter and the string Voc is below 100 V.

■ Open questions

- [] Is 20 ms the right lower bound on sweep time for TOPCon and HJT modules, or is a longer sweep needed?
- [x] How to capture true I_{sc} : extrapolate from the first samples, which start 1 to 2 % of Voc above zero (PVT-CAL-001); no negative pre-charge.
- [] Which reference cell and calibration route give ± 3 % or better at low cost?
- [] Is a commodity TFT with the sun hood readable in sun, or is a transflective display needed? (Field check, TRL 4.)
- [] What grade label format would buyers and a certification scheme accept?
- [] Should the firmware support two modules in parallel (current to 20 A at lower voltage) as well as in series?