

WELLSENSE · DESIGN PRECIS

WellSense design precis

Design Molecule Lab · designmolecule.com

DOCUMENT CONTROL

Document ID	WLS-PRC-001	Version	0.5
Status	Draft	Date	2026-09-26
Author	Amish Chadha	License	CERN-OHL-S-2.0
Project TRL	TRL 3 Proof of concept		
Repository	github.com/BoujeeEnjinia1701/wellsense		
Source	docs/02-concept.md @ 5e3aad7		

REVISION HISTORY

Version	Date	Author	Change
0.5	2026-09-26	Amish Chadha	Budget approved by Amish; parts within the \$200 budget
0.4	2026-09-25	Amish Chadha	Recommendations accepted by Amish (DDR-002)
0.3	2026-09-25	Amish Chadha	TRL 3 update from WLS-CAL-001 and WLS-DDR-001 (24 V loop boost, 0.25 % class probe, two-point calibration, numbers checked, choices adopted for TRL 3 pending review)
0.2	2026-09-25	Amish Chadha	Populate to TRL 2 (architecture, first-order numbers, safety, media)
0.1	2026-09-25	Amish Chadha	Initial scaffold

WellSense design precis


■ Summary

WellSense hangs a vented submersible pressure transducer in its own access tube inside an existing well and reads it every 15 minutes through the lab's shared FieldNode core, which sends the level over LoRaWAN to an open community dashboard. The TRL 3 calculations (WLS-CAL-001) give 0.52 mm resolution and a sensor load of 38.2 mWh a day, 1.6 % of FieldNode's 100 mW allowance. They also found that FieldNode's 12 V rail cannot drive the current loop, so the interface board carries a 24 V boost. After a two-point field calibration against a manual tape, a 0.25 % class probe reaches 12.5 mm by root sum square against the ± 20 mm target, but 27.1 mm if every error adds, so accuracy is at risk. Amish accepted all recommendations on 2026-09-25 (WLS-DDR-002): the budget rises to \$190 for the 30 m design well, the probe is limited to 22 mm so it runs freely in the 1 in access tube (2.3 mm radial clearance), a galvanized conduit protects the surface cable, FieldNode's sun shield is fitted at hot sites, and pumping tests on a public network send every 30 min. With the \$10.00 conduit the WellSense parts cost \$197.60 at a 30 m probe depth, within the \$200 budget Amish approved on 2026-09-26, and \$323.60 with the FieldNode core. The design choices below are decided by Amish (WLS-DDR-001 and WLS-DDR-002).

WellSense

CONCEPT, NOT FOR FABRICATION

github.com/BoujeeEnjinia1701/wellsense

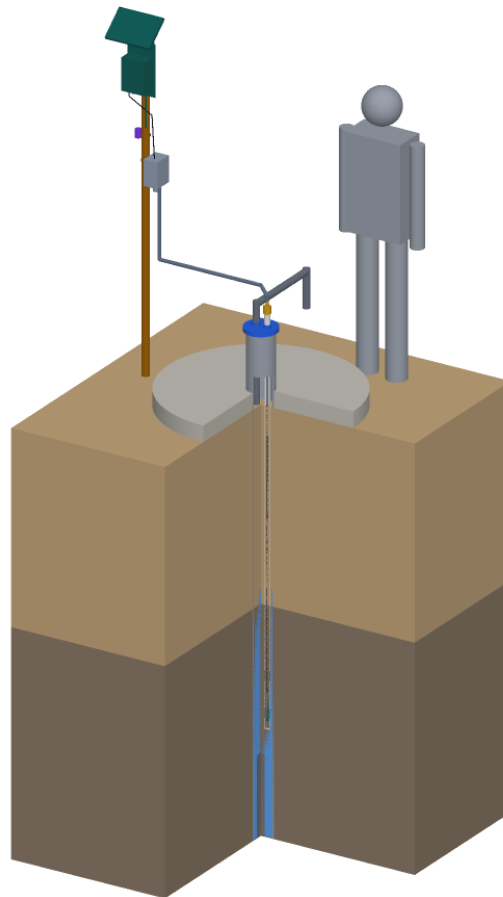

Grey figure: 1.75 m person for scale. Soil cut open to show the well; borehole shortened for display (design probe depth 30 m, to 60 m).

Figure 1. Concept massing model in a borehole with a pump and riser, soil cut open, 1.75 m person for scale. The borehole is shortened for display. CONCEPT, NOT FOR FABRICATION.

■ How it works

1. **Sense.** The transducer measures the pressure of the water column above it. Its cable carries a capillary vent tube to the surface, so the sensor reads gauge pressure and air pressure changes cancel out. Water above the probe is $h = p / (\rho g)$, about 102 mm per kPa.
2. **Keep clear of the pump.** The probe, 22 mm in diameter or less, hangs at a recorded depth inside a 25 mm PVC access tube, slotted at the bottom, so it cannot tangle with the pump cable or riser and can be pulled for checks without touching the pump.
3. **Seal the wellhead.** A split seal plate replaces or supplements the existing well cap, with glands for the riser and access tube. The cable leaves the tube through a cap with a cable-grip hanger and runs to the junction box inside a 1/2 in galvanized conduit.
4. **Read.** FieldNode switches its 12 V rail on sensor port 1 for about 2 s every 15 min. A boost on the interface board raises it to 24 V, because 12 V leaves the transducer 4.44 V short of its 12 V minimum through the shunt and 62 m of cable (WLS-CAL-001, section B). The 4 to 20 mA loop current develops 0.6 to 3.0 V across a 150 Ω precision shunt, read by a 16-bit ADC over I2C. A barometric sensor on the post logs air pressure.
5. **Convert and send.** Firmware converts current to water above the probe, then to depth to water below the measuring point: depth = probe depth below the measuring point minus water above the probe. FieldNode stores each reading and sends it in a short LoRaWAN uplink. During a pumping test at 1 min, readings are batched: every 15 min on a private TwinKit gateway, every 30 min on a public network to stay within fair use (22.7 s a day at SF9).
6. **Show.** An open dashboard plots level below ground, daily pumping drawdown and recovery, and the change against the same month last year. The community owns the data and can export CSV.
7. **Check.** At installation a caretaker measures depth to water with a manual electric tape, as in USGS procedures (Cunningham and Schalk, 2011), then lifts the probe a measured 1 m and reads again; the two points fix offset and span. Each quarter a tape reading checks and corrects drift.

WellSense: data flow (estimated values, WLS-CAL-001)

github.com/BoujeeEnjinja1701/wellsense



Figure 2. Data flow from probe to dashboard. Values are estimates from WLS-CAL-001.

■ Main components


Table 1. Main components, numbered as in the BOM and the exploded view.

#	Component	Adopted choice	Notes
1	Pressure transducer	Vented 4 to 20 mA, 0 to 10 m, 0.25 % full scale class, 316 stainless, 22 mm diameter or less, IP68	Range and type per DDR-001, D2 and D3; diameter per DDR-002
2	Vented cable	PU or PE jacket, two 0.2 mm ² cores, 400 N strain member, vent capillary, about 7 mm	Probe depth plus 2 m, to 60 m
3	Access tube	25 mm (1 in) Sch 40 PVC, 26.6 mm bore, slotted over the bottom 0.5 m	Where a pump or riser shares the casing (DDR-001, D4); 2.3 mm radial clearance for a 22 mm probe (DDR-002)
4	Wellhead seal plate	Split plate, 200 mm diameter, EPDM gasket, two glands and a tube clamp, for 150 mm casing	Fits round an installed riser; keeps surface water and insects out
5	Tube cap and hanger	PVC cap with cable grip	Sets and records probe depth
6	Junction box	IP66 box with silica gel breather on the vent tube	Desiccant changed every visit
7	Interface board	150 Ω 0.1 % 10 ppm/K shunt, 16-bit ADC with series input resistor, 12 to 24 V boost, 3.3 V regulator, TVS surge protection	Off-the-shelf modules, no custom PCB
8	FieldNode core	Lab shared node: enclosure, 6 W panel, LiFePO4 cell, LoRaWAN radio; sun shield at hot sites	See the FieldNode repo (FND-DDR-002 for the shield)
9	Barometric sensor	BMP390 or BME280 class, in a vented housing on the post	Aquifer air pressure response; vent check
10	Mounting post	48.3 mm galvanized pipe, 2.7 m, 2.1 m above ground, 0.75 m from the well	FieldNode base at 1.75 m (FND-DDR-001, D11)
13	Post footing	300 mm diameter, 0.6 m deep, one 25 kg bag of concrete	Added at TRL 3
14	Surface cable conduit	1/2 in (21.3 mm OD) galvanized rigid conduit, about 1.3 m, tube cap to junction box	Added under DDR-002 for R16

WellSense: exploded viewgithub.com/BoujeeEnjinia1701/wellsense

CONCEPT, NOT FOR FABRICATION

- 1 Pressure transducer, vented, 4 to 20 mA
- 2 Vented cable with desiccant end
- 3 Access tube, 25 mm PVC, slotted
- 4 Wellhead seal plate and glands
- 5 Tube cap and cable hanger
- 6 Junction box with desiccant breather
- 7 4 to 20 mA interface board with 24 V boost
- 8 FieldNode core (enclosure, panel, radio)
- 9 Barometric reference sensor
- 10 Mounting post and clamps
- 13 Post footing, concrete
- 14 Surface cable conduit, galvanized

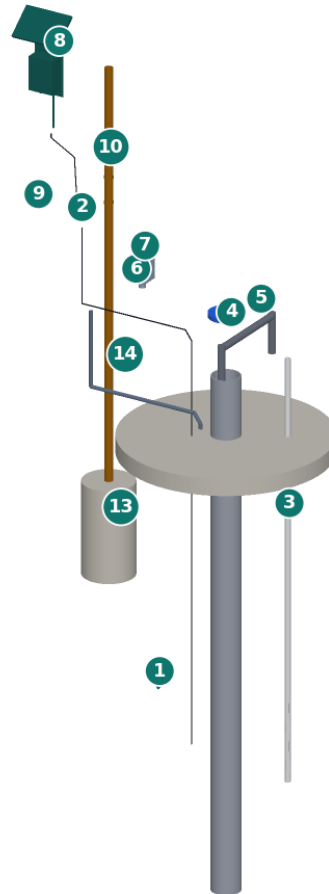


Seen from the front right and above, 24 deg elevation; numbers match bom/bom.csv

Figure 3. Exploded view with BOM callouts. CONCEPT, NOT FOR FABRICATION.

WellSense: cutaway (broken section)github.com/BoujeeEnjinia1701/wellsense

CONCEPT, NOT FOR FABRICATION

- 1 Pressure transducer, vented, 4 to 20 mA
- 2 Vented cable with desiccant end
- 3 Access tube, 25 mm PVC, slotted
- 4 Wellhead seal plate and glands
- 5 Tube cap and cable hanger
- 14 Surface cable conduit, galvanized

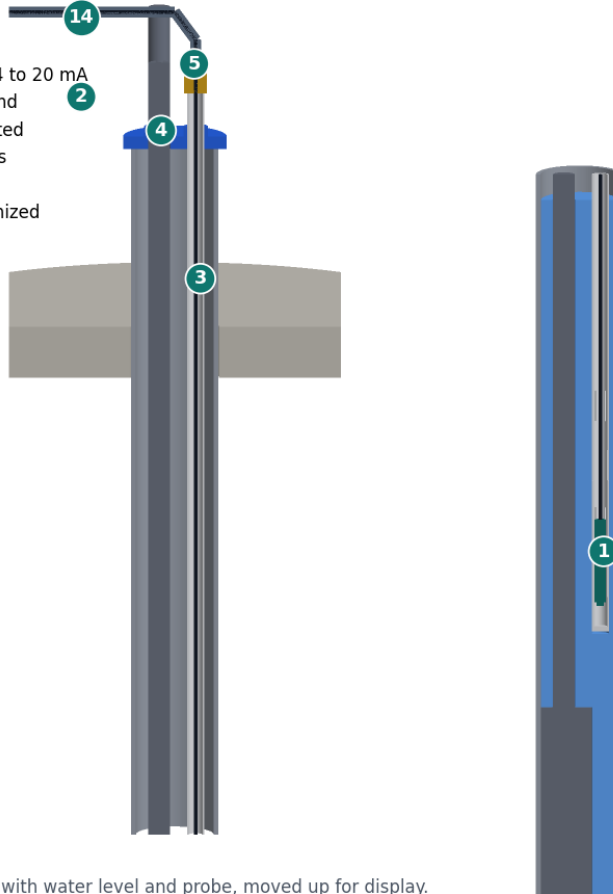

Left: wellhead. Right: lower borehole with water level and probe, moved up for display.
 Grey: existing well, pump and riser (not in kit).

Figure 4. Broken section: wellhead (left) and lower borehole with water level and probe (right).

■ Numbers checked at TRL 3

All values come from WLS-CAL-001, where the assumptions are stated.

Table 2. Key numbers from WLS-CAL-001.

Quantity	Value	Basis	Requirement
Full-scale pressure	98.07 kPa	10 m × 1,000 kg/m ³ × 9.80665 m/s ²	R1 met
Resolution	0.52 mm	16 mA × 150 Ω = 2.4 V; 125 μV ADC step; 19,200 steps over 10 m	R3 met
Loop voltage at the transducer	7.56 V from 12 V; 20.16 V with the 24 V boost	22 mA, 150 Ω shunt, 62 m of cable, diode	12 V minimum; boost required
Accuracy, datasheet only	50 mm (0.5 % class); 25 mm (0.25 % class)	Percentage of 10 m full scale	
Accuracy after two-point calibration	12.5 mm RSS; 27.1 mm worst case	0.25 % class probe; Table 2 of WLS-CAL-001	R4 at risk
Density change, 4 to 25 °C	0.29 %, 29 mm at 10 m	Fixed site density in firmware	
Absolute sensor without compensation	±306 mm	±3 kPa weather swing	Reason for the vented design
Energy per reading	1.43 J	24 V × 22 mA × 2 s through boost and rail, plus the controller	
Sensor energy per day	38.2 mWh	96 readings	R8 met: 1.6 % of 100 mW
Pumping test airtime, public network	22.7 s/day	30-reading batch every 30 min at SF9	R6 met, within 30 s fair use
Energy at 1 min interval	0.573 Wh/day	1,440 readings	24 % of the allowance during tests
Storage per year	1.12 MB	35,040 readings × 32 bytes	R7 met: 6.7 % of 16 MB
Probe clearance in the tube	2.3 mm radial	22 mm probe in 26.6 mm bore	R10 at risk (pump may need pulling)
Hanging loads at 60 m	35 N cable (factor 11.5); 264 N tube (factor 58)	Dry, worst case	R2 met
WellSense parts per well	\$197.60	bom/bom.csv, 30 m probe depth, conduit included	R12 met (\$200)
With FieldNode core	\$323.60	Adds line 8 (\$126.00, FND-CAL-001); \$331.60 with the hot-site shield	Counted in the FieldNode repo (DDR-001, D1)
Depth-dependent cost	\$1.80 per metre	Cable plus access tube	Budget holds to 31.3 m

■ Key design choices

Decided by Amish, 2026-09-25: go with recommendation (WLS-DDR-001 and WLS-DDR-002).

- **Vented 4 to 20 mA transducer rather than an absolute-pressure sensor with barometric compensation (D2).**
The current loop is robust over long cables and the reading needs no compensation. The costs are desiccant

maintenance at the vent and a 24 V boost, since the loop needs more than FieldNode's 12 V rail. A sealed absolute sensor with RS-485 and a surface barometer is kept as a variant.

- **0 to 10 m range (D3)**, with a 0 to 20 m variant for wells whose seasonal swing plus drawdown exceeds 9 m.
- **Own access tube where a pump is present (D4)**. Standard practice to protect the probe and the pump; also the hardest part to fit in an existing well (R10 at risk). The tube ends above the pump.
- **FieldNode as the core (D8)**. Reuses the lab's shared enclosure, solar charging, storage and radio, so WellSense designs only the well side. The interface board connects to sensor port 1 (switched 12 V rail and I2C); the pinout is still open in FieldNode (FND-DDR-001, O2). A battery-only node remains a question for the FieldNode project (DDR-001, O2).
- **Manual tape as the reference (D6)**. A shared electric tape sets the datum and the two-point calibration at installation and checks drift each quarter.
- **Levels only (D7)**. No camera, audio or pump data; the dashboard shows water level so that sharing the data carries little risk.
- **1 in access tube with a probe of 22 mm or less (DDR-002)**. Keeps the tube small enough to pass a centered riser in 150 mm casing; a 1-1/4 in tube would fit only 200 mm casing.
- **Galvanized conduit over the surface cable (DDR-002)**. Protects the cable from livestock, mowing and tampering between the tube cap and the junction box.
- **Hot sites (DDR-002)**. R15 stays at 55 °C; where the design maximum air temperature exceeds 30 °C (FND-CAL-001 v0.2), the FieldNode core carries FieldNode's sun shield (FND-DDR-002).
- **Pumping-test uplinks (DDR-002)**. Every 30 min on a public network, every 15 min on a private TwinKit gateway.

■ Safety

Safety: Drinking water. Anything lowered into a supply well can contaminate it. Disinfect the probe, cable and tube before installation (for example with a chlorine solution as local water authorities advise), use only materials suitable for drinking water contact, and keep the wellhead sealed so surface water, insects and animals cannot enter. Involve the well owner or water authority before opening a public supply well.

Safety: Electrical and pump hazards. Many wells contain a submersible pump on mains power. Isolate and lock off the pump supply before working at the wellhead, and keep the logger wiring separate from the pump cable. WellSense itself runs at 24 V or less (extra-low voltage).

Safety: Lithium cell. The FieldNode core contains a lithium iron phosphate cell of about 19 Wh; follow the FieldNode safety notes on fusing and charging temperature limits.

Safety: Working at an open well. An open dug well or large borehole is a fall and drowning hazard, especially for children. Never leave a wellhead open, and cover large-diameter wells while working.

Safety: Lifting and cable handling. A long cable with a probe and tube can be heavy; lower it slowly with two people so it does not run away into the well, and never let the cable carry more than the rated load of its strain member.

■ Open questions

- [] Can an access tube be added beside an installed pump without pulling it? Only an installation trial can tell.

- [] Real long-term drift of low-cost vented transducers; is a quarterly tape check enough?
- [] Which drinking water material certifications can low-cost suppliers show for cable, seals and probe?
- [] How should the dashboard present drawdown so that non-specialists read it correctly? To be answered in co-design.
- [] Locking of the seal plate, tube cap and junction box (R16).
- [] First partner and region for co-design (DDR-001, O1).
- [x] Cost at the 30 m design depth with the conduit included (\$197.60). Budget set to \$200 to cover the priced BOM: decided by Amish, 2026-09-26 (WLS-DDR-002).

Concept media: [blueprint sheet](#), [interactive 3D model](#).