
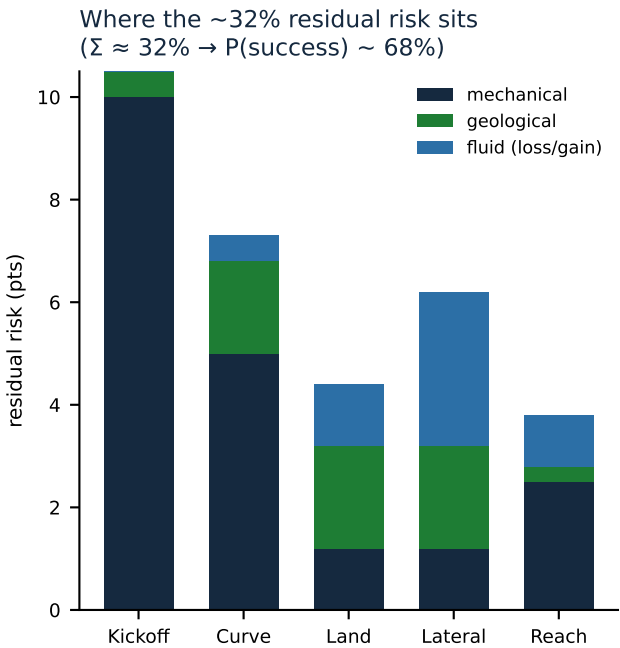


Drilling Execution Forecast

How the short-radius re-entry should drill — geometry × geology, section by section, and where the residual risk sits

Geometry through the geology: vertical re-entry → short-radius curve → thin-pay lateral

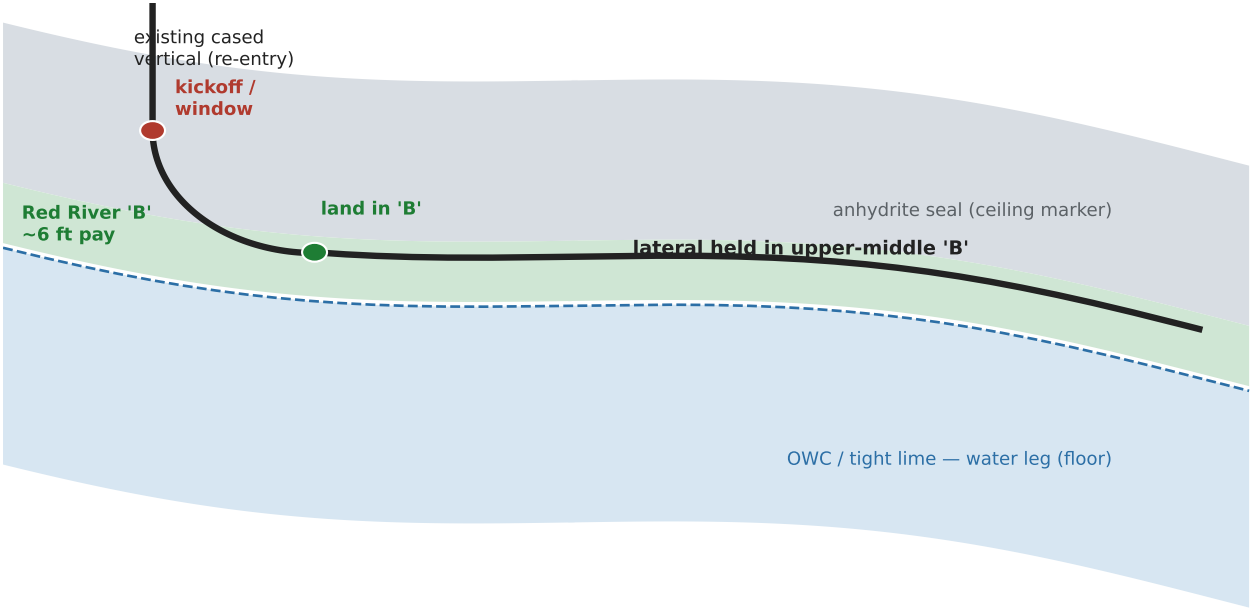

1 · Re-entry & Kickoff	2 · Short-radius Curve	3 · Land in the 'B'	4 · Lateral in Pay	5 · Reach / Hole Mechanics
GEOM cut window in casing; sidetrack GEOL steel & cement, not rock ROP n/a RISK casing / cement-bond integrity	GEOM high build rate / DLS; tool-face fight GEOL abrasive anhydrite ↔ dolomite cycles ROP slow; real bit wear RISK exit curve off-TVD; torque & drag	GEOM flatten into a ~6-ft window GEOL anhydrite ceiling, OWC floor ROP — RISK land high (no pay) / low (water)	GEOM hold upper-middle 'B' GEOL fractured dolomite — drills fast ROP fast RISK lost circulation; thin-zone steer	GEOM T&D limits lateral length GEOL easy cleaning at angle ROP steady RISK torque/drag; ECD vs losses & OWC

WHAT RETIRES THE RISK — before the curve is cut		
✓ Original Branch 4 CBL / casing log	✓ Pilot-hole logs ('B' / anhydrite / OWC TVD)	✓ Offset / fleet dip model (sheaf prior)
retires kickoff & casing risk — the biggest single lever	retires landing risk — land to a known depth	retires steering lag — holds ~95% in-zone