


SKYVIEW WAGA DISPLAY ON-TOW INDICATOR (OTI) DESIGN CONCEPTS AND ASSUMPTIONS



FLARM and SoftRF transceivers output the relative vertical distance as an integer value in metres. It appears in the once a second \$PFLAU sentence for the nearest traffic (the glider on tow, unless another aircraft is a collision threat). It also appears in the interim in the \$PFCAA sentence but this depends on how many other traffic targets there are. Note. This measure is subject to GPS errors. Here assumed to be $\pm 4m$

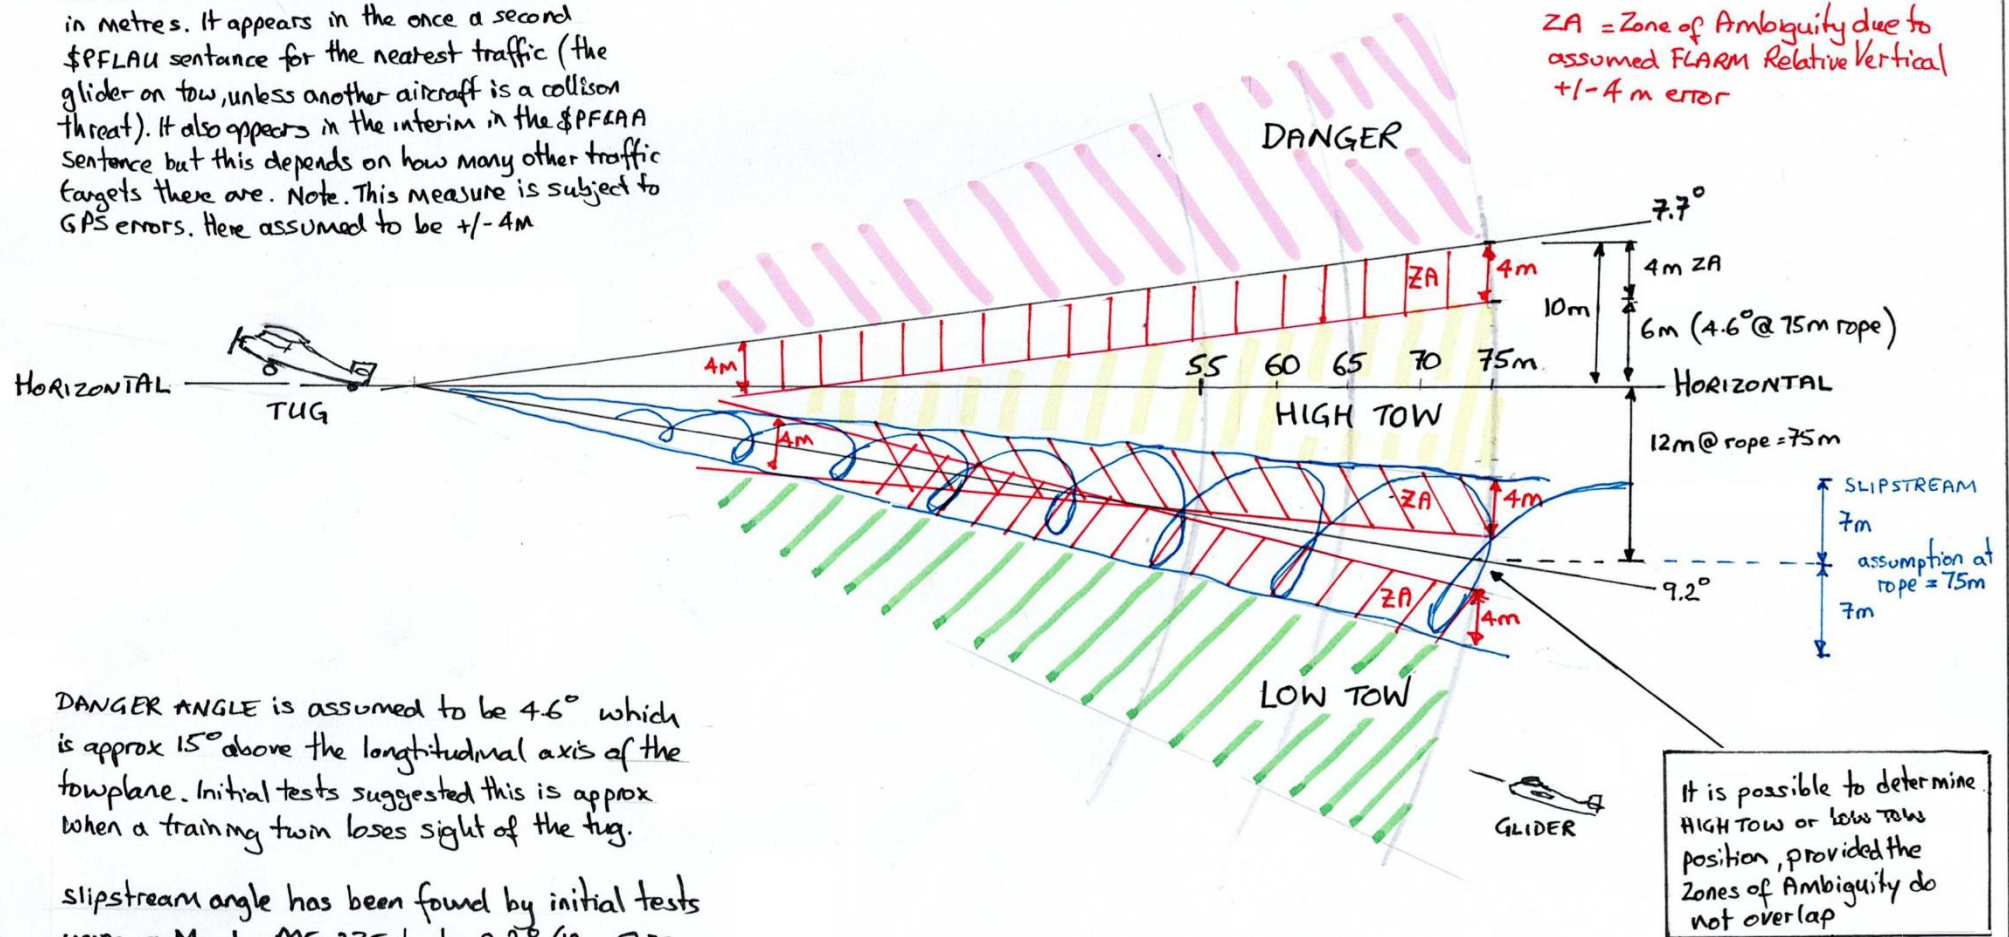

DANGER ANGLE is assumed to be 4.6° which is approx 15° above the longitudinal axis of the towplane. Initial tests suggested this is approx when a training twin loses sight of the tug.

slipstream angle has been found by initial tests using a Maule MS-235 to be 9.2° (12m @ 75m rope). May be different for Pawnee and other aircraft. Angle may vary with climb rate achieved and AOA/airspeed of tug.